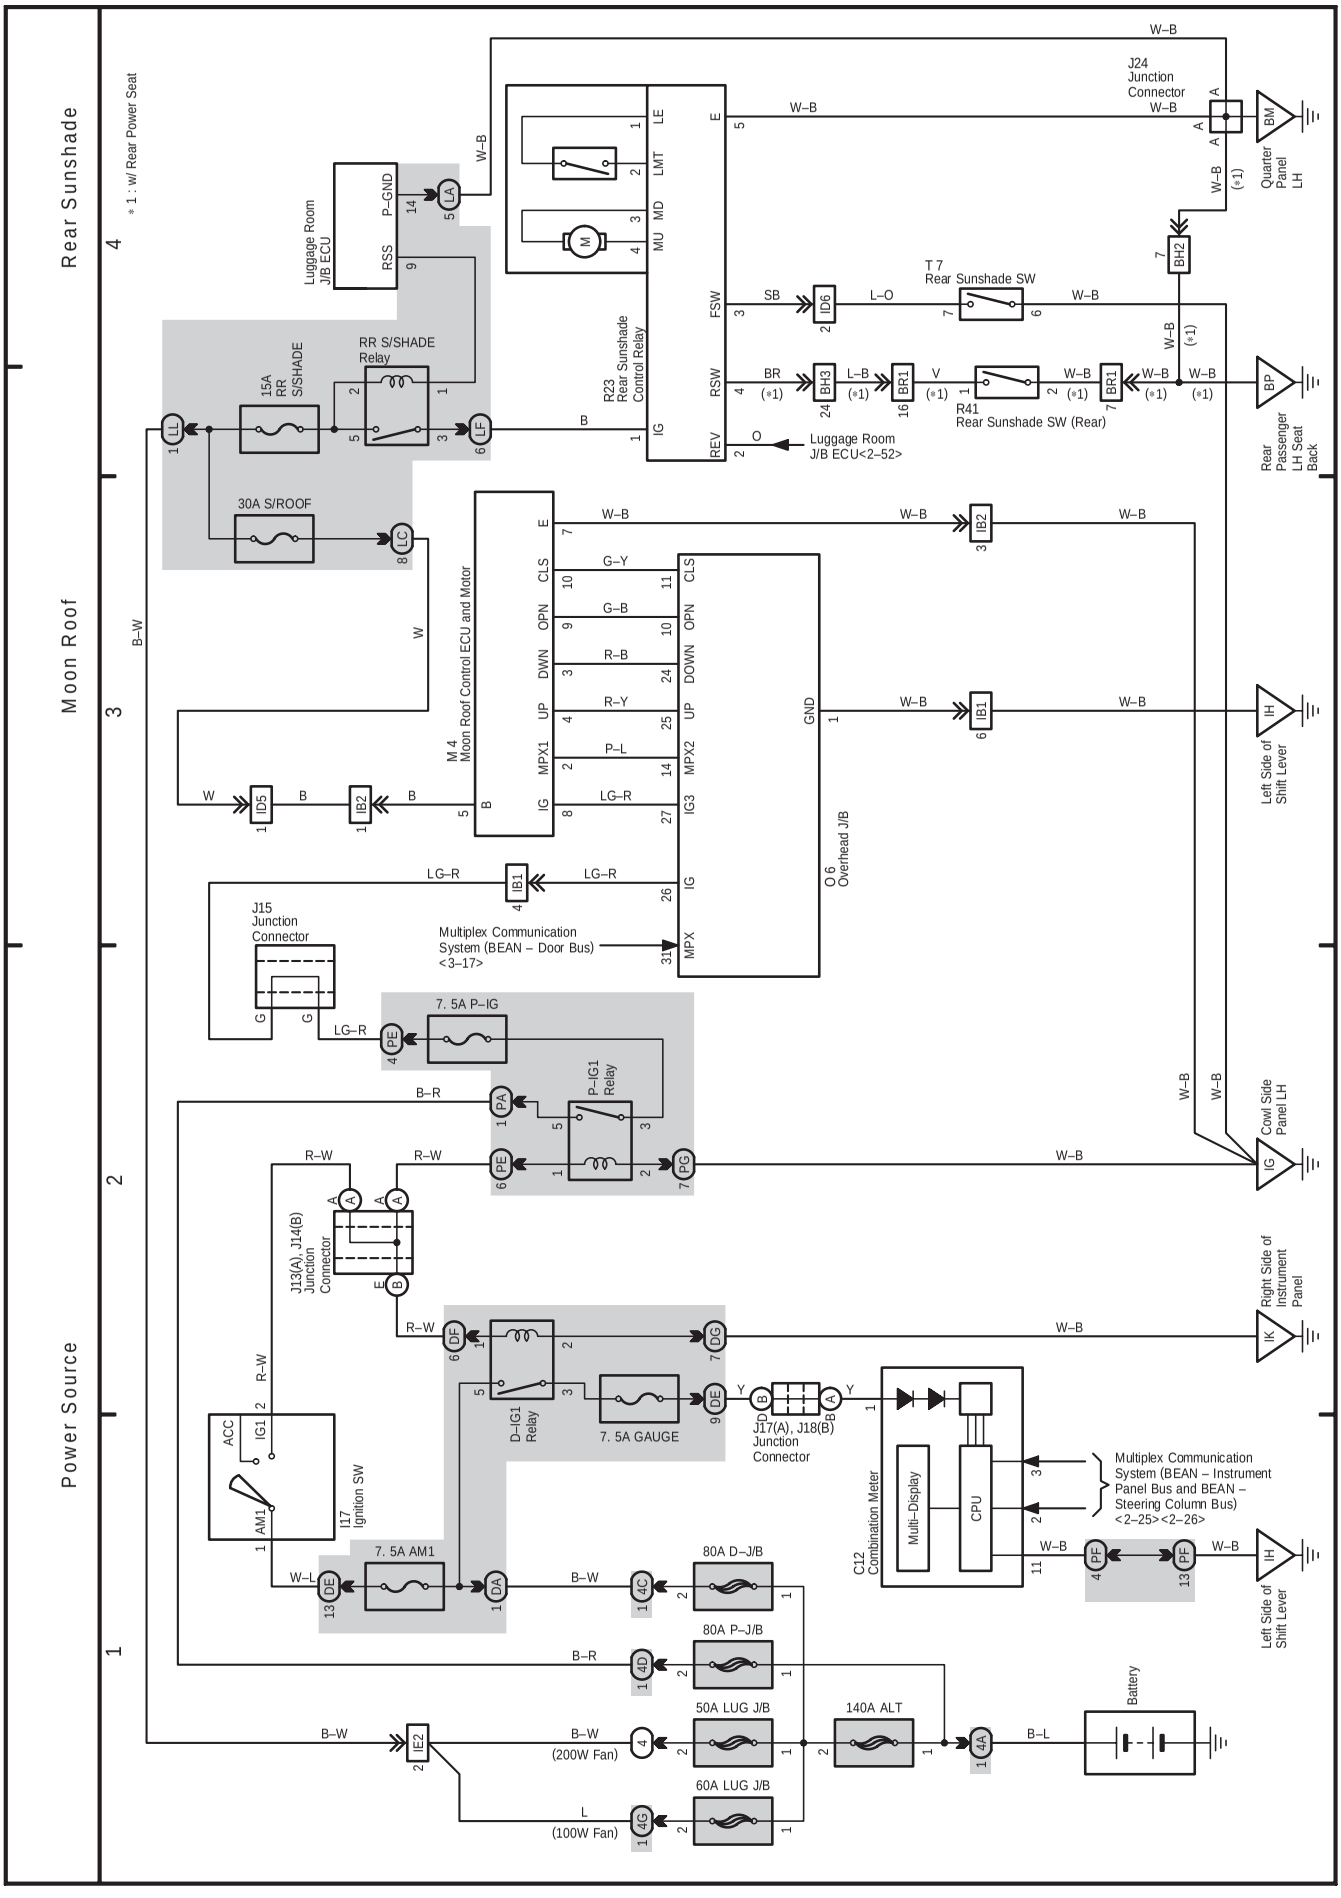
Rear Sunshade
Moon Roof
Power Source
* 1 : w/ Rear Power Seat
Luggage Room J/B ECU
RR S/SHADE Relay
15A RR S/SHADE
30A S/ROOF
R23 Rear Sunshade Control Relay
M 4 Moon Roof Control ECU and Motor
J15 Junction Connector
Multiplex Communication System (BEAN – Door Bus) <3–17>
O 6 Overhead J/B
J24 Junction Connector
T 7 Rear Sunshade SW
R41 Rear Sunshade SW (Rear)
Luggage Room J/B ECU<2–52>
Quarter Panel LH
Rear Passenger LH Seat Back
Left Side of Shift Lever
Cowl Side Panel LH
Right Side of Instrument Panel
P–IG1 Relay
D–IG1 Relay
7. 5A P–IG
7. 5A GAUGE
7. 5A AM1
J13(A), J14(B) Junction Connector
J17(A), J18(B) Junction Connector
I17 Ignition SW
C12 Combination Meter
Multi–Display
CPU
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–25><2–26>
80A D–J/B
80A P–J/B
50A LUG J/B
60A LUG J/B
140A ALT
Battery
(200W Fan)
(100W Fan)

16 LS 430 (RHD)