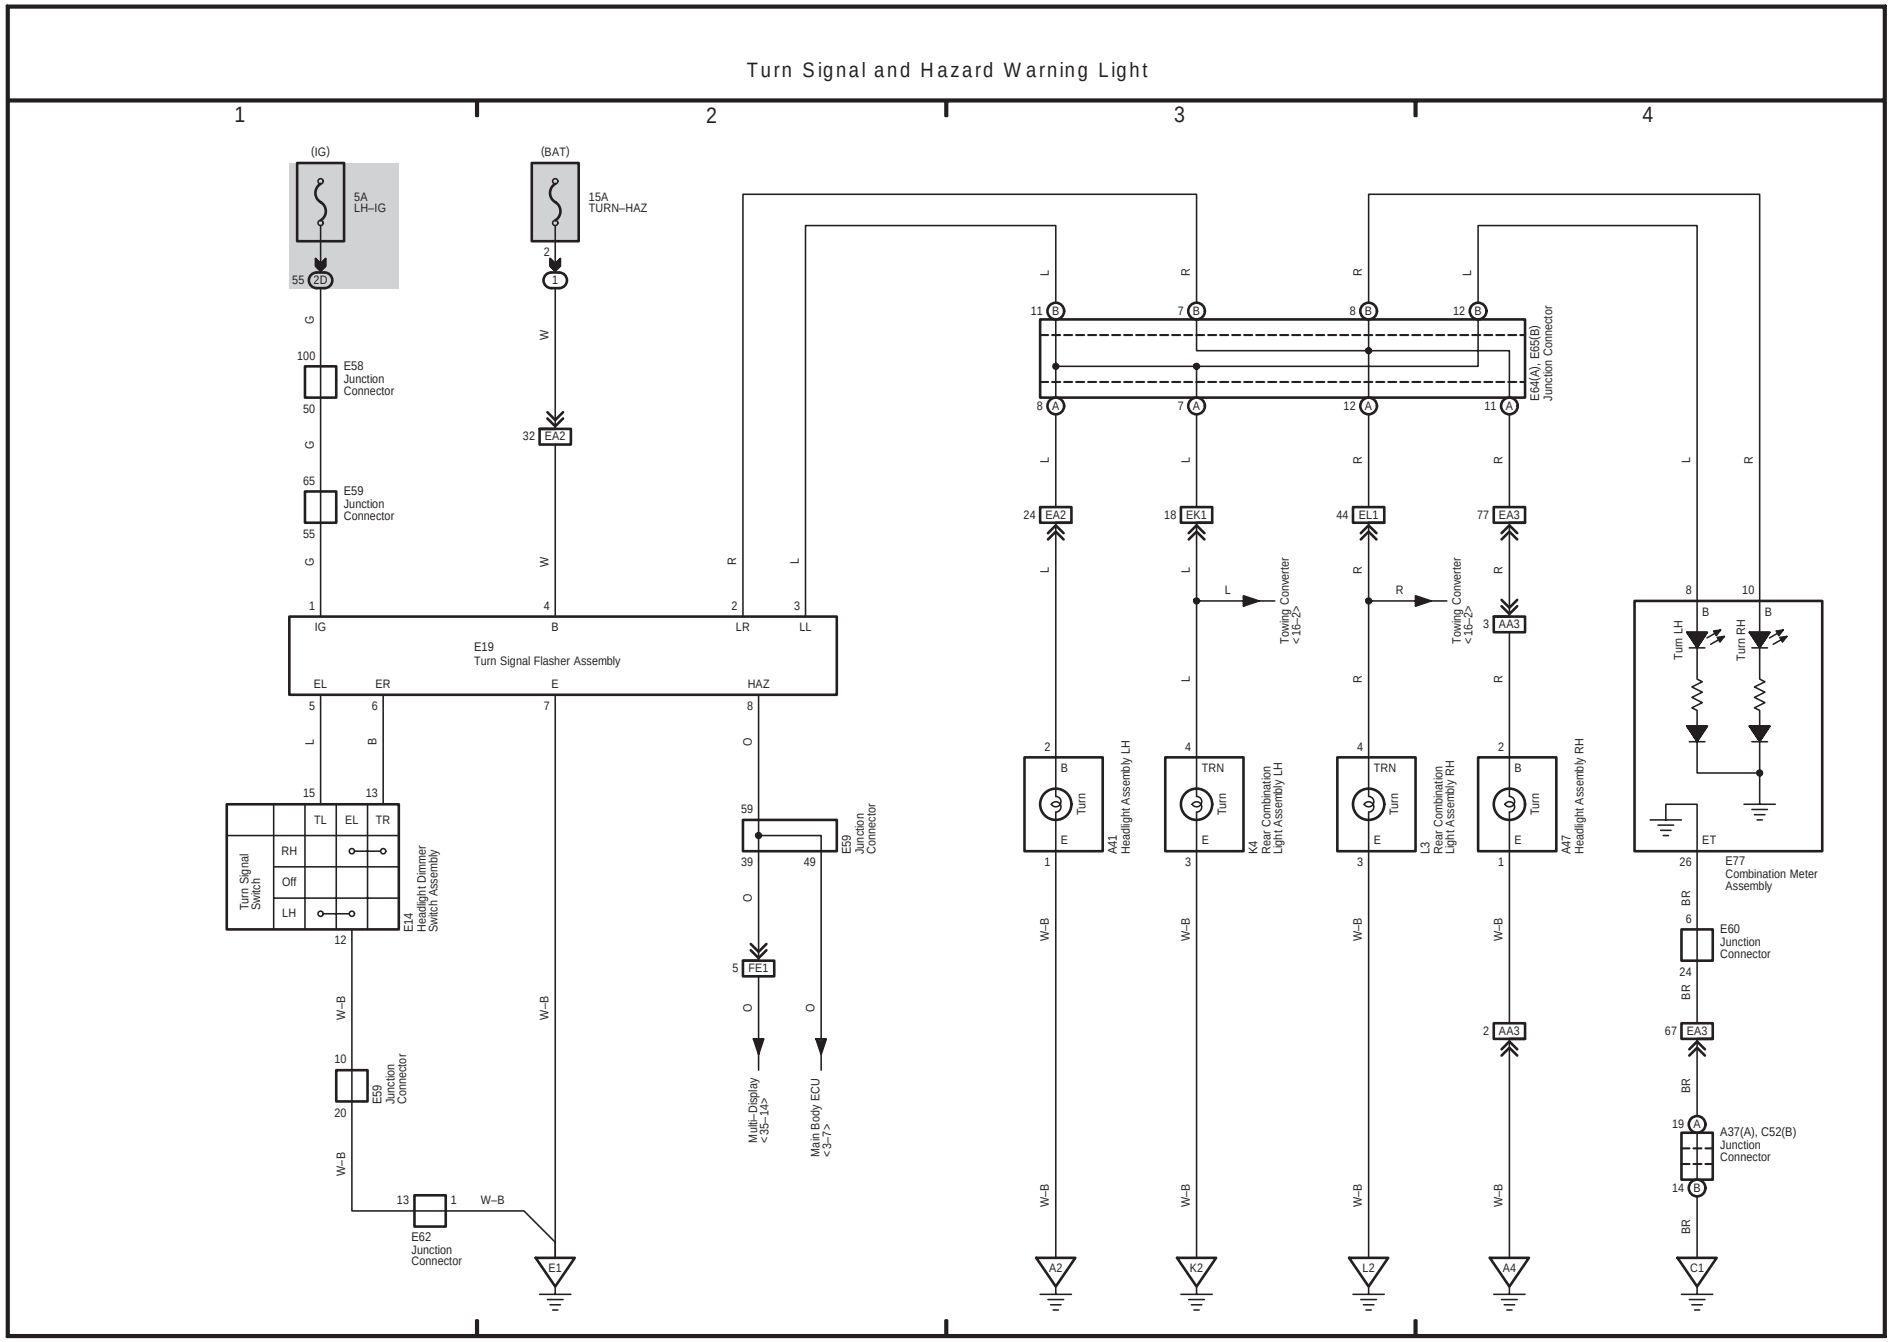
Turn Signal and Hazard Warning Light
1
2
3
4
(IG)
(BAT)
5A
LH–IG
15A
TURN–HAZ
E58
Junction
Connector
E59
Junction
Connector
E19
Turn Signal Flasher Assembly
IG
B
LR
LL
EL
ER
E
HAZ
Turn Signal
Switch
RH
Off
LH
TL
EL
TR
E14
Headlight Dimmer
Switch Assembly
E62
Junction
Connector
E1
Multi-Display
<35–14>
Main Body ECU
<3–7>
E64(A), E65(B)
Junction Connector
Towing Converter
<16–2>
A41
Headlight Assembly LH
K4
Rear Combination
Light Assembly LH
L3
Rear Combination
Light Assembly RH
A47
Headlight Assembly RH
Turn
TRN
A2
K2
L2
A4
Turn LH
Turn RH
ET
E77
Combination Meter
Assembly
E60
Junction
Connector
A37(A), C52(B)
Junction
Connector
C1