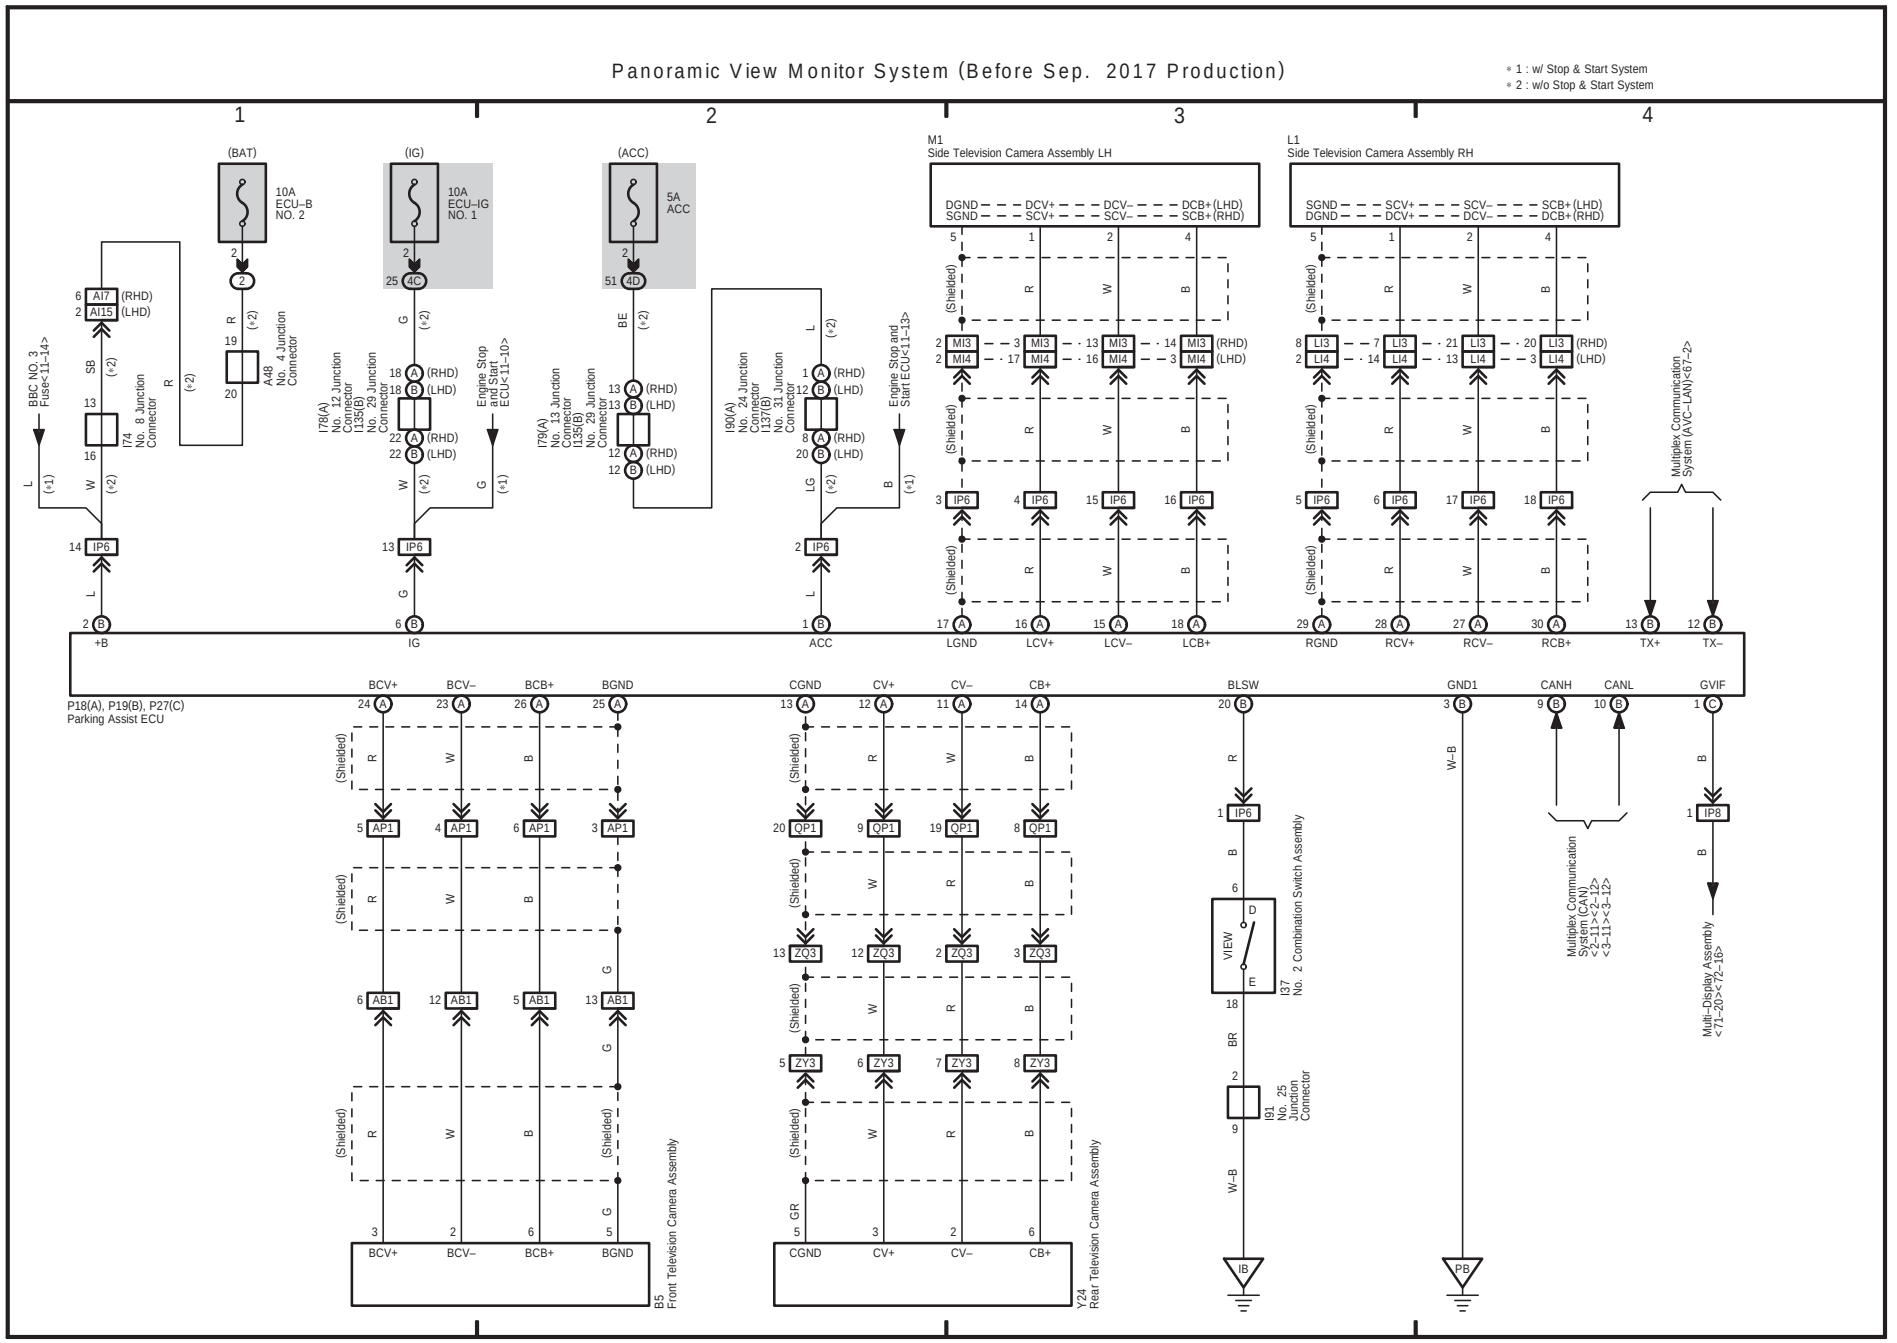
Panoramic View Monitor System (Before Sep. 2017 Production)
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
1
2
3
4
(BAT)
10A ECU–B NO. 2
(IG)
10A ECU–IG NO. 1
(ACC)
5A ACC
M1
Side Television Camera Assembly LH
L1
Side Television Camera Assembly RH
BBC NO. 3 Fuse<11–14>
I74 No. 8 Junction Connector
A48 No. 4 Junction Connector
I78(A) No. 12 Junction Connector I135(B) No. 29 Junction Connector
Engine Stop and Start ECU<11–10>
I79(A) No. 13 Junction Connector I135(B) No. 29 Junction Connector
I90(A) No. 24 Junction Connector I135(B) No. 31 Junction Connector
Engine Stop and Start ECU<11–13>
Multiplex Communication System (AVC–LAN)<67–2>
+B
IG
ACC
LGND
LCV+
LCV–
LCB+
RGND
RCV+
RCV–
RCB+
TX+
TX–
P18(A), P19(B), P27(C) Parking Assist ECU
BCV+
BCV–
BCB+
BGND
CGND
CV+
CV–
CB+
BLSW
GND1
CANH
CANL
GVIF
B5 Front Television Camera Assembly
Y24 Rear Television Camera Assembly
I37 No. 2 Combination Switch Assembly
I91 No. 25 Junction Connector
Multiplex Communication System (CAN) <2–11><2–12> <3–11><3–12>
Multi–Display Assembly <71–20><72–16>
IB
PB