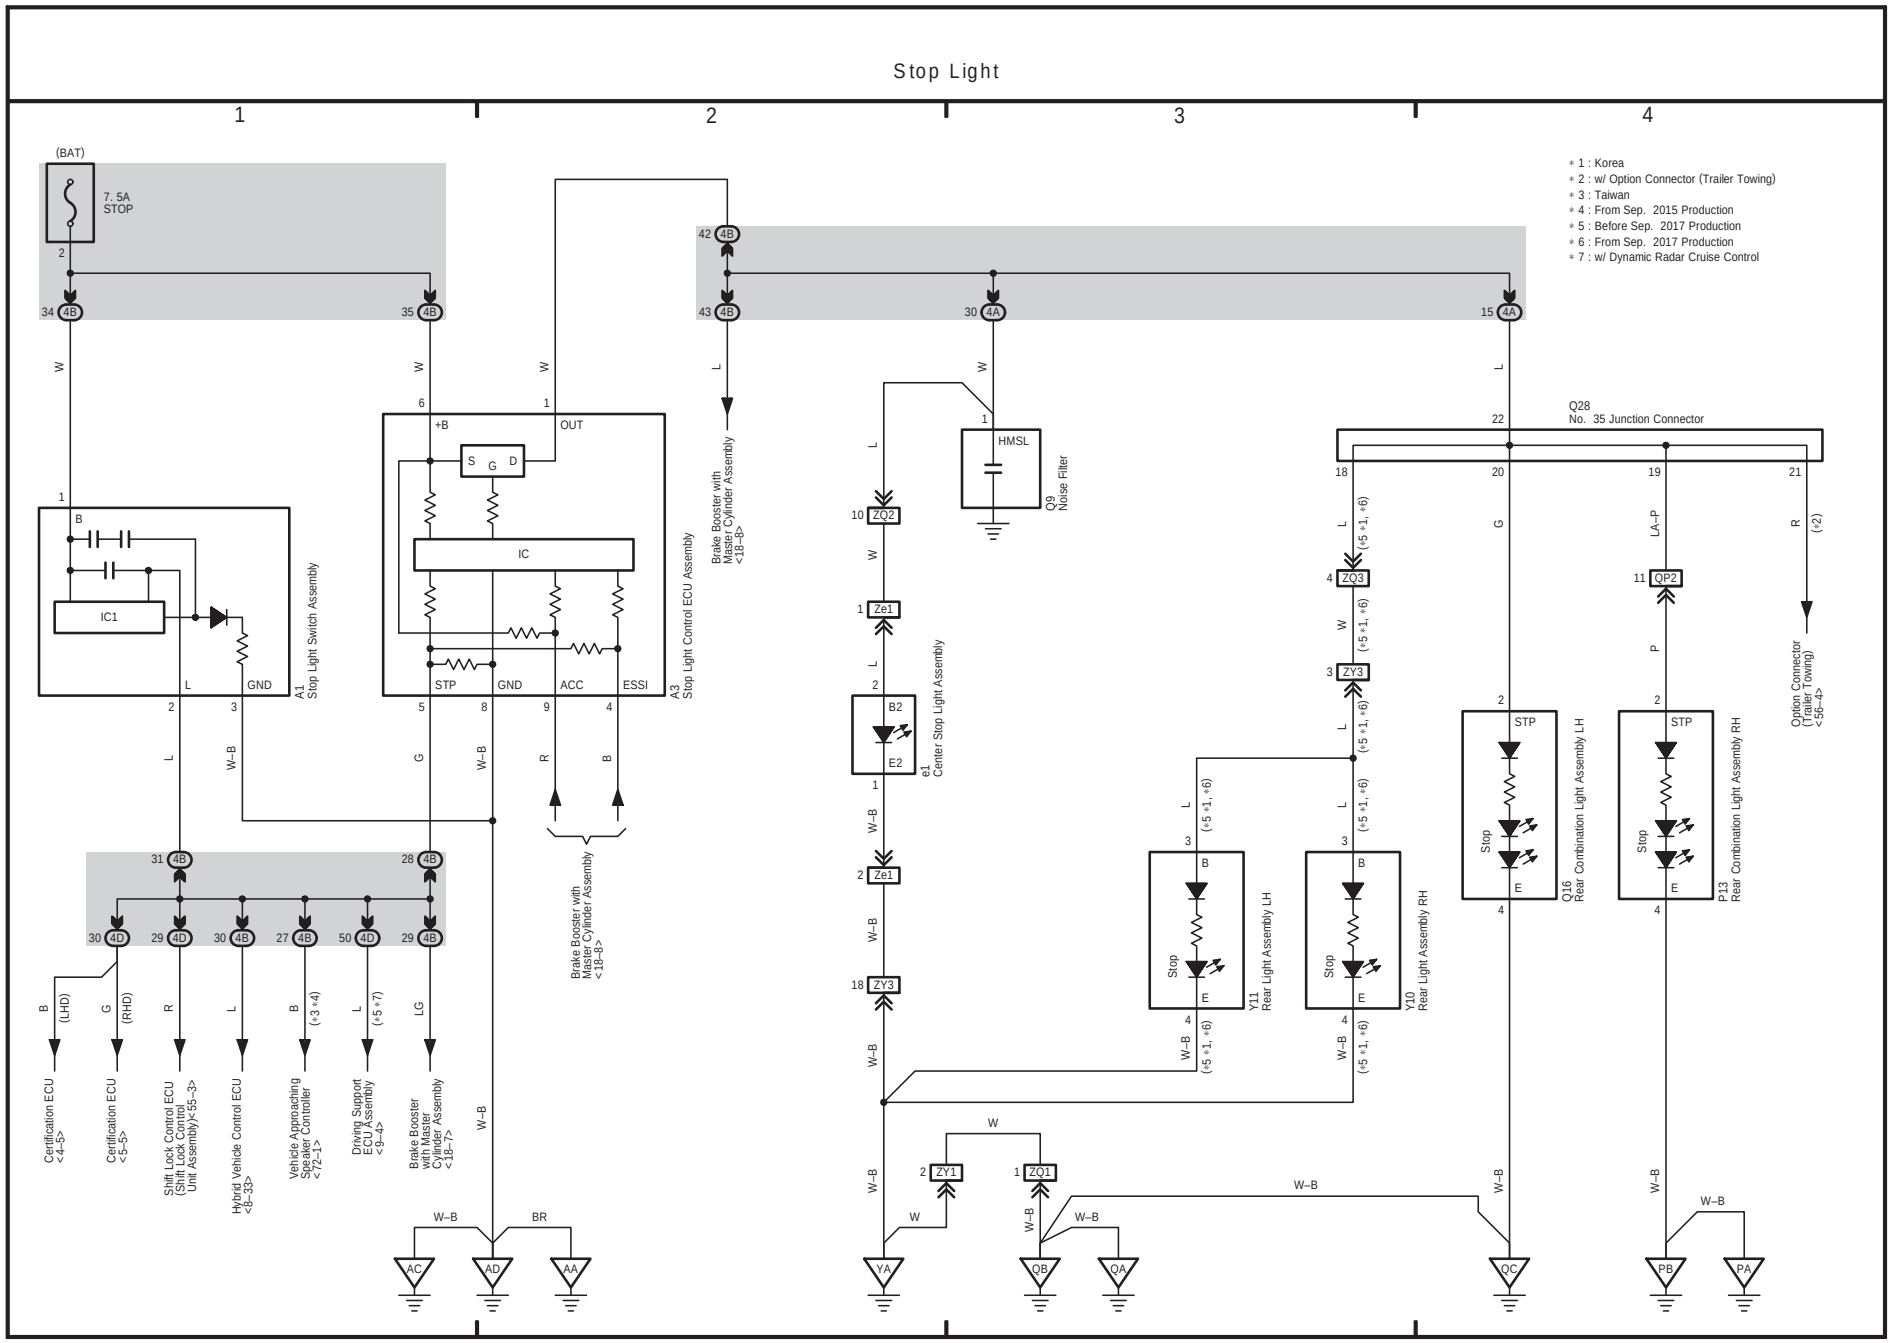
Stop Light
1
2
3
4
(BAT)
7. 5A
STOP
2
34 4B
35 4B
42 4B
43 4B
30 4A
15 4A
W
L
1
B
IC1
L
GND
2
3
A1
Stop Light Switch Assembly
6
1
+B
OUT
S
G
D
IC
STP
GND
ACC
ESSI
5
8
9
4
A3
Stop Light Control ECU Assembly
Brake Booster with
Master Cylinder Assembly
<18–8>
10 ZQ2
1 Ze1
2 B2
E2
e1
Center Stop Light Assembly
18 ZY3
2 ZY1
1 ZQ1
HMSL
Q9
Noise Filter
Q28
No. 35 Junction Connector
22
18
20
19
21
4 ZQ3
3 ZY3
11 QP2
(*5 *1, *6)
(*2)
Option Connector
(Trailer Towing)
<56–4>
STP
Stop
E
Q16
Rear Combination Light Assembly LH
P13
Rear Combination Light Assembly RH
Y11
Rear Light Assembly LH
Y10
Rear Light Assembly RH
31 4B
28 4B
30 4D
29 4D
30 4B
27 4B
50 4D
29 4B
W–B
G
R
B
LG
BR
(LHD)
(RHD)
(*3 *4)
(*5 *7)
Certification ECU
<4–5>
Certification ECU
<5–5>
Shift Lock Control ECU
(Shift Lock Control
Unit Assembly)<35–3>
Hybrid Vehicle Control ECU
<8–33>
Vehicle Approaching
Speaker Controller
<72–1>
Driving Support
ECU Assembly
<9–4>
Brake Booster
with Master
Cylinder Assembly
<18–7>
AC
AD
AA
YA
QB
QA
QC
PB
PA
* 1 : Korea
* 2 : w/ Option Connector (Trailer Towing)
* 3 : Taiwan
* 4 : From Sep. 2015 Production
* 5 : Before Sep. 2017 Production
* 6 : From Sep. 2017 Production
* 7 : w/ Dynamic Radar Cruise Control