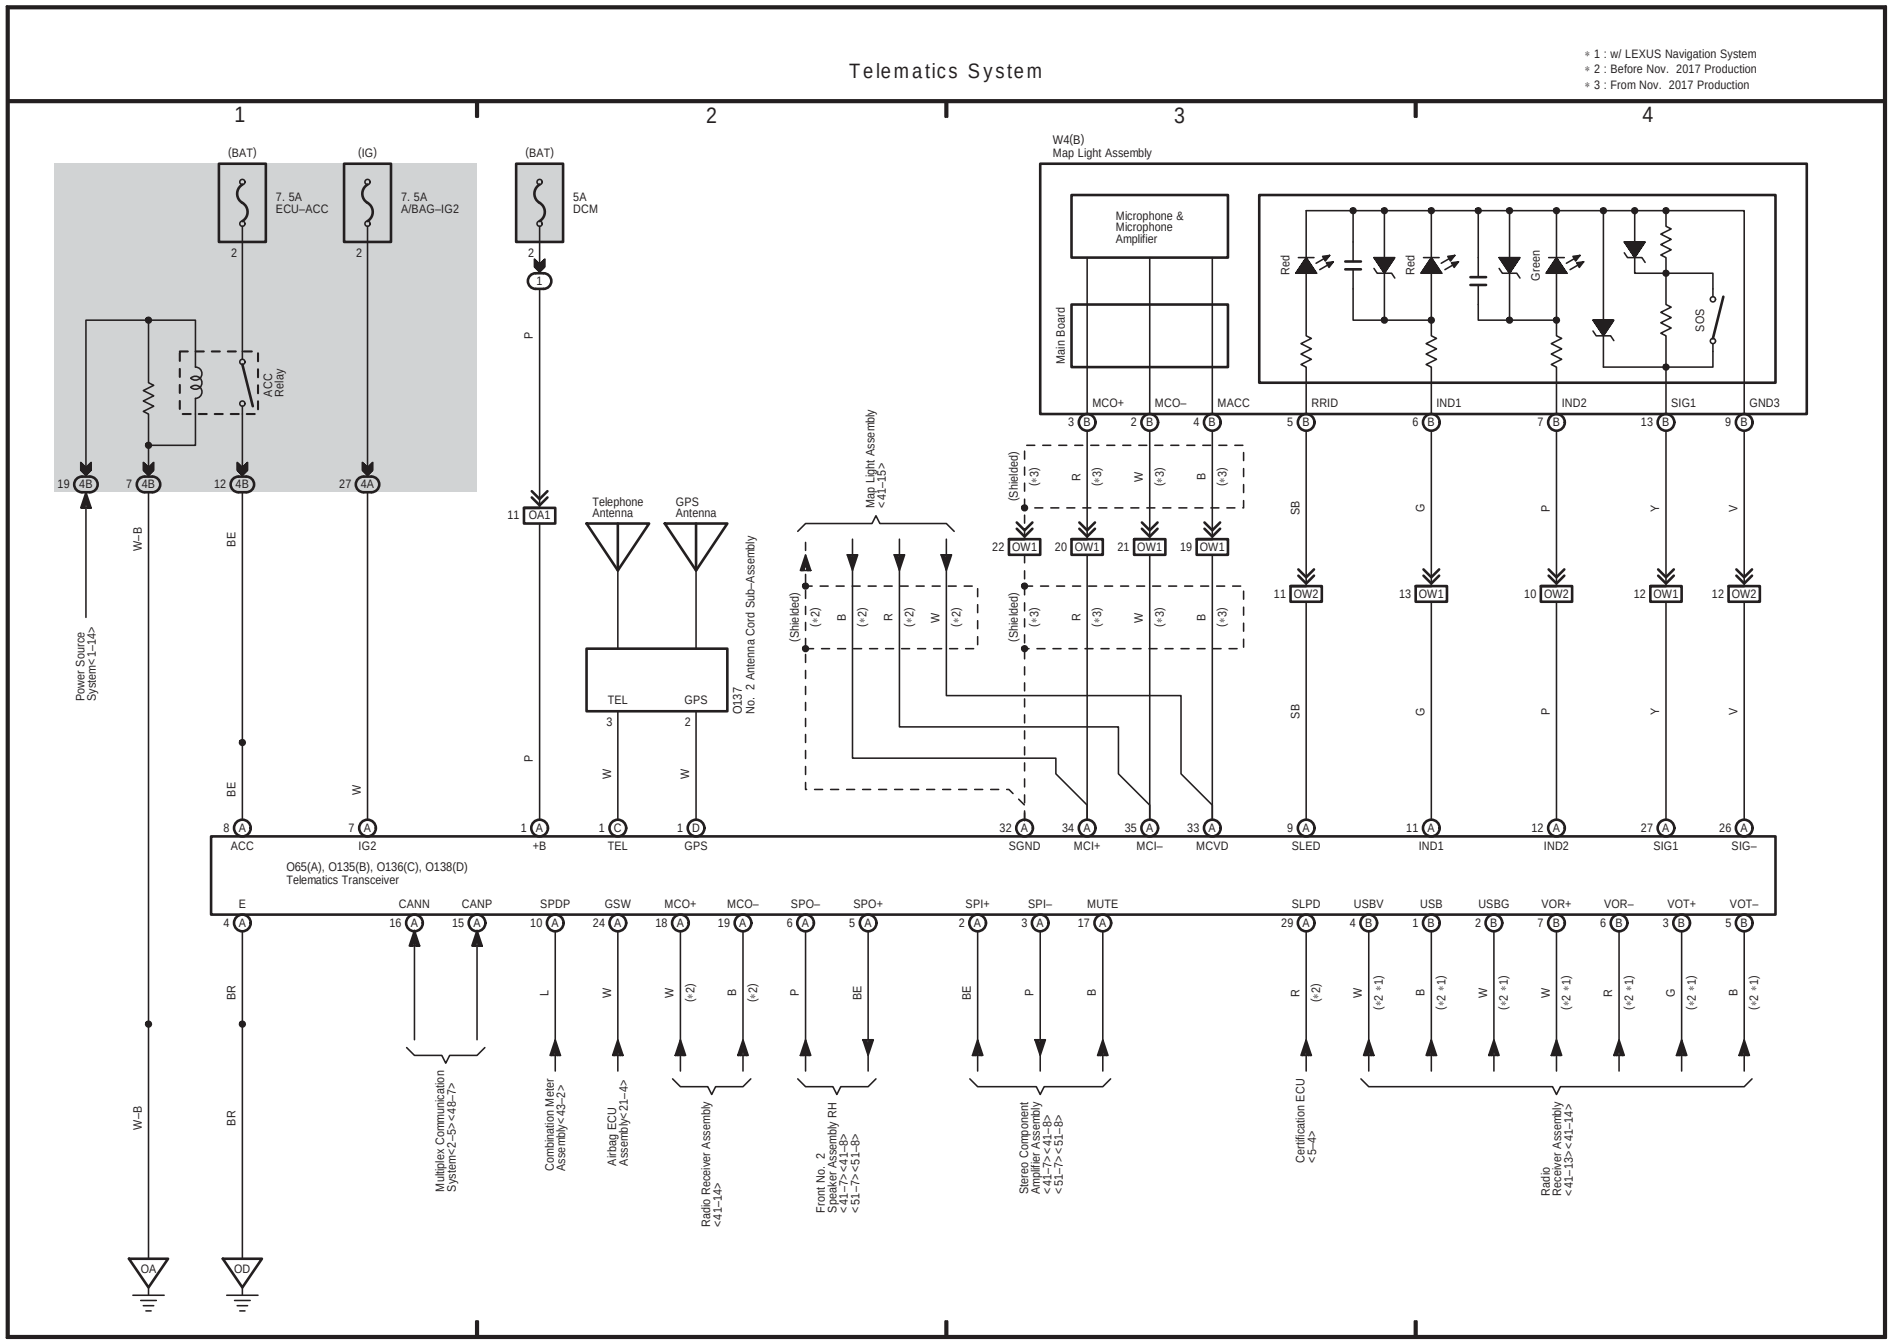

Telematics System
* 1 : w/ LEXUS Navigation System
* 2 : Before Nov. 2017 Production
* 3 : From Nov. 2017 Production
1
2
3
4
(BAT)
(IG)
7. 5A ECU–ACC
7. 5A A/BAG–IG2
ACC Relay
Power Source System<1–14>
(BAT)
5A DCM
P
OA1
Telephone Antenna
GPS Antenna
TEL
GPS
O137 No. 2 Antenna Cord Sub–Assembly
Map Light Assembly <41–15>
W4(B) Map Light Assembly
Microphone & Microphone Amplifier
Main Board
Red
Red
Green
SOS
MCO+
MCO–
MACC
RRID
IND1
IND2
SIG1
GND3
(Shielded)
OW1
OW2
SB
G
P
Y
V
W–B
BE
W
BR
OA
OD
ACC
IG2
+B
TEL
GPS
SGND
MCI+
MCI–
MCVD
SLED
IND1
IND2
SIG1
SIG–
O65(A), O135(B), O136(C), O138(D) Telematics Transceiver
E
CANN
CANP
SPDP
GSW
MCO+
MCO–
SPO–
SPO+
SPI+
SPI–
MUTE
SLPD
USBV
USB
USBG
VOR+
VOR–
VOT+
VOT–
L
R
Multiplex Communication System<2–5><48–7>
Combination Meter Assembly<43–2>
Airbag ECU Assembly<21–4>
Radio Receiver Assembly <41–14>
Front No. 2 Speaker Assembly RH <41–7><41–8> <51–7><51–8>
Stereo Component Amplifier Assembly <41–7><41–8> <51–7><51–8>
Certification ECU <5–4>
Radio Receiver Assembly <41–13><41–14>
(*1)
(*2)
(*3)