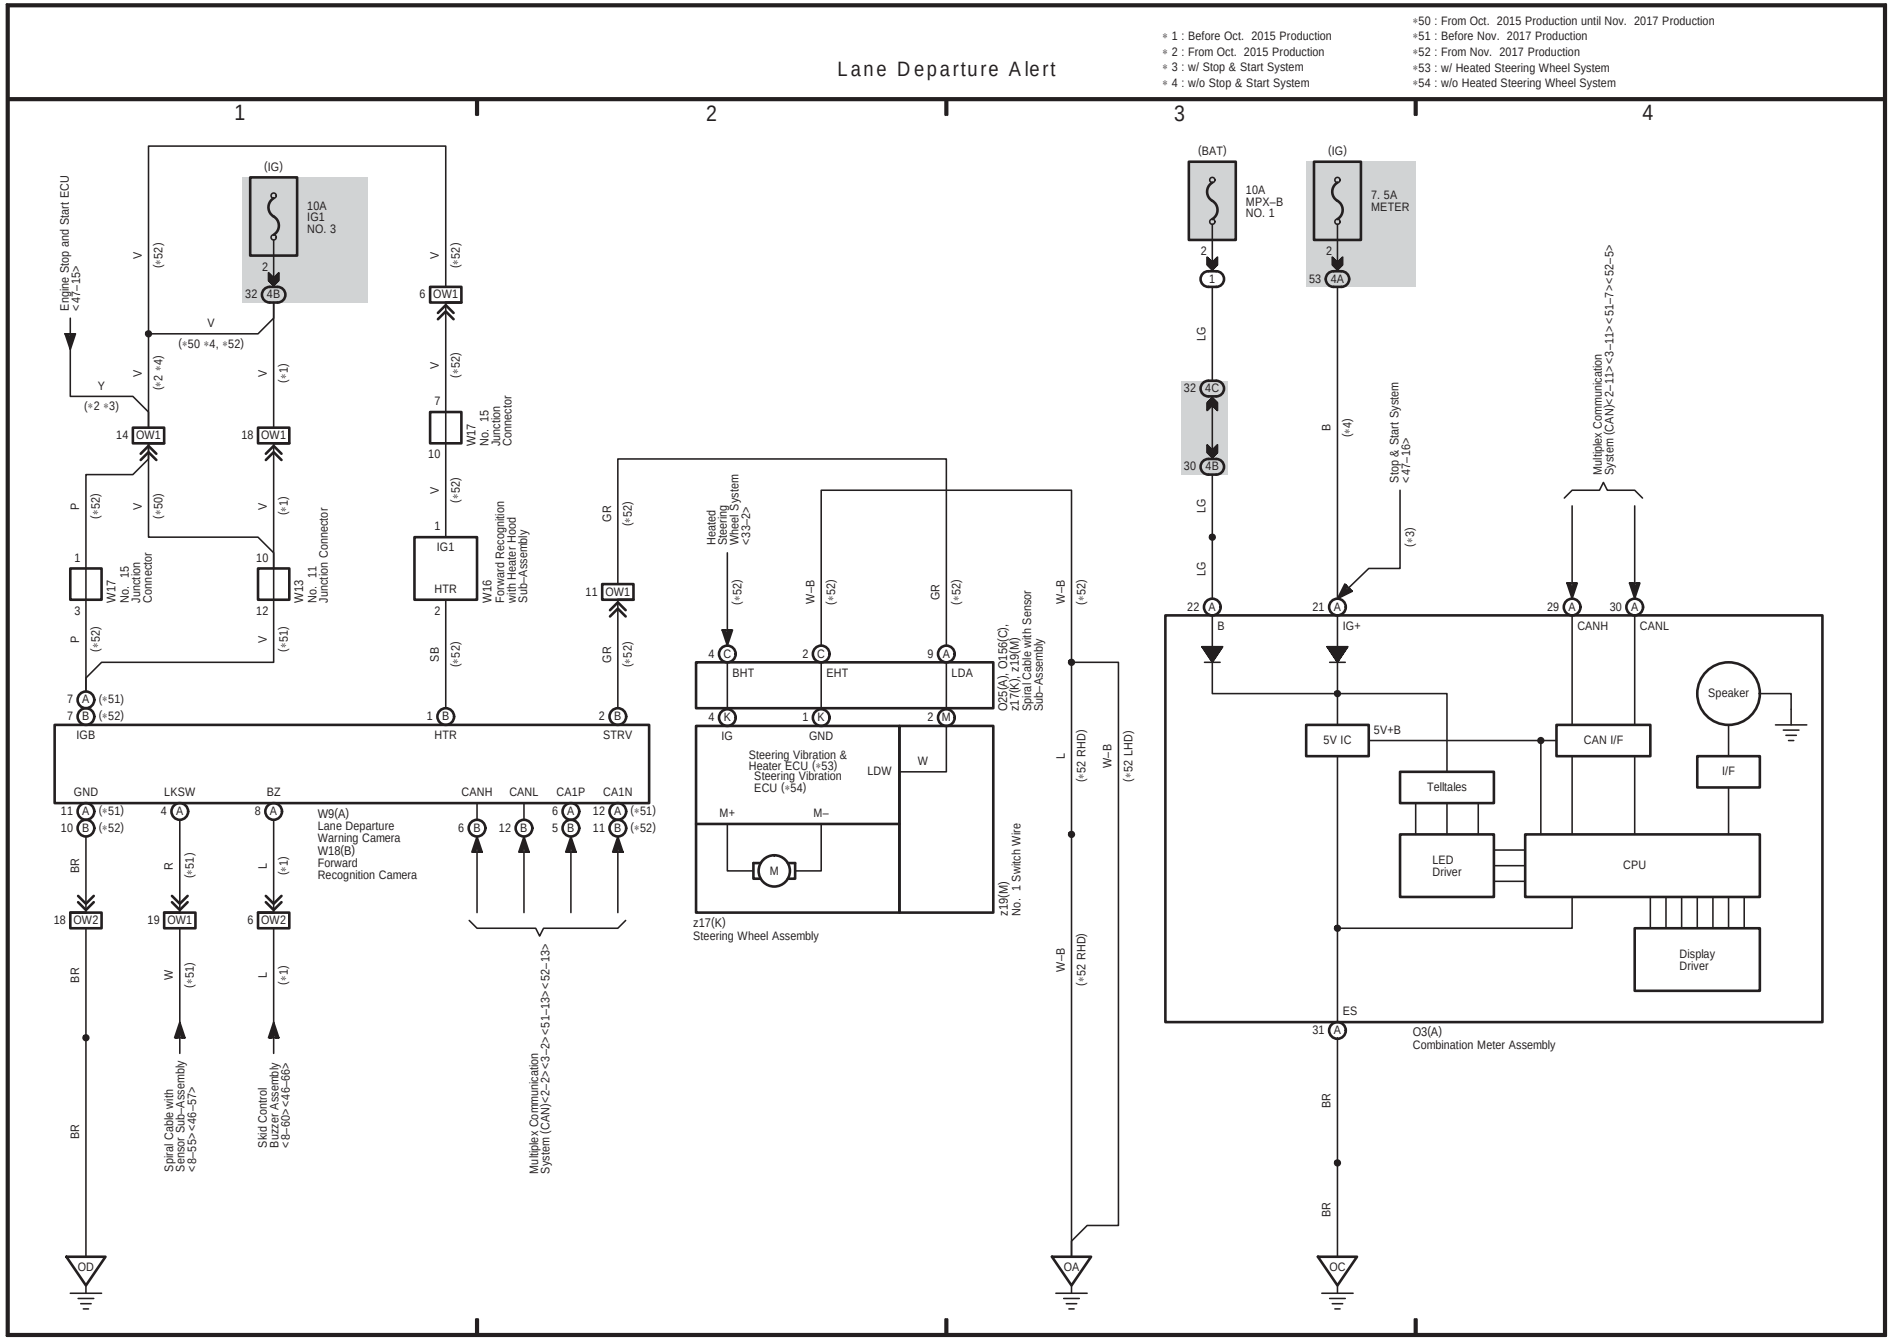
Lane Departure Alert
∗1 : Before Oct. 2015 Production
∗2 : From Oct. 2015 Production
∗3 : w/ Stop & Start System
∗4 : w/o Stop & Start System
∗50 : From Oct. 2015 Production until Nov. 2017 Production
∗51 : Before Nov. 2017 Production
∗52 : From Nov. 2017 Production
∗53 : w/ Heated Steering Wheel System
∗54 : w/o Heated Steering Wheel System
1
2
3
4
Engine Stop and Start ECU <47–15>
(IG)
10A IG1 NO. 3
W17 No. 15 Junction Connector
W13 No. 11 Junction Connector
W16 Forward Recognition with Heater Hood Sub–Assembly
Heated Steering Wheel System <33–2>
O25(A), O156(C), z17(K), z19(M) Spiral Cable with Sensor Sub–Assembly
z17(K) Steering Wheel Assembly
Steering Vibration & Heater ECU (∗53) Steering Vibration ECU (∗54)
z19(M) No. 1 Switch Wire
W9(A) Lane Departure Warning Camera
W18(B) Forward Recognition Camera
Spiral Cable with Sensor Sub–Assembly <8–53> <46–57>
Skid Control Buzzer Assembly <8–60> <46–66>
Multiplex Communication System (CAN) <2–2> <3–2> <51–13> <52–13>
(BAT)
10A MPX–B NO. 1
7. 5A METER
Stop & Start System <47–16>
Multiplex Communication System (CAN) <2–11> <3–11> <51–7> <52–5>
Speaker
5V IC
CAN I/F
Telltales
LED Driver
CPU
Display Driver
O3(A) Combination Meter Assembly