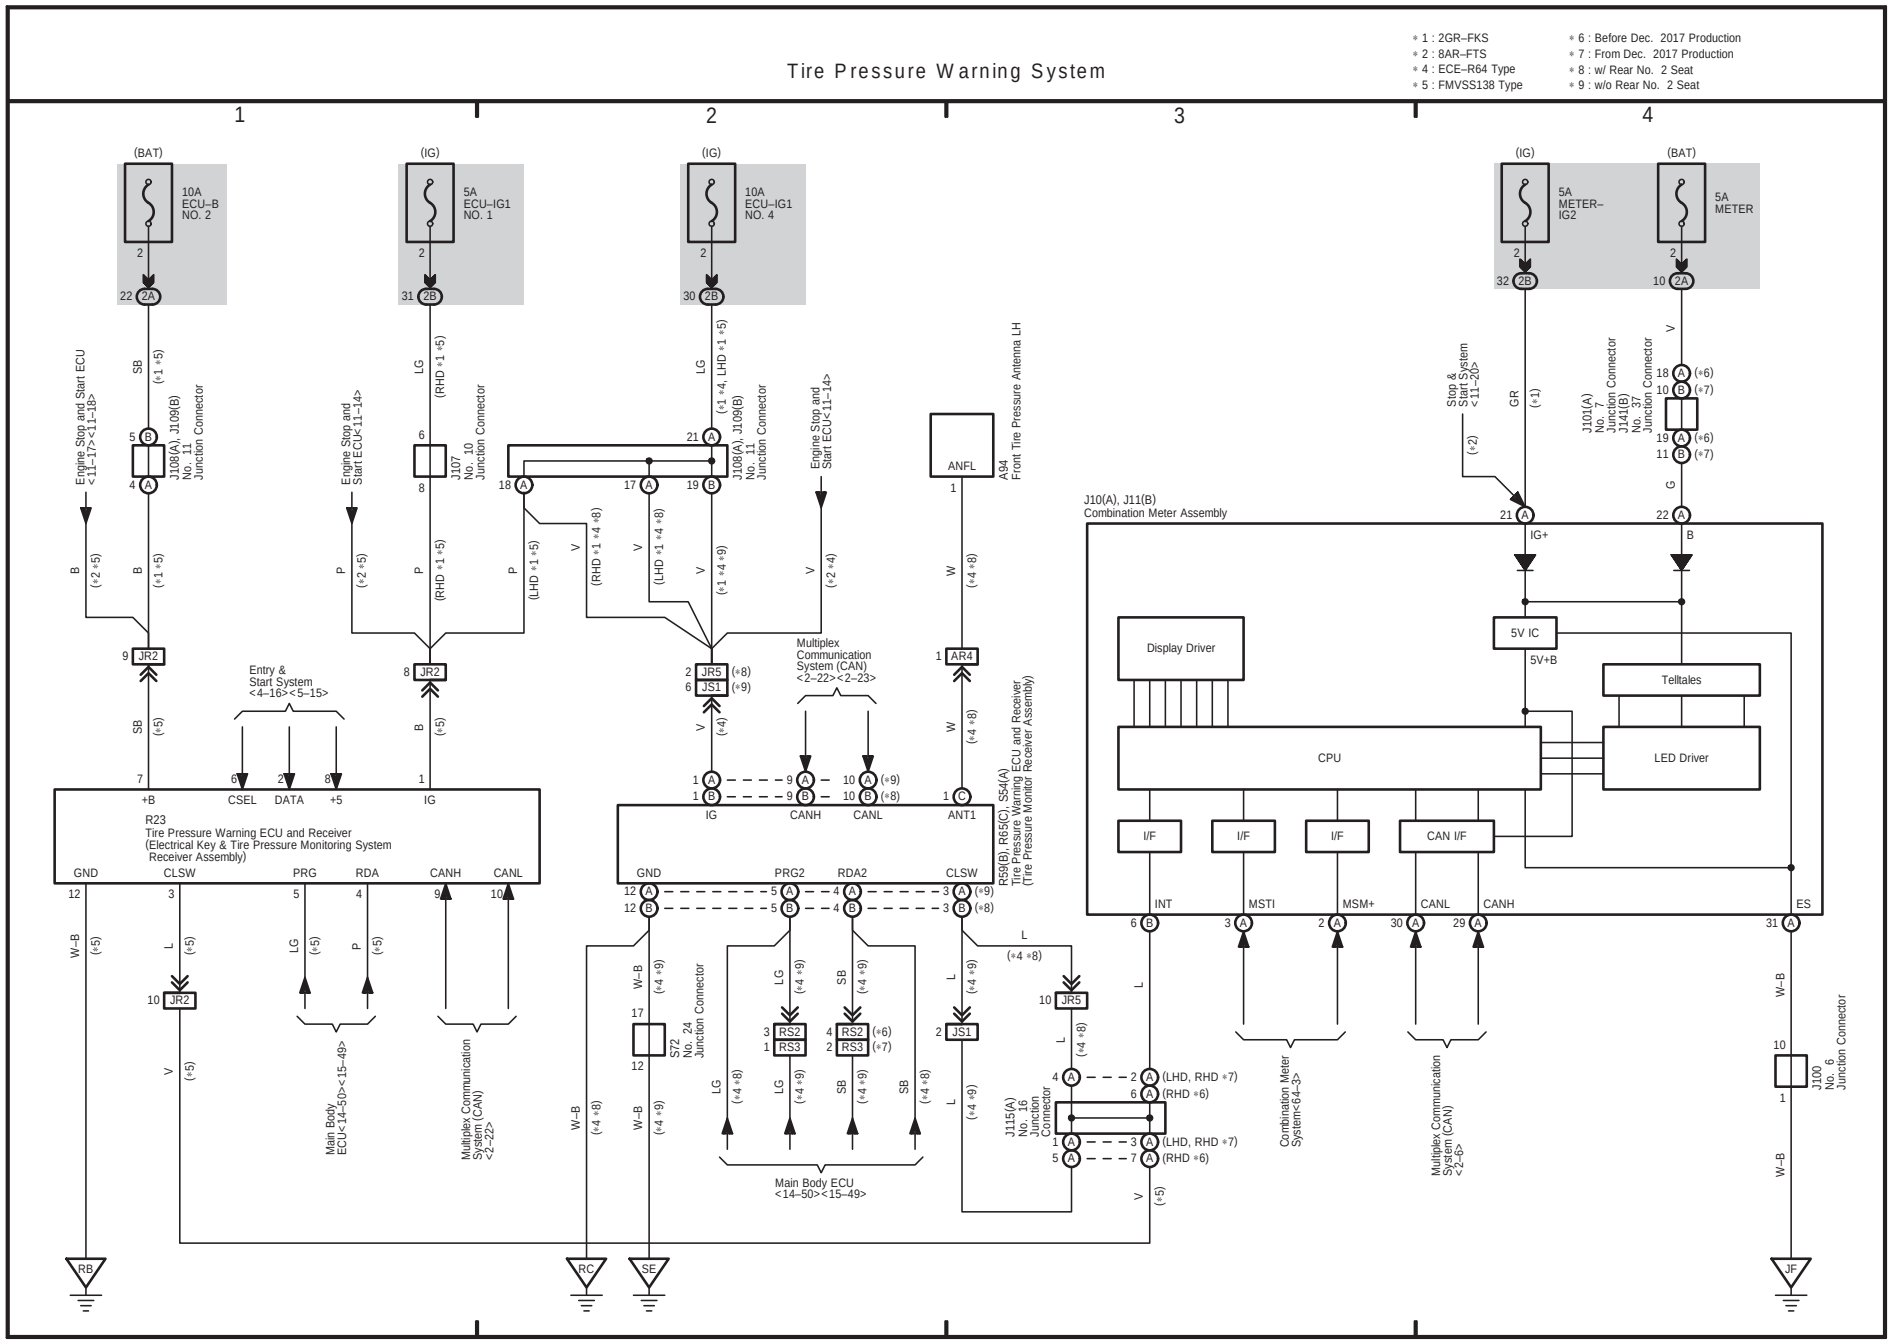

Tire Pressure Warning System
* 1 : 2GR–FKS
* 2 : 8AR–FTS
* 4 : ECE–R64 Type
* 5 : FMVSS138 Type
* 6 : Before Dec. 2017 Production
* 7 : From Dec. 2017 Production
* 8 : w/ Rear No. 2 Seat
* 9 : w/o Rear No. 2 Seat
1
2
3
4
(BAT)
10A ECU–B NO. 2
(IG)
5A ECU–IG1 NO. 1
(IG)
10A ECU–IG1 NO. 4
(IG)
5A METER–IG2
(BAT)
5A METER
Engine Stop and Start ECU <11–17><11–18>
Engine Stop and Start ECU<11–14>
Engine Stop and Start ECU<11–14>
Stop & Start System <11–20>
J108(A), J109(B) No. 11 Junction Connector
J107 No. 10 Junction Connector
J108(A), J109(B) No. 11 Junction Connector
J101(A) No. 7 Junction Connector J141(B) No. 3 Junction Connector
ANFL
A94 Front Tire Pressure Antenna LH
J10(A), J11(B) Combination Meter Assembly
IG+
B
5V IC
5V+B
Display Driver
Telltales
CPU
LED Driver
I/F
I/F
I/F
CAN I/F
INT
MSTI
MSM+
CANL
CANH
ES
Entry & Start System <4–16><5–15>
Multiplex Communication System (CAN) <2–22><2–23>
R23
Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly)
R59(B), R65(C), S54(A)
Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
+B
CSEL
DATA
+5
IG
IG
CANH
CANL
ANT1
GND
CLSW
PRG
RDA
CANH
CANL
GND
PRG2
RDA2
CLSW
S72 No. 24 Junction Connector
J115(A) No. 16 Junction Connector
Main Body ECU<14–50><15–49>
Multiplex Communication System (CAN) <2–22>
Combination Meter System<64–3>
Multiplex Communication System (CAN) <2–6>
J100 No. 6 Junction Connector
RB
RC
SE
JF