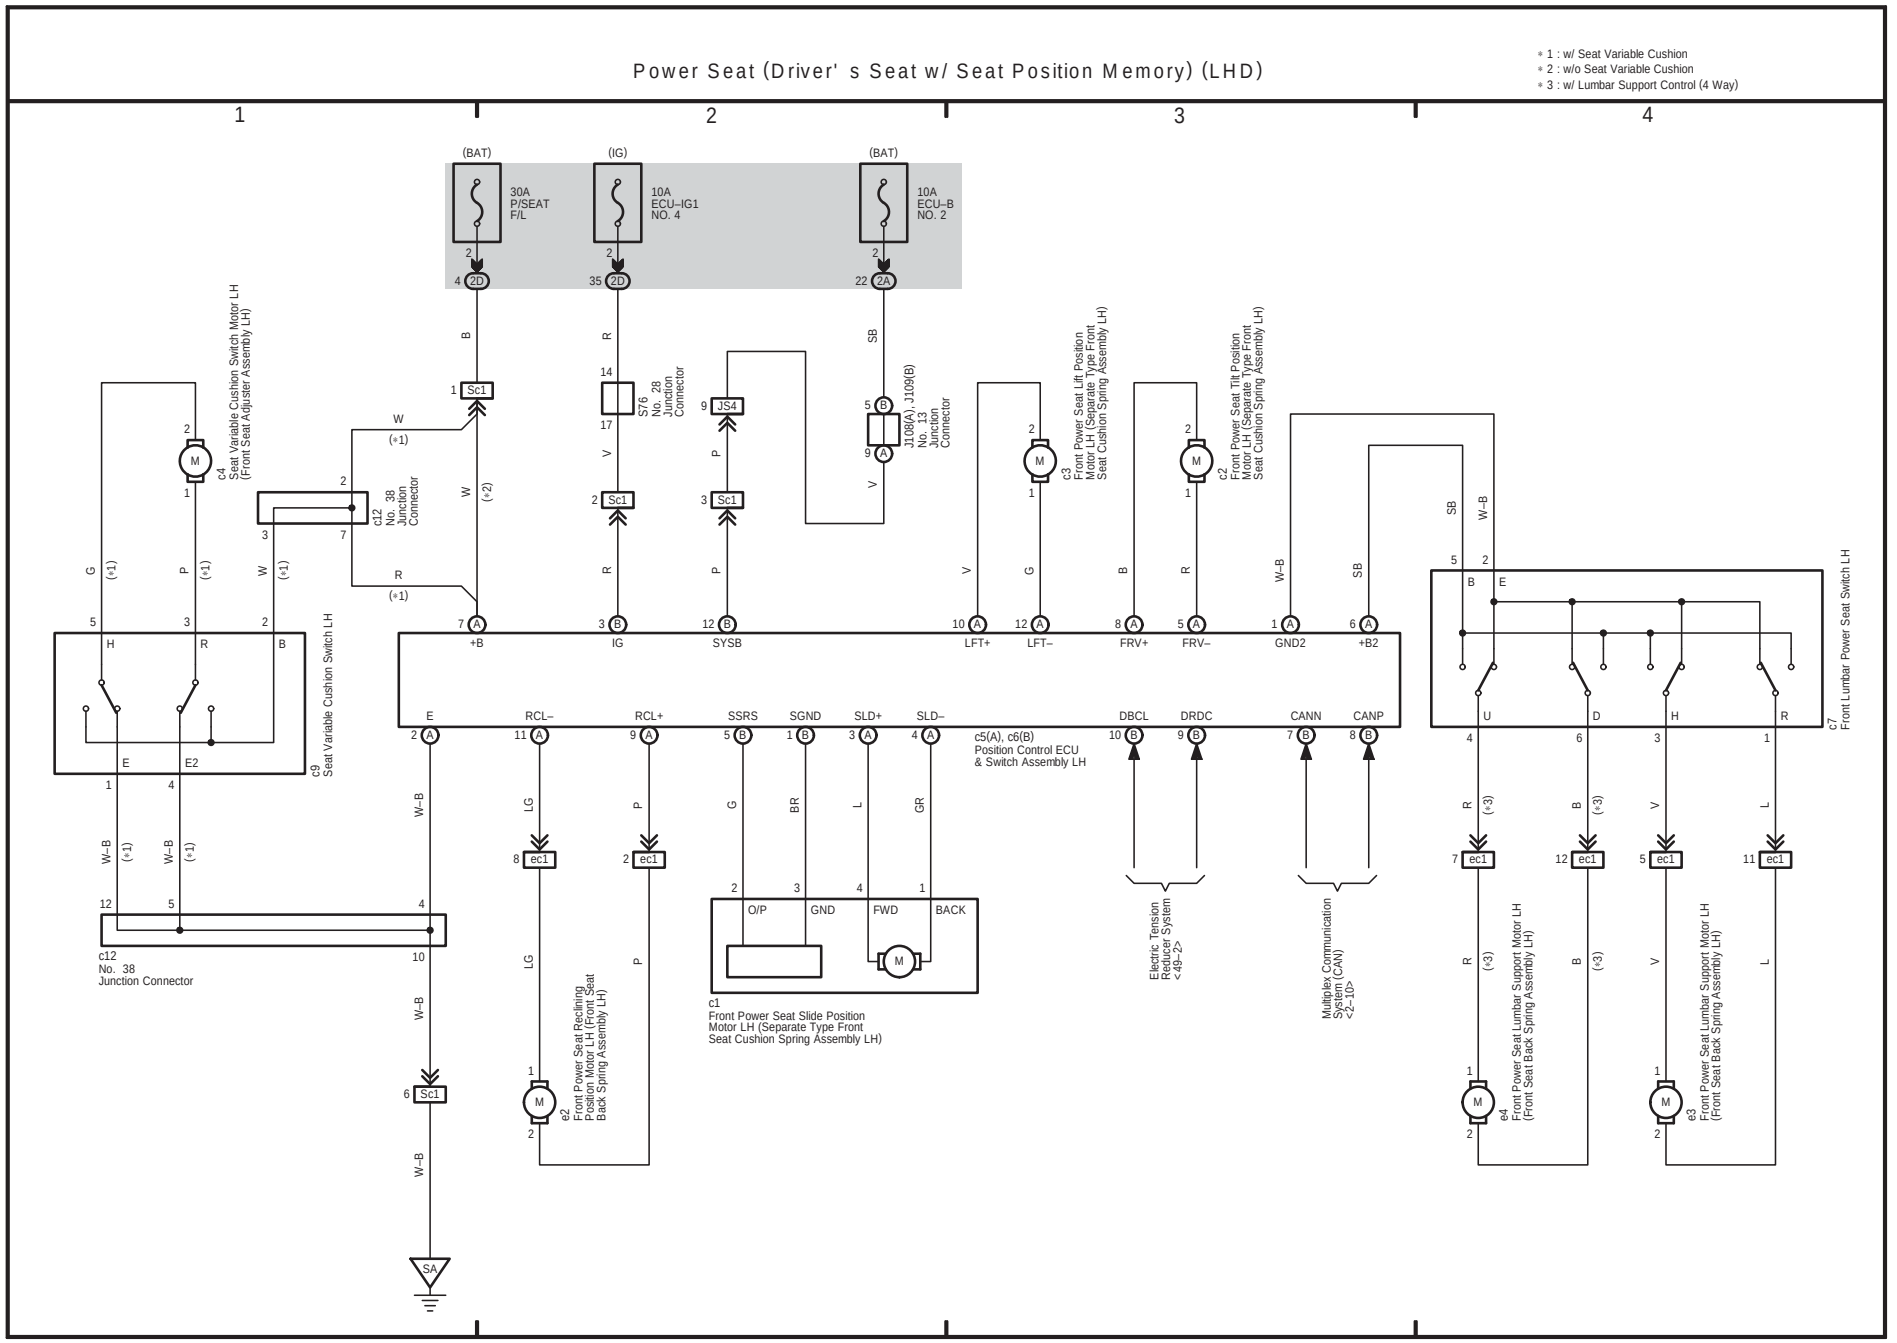
Power Seat (Driver' s Seat w/ Seat Position Memory) (LHD)
* 1 : w/ Seat Variable Cushion
* 2 : w/o Seat Variable Cushion
* 3 : w/ Lumbar Support Control (4 Way)
1
2
3
4
(BAT)
30A P/SEAT F/L
(IG)
10A ECU–IG1 NO. 4
(BAT)
10A ECU–B NO. 2
c4 Seat Variable Cushion Switch Motor LH (Front Seat Adjuster Assembly LH)
c12 No. 38 Junction Connector
S76 No. 28 Junction Connector
JS4
J108(A), J109(B) No. 13 Junction Connector
c3 Front Power Seat Lift Position Motor LH (Separate Type Front Seat Cushion Spring Assembly LH)
c2 Front Power Seat Tilt Position Motor LH (Separate Type Front Seat Cushion Spring Assembly LH)
c7 Front Lumbar Power Seat Switch LH
c9 Seat Variable Cushion Switch LH
+B
IG
SYSB
LFT+
LFT–
FRV+
FRV–
GND2
+B2
E
RCL–
RCL+
SSRS
SGND
SLD+
SLD–
DBCL
DRDC
CANN
CANP
c5(A), c6(B) Position Control ECU & Switch Assembly LH
c1 Front Power Seat Slide Position Motor LH (Separate Type Front Seat Cushion Spring Assembly LH)
O/P
GND
FWD
BACK
e2 Front Power Seat Reclining Position Motor LH (Front Seat Back Spring Assembly LH)
Electric Tension Reducer System <49–2>
Multiplex Communication System (CAN) <2–10>
e4 Front Power Seat Lumbar Support Motor LH (Front Seat Back Spring Assembly LH)
e3 Front Power Seat Lumbar Support Motor LH (Front Seat Back Spring Assembly LH)
SA