REMOVAL

1. BOLT, SCREW AND NUT TABLE

HINT:

The bolts, screws and nuts, necessary for installation and removal of the instrument panel, are shown in the illustration below with alphabet code.

mm (in.) (L=Length)

Code	Shape	Code	Shape	Code	Shape
<A>	φ=6 (0.24) L=25 (0.98) 91635-60625	<B>	φ=8 (0.31) L=20 (0.79) 91635 - 60820	<C>	φ=5 (0.20) L=16 (0.63) B50922 93567-55016
<D>	φ=6 (0.24) B51347 90179-06200				

P B108505E01

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait for 90 seconds after disconnecting the cable to prevent the airbag working (See page RS-1).

3. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY

(a) Turn the shift lever knob counterclockwise and remove the shift lever knob sub-assembly.

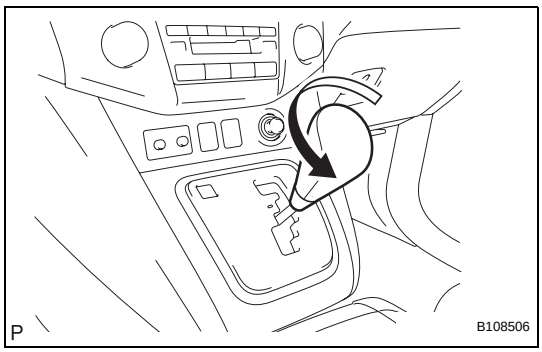

P B108506

IP

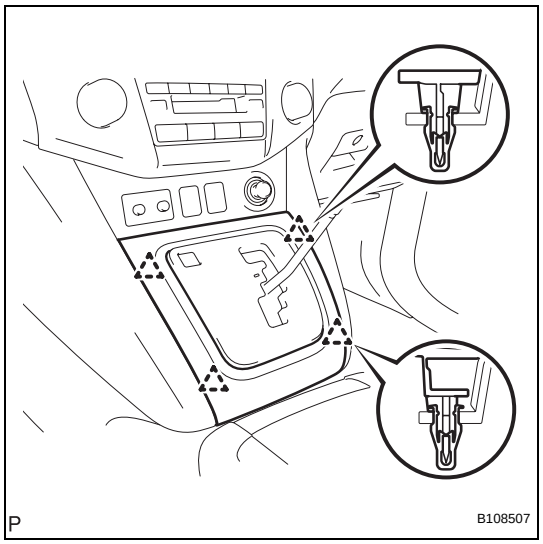

4. **REMOVE CONSOLE PANEL UPPER FRONT**
   (a) Disengage the 4 clips and remove the console panel upper front.

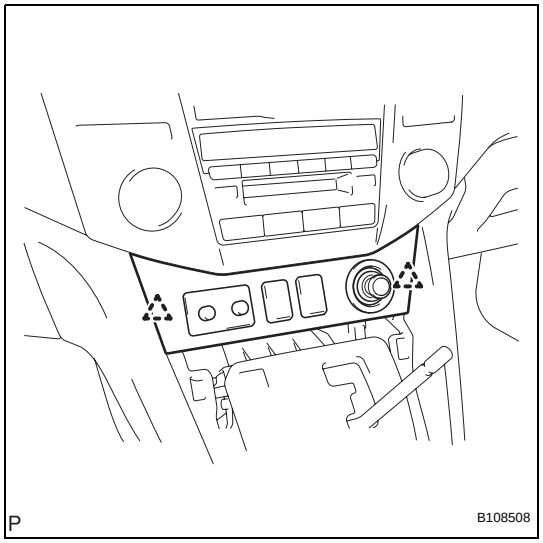

5. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER**
   (a) Disengage the 2 clips.
   (b) Disconnect the connectors and remove the instrument panel finish panel lower.
6. **REMOVE RADIO RECEIVER (See page AV-232)**
7. **REMOVE CENTER CLUSTER INTEGRATION SWITCH (w/o Navigation System) (See page AC-186)**
8. **REMOVE MULTI-DISPLAY (w/ Navigation System) (See page AV-235)**
9. **REMOVE STEERING WHEEL NO.2 COVER LOWER (See page RS-387)**
10. **REMOVE STEERING WHEEL NO.3 COVER LOWER (See page RS-387)**
11. **REMOVE STEERING PAD (See page RS-388)**
12. **REMOVE STEERING WHEEL ASSEMBLY (See page SR-40)**
13. **REMOVE STEERING COLUMN COVER (See page SR-40)**
14. **REMOVE TILT AND TELESCOPIC SWITCH (for Power Tilt and Power Telescopic) (See page SR-51)**
15. **REMOVE TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY**
16. **REMOVE FRONT DOOR SCUFF PLATE LH (See page IR-6)**

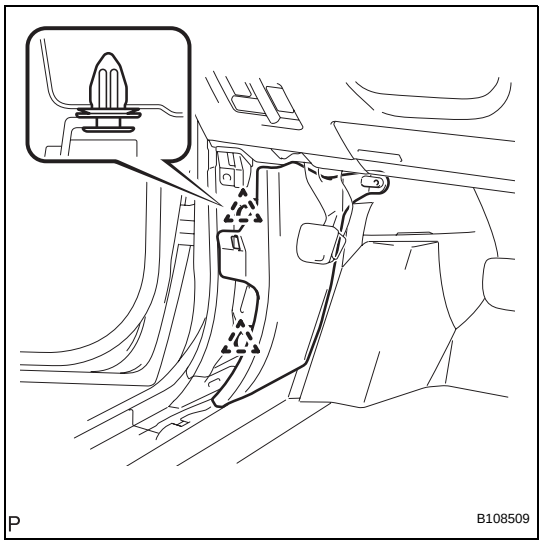

17. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH

(a) Remove the 2 clips and the cowl side trim sub-assembly LH.

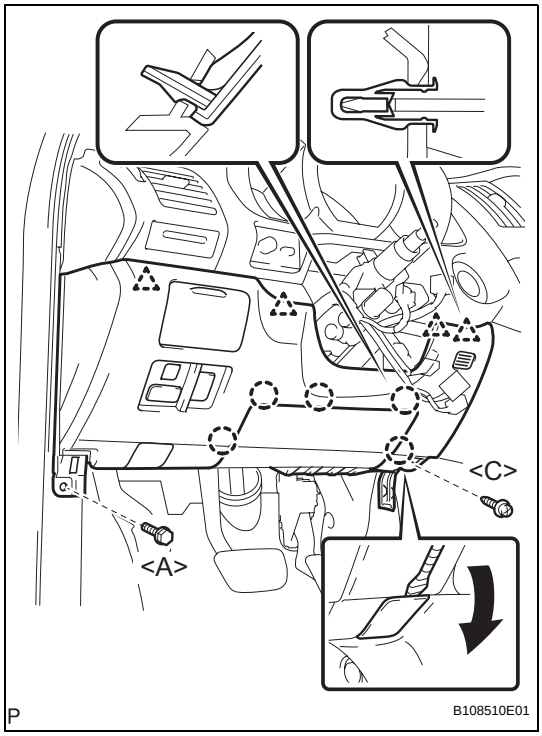

18. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER

(a) Using a screwdriver, open the instrument panel finish panel sub-assembly lower cover.
HINT:
Tape the screwdriver tip before use.
(b) Remove the bolt <A> and the screw <C>.
(c) Disconnect the hood lock control cable assembly.
(d) Disengage the 5 claws and the 4 clips.
(e) Disconnect the connectors and remove the instrument panel finish panel sub-assembly lower.

19. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (See page RS-403)

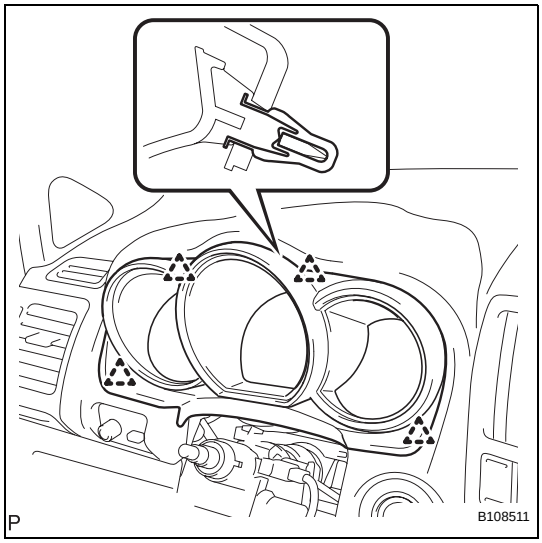

20. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

(a) Disengage the 4 clips and remove the instrument cluster finish panel sub-assembly.

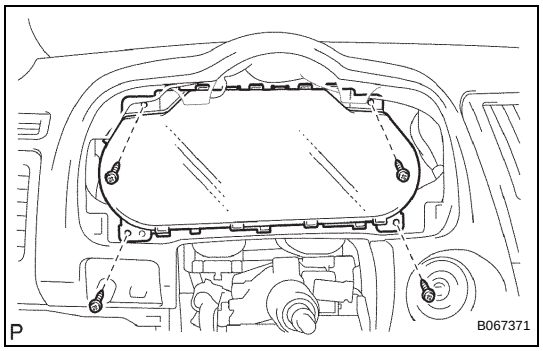

21. REMOVE COMBINATION METER ASSEMBLY

(a) Remove the 4 screws <C>.

(b) Pull out the combination meter assembly, then disconnect the connectors.

22. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures for the RH side and the LH side.

23. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedures for the RH side and the LH side.

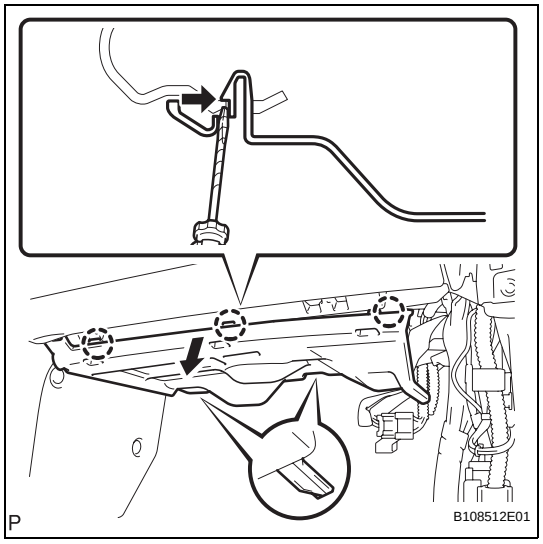

24. REMOVE INSTRUMENT PANEL NO.2 UNDER COVER SUB-ASSEMBLY

(a) Using a screwdriver, push the 3 claws in the direction indicated by the arrow to disengage and remove the guide on the front of the vehicle.

HINT:

Tape the screwdriver tip before use.

(b) Disconnect the connectors and remove the instrument panel No.2 under cover sub-assembly.

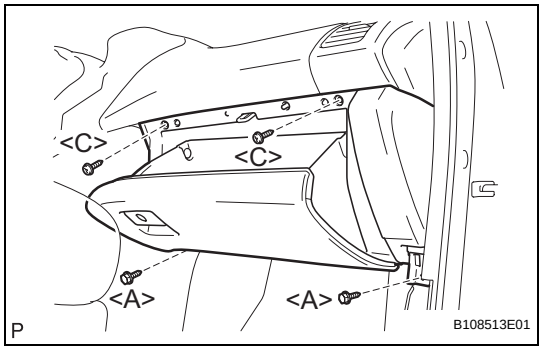

25. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY

(a) Remove the 2 bolts <A> and the 2 screws <C>.

(b) Pull the glove compartment door assembly to the rear to remove it.

(c) Disconnect the connector.

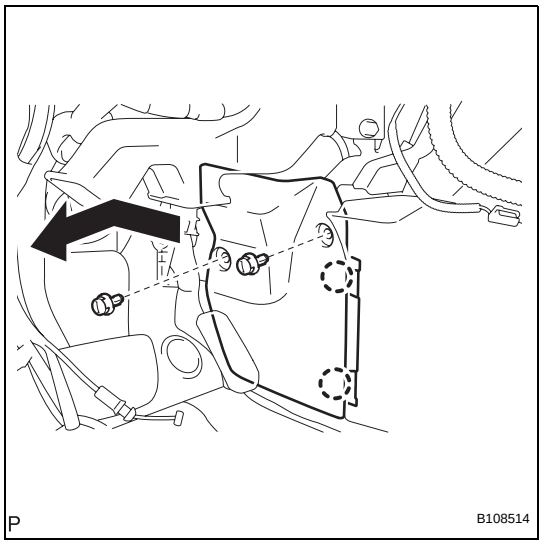

26. REMOVE FLOOR CARPET COVER CENTER LH

(a) Remove the 2 clips from the floor carpet cover center LH.

(b) Depress the edge of the floor carpet cover center LH around the claws to disengage the 2 claws below the floor carpet cover center LH.

(c) Slide the floor carpet cover center LH to the front of the vehicle, and disengage the 2 claws from the instrument panel finish panel lower center at the floor carpet cover center LH.

(d) Remove the floor carpet cover center LH.

27. REMOVE FLOOR CARPET COVER CENTER RH

HINT:

Use the same procedures for RH side and the LH side.

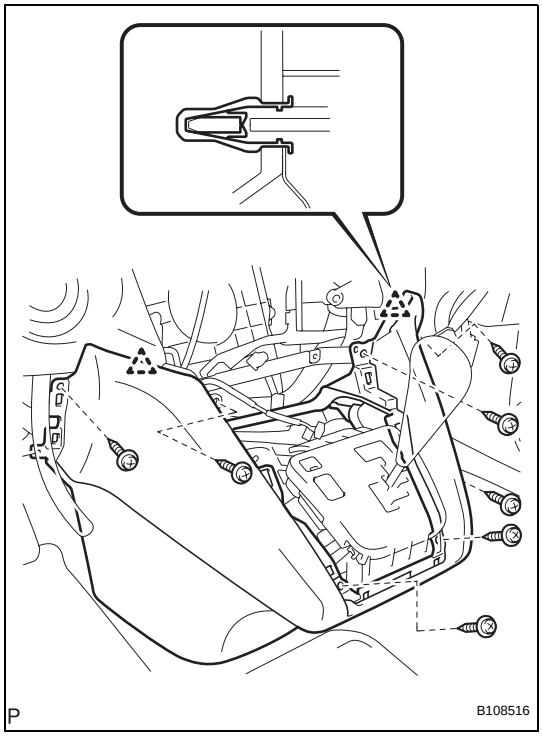

28. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER

(a) Remove the 7 screws <C>.

(b) Disengage the 2 clips and remove the instrument panel finish panel lower center.

29. REMOVE FRONT PILLAR GARNISH LH (See page IR-7)

30. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures for the RH side and the LH side.

31. REMOVE INSTRUMENT PANEL FINISH PLATE

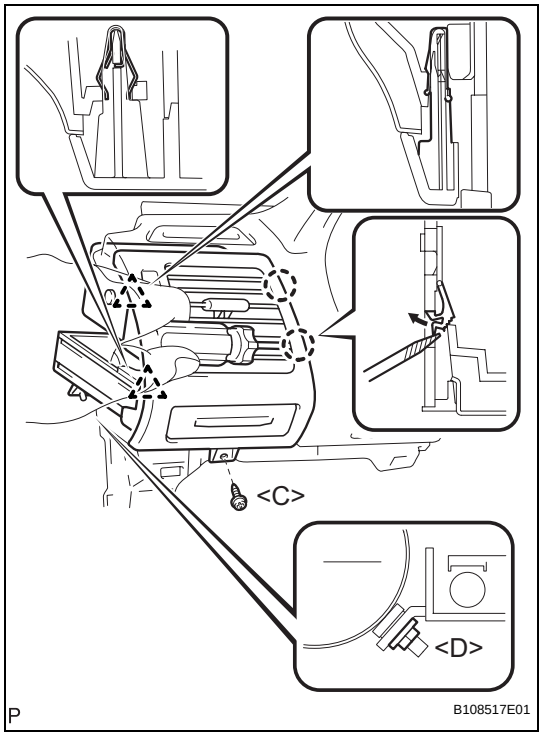

32. REMOVE INSTRUMENT PANEL NO.1 REGISTER ASSEMBLY

(a) Remove the screw <C> and nut <D>.

(b) Using a screwdriver, lever up the 2 claws on the body from inside of the register.
HINT:
Tape the screwdriver tip before use.

(c) Disengage the 2 clips and remove the instrument panel No.1 register assembly.

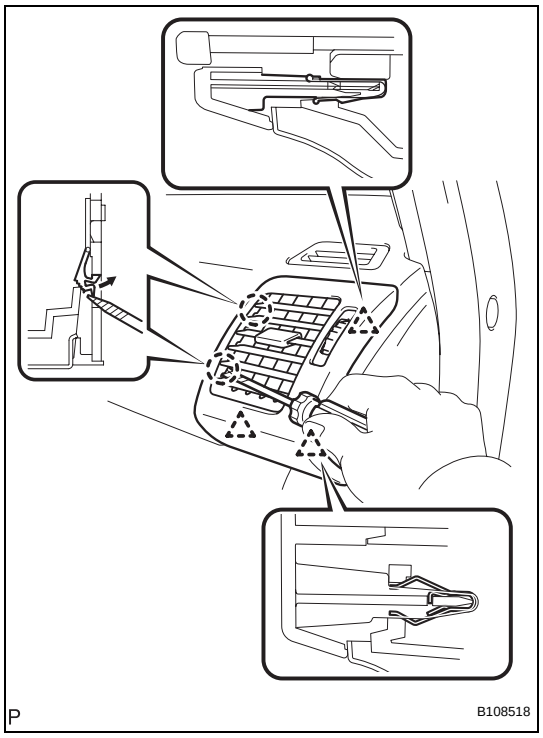

33. REMOVE INSTRUMENT PANEL NO.1 REGISTER ASSEMBLY LOWER

(a) Using a screwdriver, lever up the 2 claws on the body from inside of the register.
HINT:
Tape the screwdriver tip before use.

(b) Disengage the 3 clips and remove the instrument panel No.1 register assembly lower.

34. REMOVE INSTRUMENT PANEL ASSEMBLY

(a) Remove the 2 bolts <A>, bolt <B> and 2 nuts <D> as shown in the illustration.

(b) Disconnect each of the clamps and the connectors.

(c) Pull the instrument panel assembly to the rear and check that none of the wire harness is stuck in the body.

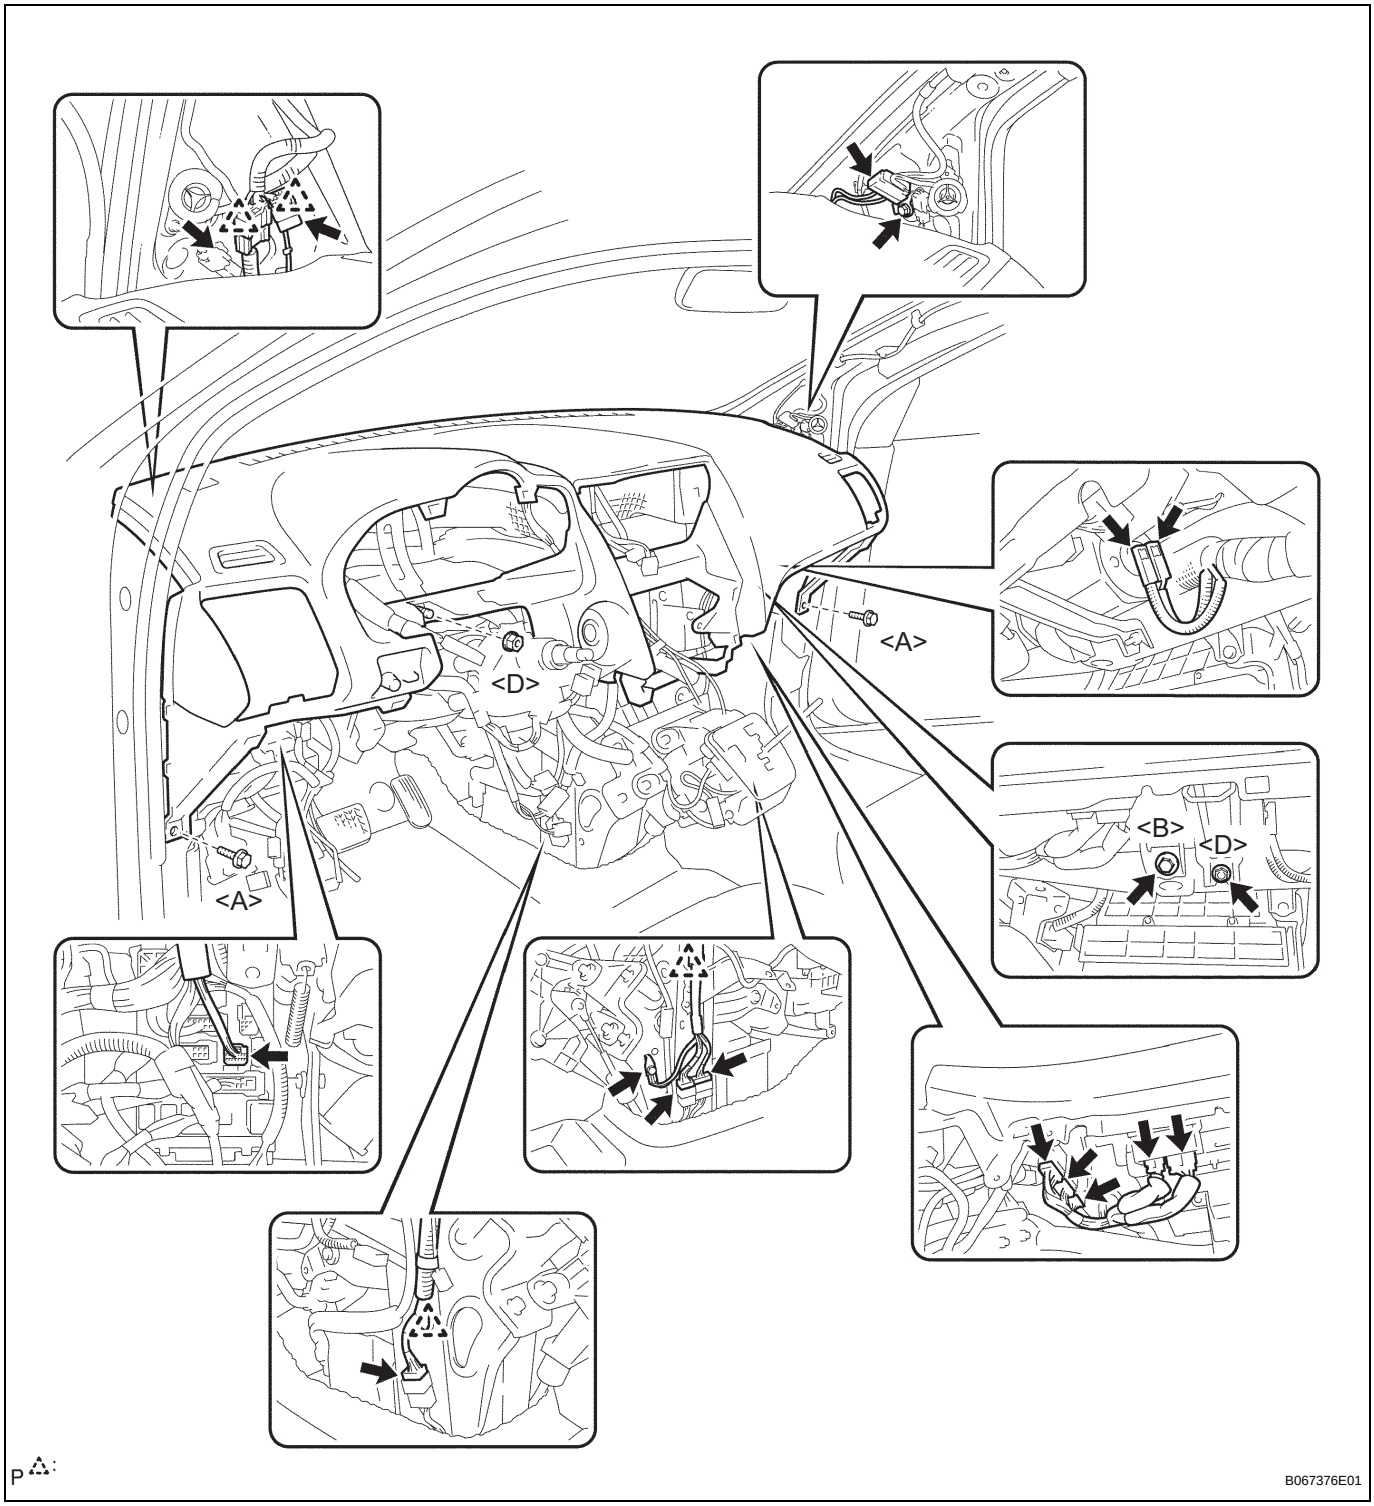

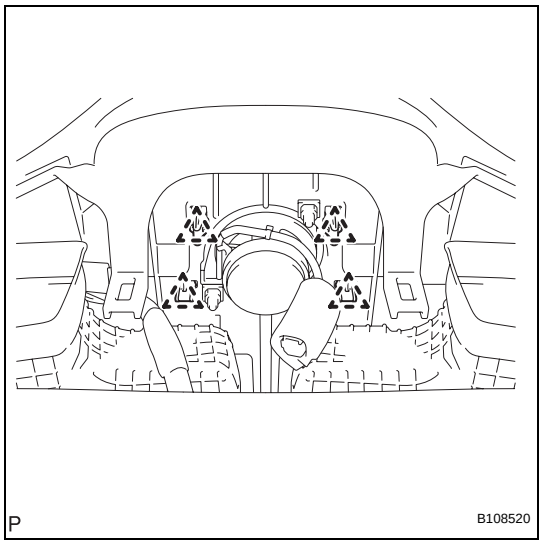

DISASSEMBLY

1. **REMOVE SPEAKER HOLE NO.1 COVER (w/ Mark Levinson Speaker System)**
   (a) Disengage the 4 clips and remove the speaker hole No.1 cover.

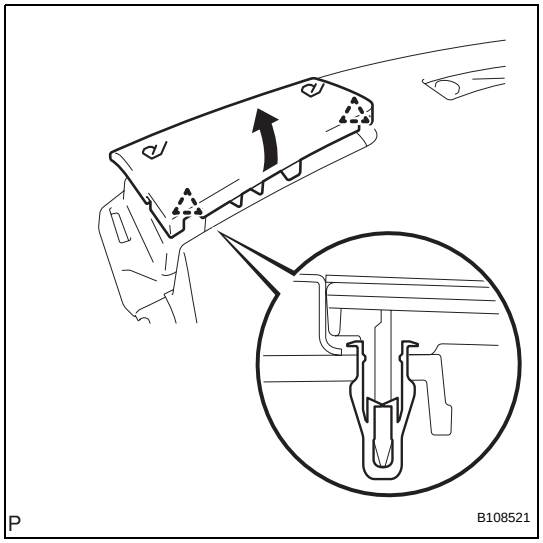

2. **REMOVE INSTRUMENT PANEL NO.1 SPEAKER PANEL SUB-ASSEMBLY**
   (a) Disengage the 2 clips and remove the instrument panel No.1 speaker panel sub-assembly.

3. **REMOVE INSTRUMENT PANEL NO.2 SPEAKER PANEL SUB-ASSEMBLY**
   HINT:
   Use the same procedures for the instrument panel No.2 speaker panel sub-assembly and the instrument panel No.1 speaker panel sub-assembly.

4. **REMOVE FRONT NO.2 SPEAKER (w/ Mark Levinson Speaker System) (See page AV-244)**

5. **REMOVE FRONT NO.2 SPEAKER (for Driver Side) (See page AV-245)**

6. **REMOVE FRONT NO.2 SPEAKER (for Front Passenger Side)**
   HINT:
   Use the same procedures for the driver side and passenger side.

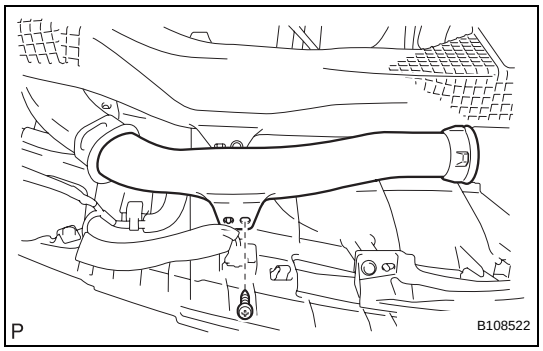

7. **REMOVE SIDE DEFROSTER NO.3 NOZZLE DUCT**
   (a) Remove the screw <C> and the side defroster No.3 nozzle duct.

8. **REMOVE SIDE DEFROSTER NO.4 NOZZLE DUCT**
   HINT:
   Use the same procedures for the side defroster No.4 nozzle duct and the side defroster No.3 nozzle duct.

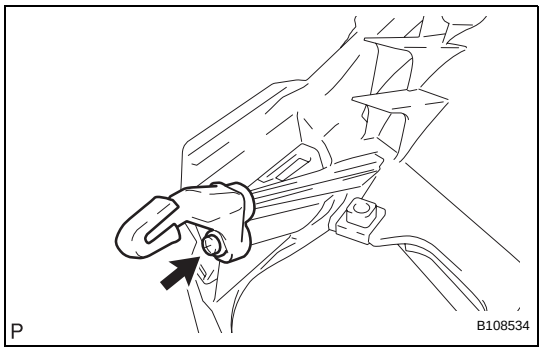

9. REMOVE INSTRUMENT PANEL NO.1 PIN

(a) Remove the screw <C> and the instrument panel No.1 pin.

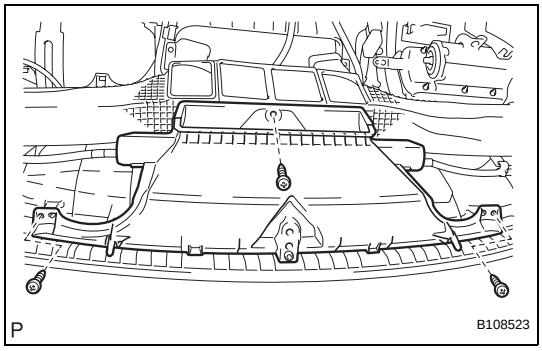

10. REMOVE DEFROSTER NOZZLE ASSEMBLY

(a) Remove the 3 screws <C> and the defroster nozzle assembly.

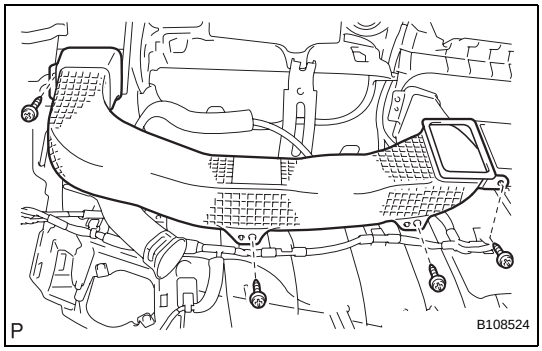

11. REMOVE HEATER TO REGISTER NO.1 DUCT

(a) Remove the 4 screws <C> and the heater to register No.1 duct.

12. REMOVE HEATER TO REGISTER NO.4 DUCT

HINT:

Use the same procedures for the heater to register No.4 duct and the heater to register No.1 duct.

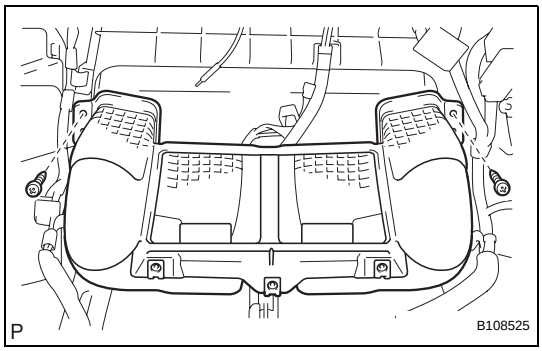

13. REMOVE HEATER TO REGISTER CENTER SUB DUCT

(a) Remove the 2 screws <C> and the heater to register center sub duct.

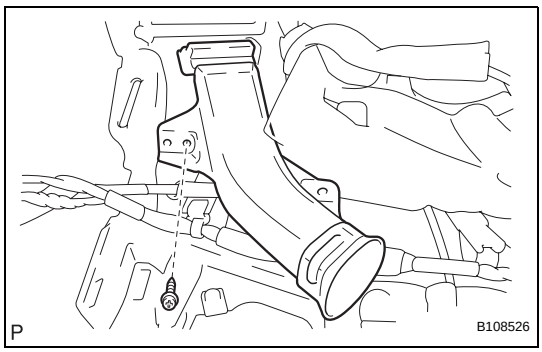

14. REMOVE SIDE DEFROSTER NO.1 NOZZLE DUCT

(a) Remove the screw <C> and the side defroster No.1 nozzle duct.

15. REMOVE SIDE DEFROSTER NO.2 NOZZLE DUCT

HINT:

Use the same procedures for the side defroster No.2 nozzle duct and the side defroster No.1 nozzle duct.

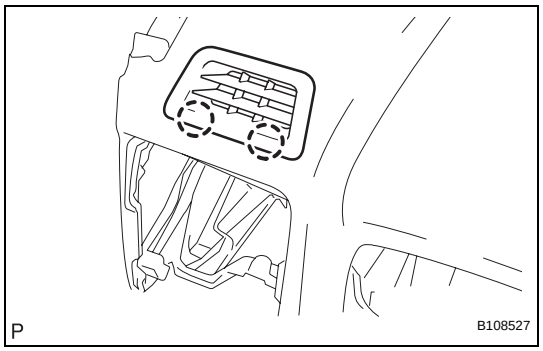

16. REMOVE SIDE DEFROSTER NO.1 NOZZLE

(a) Disengage the 2 claws and remove the side defroster No.1 nozzle.

17. REMOVE SIDE DEFROSTER NO.2 NOZZLE

HINT:

Use the same procedures for the side defroster No.2 nozzle and the side defroster No.1 nozzle.

18. REMOVE NETWORK GATEWAY ECU

(a) Remove the screw <C> and the network gateway ECU.

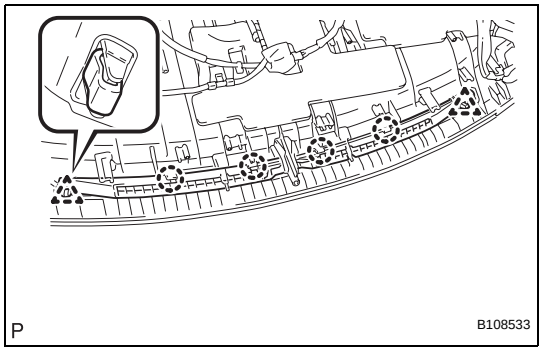

19. REMOVE DEFROSTER NOZZLE NO.1 GARNISH

(a) Disengage the 2 clips and 4 claws then remove the defroster nozzle No.1 garnish.

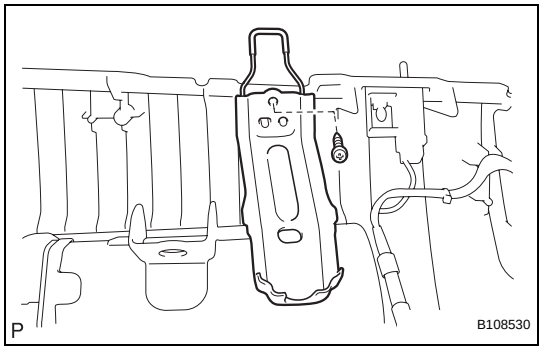

20. REMOVE INSTRUMENT PANEL BRACKET SUB-ASSEMBLY CENTER

(a) Remove the screw <C> and the instrument panel bracket sub-assembly center.

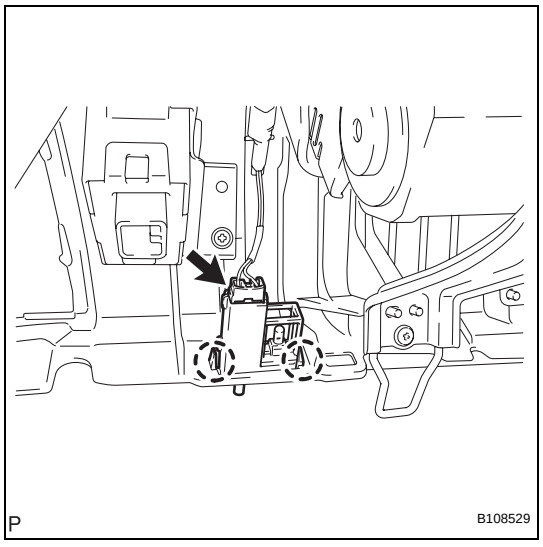

21. REMOVE GLOVE BOX LIGHT ASSEMBLY

(a) Disconnect the connector.

(b) Disengage the 2 claws and remove the glove box light assembly.

22. REMOVE NO.2 RADIO ANTENNA CORD (w/o Navigation System) (See page AV-269)

23. REMOVE NO.2 RADIO ANTENNA CORD (w/ Navigation System) (See page AV-269)

24. REMOVE INSTRUMENT PANEL NO.2 WIRE

(a) Remove the 2 screws.

(b) Disengage the 18 clamps and remove the instrument panel No.2 wire.

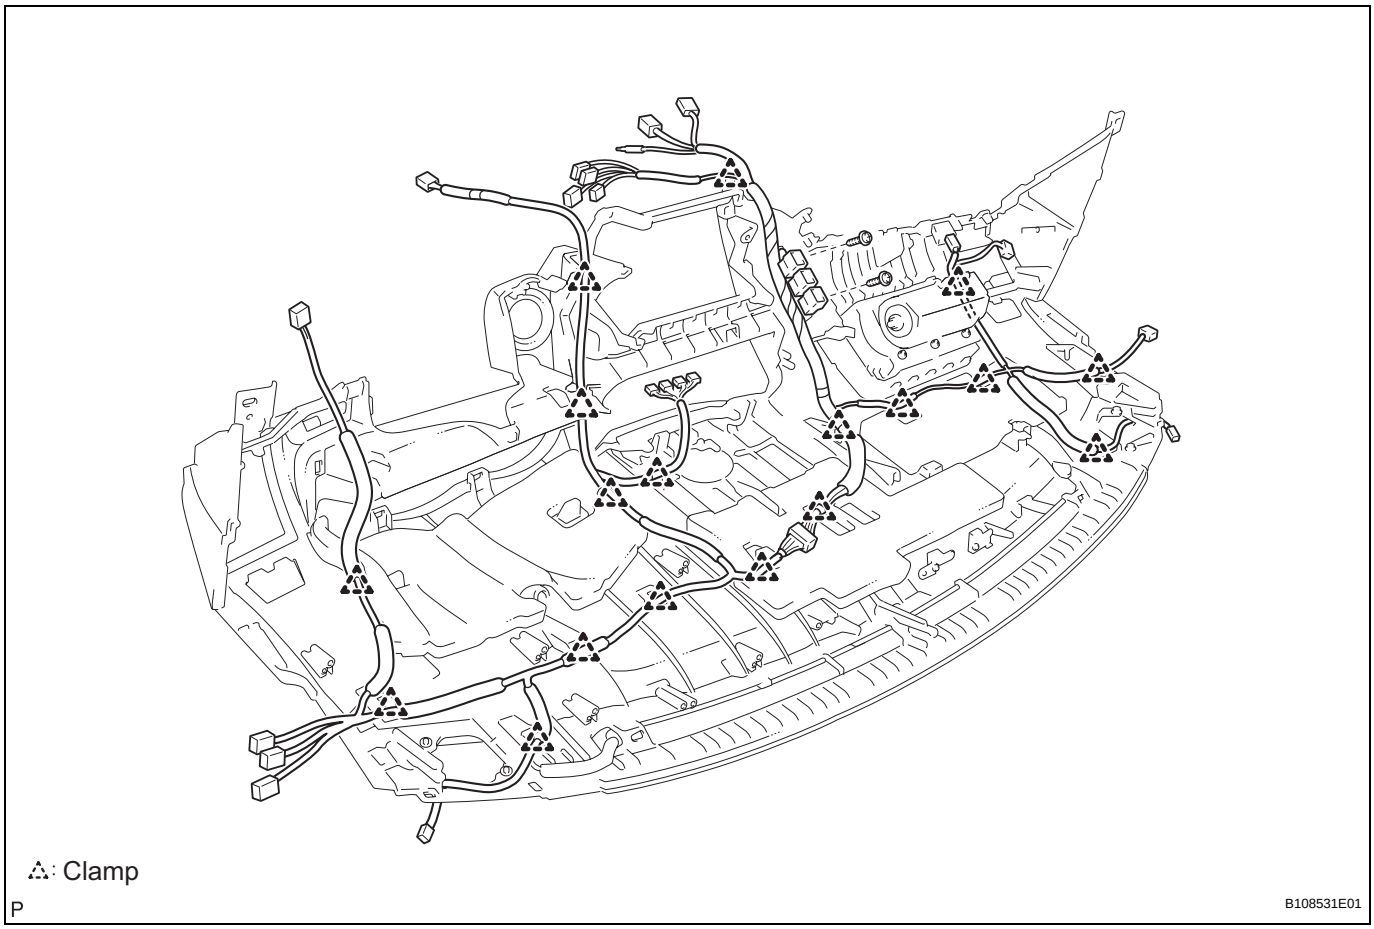

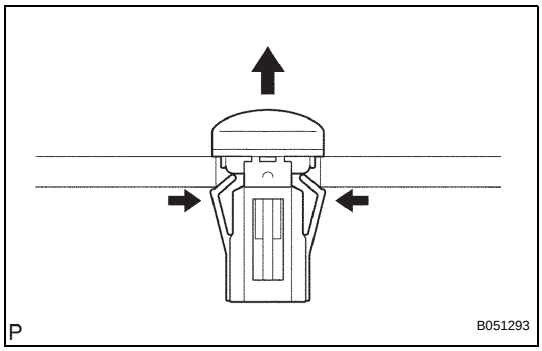

25. REMOVE AUTOMATIC LIGHT CONTROL SENSOR

(a) Remove the automatic light control sensor.

NOTICE:

Do not pry the automatic light control sensor off from the upper position.

26. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page RS-412)