SECTION PWO
POWER OUTLET

CONTENTS

PRECAUTION 2

PRECAUTIONS 2
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 2
Precautions for Removing Battery Terminal 2

PREPARATION 4

PREPARATION 4
Special Service Tools 4

SYSTEM DESCRIPTION 5

COMPONENT PARTS 5
Component Parts Location 5
Power Socket 5

WIRING DIAGRAM 7

POWER SOCKET 7
Wiring Diagram 7

REMOVAL AND INSTALLATION 9

POWER SOCKET 9

CONSOLE POWER SOCKET 9
CONSOLE POWER SOCKET : Exploded View 9
CONSOLE POWER SOCKET : Removal and Installation 9

REAR POWER SOCKET 10
REAR POWER SOCKET : Exploded View 10
REAR POWER SOCKET : Removal and Installation 10

LUGGAGE ROOM POWER SOCKET 11
LUGGAGE ROOM POWER SOCKET : Exploded View 11
LUGGAGE ROOM POWER SOCKET : Removal and Installation 11

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000013821783

Risk of injury

There is a risk of injury caused by parts becoming projectiles if uncontrolled deployment of air bag or seat belt pre-tensioner occurs, or by storing air bag with the deployment side facing downwards. When scrapping air bag or seat belt pre-tensioner by means of controlled deployment, there is also a danger present if a sufficiently safe distance is not maintained, or if opening using cutting torches or other cutting tools, or due to smelting or if parts that are not yet triggered are exposed to a blaze or a smoldering fire at landfills.

Safety instructions/precautions

- Removed air bag must always be stored with deployment side facing up.
- Acquisition, transportation, storage, testing and assembly work should only be performed or supervised by properly trained personnel.
- Install air bag or seat belt pre-tensioner immediately following retrieval from storage.
- Air bag and seat belt pre-tensioner must be protected from flying sparks, open fires and temperature exceeding 100°C (212°F).
- Never transport air bag and seat belt pre-tensioner in the passenger compartment. Store them securely in the luggage room of the vehicle in their original replacement part packaging and secure them so that they cannot slip around.
- Never allow air bag and seat belt pre-tensioner to come into contact with grease, oil, or cleaning agents.
- Perform system tests using approved testing equipment only, and only when the units are properly installed and the vehicle is unoccupied.
- Before the initial hookup of the battery or an external power supply, the ignition must be switched on and the vehicle unoccupied.
- Air bag and seat belt pre-tensioner that fall from a height of more than 0.5 m must be replaced.
- When scrapping by means of controlled deployment of air bag and seat belt pre-tensioner, a safe distance of at least 10 m must be maintained.
- Before starting work on air bag and seat belt pre-tensioner and work on components that are connected to air bag and seat belt pre-tensioner or require and intervention in their electric circuit (e.g. when removing the steering wheel):

- Disconnect any external power sources (e.g. charger).
- Disconnect and insulate ground line of battery

- Before starting bodywork in combination with welding or retrofitting, during which work is performed on uninsulated, current-carrying lines or require an intervention in their electric circuit (e.g. when removing the steering wheel):

- Disconnect any external power sources (e.g. charger).
- Disconnect and insulate ground line of battery.
- During welding, disconnect plug connection and from control unit of air bag.

- When the air bag deploys, the pyrofuse activates and the power source from the battery is disconnected. This prevents possible fires caused by electric leakage after an accident occurs.


Precautions for Removing Battery Terminal

INFOID:0000000013821845

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

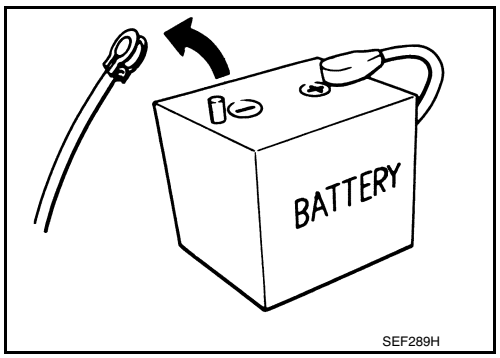

BR08DE	: 4 minutes	YD25DDTi	: 2 minutes
D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		

NOTE:
ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:
- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
  - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
  - Driving for 30 minutes or more on a steep slope.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:
If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.


NOTE:
The removal of 12V battery may cause a DTC detection error.

PREPARATION

PREPARATION

Special Service Tools

INFOID:0000000013767851


Tool number Tool name		Description
KV995H0200 (DAIMLER tool No. 169 589 00 37 00) Plier	 JSMIA2563ZZ	Removing power socket

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000013767852

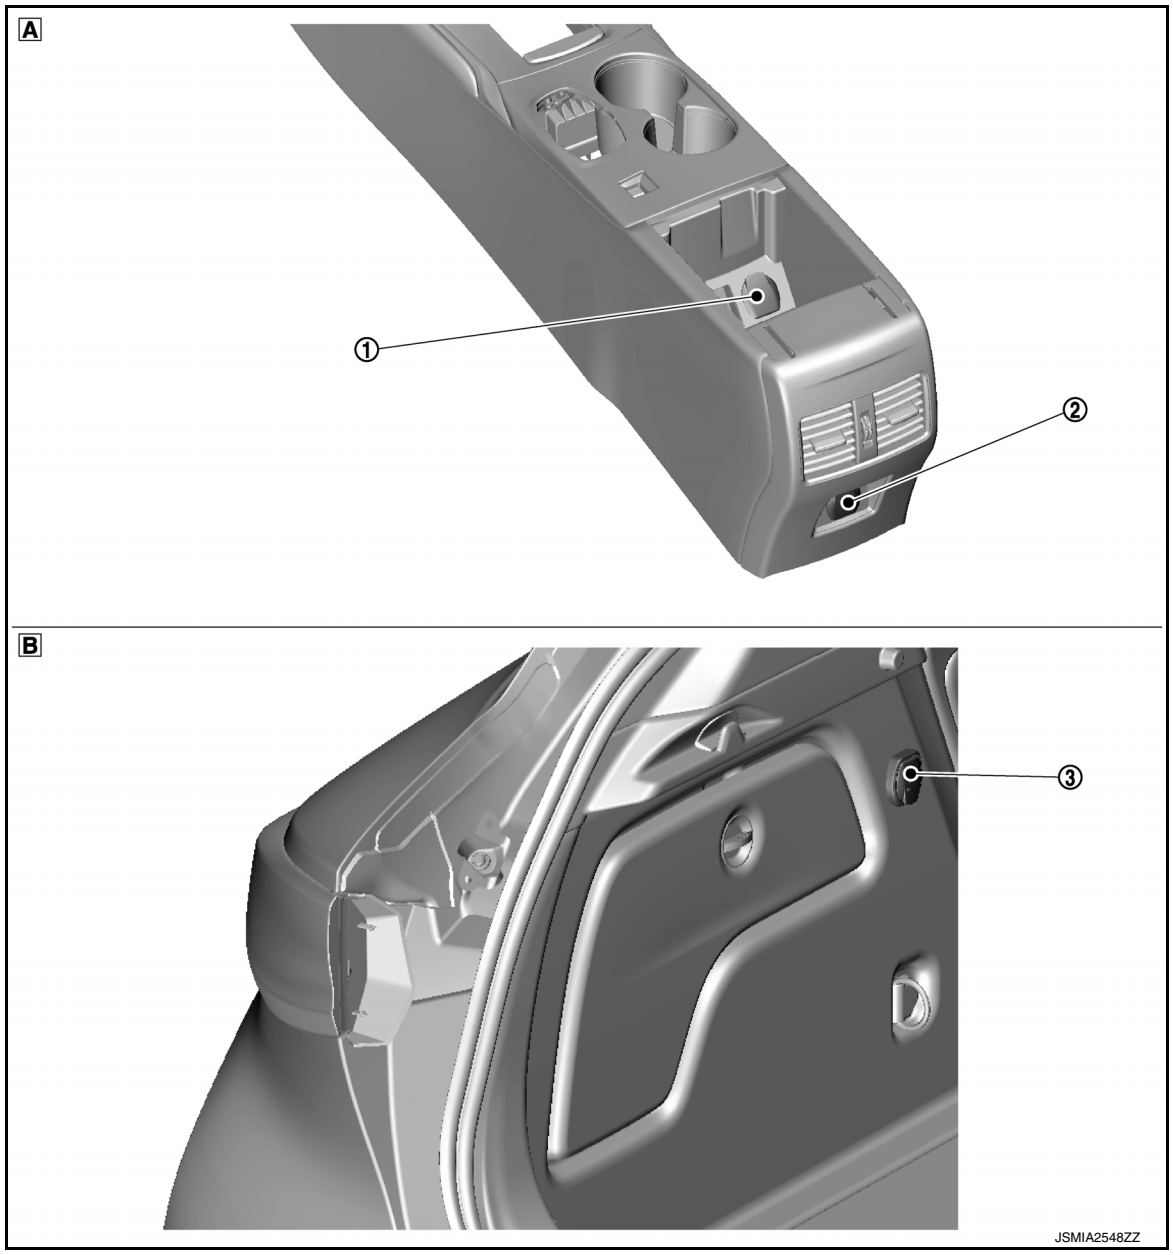

A Center console

B Luggage room

No.	Component	Function
①	Console power socket	Refer to PWO-5, "Power Socket".
②	Rear power socket	
③	Luggage room power socket	

Power Socket

INFOID:0000000013767853


Rated voltage	DC 12 V
Maximum electric capacity	180 W or less (Total)
Maximum current	15 A or less (Total)

WIRING DIAGRAM

POWER SOCKET

Wiring Diagram

INFOID:0000000013767854

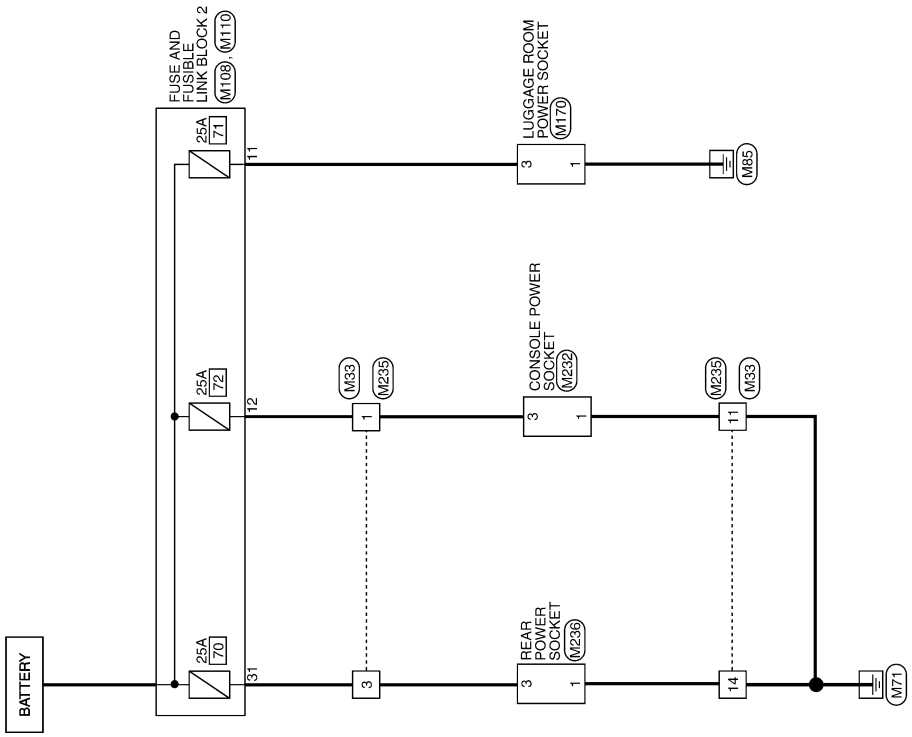


POWER SOCKET

2016/02/08

JRMWJ5216GB

POWER SOCKET

Connector No.	M33
Connector Name	WIRE TO WIRE
Connector Type	MB_A0365458728




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
3	R	-
4	B	-
5	W	-
6	B	-
7	G	-
8	R	-
9	V	-
10	BR	-
11	BR	-
14	BR	-

Connector No.	M108
Connector Name	FUSE AND FUSIBLE LINK BLOCK 2
Connector Type	MB_A0055458801



Terminal No.	Color Of Wire	Signal Name [Specification]
11	P	-
12	B	-
13	R	-
14	W	-

Connector No.	M110
Connector Name	FUSE AND FUSIBLE LINK BLOCK 2
Connector Type	MB_A0065450001



Terminal No.	Color Of Wire	Signal Name [Specification]
26	BR	-
31	R	-

Connector No.	M170
Connector Name	LUGGAGE ROOM POWER SOCKET
Connector Type	MB_A0315452026




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
3	P	-

Connector No.	M232
Connector Name	CONSOLE POWER SOCKET
Connector Type	MB_A0375450228



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
3	B	-

Connector No.	M235
Connector Name	WIRE TO WIRE
Connector Type	MB_A2205459928



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
3	B	-
4	Y	-
5	W	-
6	B	-
7	G	-
8	R	-
9	V	-
10	L	-
11	BR	-
14	BR	-

Connector No.	M236
Connector Name	REAR POWER SOCKET
Connector Type	MB_A0375450228

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
3	B	-

JRMWJ5217GB

REMOVAL AND INSTALLATION


POWER SOCKET

CONSOLE POWER SOCKET

CONSOLE POWER SOCKET : Exploded View

INFOID:0000000013767855

① : Power socket

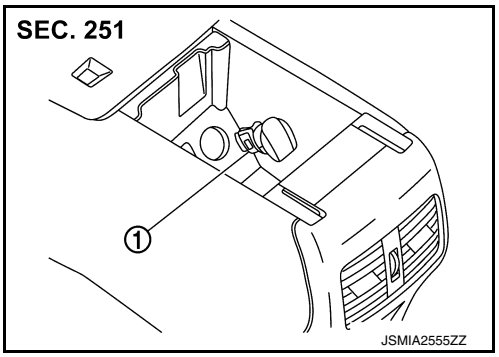


CONSOLE POWER SOCKET : Removal and Installation


INFOID:0000000013767856

REMOVAL

1. Remove the center console mask. Refer to IP-22, "Removal and Installation".
2. Disconnect the power socket connector.
3. Open the flap ①.

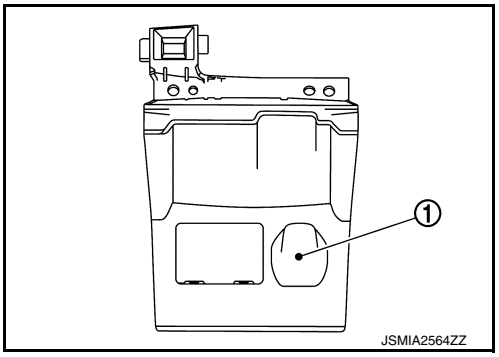


4. Release the power socket using a plier [SST: KV995H0200 (169 589 00 37 00)] (A) and pull out.

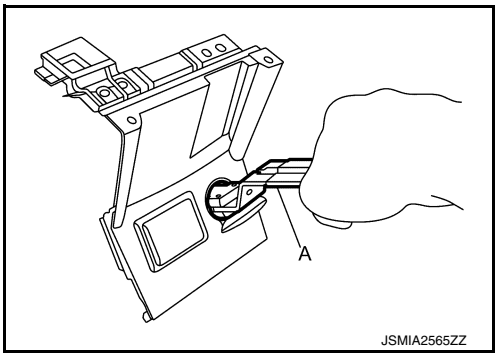

NOTE:

The lugs of the pliers (A) must engage in the notches Ⓐ of the housing of the power socket.

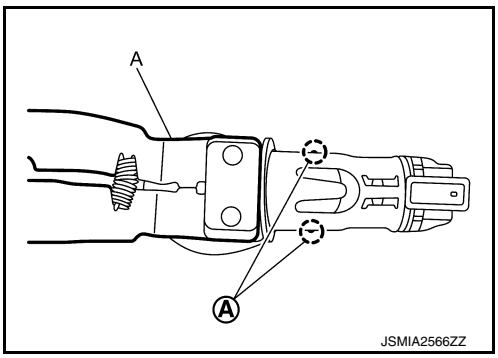

INSTALLATION

Install in the reverse order of removal.


NOTE:

Make sure that the installation position of the power socket.

REAR POWER SOCKET

REAR POWER SOCKET : Exploded View

INFOID:0000000013767857

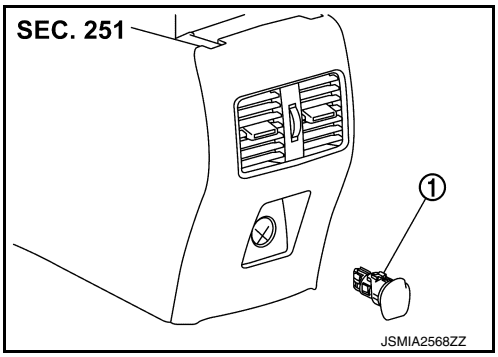


① : Power socket

REAR POWER SOCKET : Removal and Installation


INFOID:0000000013767858

REMOVAL


1. Remove the center console rear finisher. Refer to IP-22, "Removal and Installation".
2. Disconnect the power socket connector.
3. Open the flap ①.

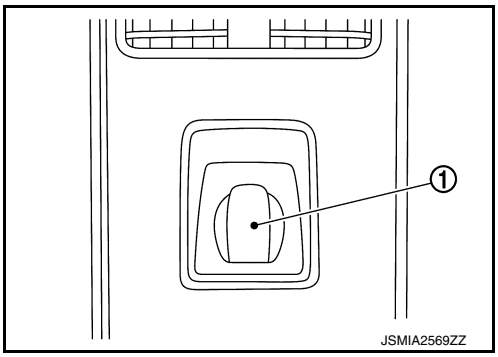

4. Release the power socket using a plier [SST: KV995H0200 (169 589 00 37 00)] (A) and pull out.

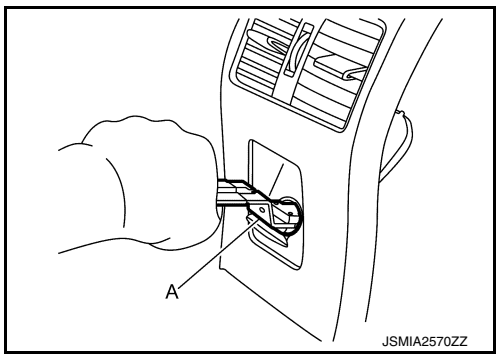

NOTE:
The lugs of the pliers (A) must engage in the notches Ⓐ of the housing of the power socket.

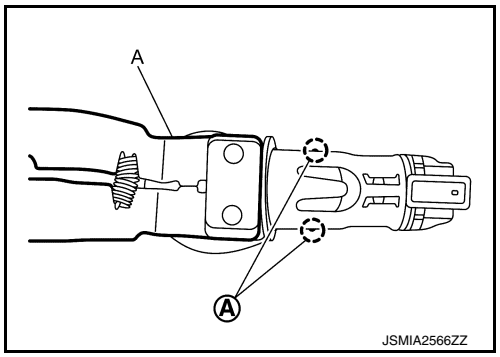


INSTALLATION
Install in the reverse order of removal.
NOTE:
Make sure that the installation position of the power socket.

LUGGAGE ROOM POWER SOCKET

LUGGAGE ROOM POWER SOCKET : Exploded View

INFOID:0000000013767859

① : Power socket

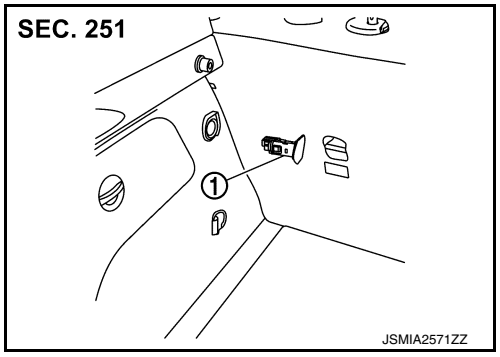


LUGGAGE ROOM POWER SOCKET : Removal and Installation

INFOID:0000000013767860


REMOVAL

1. Remove the luggage side finisher lid LH. Refer to INT-40, "LUGGAGE SIDE LOWER FINISHER : Removal and Installation".
2. Disconnect the power socket connector.


3. Open the flap ①.

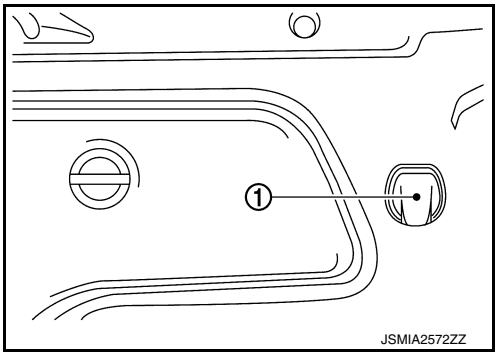

4. Release the power socket using a plier [SST: KV995H0200 (169 589 00 37 00)] (A) and pull out.

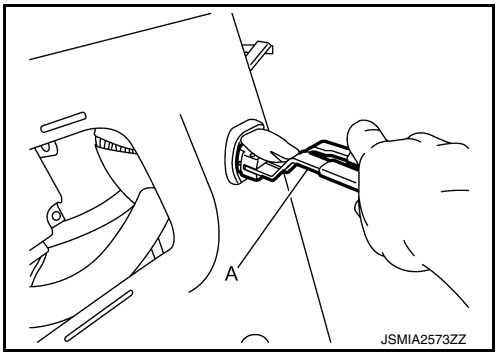

NOTE:
The lugs of the pliers (A) must engage in the notches Ⓐ of the housing of the power socket.

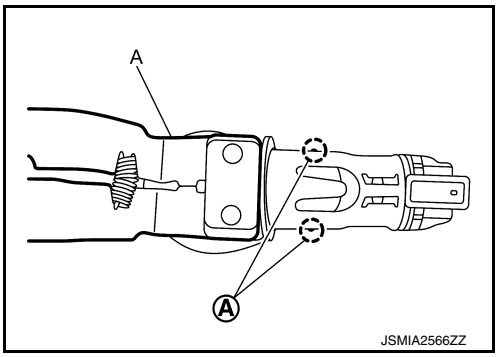

INSTALLATION
Install in the reverse order of removal.
NOTE:
Make sure that the installation position of the power socket.