NOTIFICATION

NTC

1. Notification

NOTIFICATION

HOW TO USE PULLEY WRENCH (18355AA020)

1. PRECAUTIONS FOR USE

1. When working on the vehicle

Note:
When working on the vehicle, also perform the following steps.

(1) Remove the radiator fan control module (main) and the radiator fan control module (sub). Ref. to COOLING(H4DOTC)>Radiator Fan Control Unit>REMOVAL.

2. Hereafter, refer to the removal procedures for "Crank Pulley". Ref. to MECHANICAL(H4DOTC)>Crank Pulley>REMOVAL.
3. For installation, refer to the installation procedures for "Crank Pulley". Ref. to MECHANICAL(H4DOTC)>Crank Pulley>INSTALLATION.

2. PREPARATIONS FOR PULLEY WRENCH

1. Attach the head to the pulley wrench body of ST.

Note:
- **ST consists of the followings.**

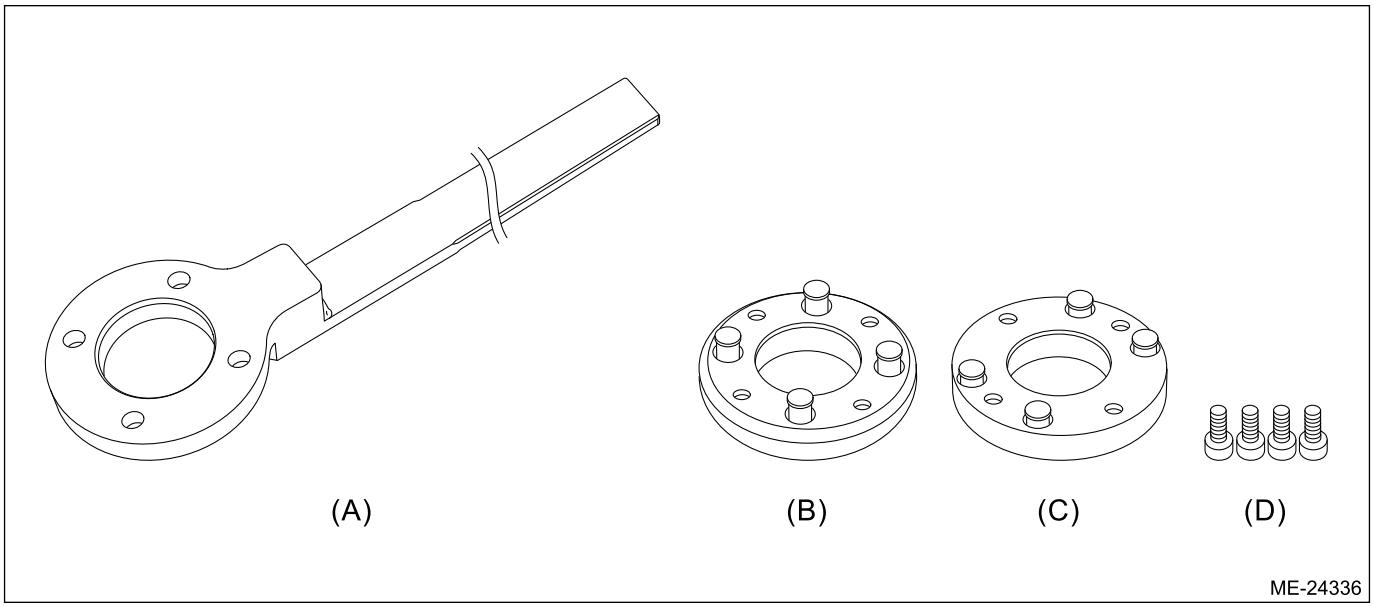

(A) Pulley wrench body
(B) Head for 4-hole crank pulley
(C) Head for 6-hole crank pulley
(D) Bolt

- **Be careful of the head attached to the pulley wrench body as it depends on the number of holes on the crank pulley.**
- **M8 × 18 × 1.25 bolts in the strength range of 12.9 (12.9 stamped on bolt head) can be used as substitutes for original bolts.**

Preparation tool:
ST: PULLEY WRENCH (18355AA020)

Tightening torque:
30 N·m (3.1 kgf-m, 22.1 ft-lb)

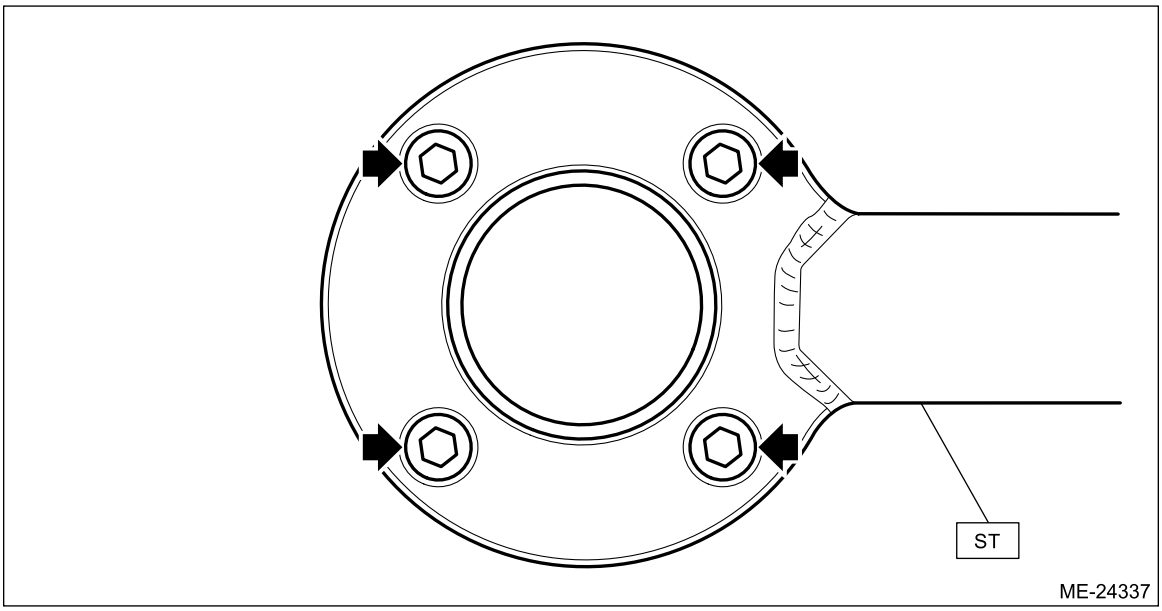
ST
ME-24337