16.Turbine Speed Sensor 1

A: REMOVAL

1) Lift-up the vehicle.
2) Remove the intercooler. (Turbo model) <Ref. to IN(H4DOTC)-12, REMOVAL, Intercooler.>
3) Remove the air intake chamber. (Non-turbo model) <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
4) Disconnect the turbine speed sensor 1 connector.

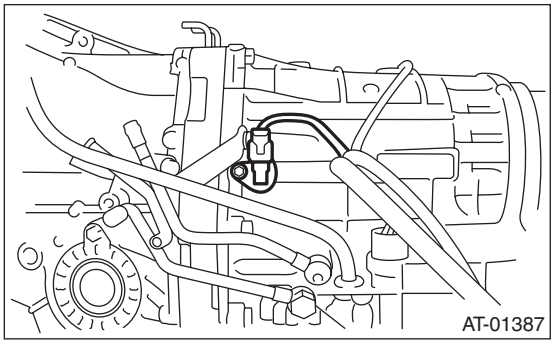

5) Remove the turbine speed sensor 1.

B: INSTALLATION

1) Install the turbine speed sensor 1.

Tightening torque:
7 N·m (0.7 kgf-m, 5.2 ft-lb)

2) Connect the turbine speed sensor 1 connector.

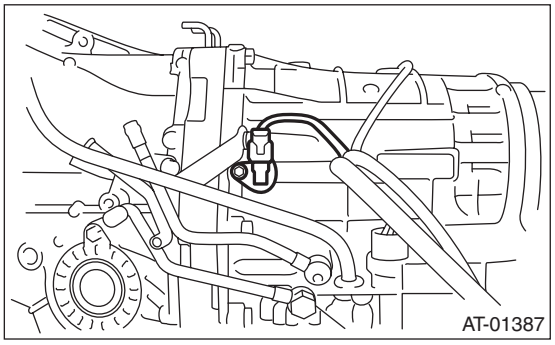

3) Install the intercooler. (Turbo model) <Ref. to IN(H4DOTC)-12, INSTALLATION, Intercooler.>
4) Install the air intake chamber. (Non-turbo model) <Ref. to IN(H6DO)-6, INSTALLATION, Air Intake Chamber.>