

18 4RUNNER

(Cont. next page)

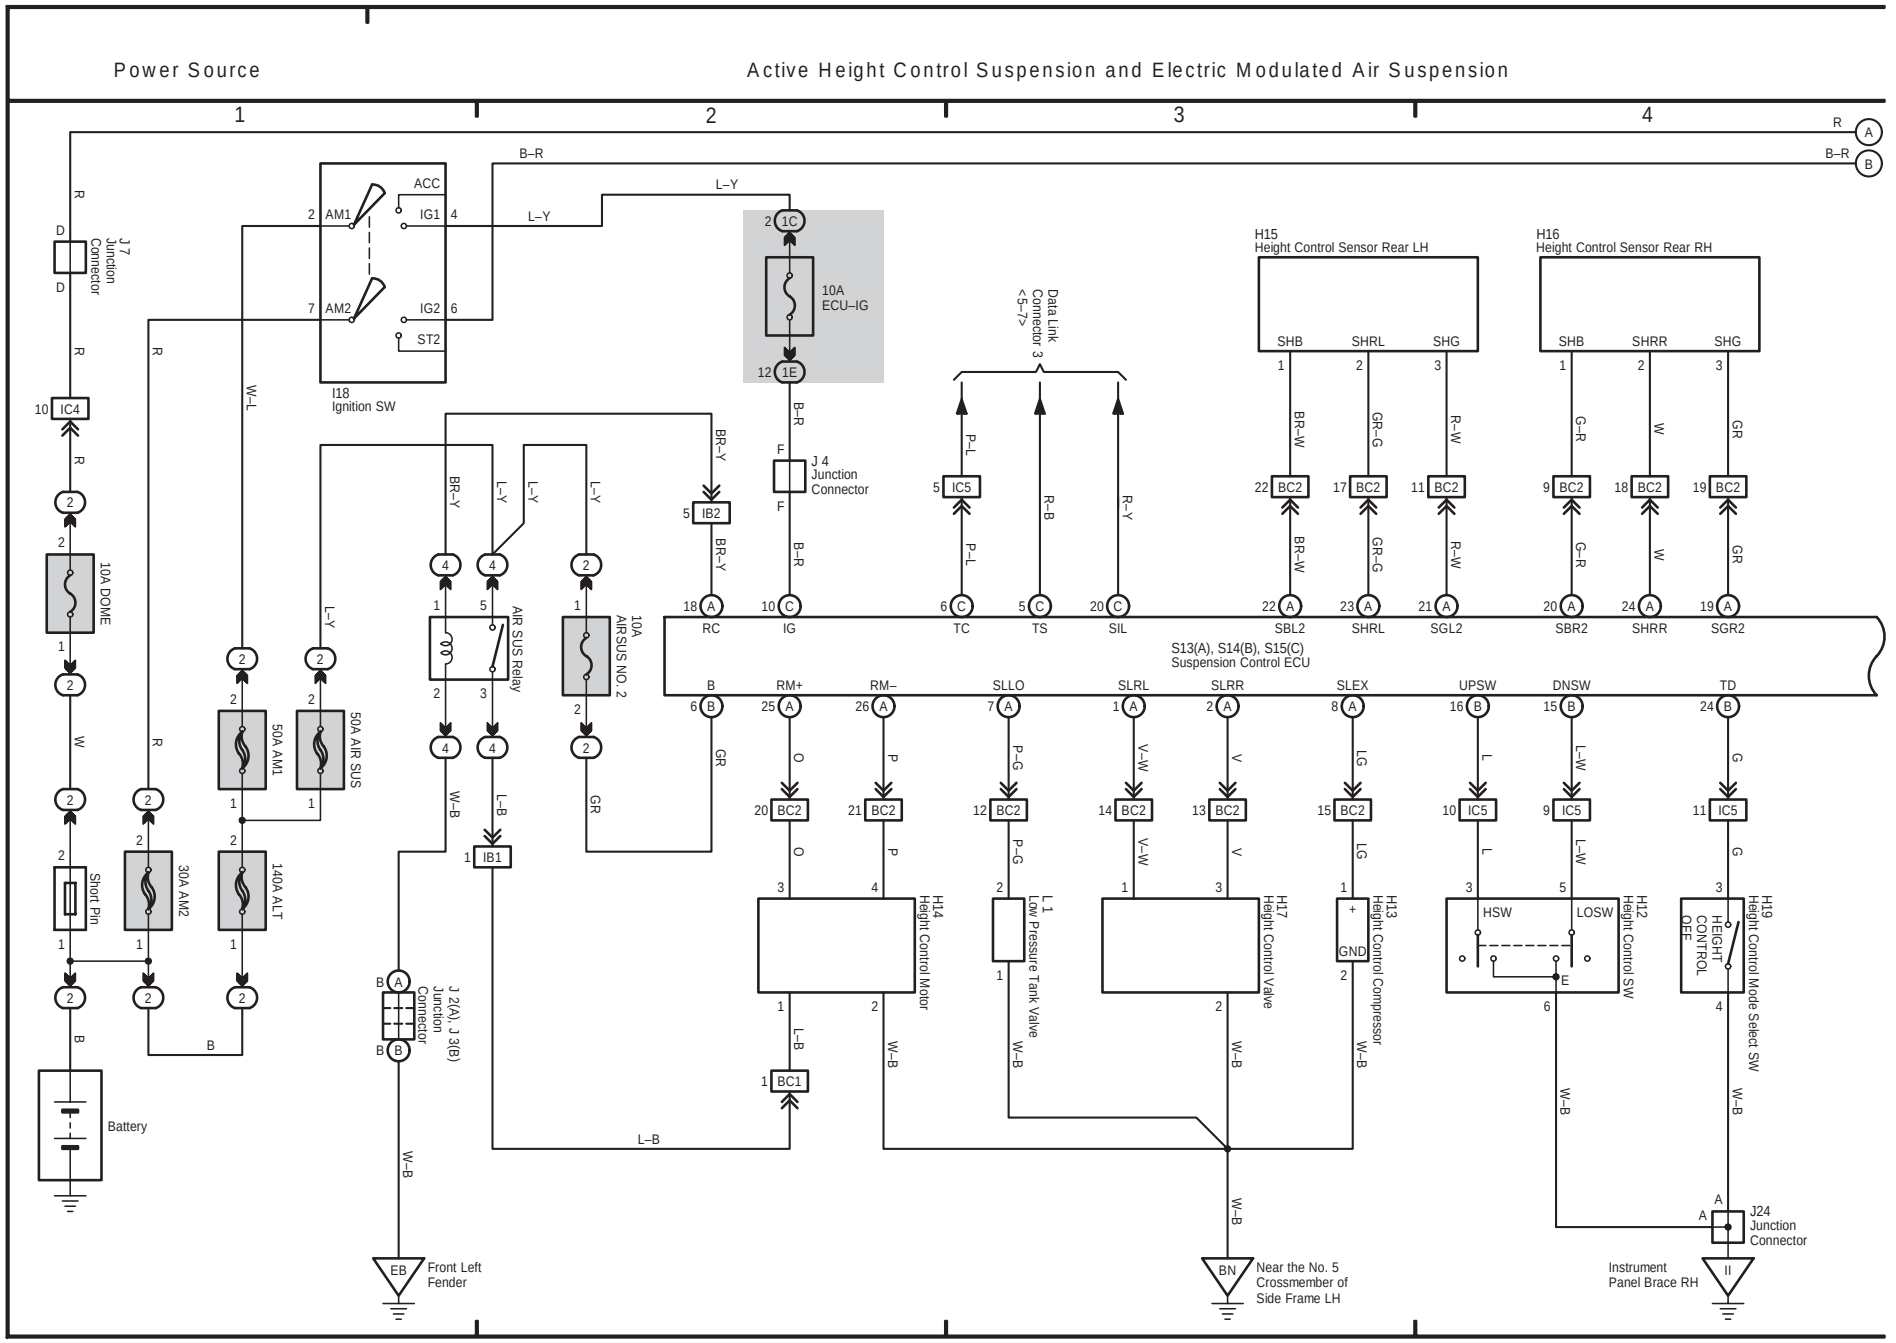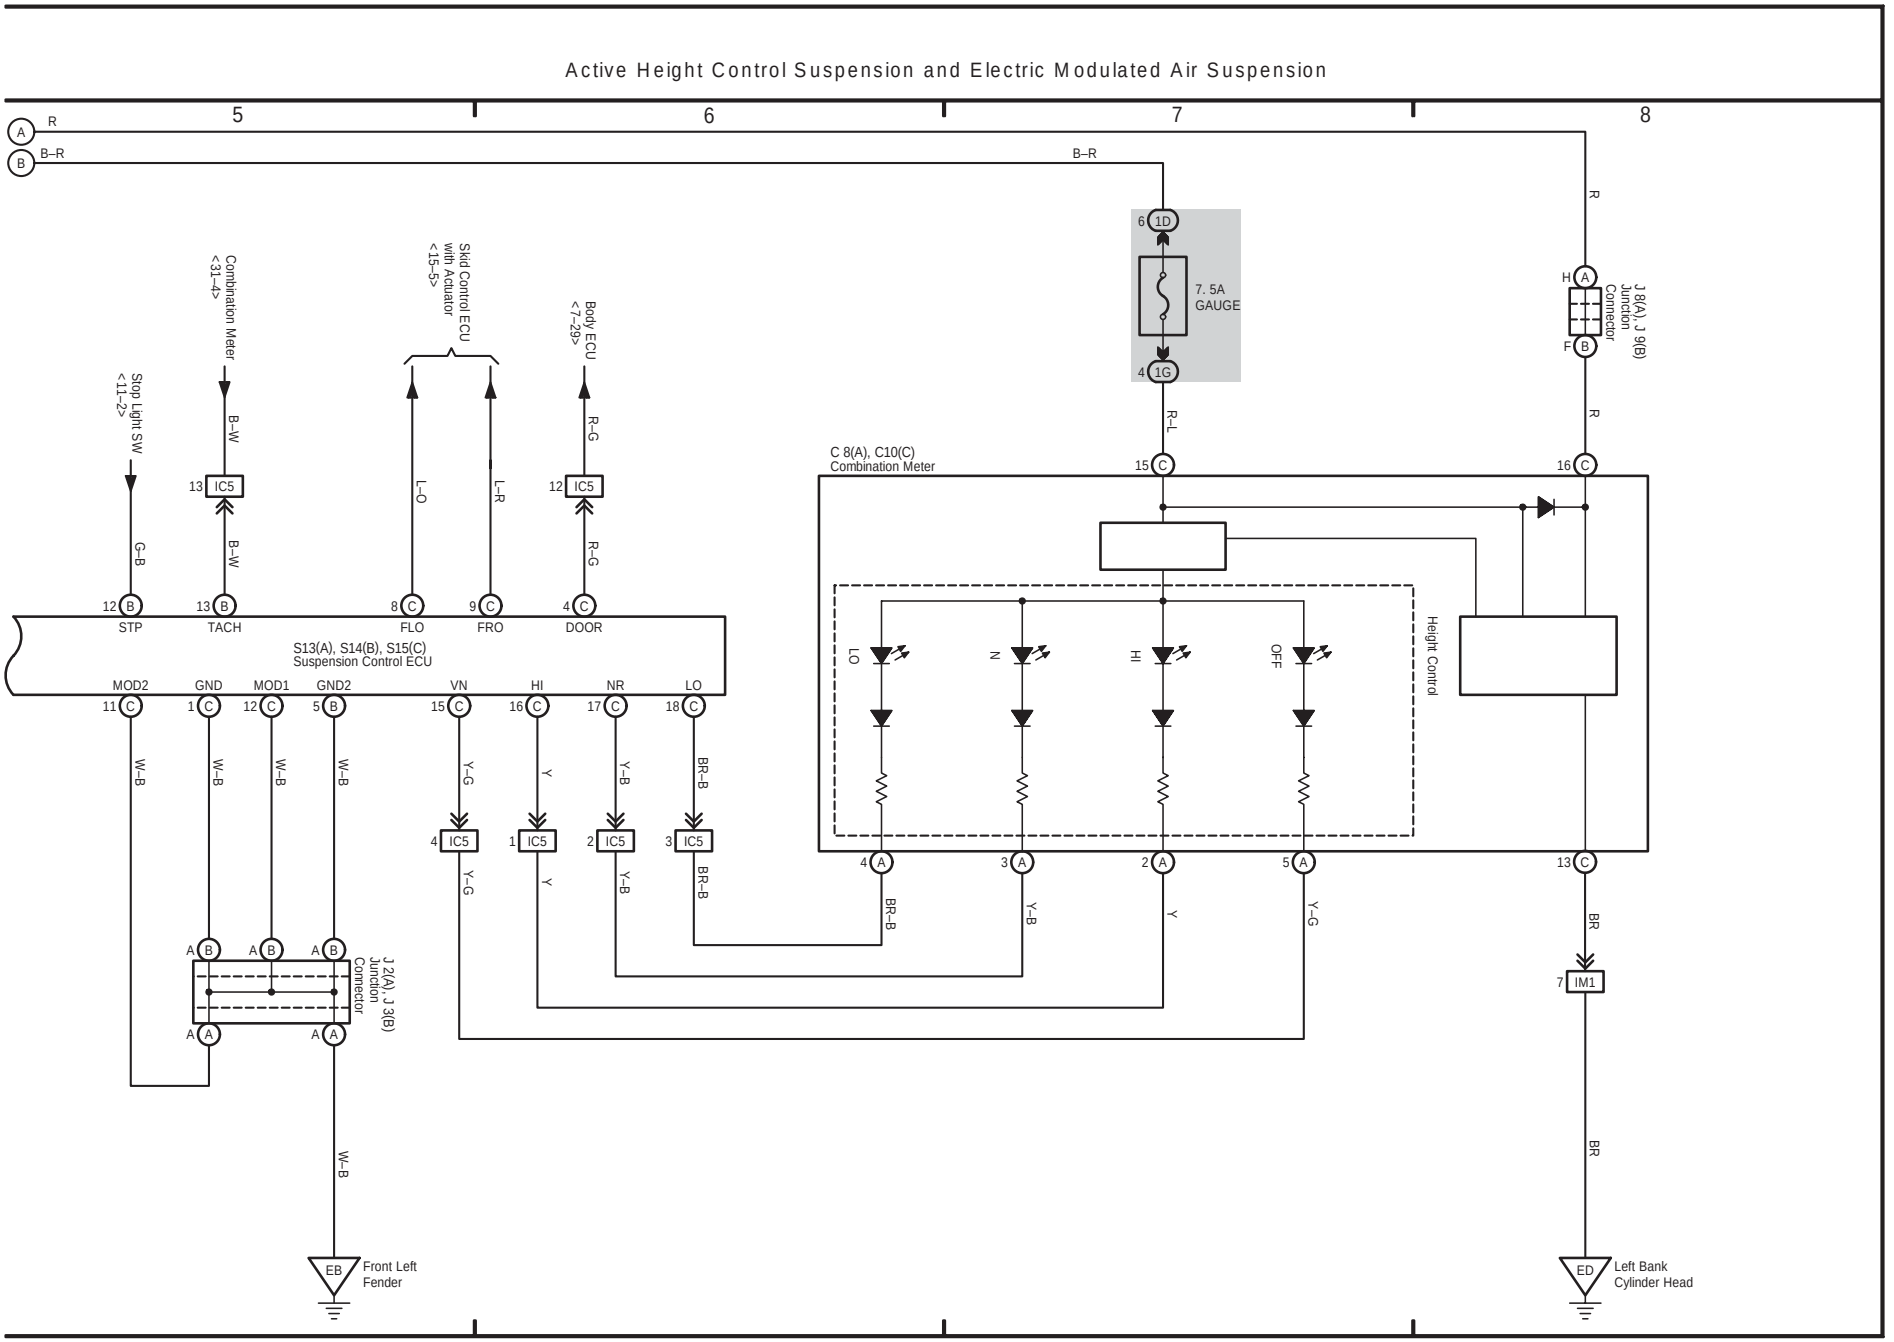


Active Height Control Suspension and Electric Modulated Air Suspension
5
6
7
8
R
B–R
B–R
6 1D
7. 5A GAUGE
4 1G
R–L
R
H A
F B
J 8(A), J 9(B) Junction Connector
C 8(A), C10(C) Combination Meter
15 C
16 C
Combination Meter <31–4>
Skid Control ECU with Actuator <15–5>
Body ECU <7–29>
Stop Light SW <11–2>
B–W
L–O
L–R
R–G
G–B
13 IC5
12 IC5
12 B
13 B
8 C
9 C
4 C
STP
TACH
FLO
FRO
DOOR
S13(A), S14(B), S15(C) Suspension Control ECU
MOD2
GND
MOD1
GND2
VN
HI
NR
LO
11 C
1 C
12 C
5 B
15 C
16 C
17 C
18 C
W–B
Y–G
Y
Y–B
BR–B
4 IC5
1 IC5
2 IC5
3 IC5
LO
N
HI
OFF
Height Control
4 A
3 A
2 A
5 A
13 C
BR
7 IM1
A B
A A
J 2(A), J 3(B) Junction Connector
EB
Front Left Fender
ED
Left Bank Cylinder Head