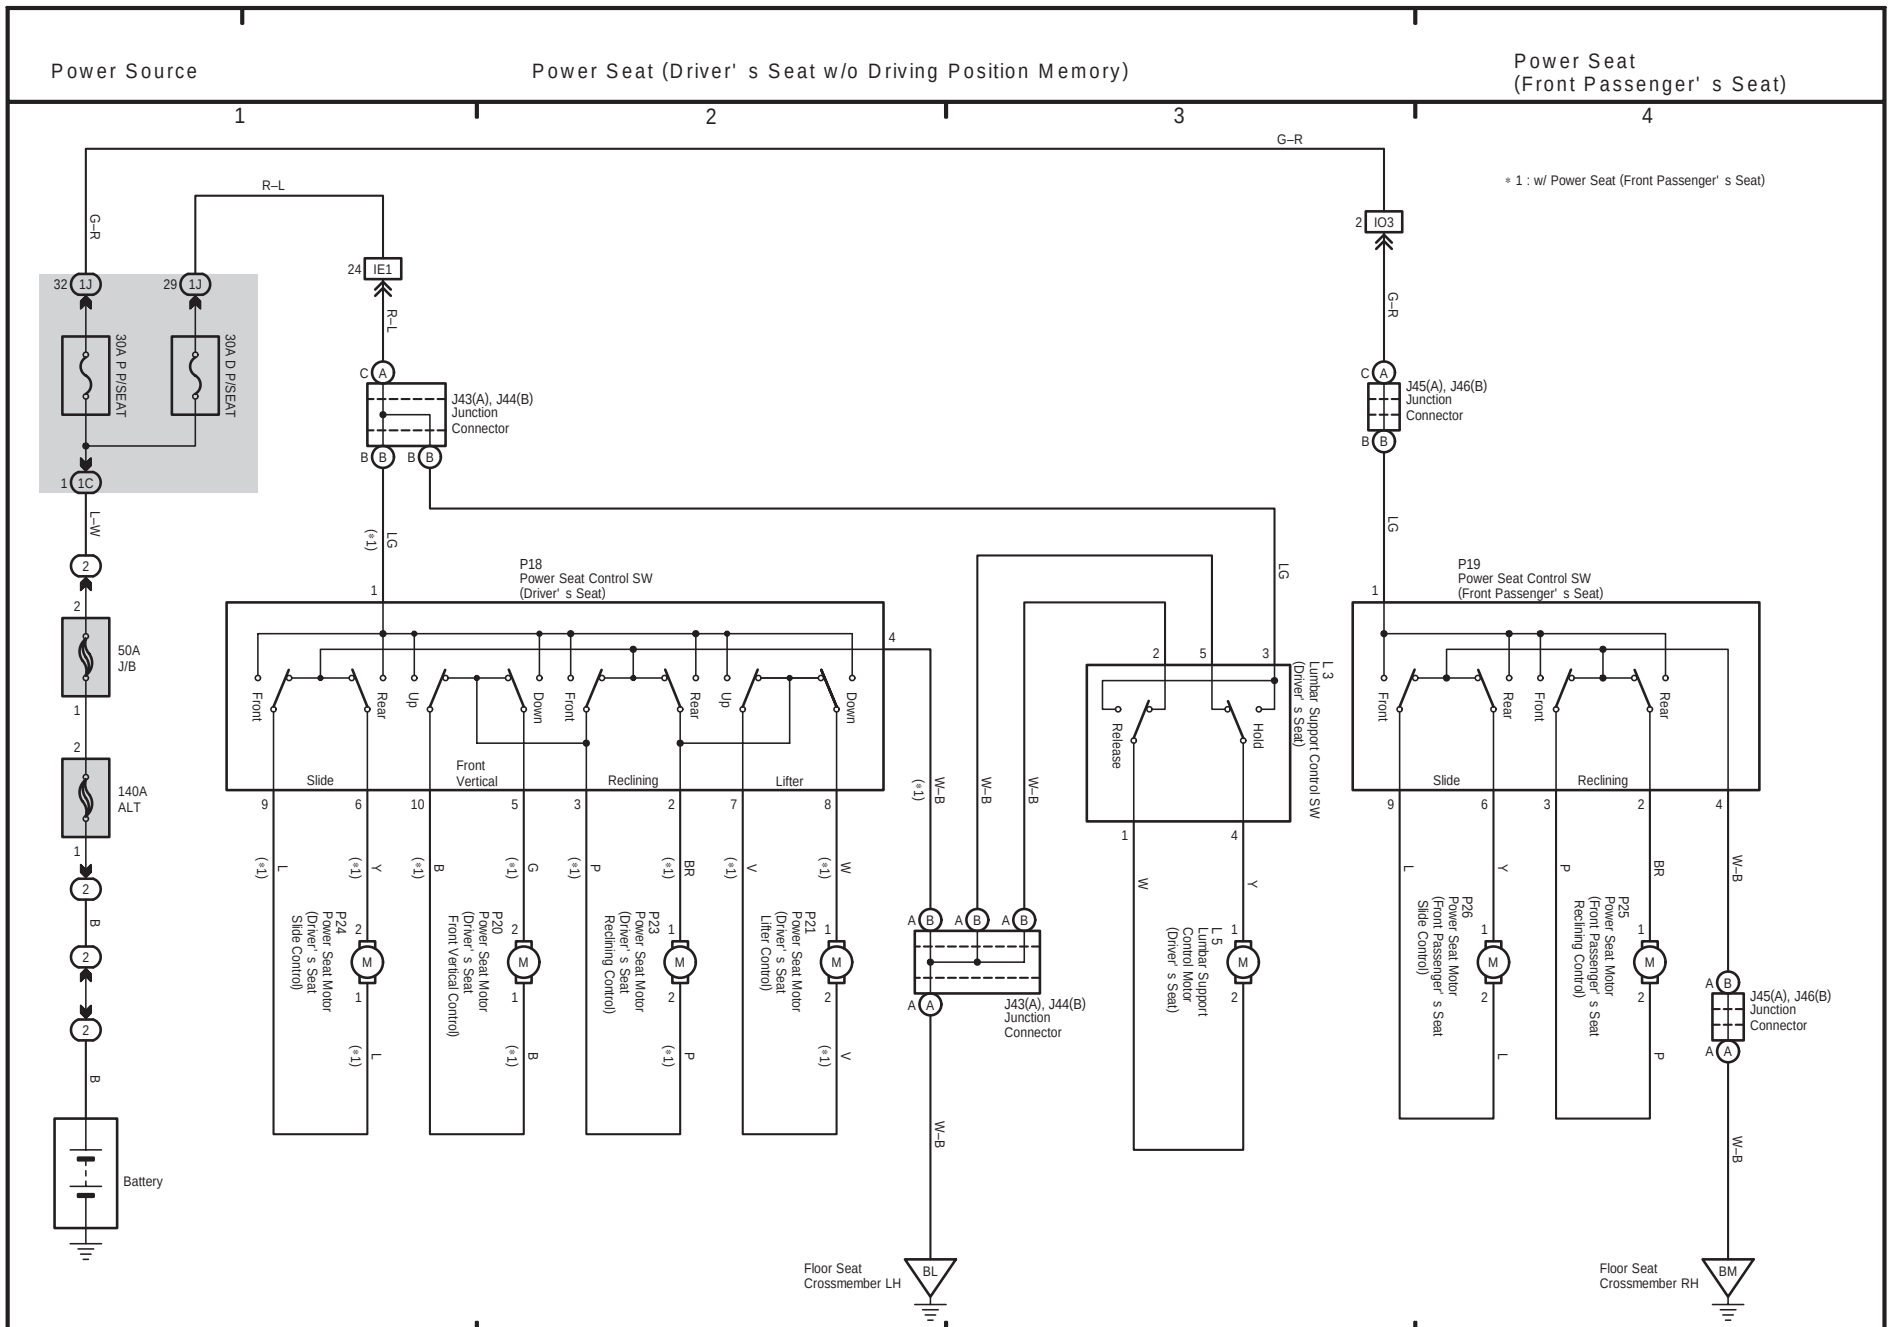
22 4RUNNER


Power Source
Power Seat (Driver' s Seat w/o Driving Position Memory)
Power Seat (Front Passenger' s Seat)
1
2
3
4
* 1 : w/ Power Seat (Front Passenger' s Seat)
G–R
R–L
L–W
LG
W–B
B
32 1J
29 1J
30A P/SEAT
30A D/SEAT
1C
50A J/B
140A ALT
Battery
24 IE1
J43(A), J44(B) Junction Connector
2 IO3
J45(A), J46(B) Junction Connector
P18 Power Seat Control SW (Driver' s Seat)
P19 Power Seat Control SW (Front Passenger' s Seat)
Front
Rear
Up
Down
Slide
Front Vertical
Reclining
Lifter
L3 Lumbar Support Control SW (Driver' s Seat)
Release
Hold
L5 Lumbar Support Control Motor (Driver' s Seat)
P24 Power Seat Motor (Driver' s Seat Slide Control)
P20 Power Seat Motor (Driver' s Seat Front Vertical Control)
P23 Power Seat Motor (Driver' s Seat Reclining Control)
P21 Power Seat Motor (Driver' s Seat Lifter Control)
P26 Power Seat Motor (Front Passenger' s Seat Slide Control)
P25 Power Seat Motor (Front Passenger' s Seat Reclining Control)
Floor Seat Crossmember LH
Floor Seat Crossmember RH
BL
BM