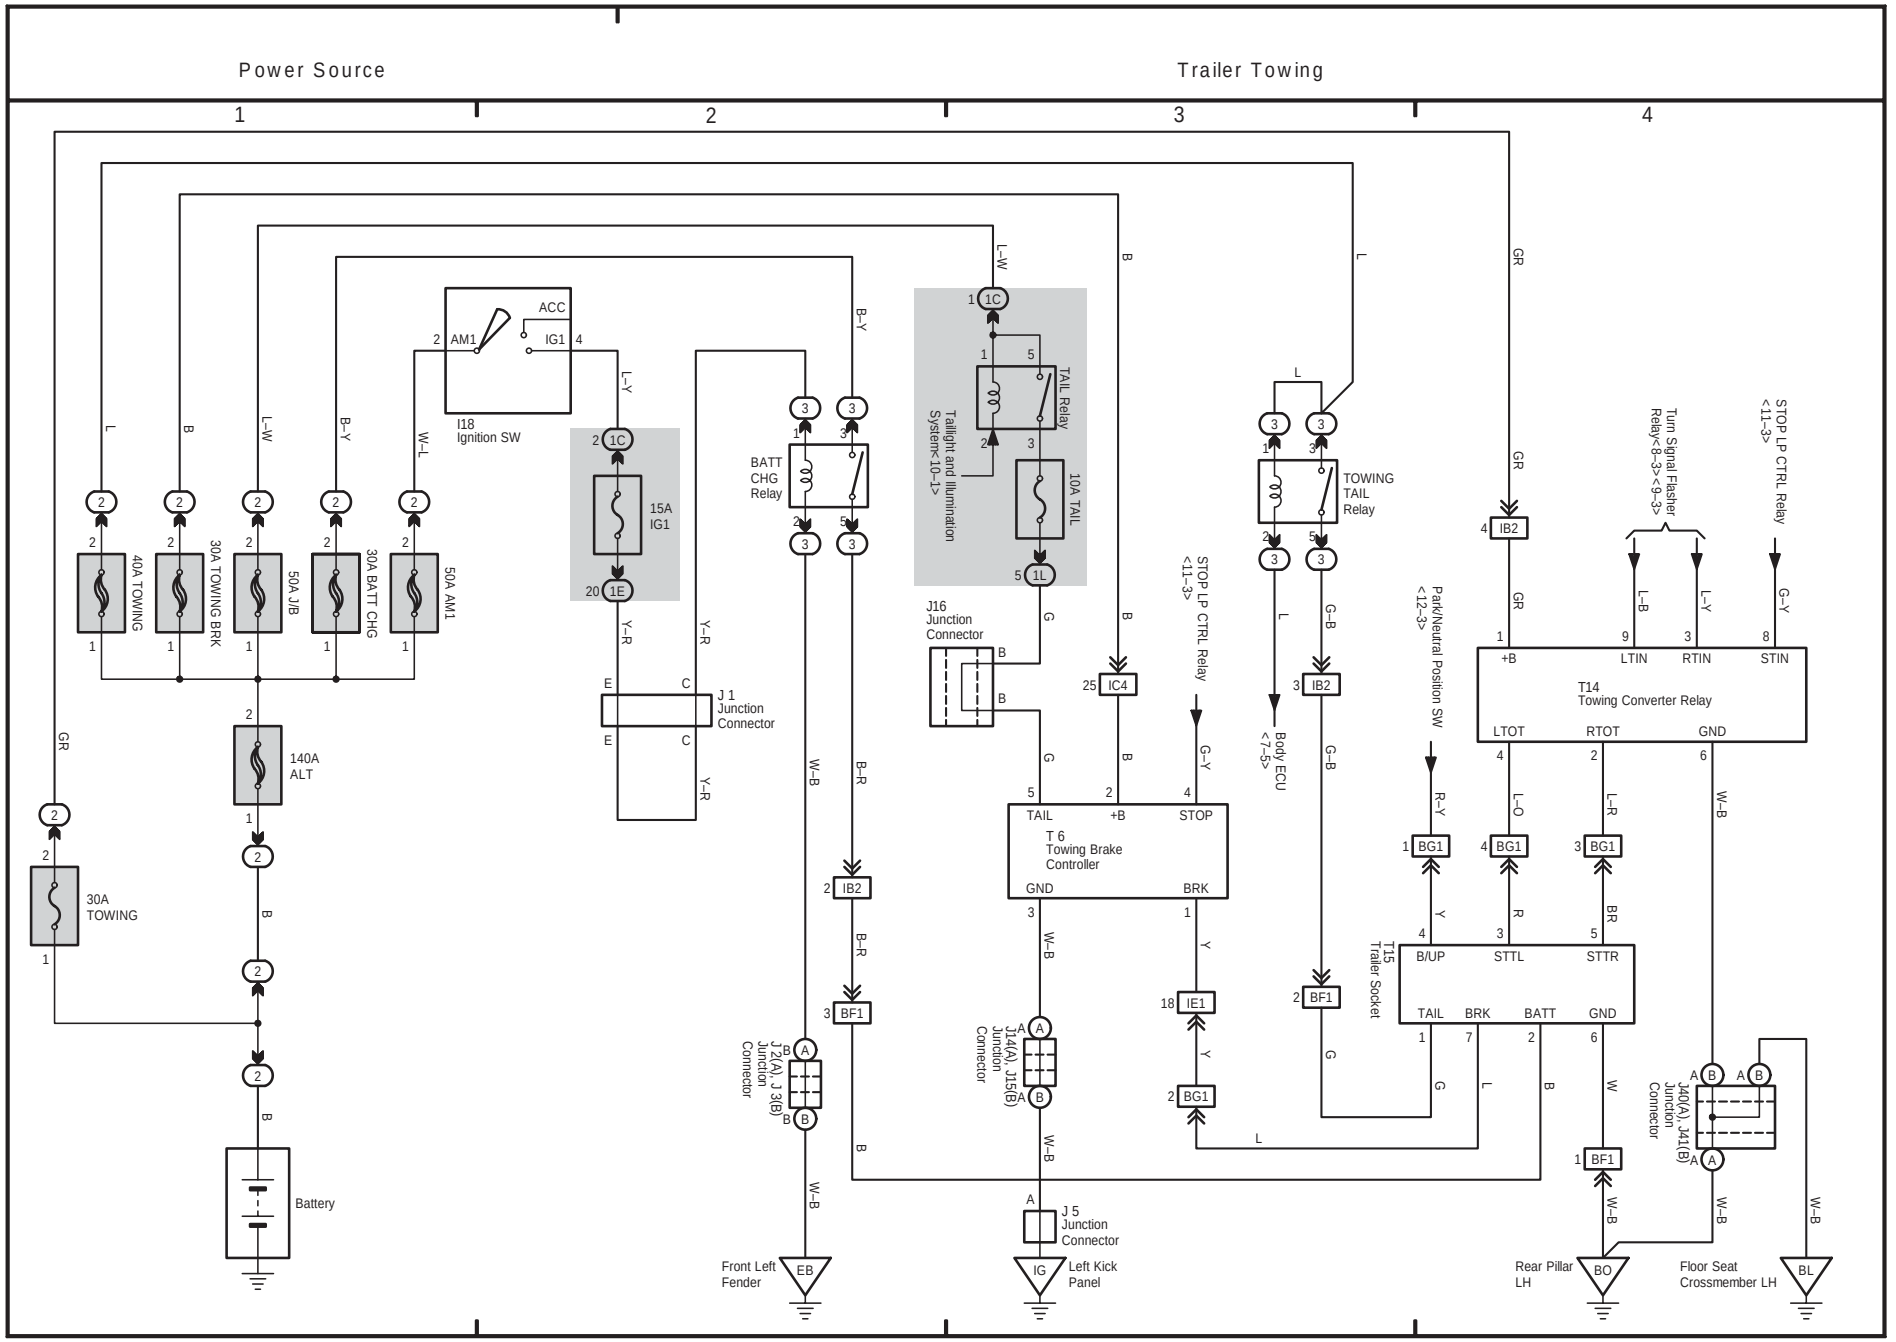

Power Source
Trailer Towing
1
2
3
4
Battery
30A TOWING
40A TOWING
30A TOWING BRK
50A J/B
30A BATT CHG
50A AM1
140A ALT
I18 Ignition SW
ACC
AM1
IG1
15A IG1
BATT CHG Relay
TAIL Relay
10A TAIL
Taillight and Illumination System<10-1>
TOWING TAIL Relay
J16 Junction Connector
J 1 Junction Connector
J2(A), J3(B) Junction Connector
J14(A), J15(B) Junction Connector
J 5 Junction Connector
J40(A), J41(B) Junction Connector
STOP LP CTRL Relay <11-3>
Turn Signal Flasher Relay<8-3><9-3>
Park/Neutral Position SW <12-3>
Body ECU <7-5>
T 6 Towing Brake Controller
T14 Towing Converter Relay
T15 Trailer Socket
Front Left Fender
Left Kick Panel
Rear Pillar LH
Floor Seat Crossmember LH