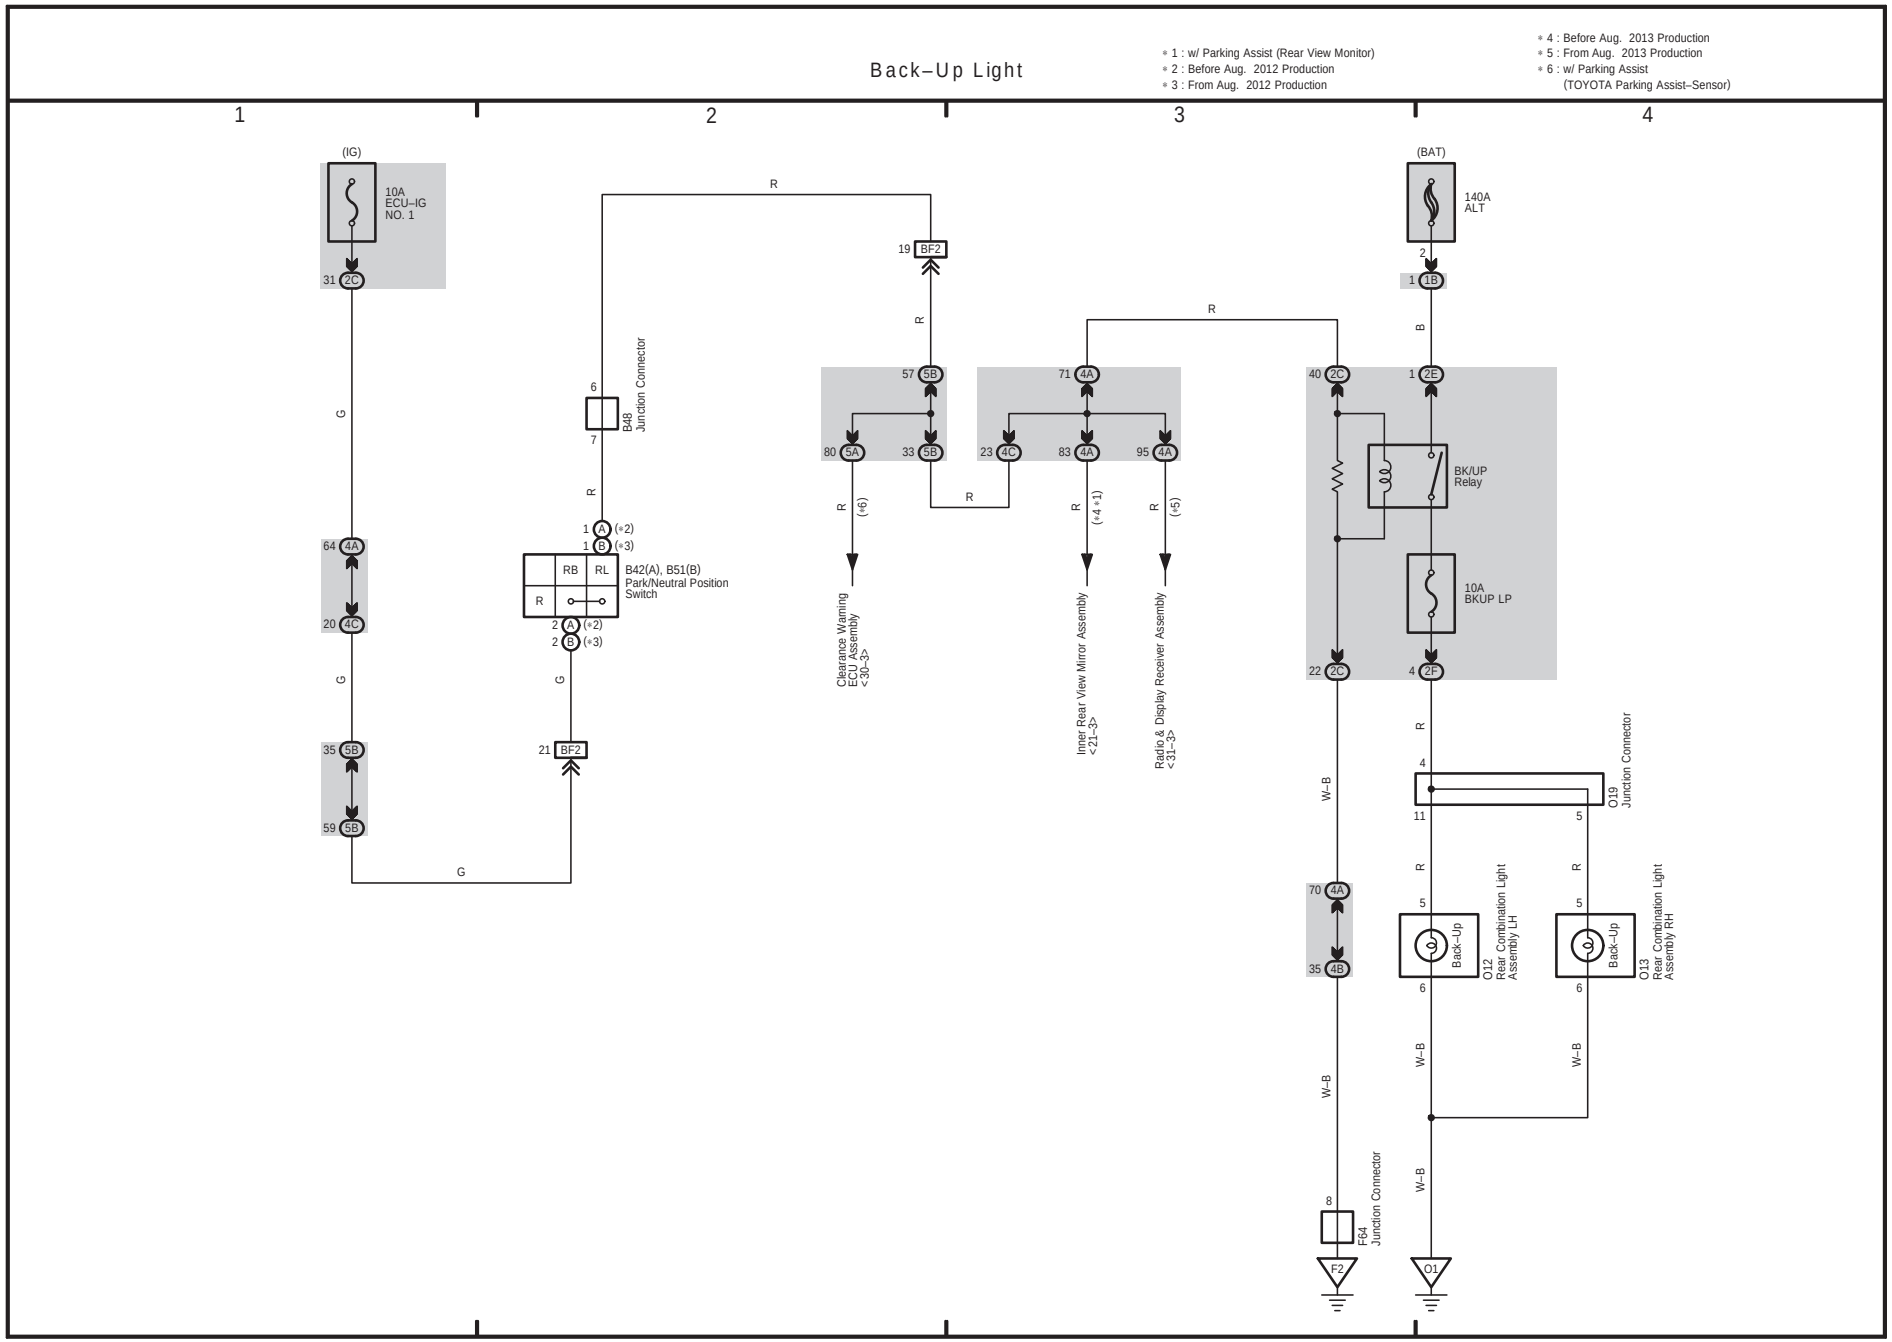

Back–Up Light
* 1 : w/ Parking Assist (Rear View Monitor)
* 2 : Before Aug. 2012 Production
* 3 : From Aug. 2012 Production
* 4 : Before Aug. 2013 Production
* 5 : From Aug. 2013 Production
* 6 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
1
2
3
4
(IG)
10A ECU–IG NO. 1
31 2C
64 4A
20 4C
35 5B
59 5B
G
R
19 BF2
6
B48 Junction Connector
7
1 A (*2)
1 B (*3)
RB
RL
R
B42(A), B51(B) Park/Neutral Position Switch
2 A (*2)
2 B (*3)
21 BF2
57 5B
80 5A
33 5B
R (*6)
Clearance Warning ECU Assembly <30–3>
71 4A
23 4C
83 4A
95 4A
R (*4 *1)
Inner Rear View Mirror Assembly <21–3>
R (*5)
Radio & Display Receiver Assembly <31–3>
(BAT)
140A ALT
2
1 1B
B
1 2E
40 2C
BK/UP Relay
10A BKUP LP
22 2C
4 2F
W–B
70 4A
35 4B
8
F64 Junction Connector
F2
O1
R
4
O19 Junction Connector
11
5
5
Back–Up
O12 Rear Combination Light Assembly LH
O13 Rear Combination Light Assembly RH
6
6