

(Cont. next page)

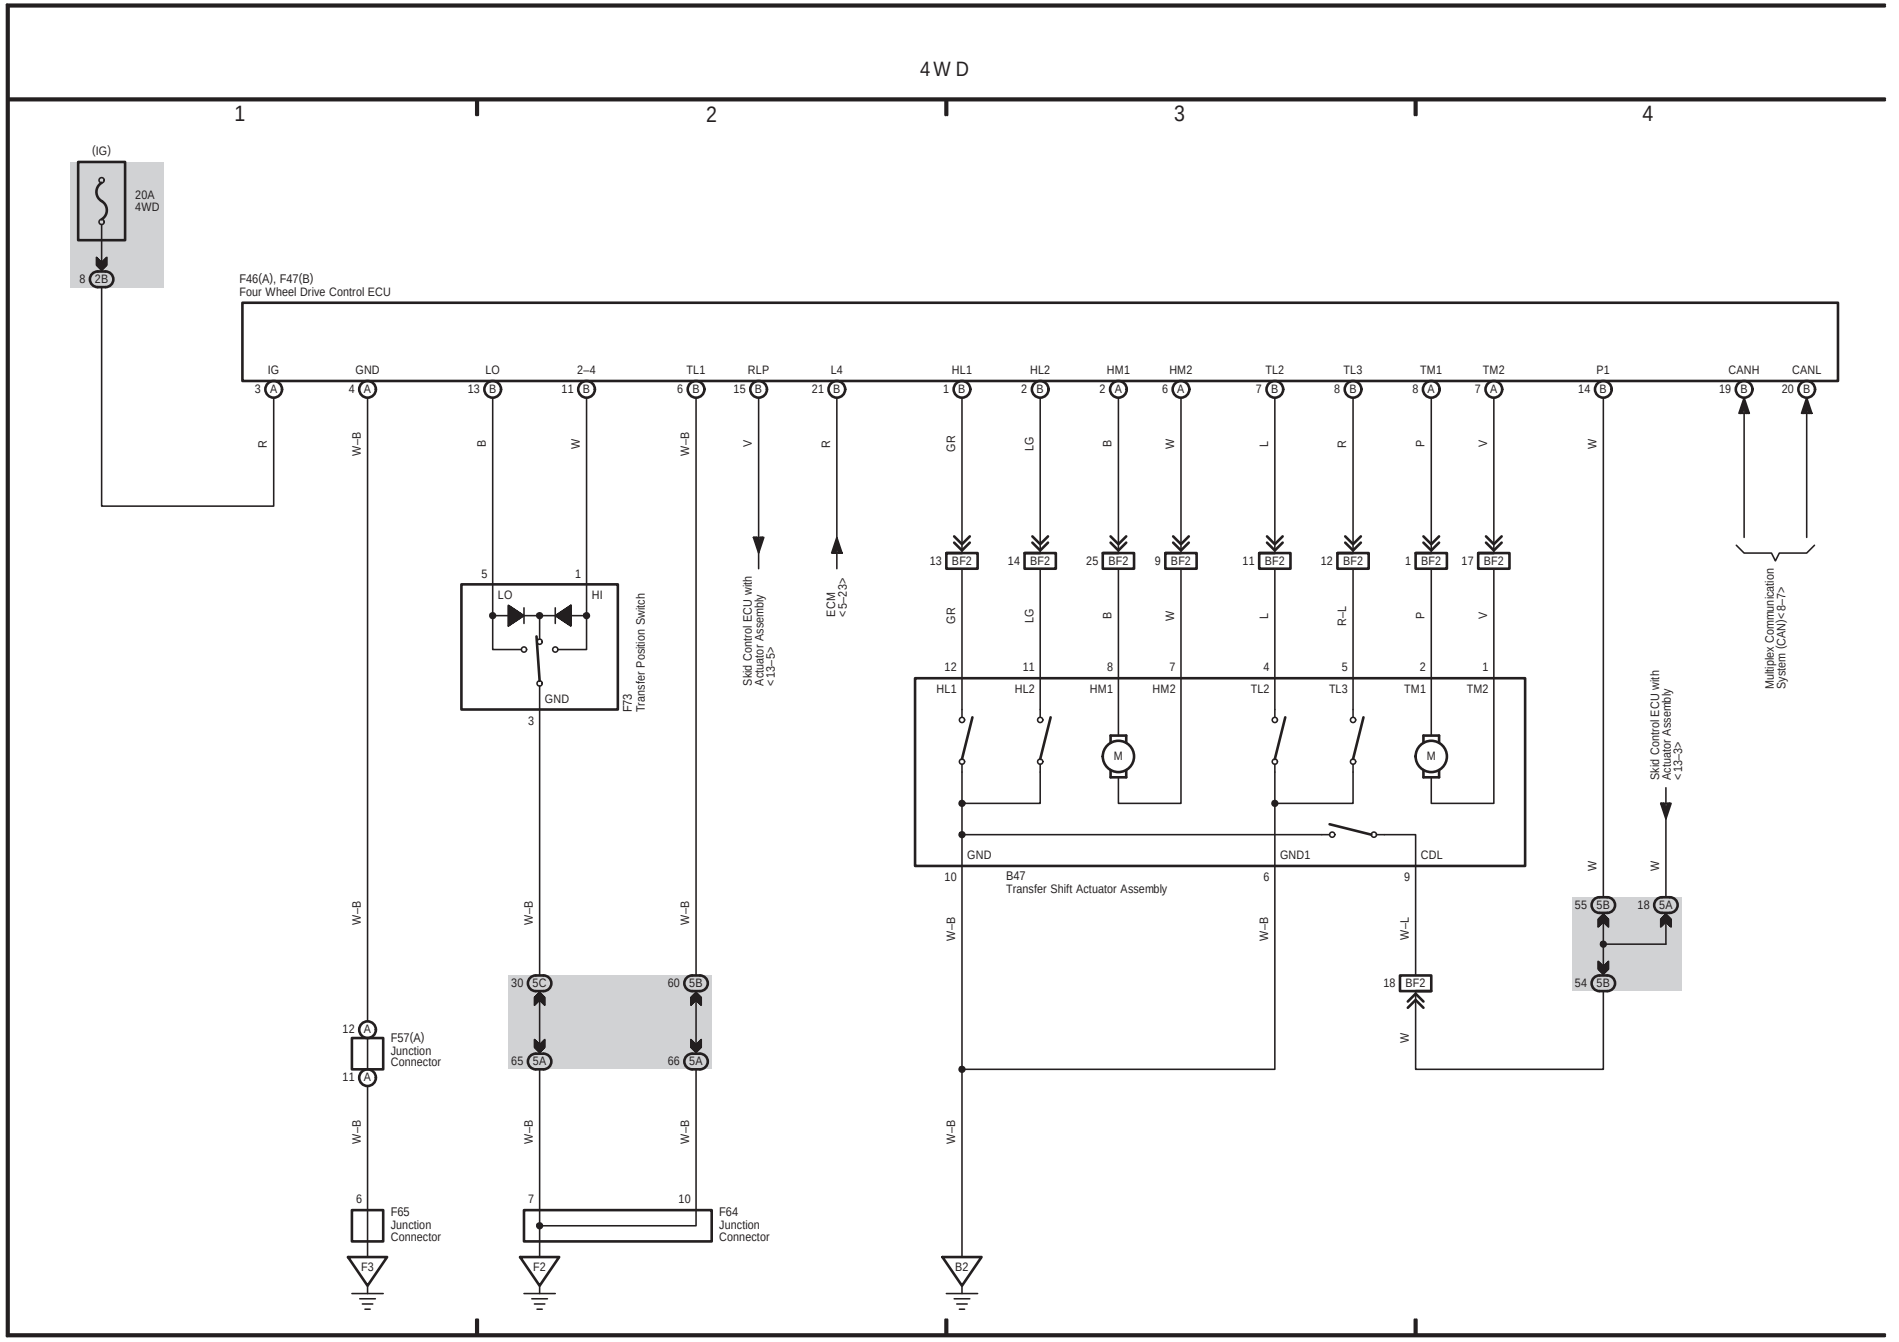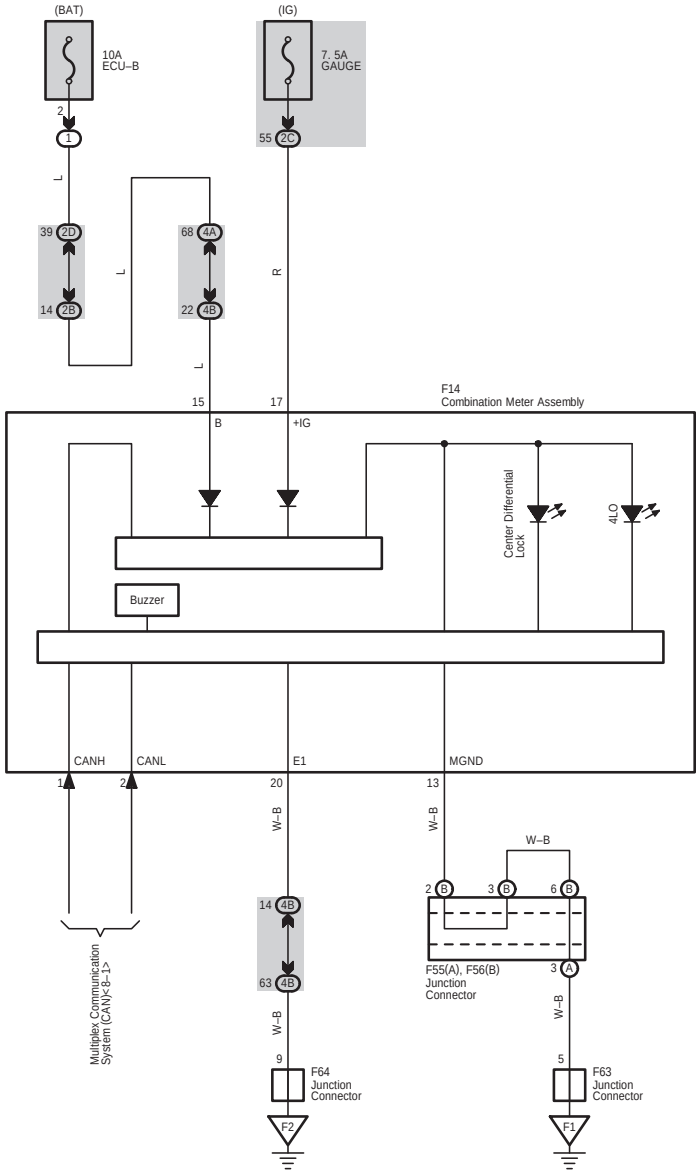

4WD


5
6
7
8
(BAT)
10A
ECU–B
(IG)
7. 5A
GAUGE
2
1
55 2C
L
39 2D
14 2B
68 4A
22 4B
L
R
L
15
17
F14
Combination Meter Assembly
B
+IG
Center Differential Lock
4LO
Buzzer
CANH
CANL
E1
MGND
1
2
20
13
W–B
W–B
W–B
2 B
3 B
6 B
14 4B
63 4B
3 A
F55(A), F56(B)
Junction
Connector
W–B
9
5
F64
Junction
Connector
F63
Junction
Connector
F2
F1
Multiplex Communication System (CAN)<8–1>