

(Cont. next page)

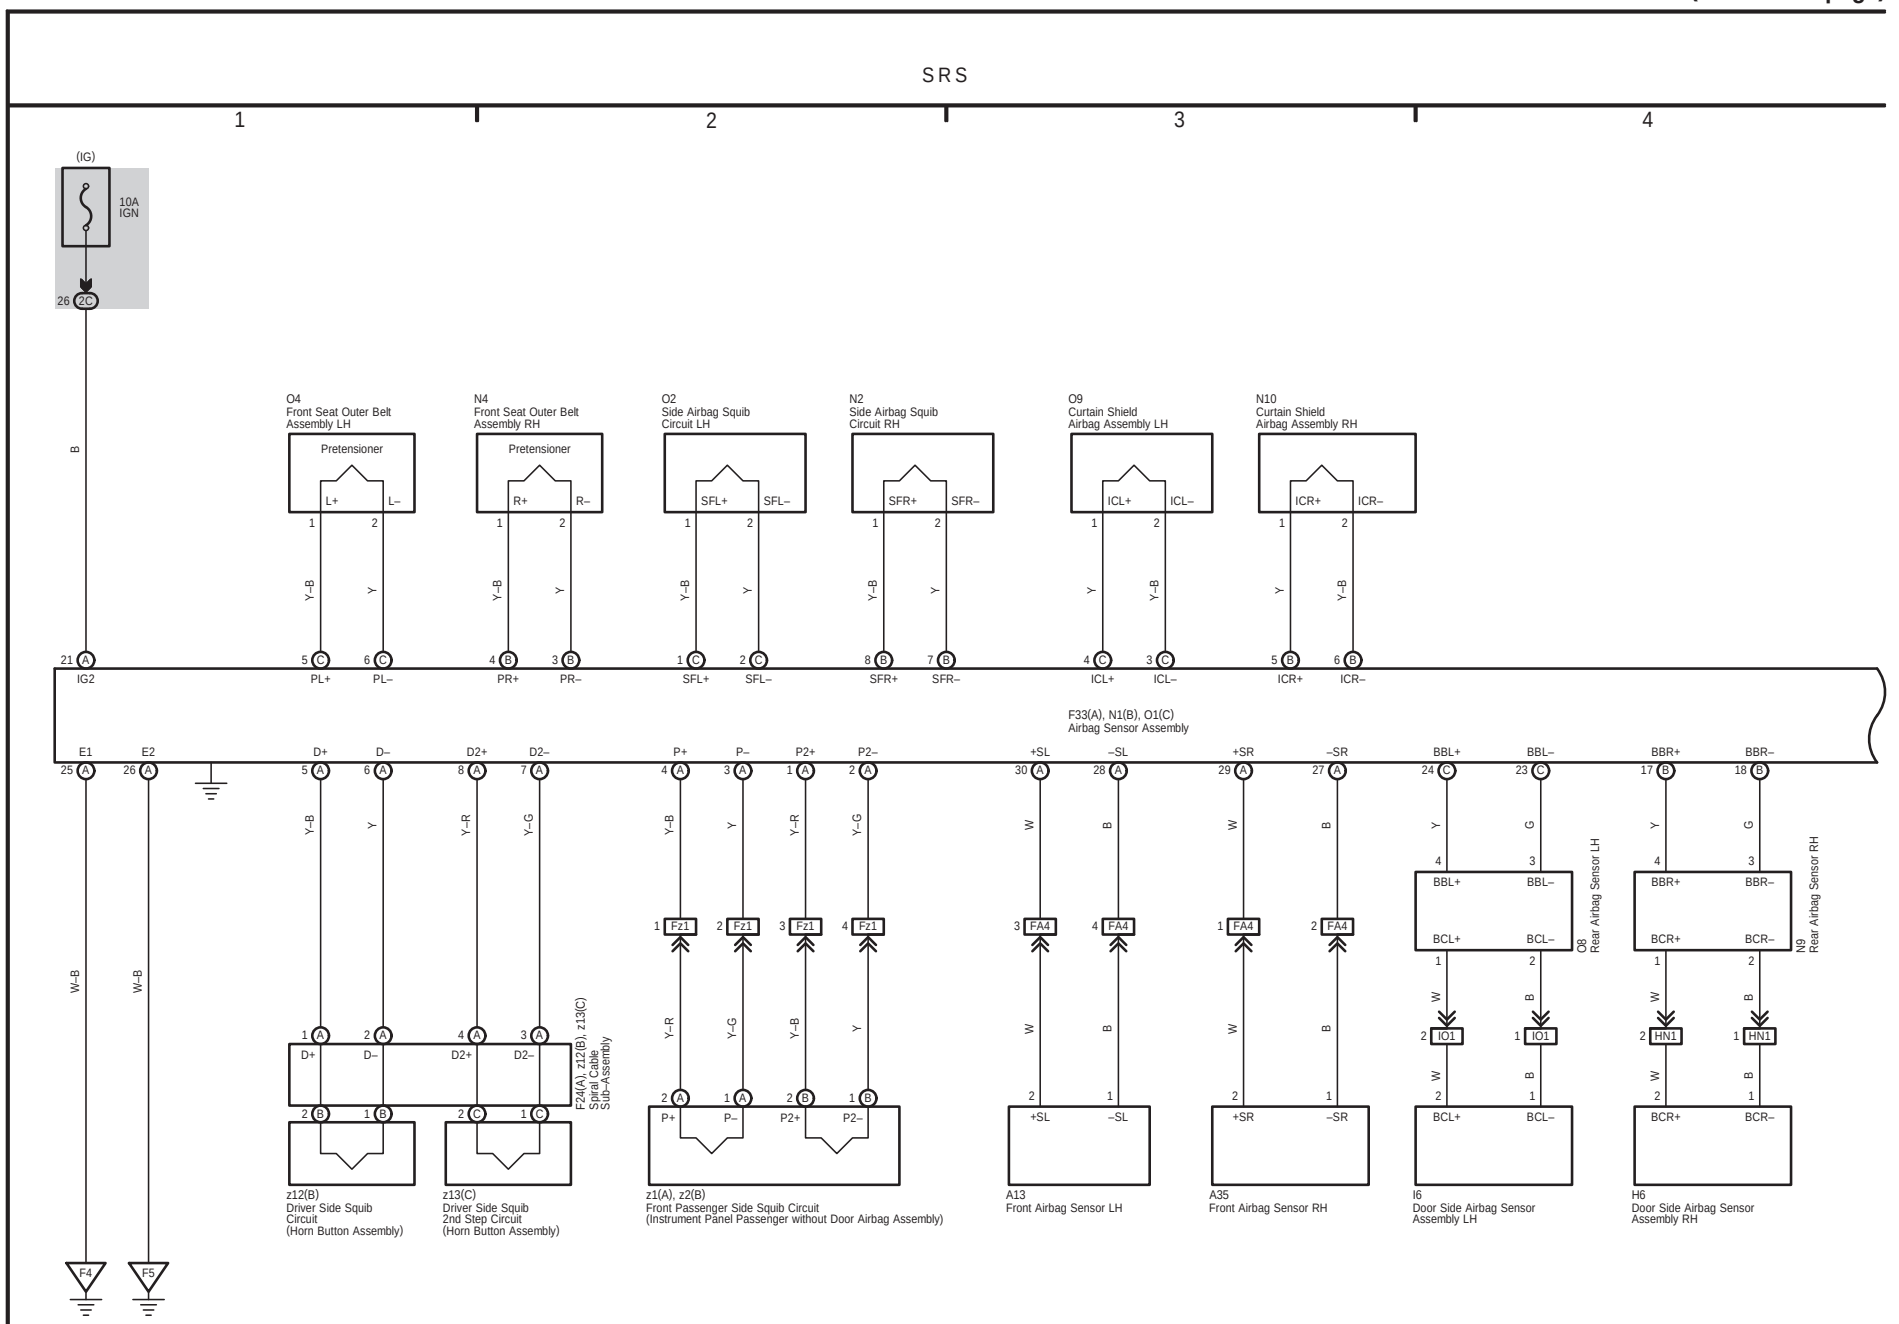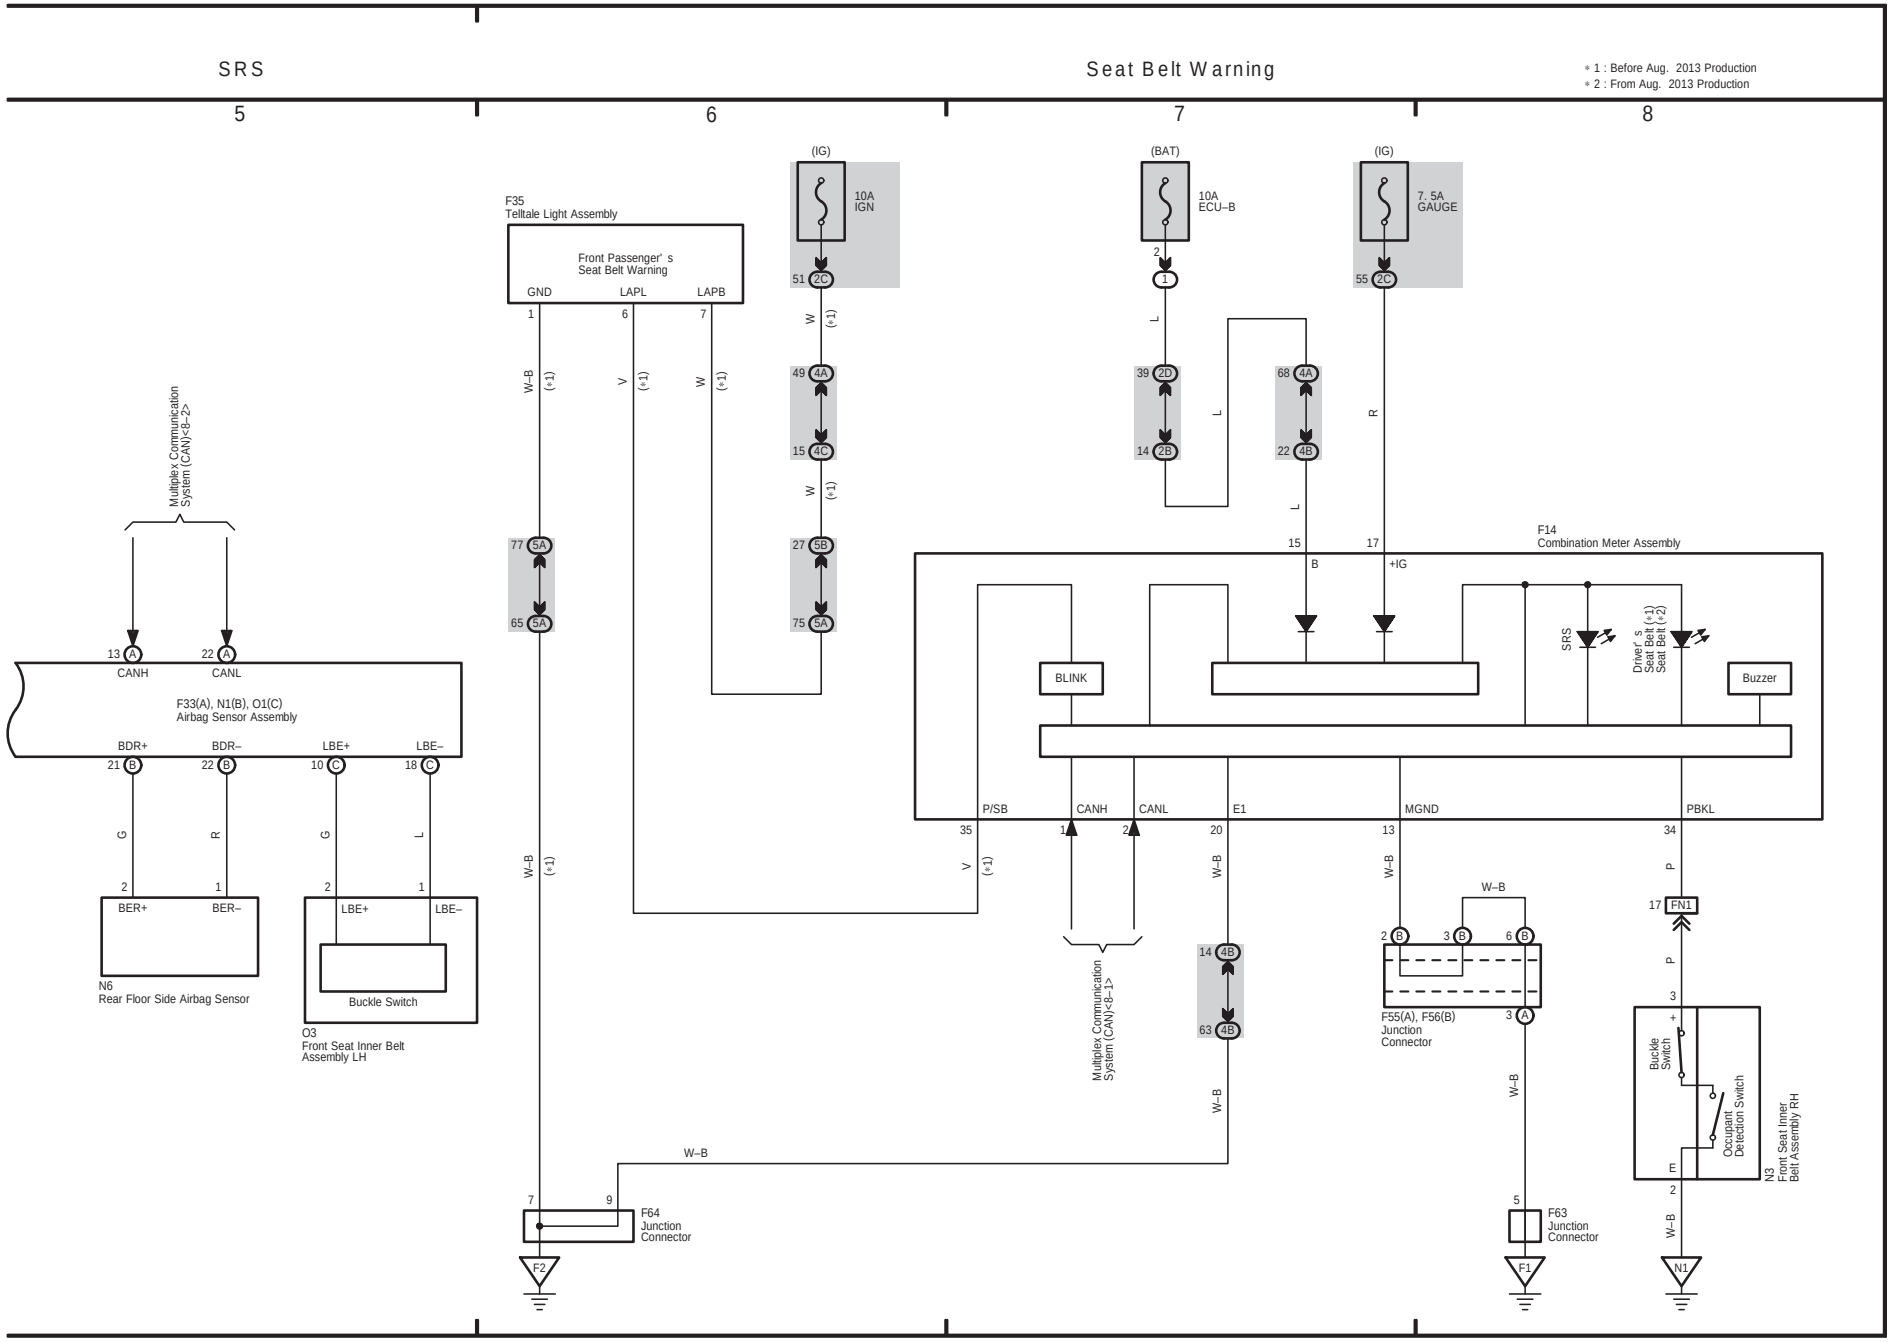


SRS
Seat Belt Warning
* 1 : Before Aug. 2013 Production
* 2 : From Aug. 2013 Production
5
6
7
8
Multiplex Communication System (CAN)<B–2>
13 A CANH
22 A CANL
F33(A), N1(B), O1(C)
Airbag Sensor Assembly
BDR+
BDR–
LBE+
LBE–
21 B
22 B
10 C
18 C
G
R
G
L
2
1
2
1
BER+
BER–
N6
Rear Floor Side Airbag Sensor
LBE+
LBE–
Buckle Switch
O3
Front Seat Inner Belt Assembly LH
F35
Telltale Light Assembly
Front Passenger' s Seat Belt Warning
GND
LAPL
LAPB
1
6
7
W–B (*1)
V (*1)
W (*1)
(IG)
10A IGN
51 2C
49 4A
15 4C
77 5A
65 5A
27 5B
75 5A
W (*1)
(BAT)
10A ECU–B
2
1
39 2D
14 2B
68 4A
22 4B
L
(IG)
7. 5A GAUGE
55 2C
R
F14
Combination Meter Assembly
15
17
B
+IG
BLINK
SRS
Driver' s Seat Belt (*1)
Seat Belt (*2)
Buzzer
P/SB
CANH
CANL
E1
MGND
PBKL
35
1
2
20
13
34
V (*1)
W–B
W–B
P
Multiplex Communication System (CAN)<B–1>
14 4B
63 4B
W–B
W–B
2 B
3 B
6 B
F55(A), F56(B) Junction Connector
3 A
17 FN1
P
3
+
Buckle Switch
Occupant Detection Switch
E
N3
Front Seat Inner Belt Assembly RH
2
W–B
W–B
7
9
F64
Junction Connector
F2
5
F63
Junction Connector
F1
N1