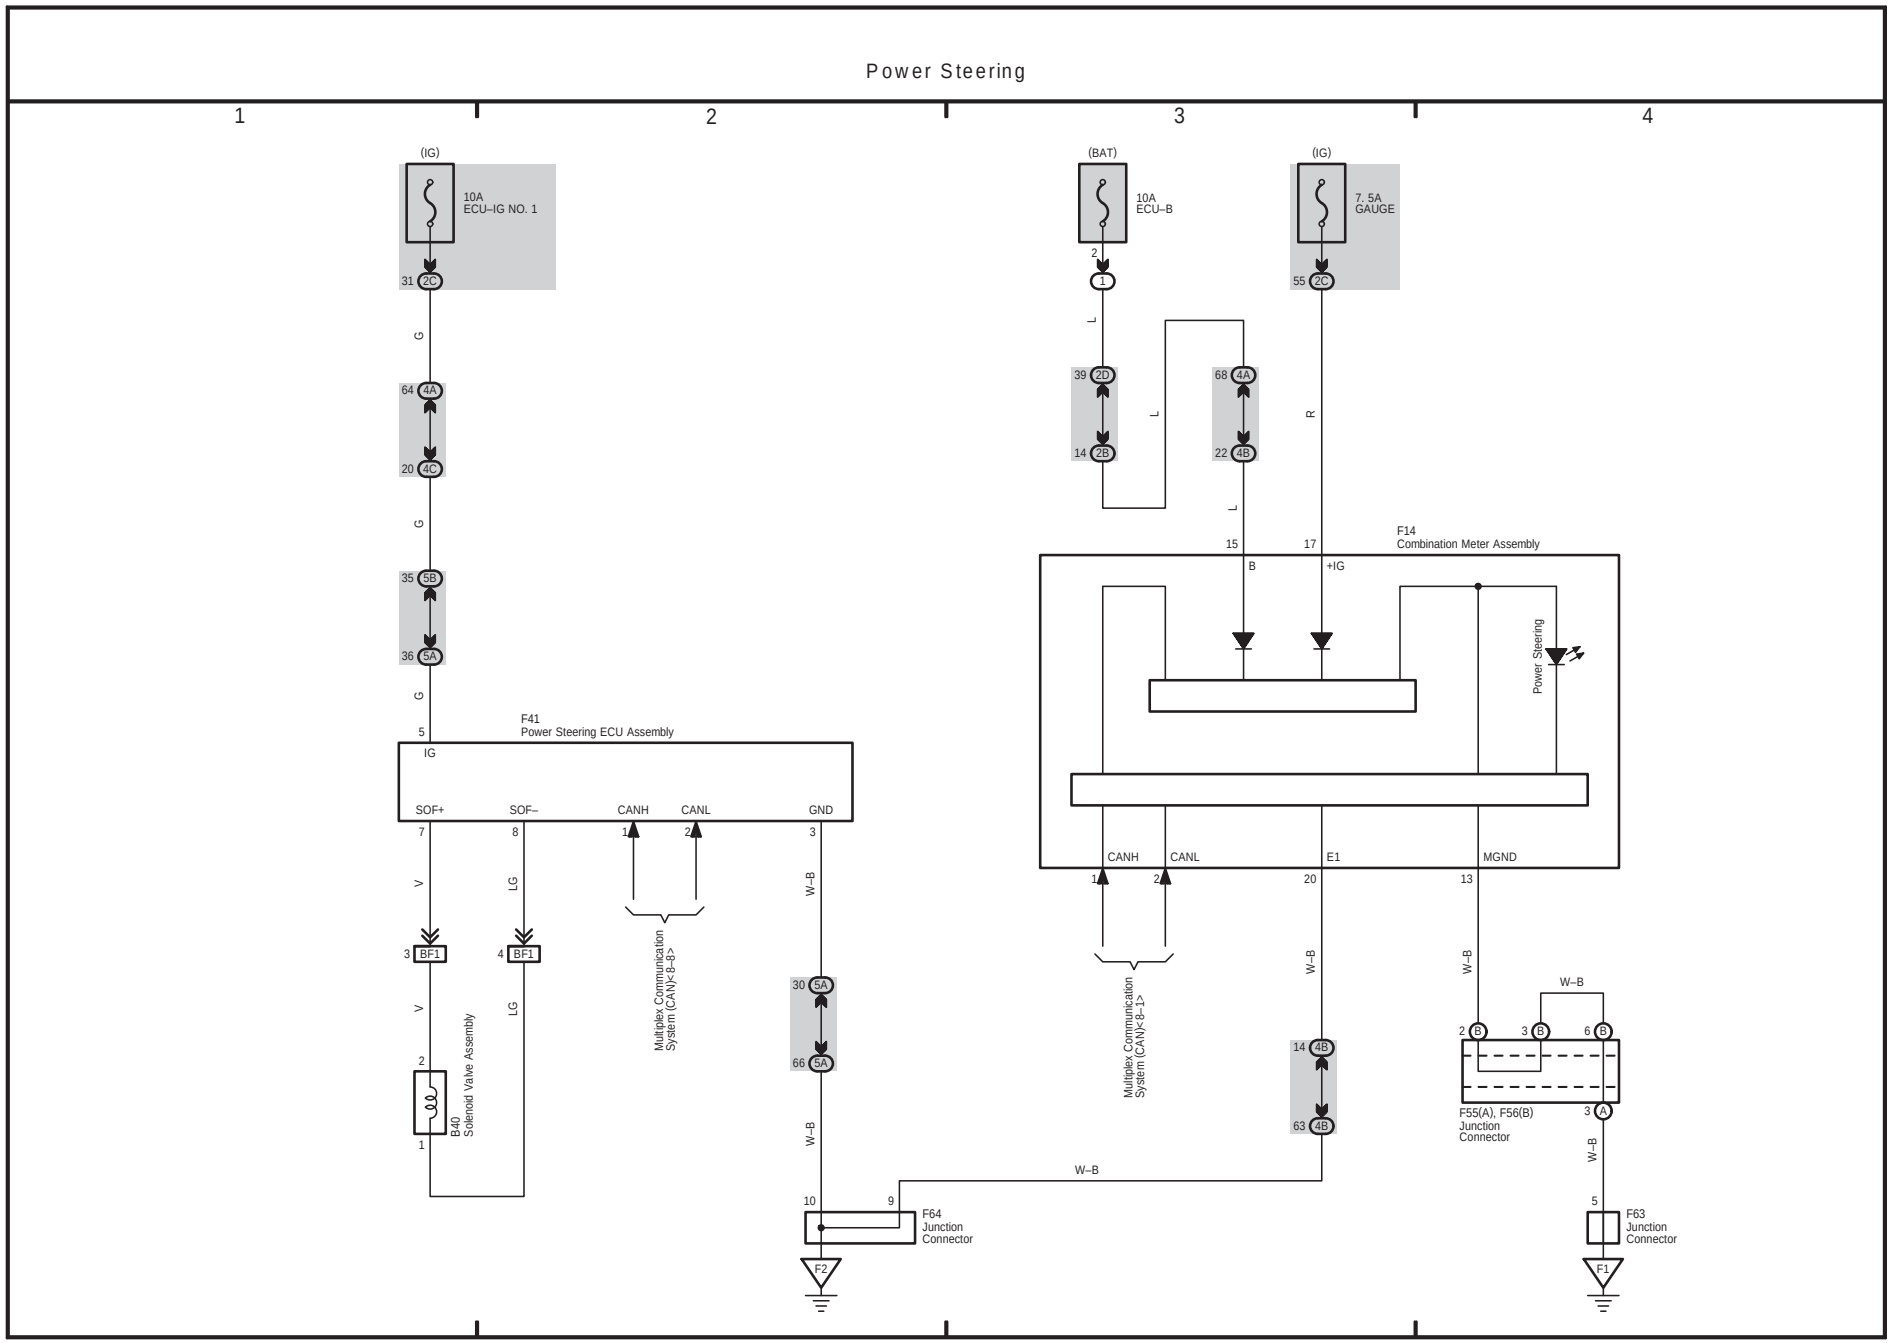

Power Steering
1
2
3
4
(IG)
10A
ECU–IG NO. 1
31 2C
G
64 4A
20 4C
G
35 5B
36 5A
G
5
F41
Power Steering ECU Assembly
IG
SOF+
SOF–
CANH
CANL
GND
7
8
1
2
3
V
LG
W–B
3 BF1
4 BF1
V
LG
2
B40
Solenoid Valve Assembly
1
Multiplex Communication System (CAN)<8–8>
30 5A
66 5A
W–B
10
9
F64
Junction Connector
F2
(BAT)
10A
ECU–B
2
1
L
39 2D
14 2B
L
68 4A
22 4B
L
R
(IG)
7. 5A
GAUGE
55 2C
F14
Combination Meter Assembly
15
17
B
+IG
Power Steering
CANH
CANL
E1
MGND
1
2
20
13
Multiplex Communication System (CAN)<8–1>
W–B
14 4B
63 4B
W–B
W–B
2 B
3 B
6 B
F55(A), F56(B)
Junction Connector
3 A
W–B
5
F63
Junction Connector
F1