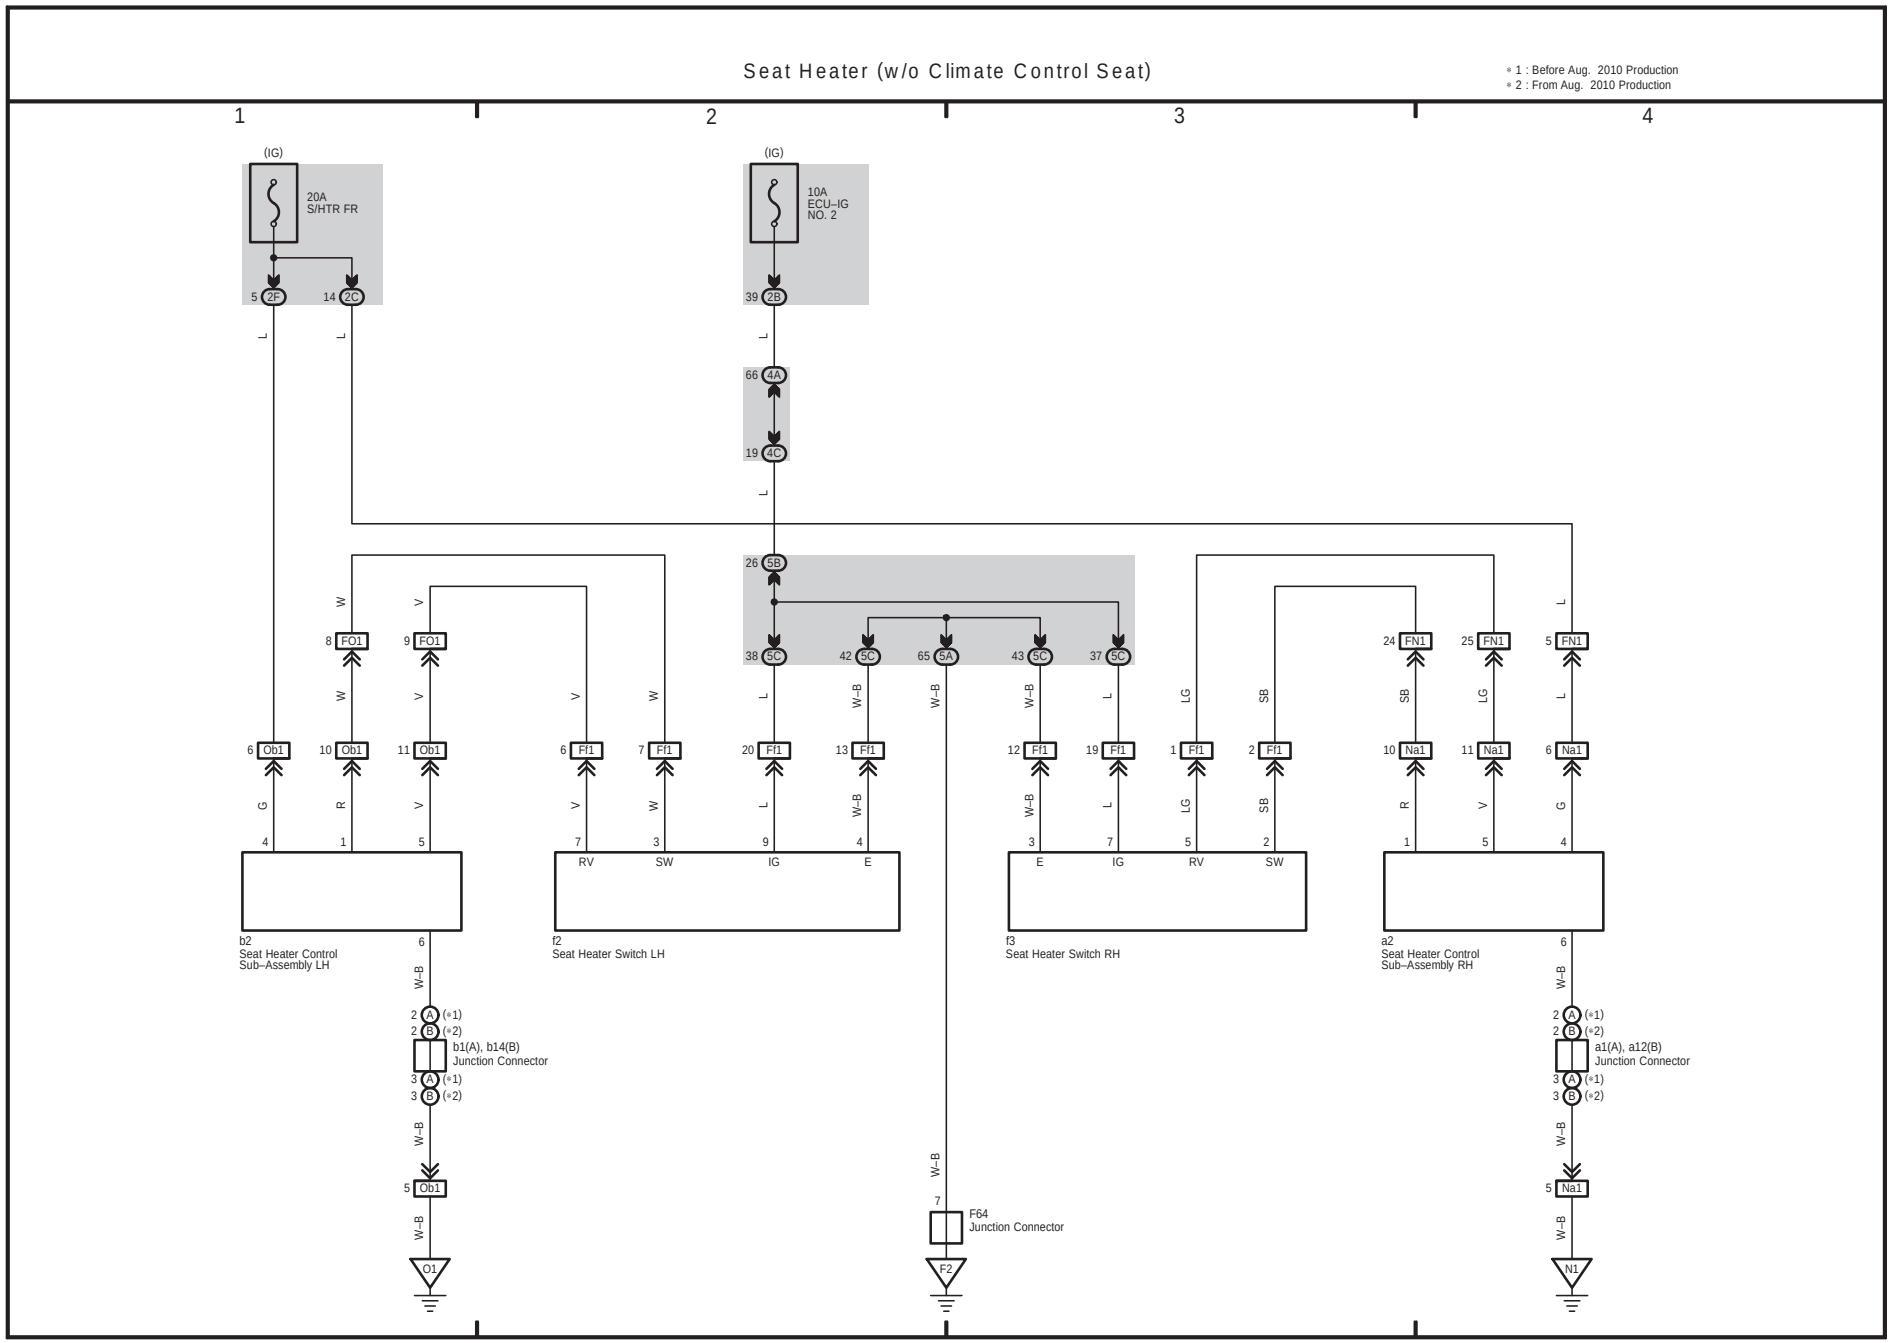

Seat Heater (w/o Climate Control Seat)
* 1 : Before Aug. 2010 Production
* 2 : From Aug. 2010 Production
1
2
3
4
(IG)
20A
S/HTR FR
5 2F
14 2C
(IG)
10A
ECU–IG
NO. 2
39 2B
66 4A
19 4C
26 5B
38 5C
42 5C
65 5A
43 5C
37 5C
8 FO1
9 FO1
6 Ob1
10 Ob1
11 Ob1
6 Ff1
7 Ff1
20 Ff1
13 Ff1
12 Ff1
19 Ff1
1 Ff1
2 Ff1
24 FN1
25 FN1
5 FN1
10 Na1
11 Na1
6 Na1
RV
SW
IG
E
b2
Seat Heater Control
Sub–Assembly LH
f2
Seat Heater Switch LH
f3
Seat Heater Switch RH
a2
Seat Heater Control
Sub–Assembly RH
b1(A), b14(B)
Junction Connector
a1(A), a12(B)
Junction Connector
F64
Junction Connector
O1
F2
N1