

(Cont. next page)

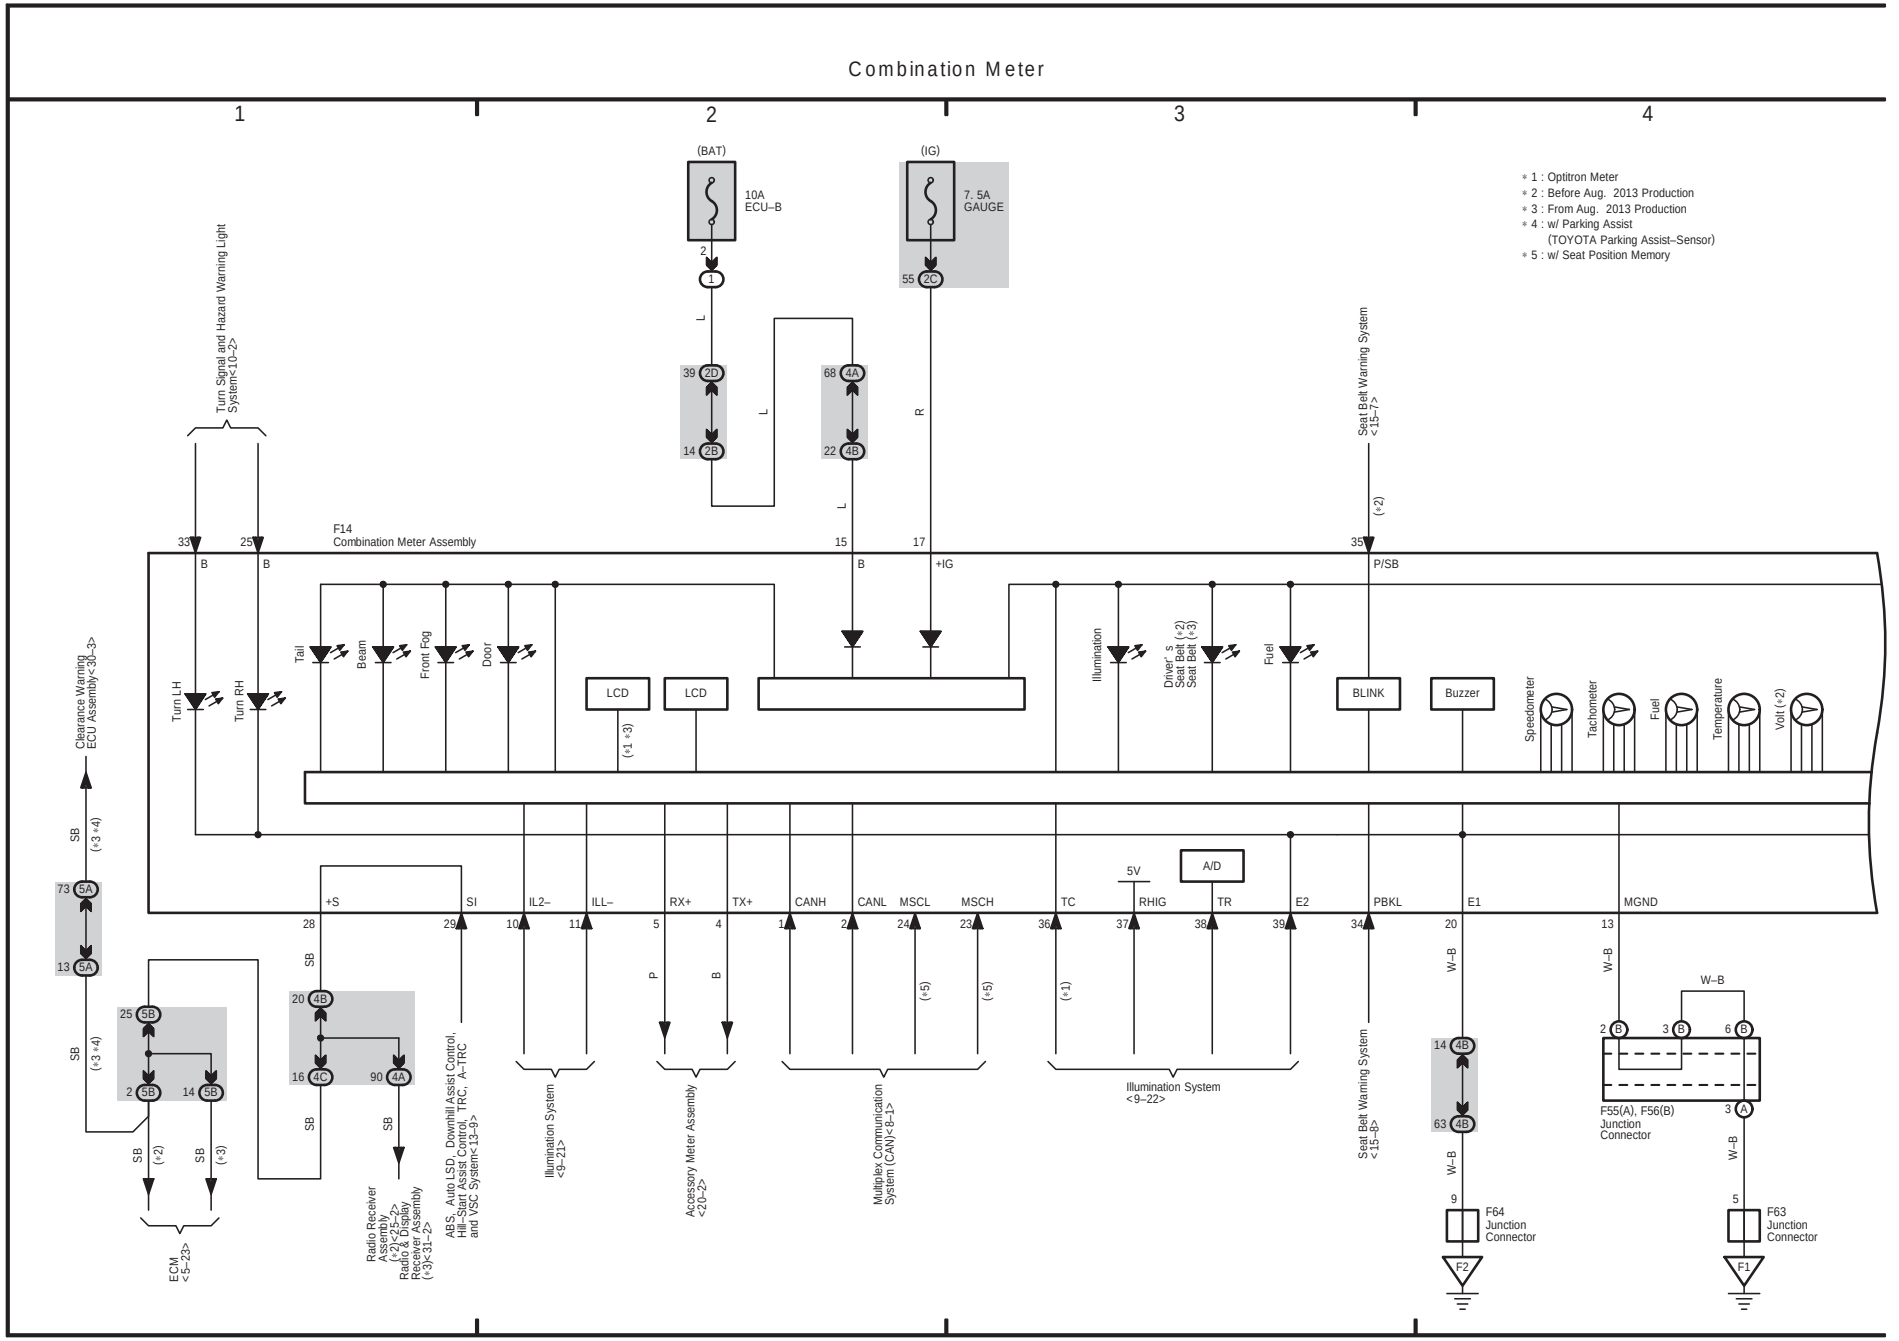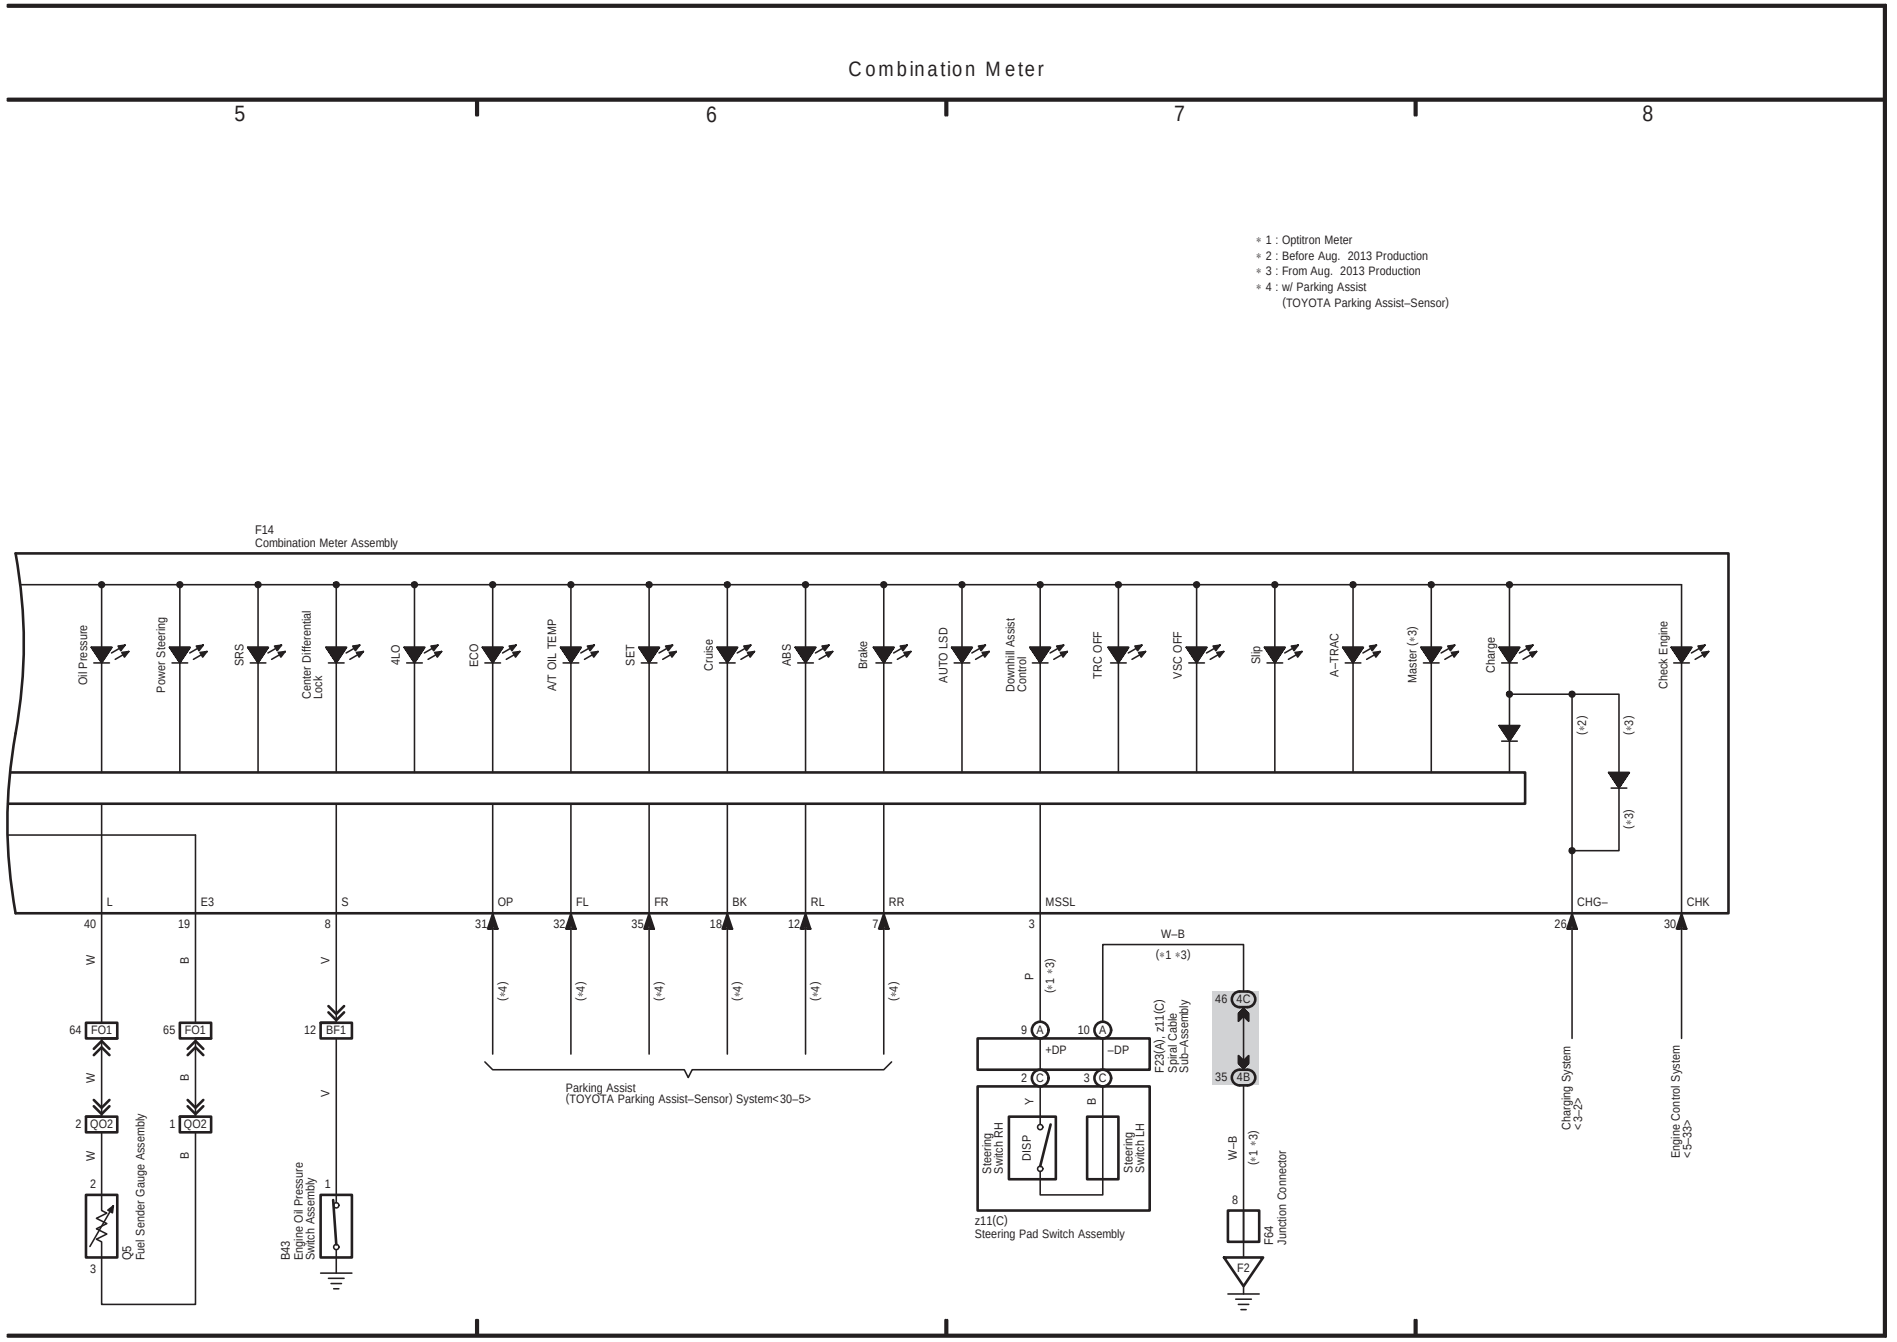


Combination Meter
5
6
7
8
* 1 : Optitron Meter
* 2 : Before Aug. 2013 Production
* 3 : From Aug. 2013 Production
* 4 : w/ Parking Assist
(TOYOTA Parking Assist–Sensor)
F14
Combination Meter Assembly
Oil Pressure
Power Steering
SRS
Center Differential LOCK
4LO
ECO
A/T OIL TEMP
SET
Cruise
ABS
Brake
AUTO LSD
Downhill Assist Control
TRC OFF
VSC OFF
Slip
A–TRAC
Master (*3)
Charge
Check Engine
(*2)
(*3)
(*3)
L
E3
S
OP
FL
FR
BK
RL
RR
MSSL
CHG–
CHK
40
19
8
31
32
35
18
12
7
3
26
30
W
B
V
P
W–B
(*1 *3)
(*4)
64 FO1
65 FO1
12 BF1
2 QO2
1 QO2
2
3
Q5
Fuel Sender Gauge Assembly
B43
Engine Oil Pressure Switch Assembly
Parking Assist
(TOYOTA Parking Assist–Sensor) System<30–5>
9 A
10 A
+DP
–DP
2 C
3 C
F23(A), z11(C)
Spiral Cable Sub-Assembly
46 4C
35 4B
Steering Switch RH
DISP
Steering Switch LH
z11(C)
Steering Pad Switch Assembly
8
F64
Junction Connector
F2
Charging System
<3–2>
Engine Control System
<5–33>