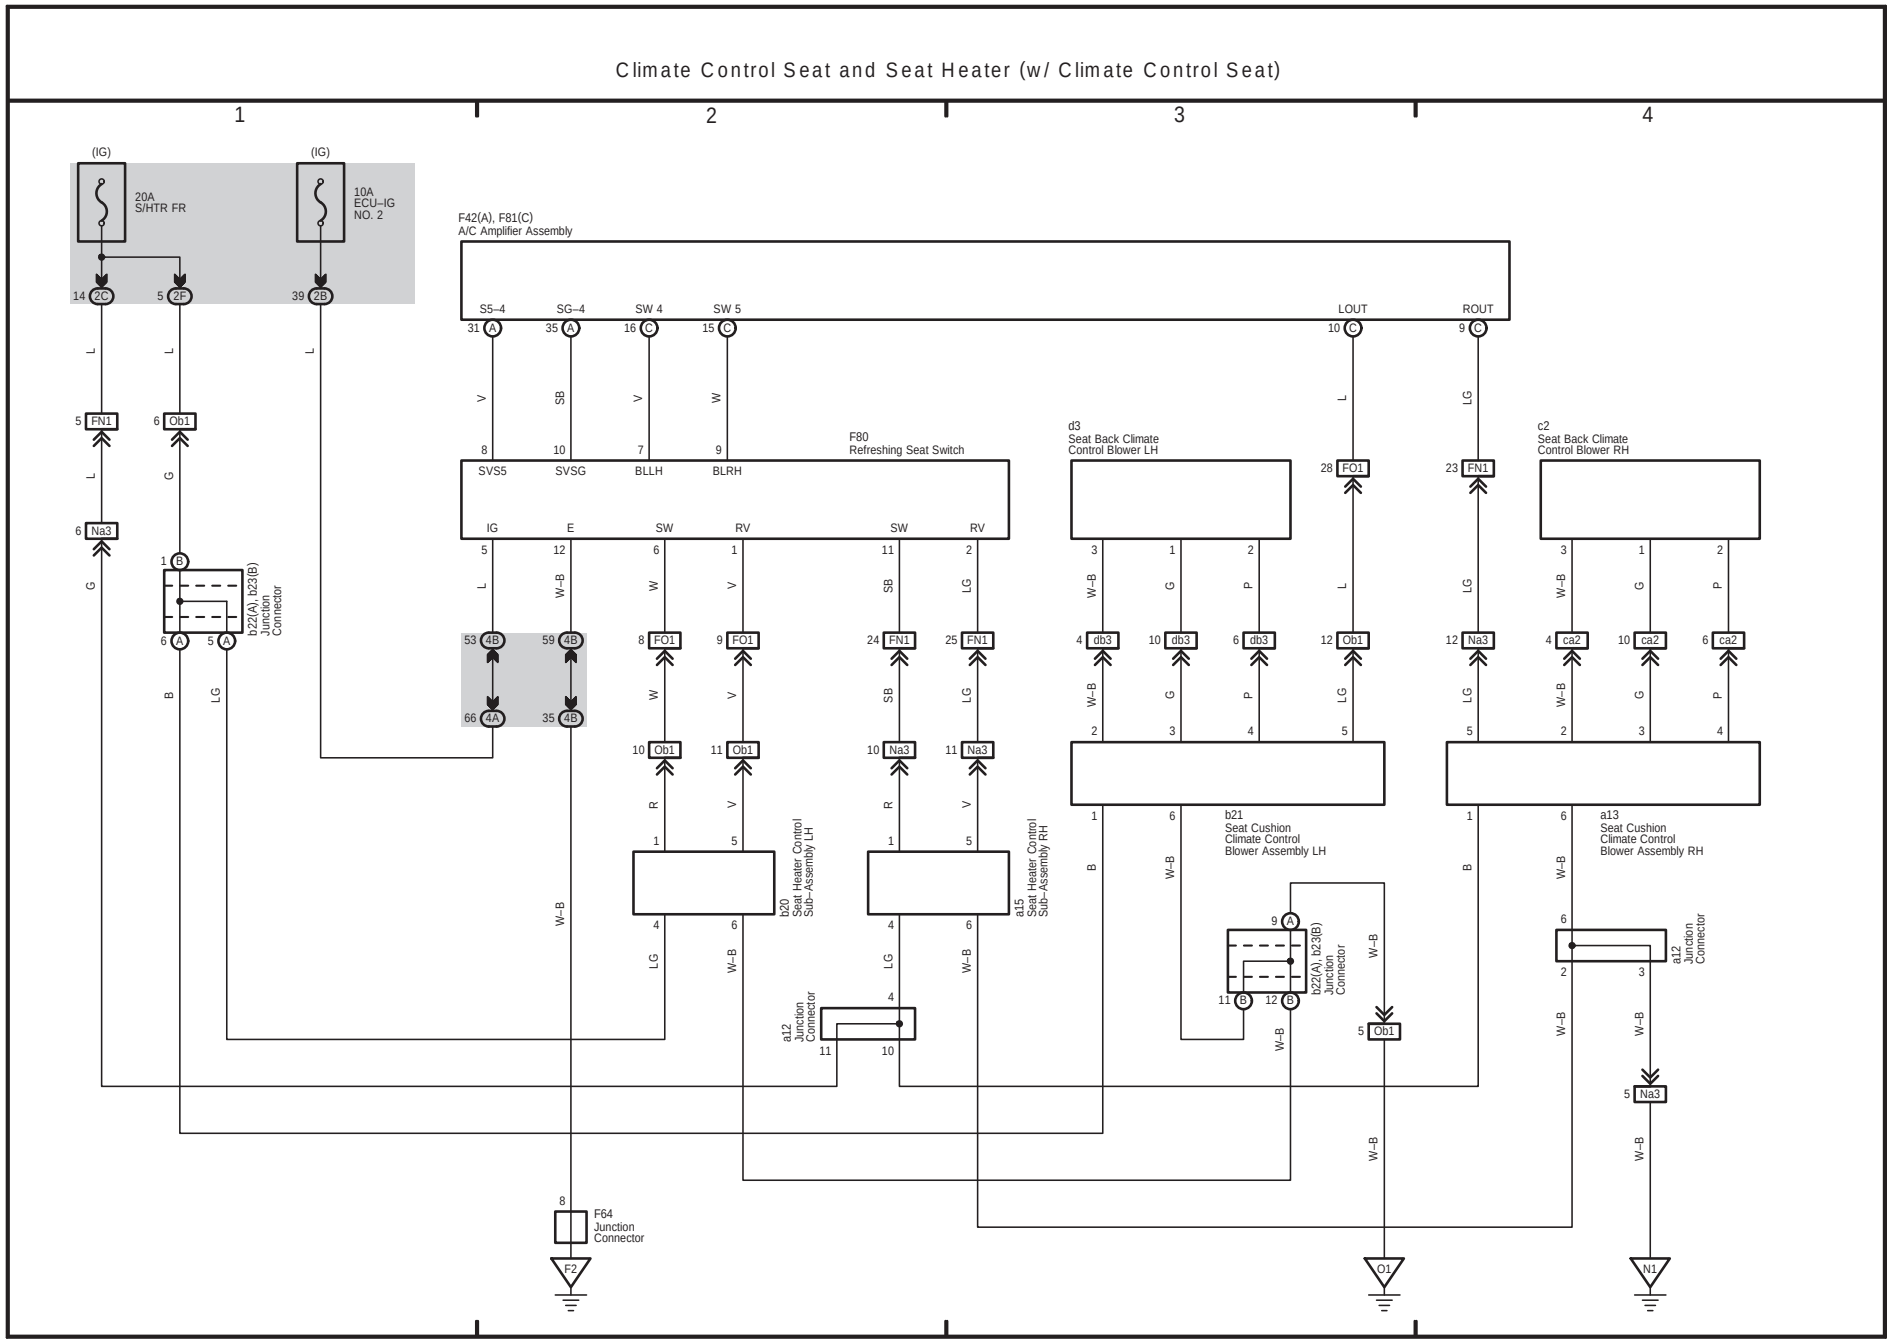

Climate Control Seat and Seat Heater (w/ Climate Control Seat)
1
2
3
4
(IG)
20A
S/HTR FR
(IG)
10A
ECU–IG
NO. 2
F42(A), F81(C)
A/C Amplifier Assembly
S5–4
SG–4
SW 4
SW 5
LOUT
ROUT
F80
Refreshing Seat Switch
SVS5
SVSG
BLLH
BLRH
IG
E
SW
RV
SW
RV
d3
Seat Back Climate
Control Blower LH
c2
Seat Back Climate
Control Blower RH
b22(A), b23(B)
Junction
Connector
b20
Seat Heater Control
Sub–Assembly LH
a15
Seat Heater Control
Sub–Assembly RH
b21
Seat Cushion
Climate Control
Blower Assembly LH
a13
Seat Cushion
Climate Control
Blower Assembly RH
a12
Junction
Connector
F64
Junction
Connector
F2
O1
N1