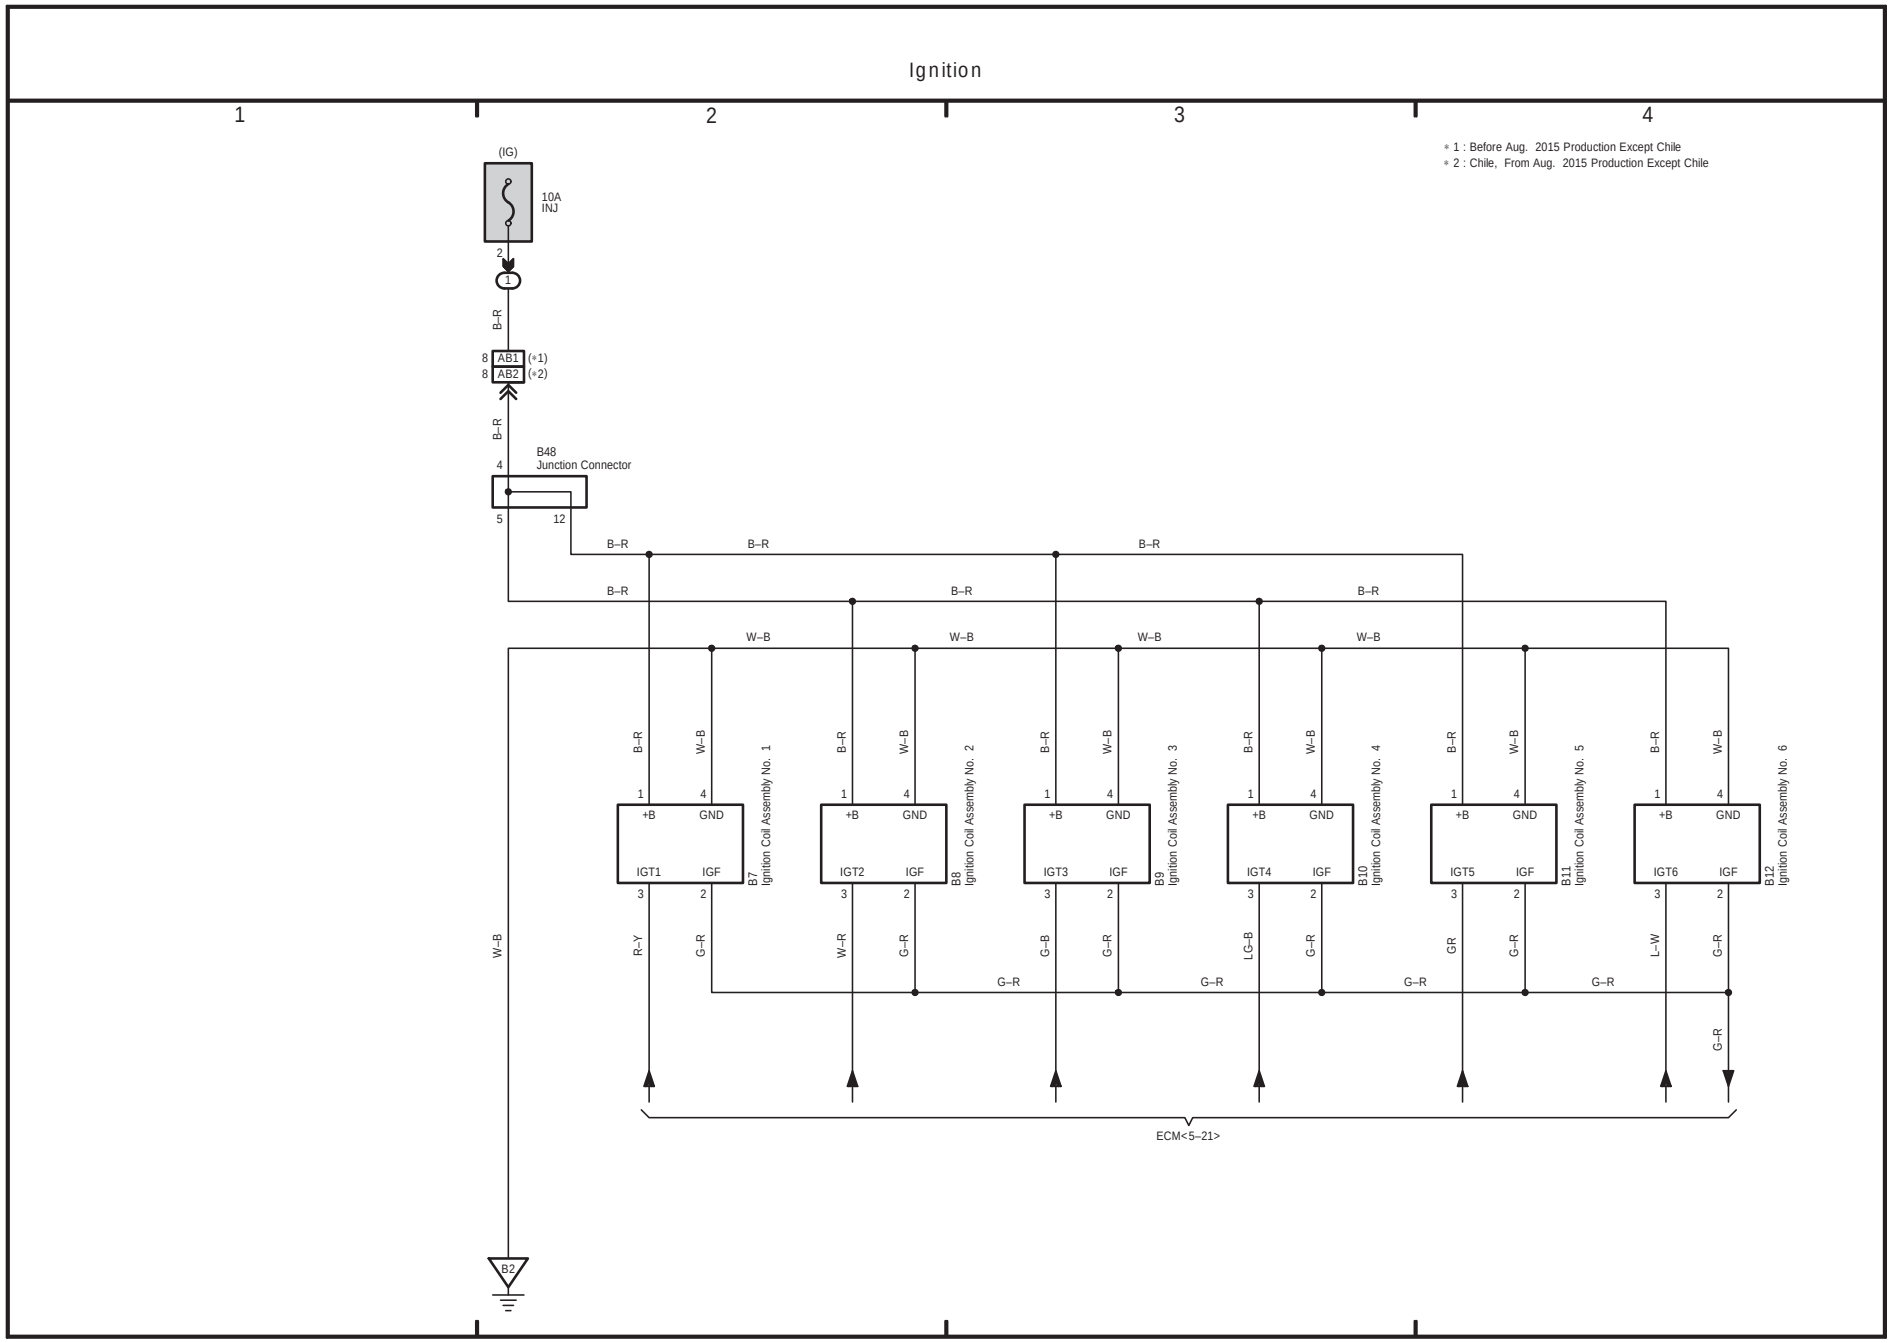

Ignition
1
2
3
4
* 1 : Before Aug. 2015 Production Except Chile
* 2 : Chile, From Aug. 2015 Production Except Chile
(IG)
10A
INJ
2
1
B–R
8 AB1 (*1)
8 AB2 (*2)
B–R
B48
Junction Connector
4
5
12
B–R
W–B
B7
Ignition Coil Assembly No. 1
B8
Ignition Coil Assembly No. 2
B9
Ignition Coil Assembly No. 3
B10
Ignition Coil Assembly No. 4
B11
Ignition Coil Assembly No. 5
B12
Ignition Coil Assembly No. 6
+B
GND
IGT1
IGT2
IGT3
IGT4
IGT5
IGT6
IGF
R–Y
G–R
W–R
G–B
LG–B
GR
L–W
ECM<5–21>
B2