

(Cont. next page)

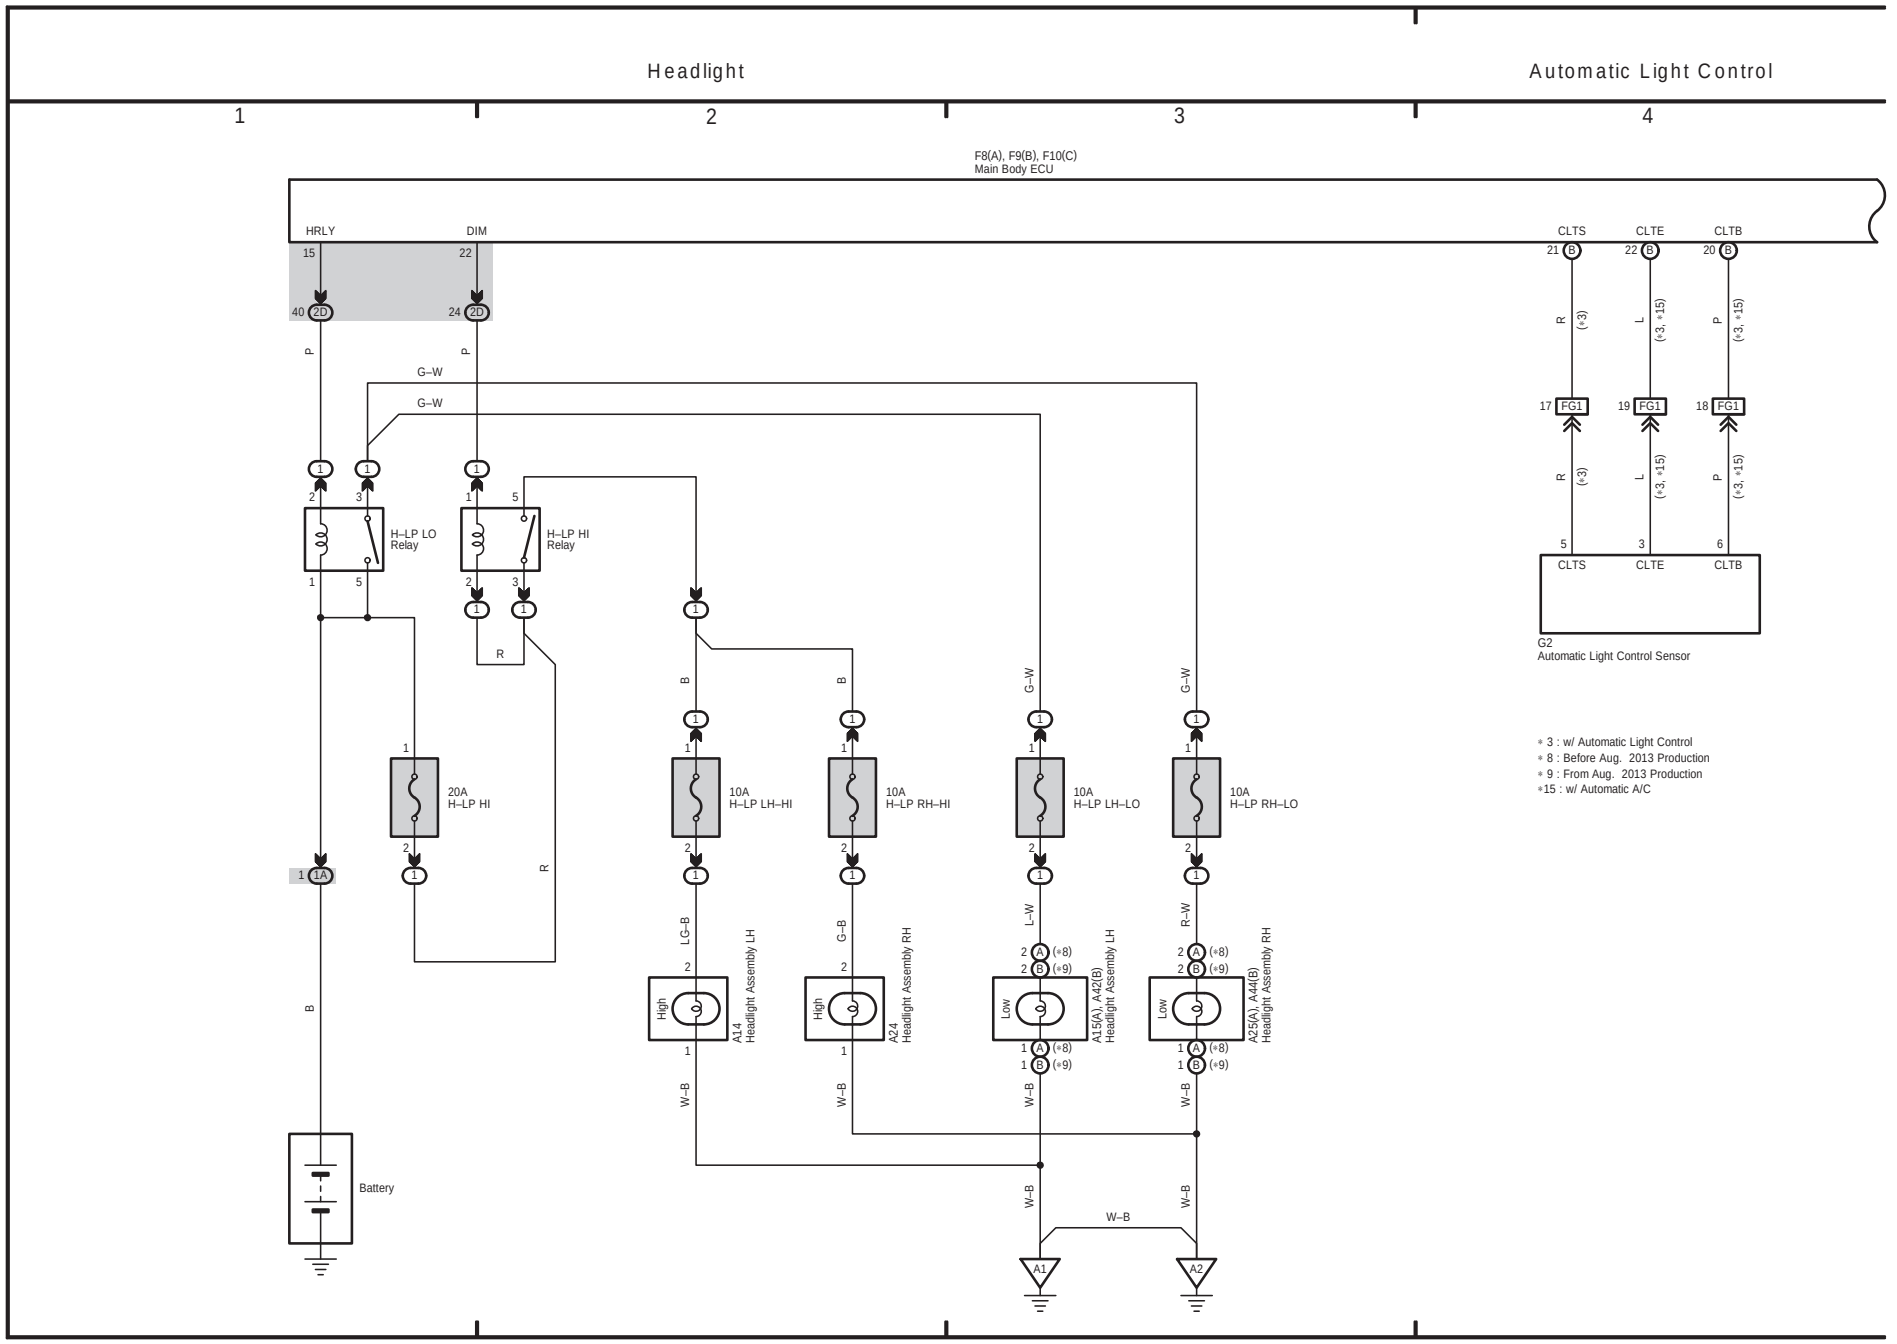

(Cont. next page)

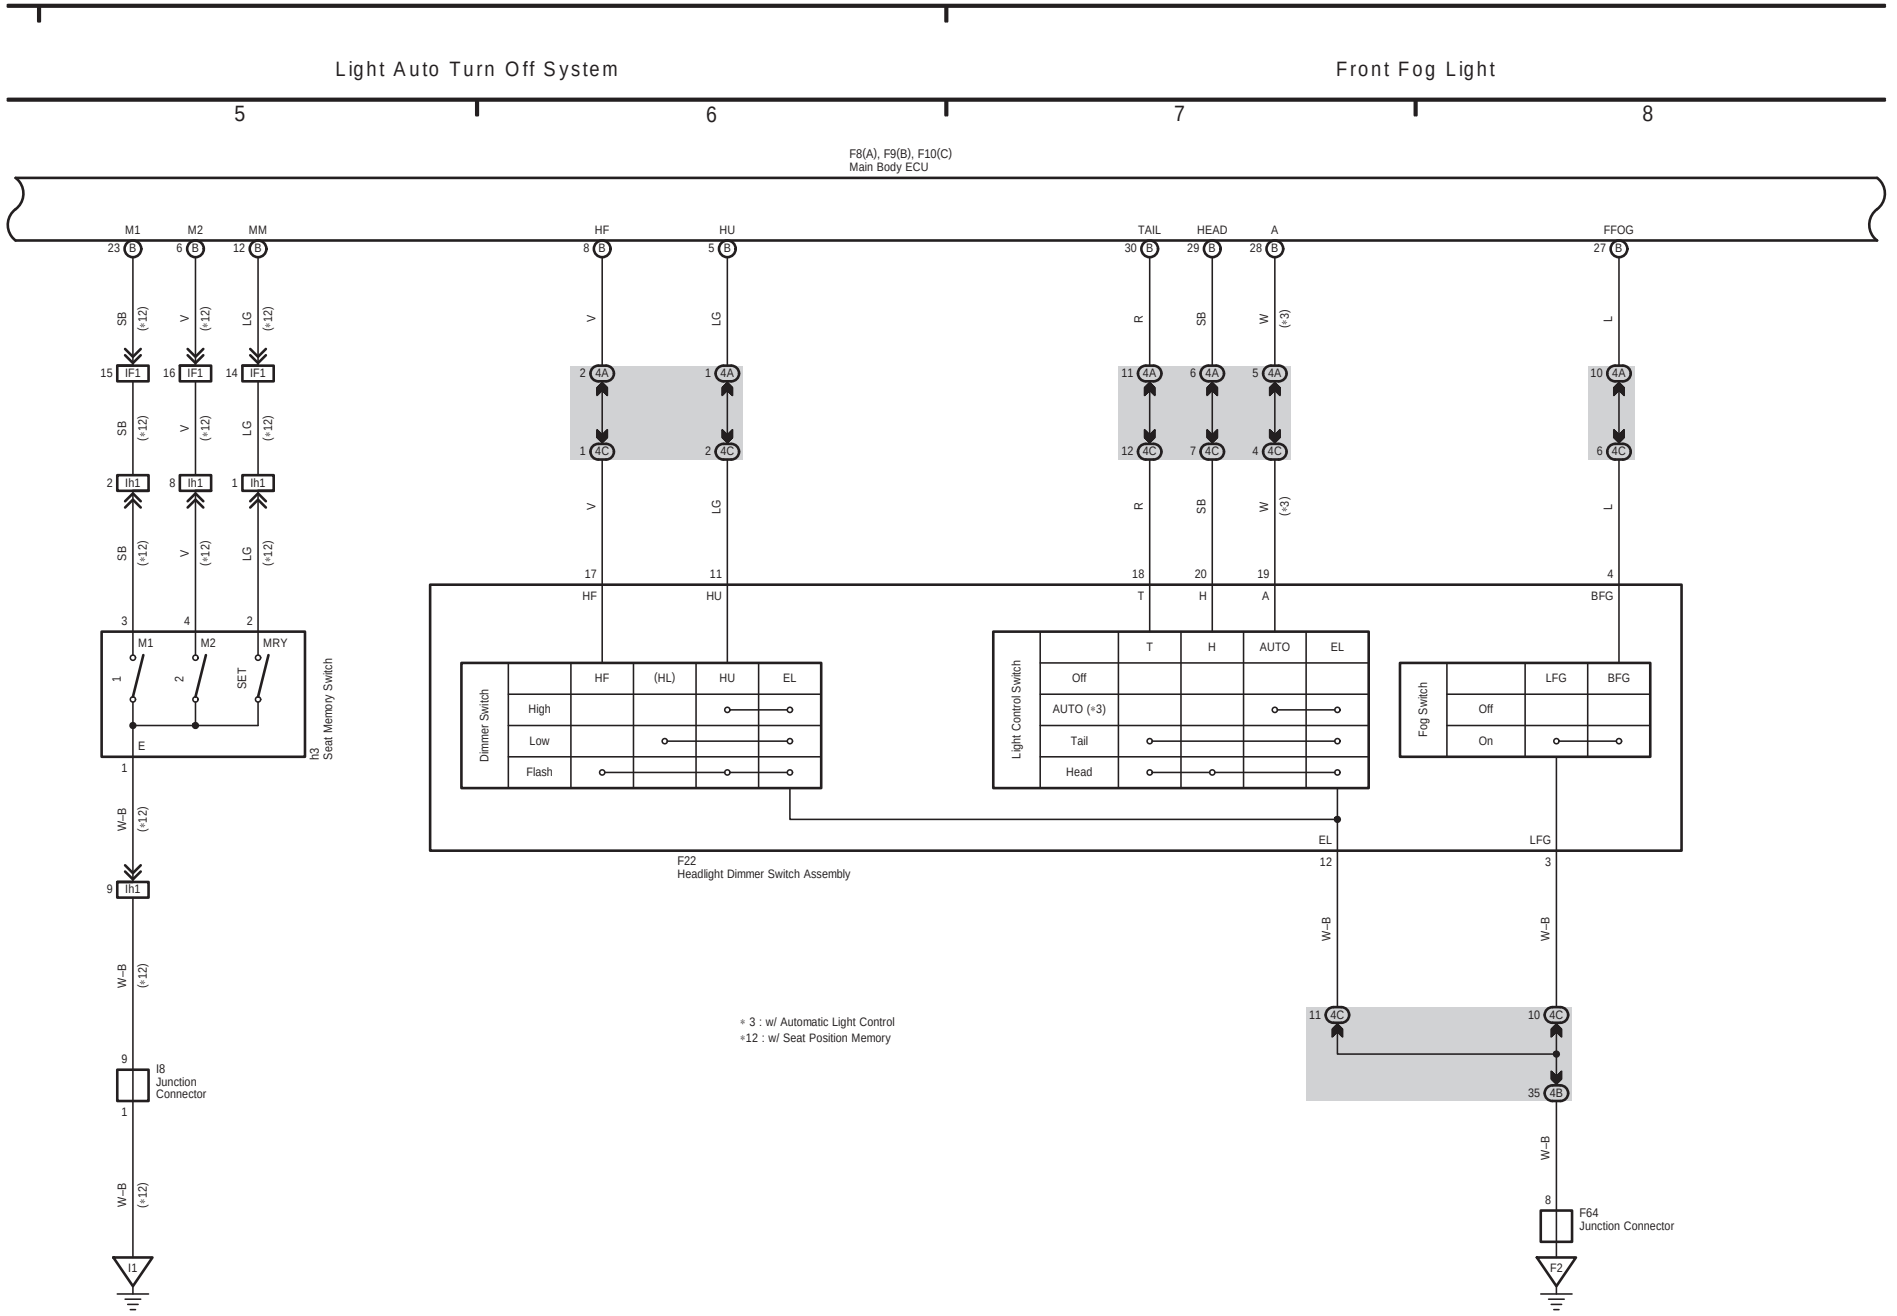


(Cont. next page)


Front Fog Light | Taillight

9 | 10 | 11 | 12

* 8 : Before Aug. 2013 Production
* 9 : From Aug. 2013 Production

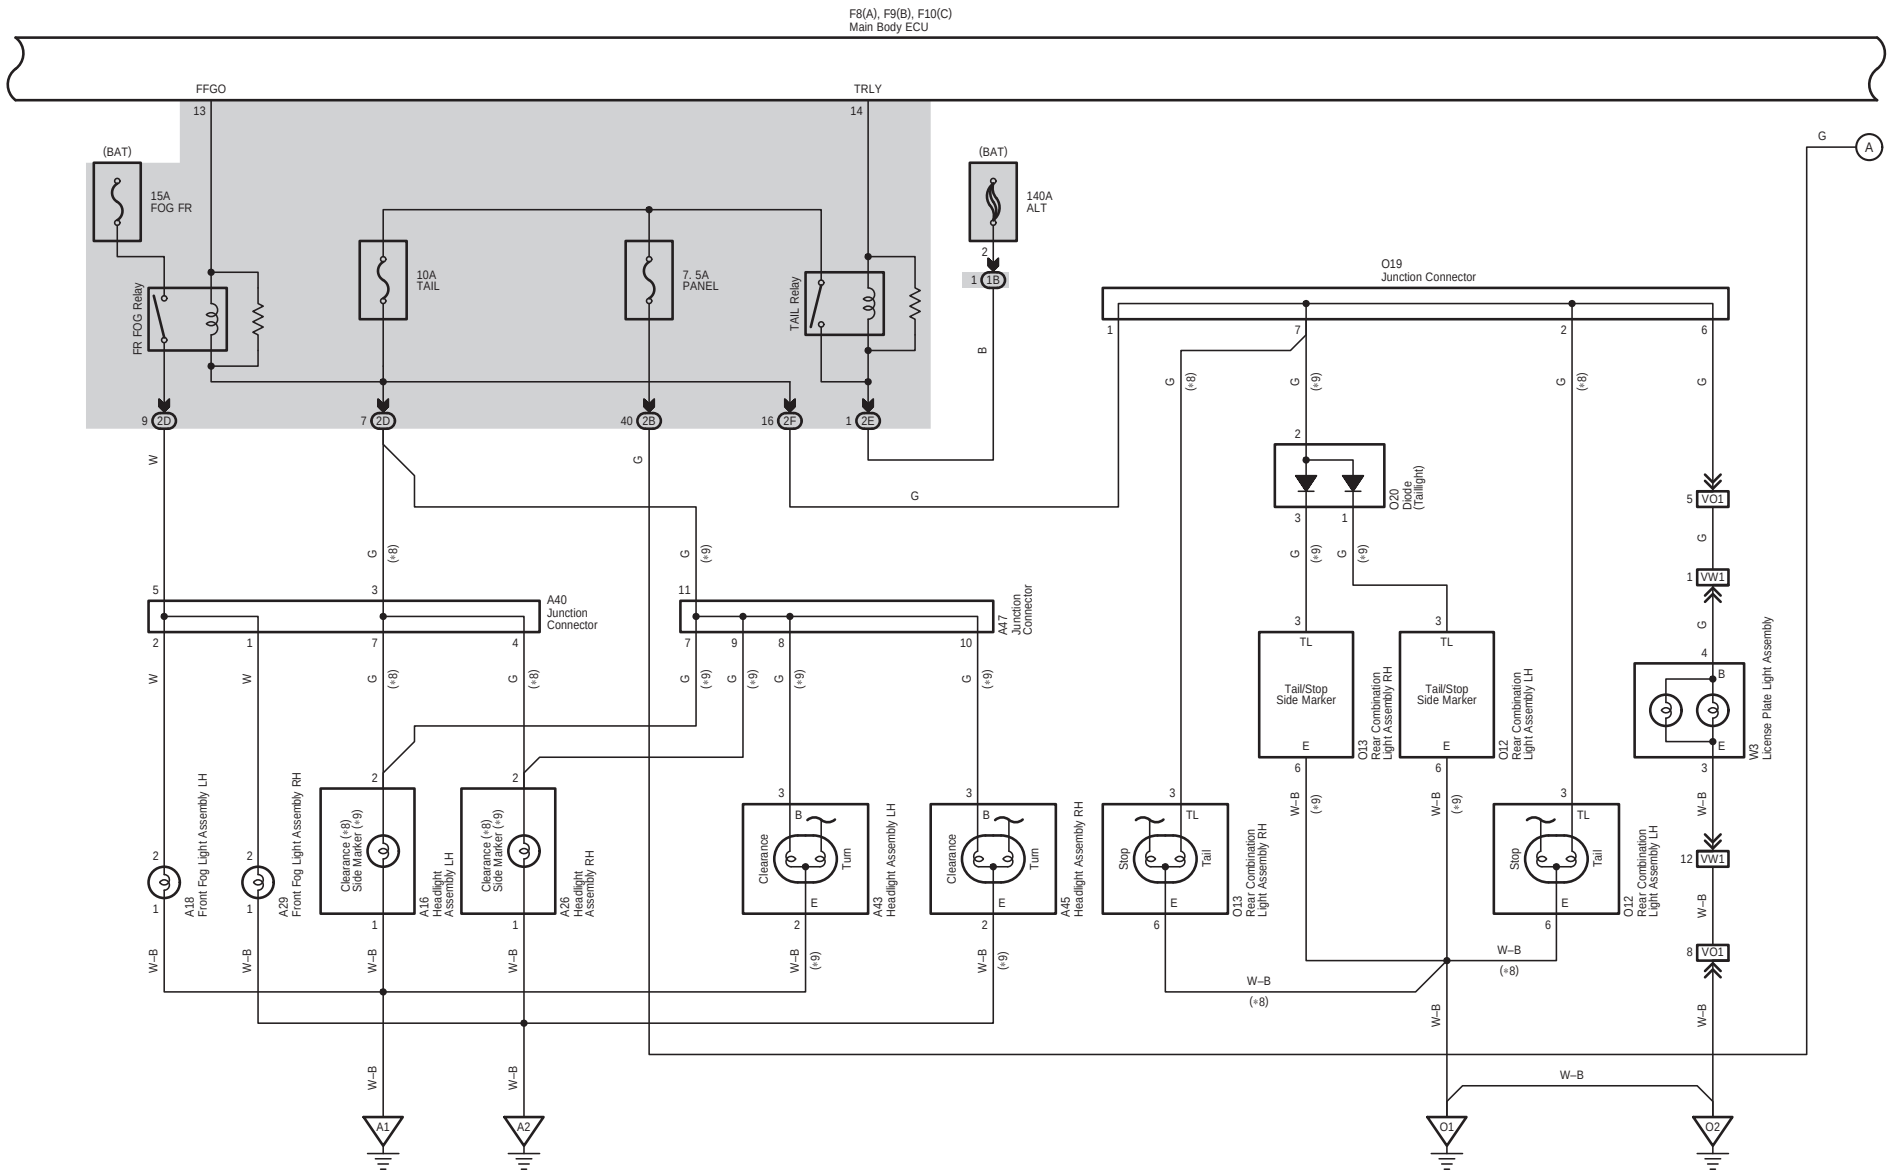

(Cont. next page)

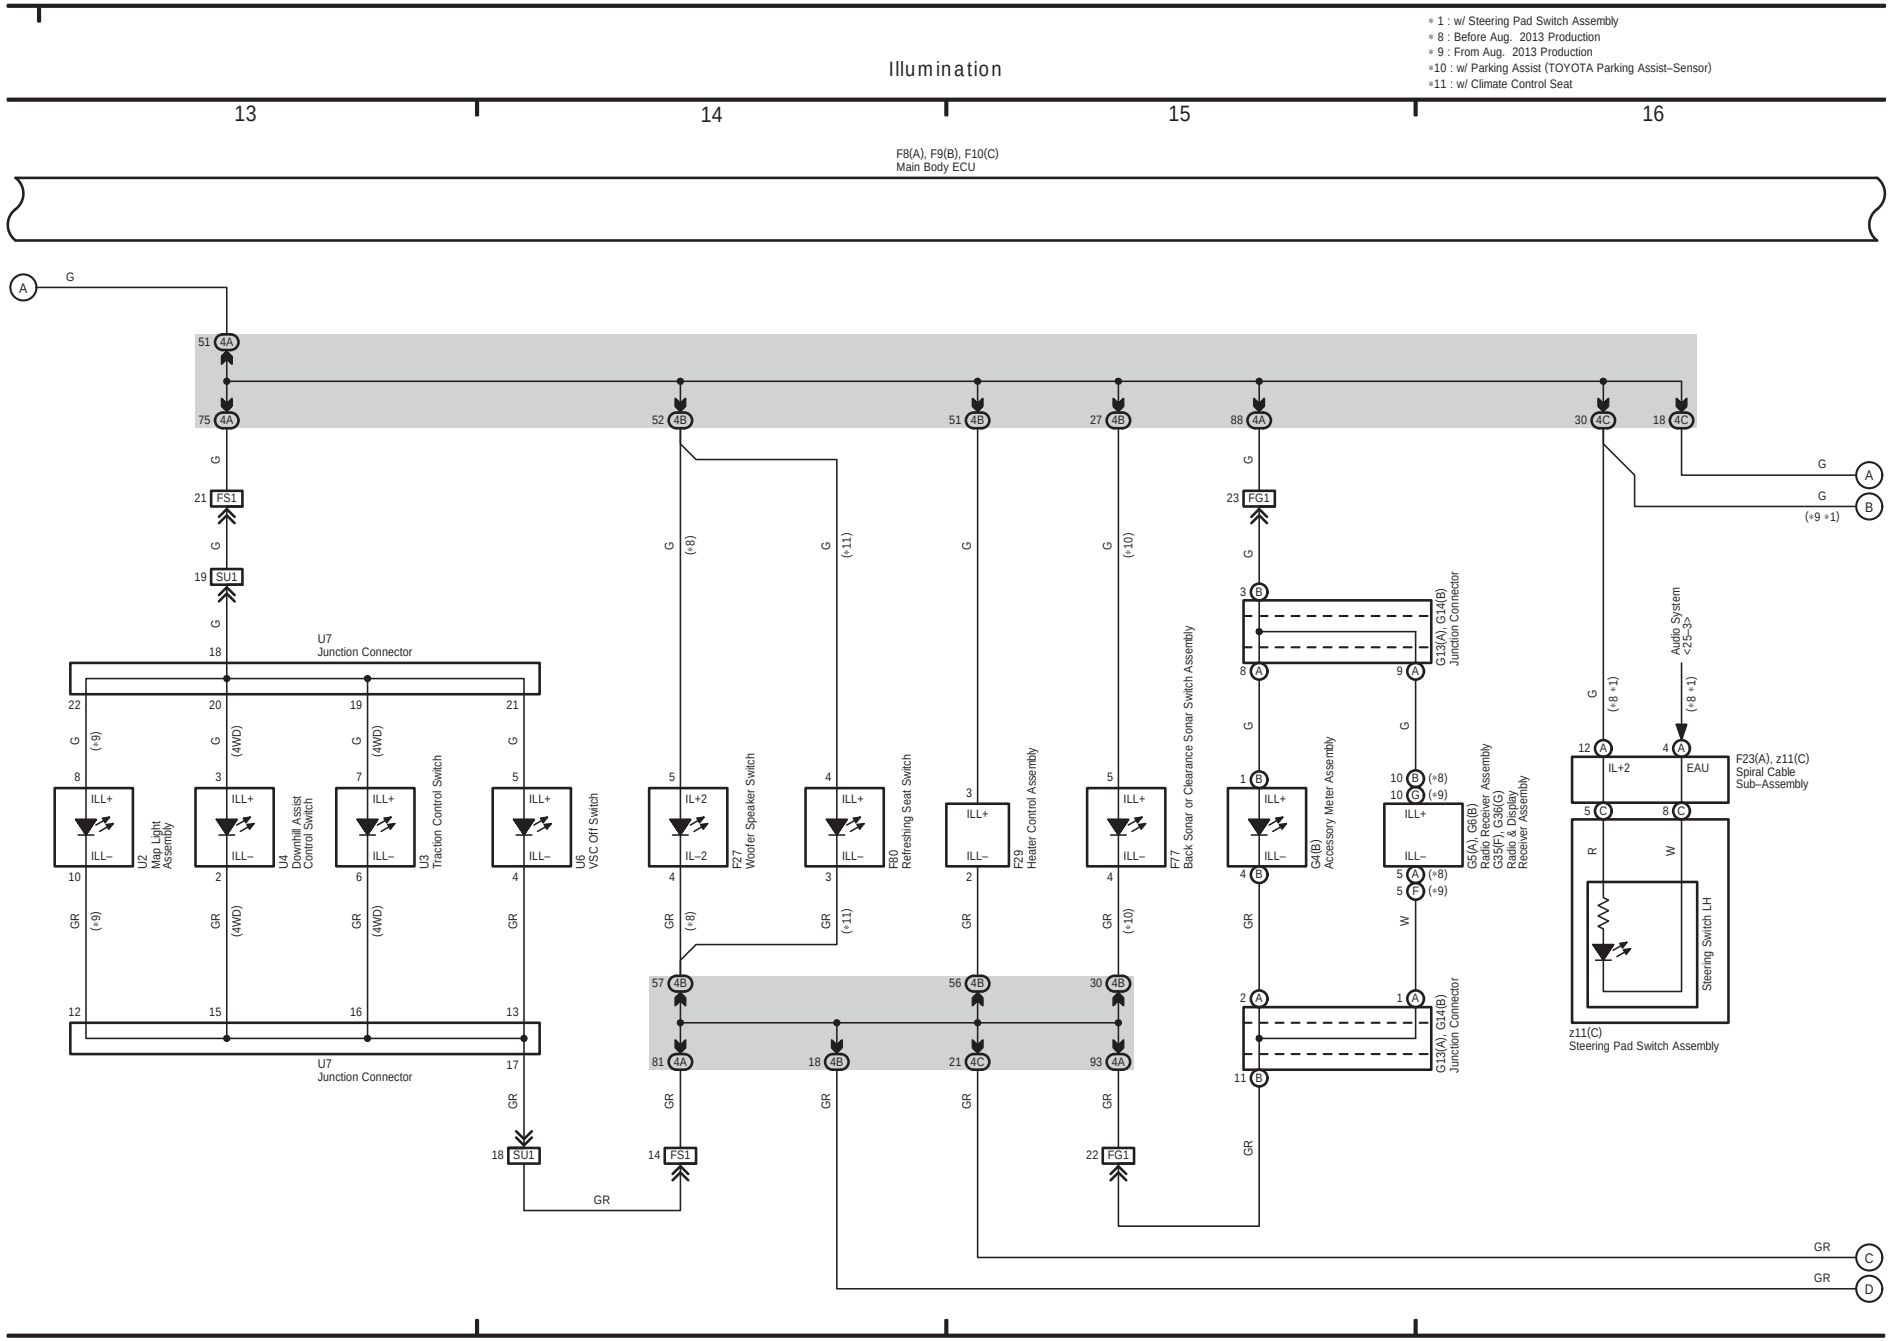

(Cont. next page)

∗ 1 : w/ Steering Pad Switch Assembly
∗ 4 : w/ Seat Heater (w/o Climate Control Seat)
∗ 8 : Before Aug. 2013 Production
∗ 9 : From Aug. 2013 Production
∗10 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)

Illumination

17 | 18 | 19 | 20

F8(A), F9(B), F10(C)
Main Body ECU

36 5B | 46 5C | 45 5C | 45 5A | 82 5A | 93 5A | 59 5C | 81 5A

A G
B G (∗9 ∗1)

G (∗9 ∗1) — 12 A IL+2
W–B (∗9 ∗1) — 10 A –DP
F23(A), z11(C) Spiral Cable Sub–Assembly
5 C — 3 C
R — B
Steering Switch LH
Steering Switch RH
z11(C) Steering Pad Switch Assembly

G (∗4) — 21 Ff1 — G (∗4) — 6 ILL+ ILL– — f3 Seat Heater Switch RH — 1 — GR (∗4) — 15 Ff1 — GR (∗4)
G (∗4) — 22 Ff1 — G (∗4) — 8 ILL+ ILL– — f2 Seat Heater Switch LH — 2 — GR (∗4) — 16 Ff1 — GR (∗4)
G — 4 Fn1 — G — 3 ILL+ ILL– — n1 Hazard Warning Signal Switch Assembly — 2 — GR — 3 Fn1 — GR
G (∗8) — 2 ACAN GND — F35 Telltale Light Assembly — 1 — W–B (∗8)
G — 2 B L — F49 Glove Box Light Assembly — 1 — W–B
G — 1 ILL+ ILL– — F74 Shift Position Indicator (Indicator Light Wire Sub–Assembly) — 2 — GR
G (∗10) — Clearance Warning ECU Assembly<30–3>

W–B (∗9 ∗1) — 46 4C — 35 4B — W–B (∗9 ∗1)

40 5C | 41 5C | 42 5A | 77 5A | 88 5A


31 5B — GR
65 5A — W–B

GR — A
GR — B

W–B (∗9 ∗1) — 7 — 8 F64 Junction Connector — F2

C GR
D GR


(Cont. next page)

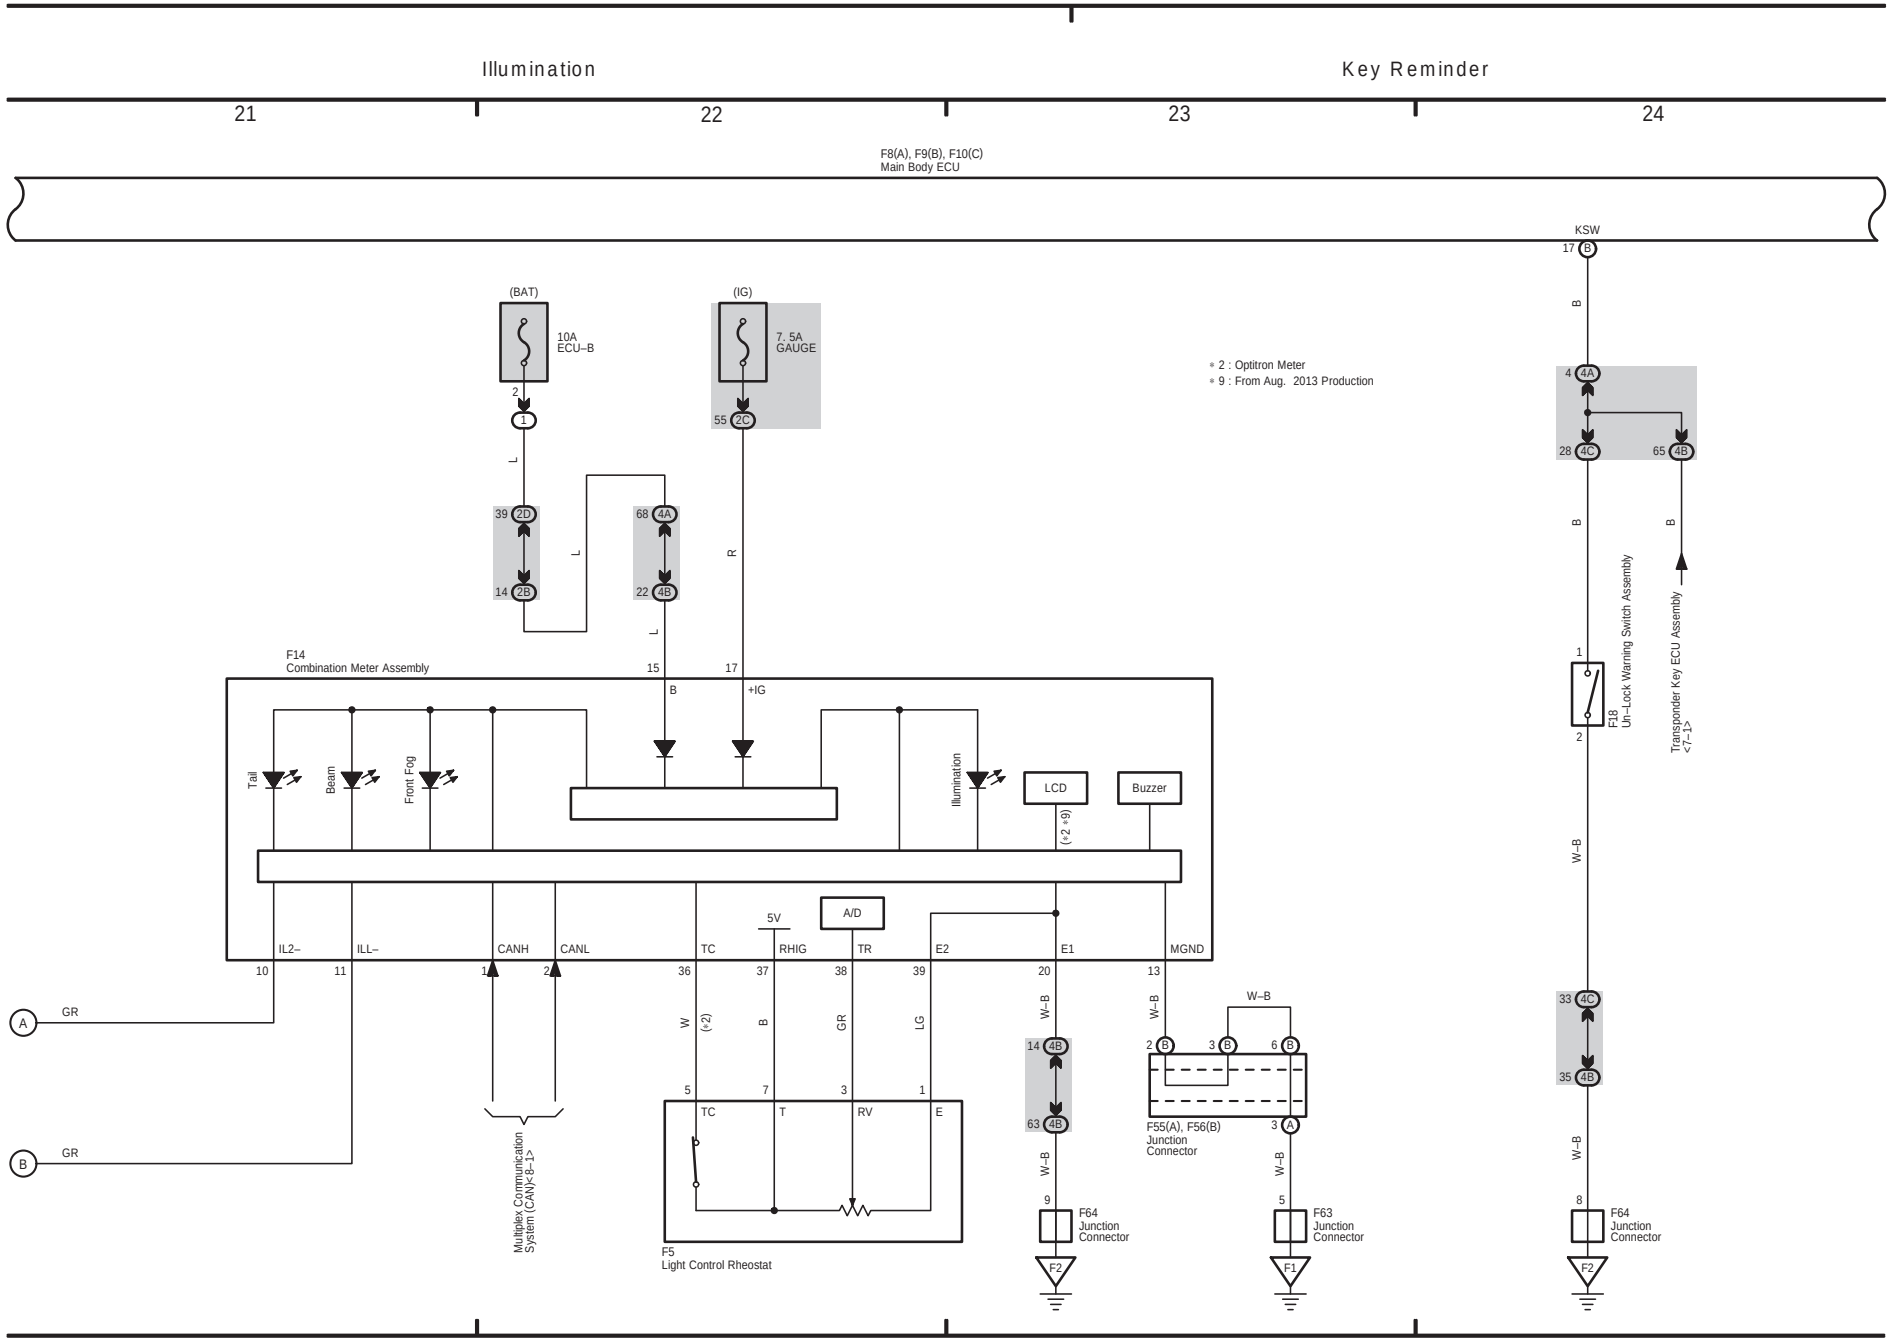

(Cont. next page)

Interior Light

* 8 : Before Aug. 2013 Production
* 9 : From Aug. 2013 Production

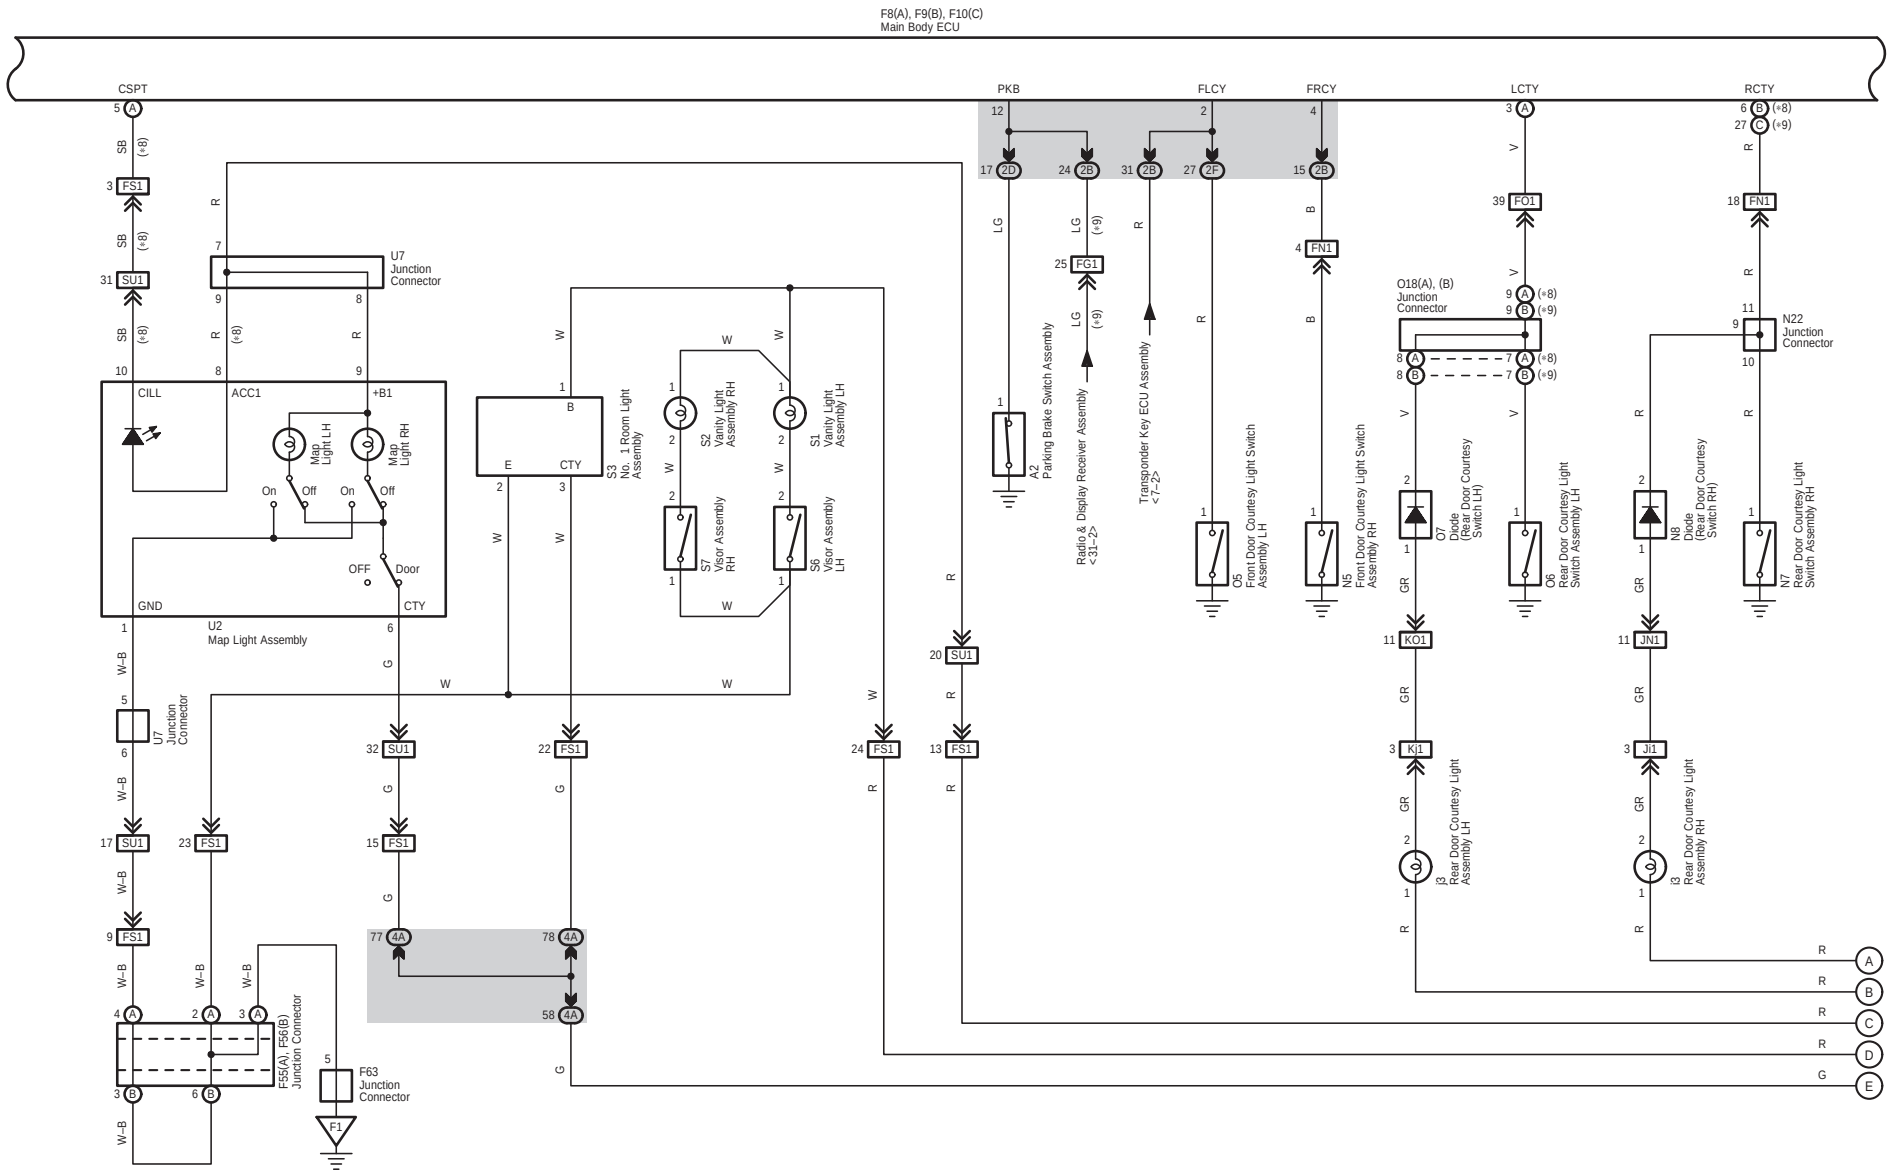

(Cont. next page)

* 5 : Outer Rear View Mirror w/ Turn Signal Light
* 6 : Before Aug. 2012 Production
* 7 : From Aug. 2012 Production
* 8 : Before Aug. 2013 Production
* 9 : From Aug. 2013 Production

Interior Light

29 30 31 32

F8(A), F9(B), F10(C)
Main Body ECU

DOMR ILE FRCL FLCL MILE

(BAT)
10A DOME
DOME Relay
Ignition Key Cylinder Light
F17 Transponder Key Amplifier
H7 Front Door Courtesy Light Assembly RH
I7 Front Door Courtesy Light Assembly LH
F57(A), F58(B) Junction Connector
H4 Outer Rear View Mirror Assembly RH
I4 Outer Rear View Mirror Assembly LH
Foot Light
O18(A), (B) Junction Connector
A38 Junction Connector
H8 Junction Connector
I8 Junction Connector
F65 Junction Connector
F63 Junction Connector
A1 F3 H1 F1 I1

(Cont. next page)

Theft Deterrent

* 8 : Before Aug. 2013 Production
* 9 : From Aug. 2013 Production


33 34 35 36

F8(A), F9(B), F10(C)
Main Body ECU

SH HCTY IND HORN HAZ CANH CANL CANP CANN GND1 GND2


(BAT)
10A SECURITY
S-HORN Relay
A32 Security Horn Assembly
A19 Engine Hood Courtesy Switch
F32 Security Indicator Light Assembly
F35 Telltale Light Assembly
Transponder Key ECU Assembly <7-2>
HORN Relay <7-3>
Turn Signal Flasher Assembly<10-1>
Multiplex Communication System (CAN)<8-3><8-4>
F55(A), F56(B) Junction Connector
F64 Junction Connector
F63 Junction Connector
A1 F2 F1

(Cont. next page)

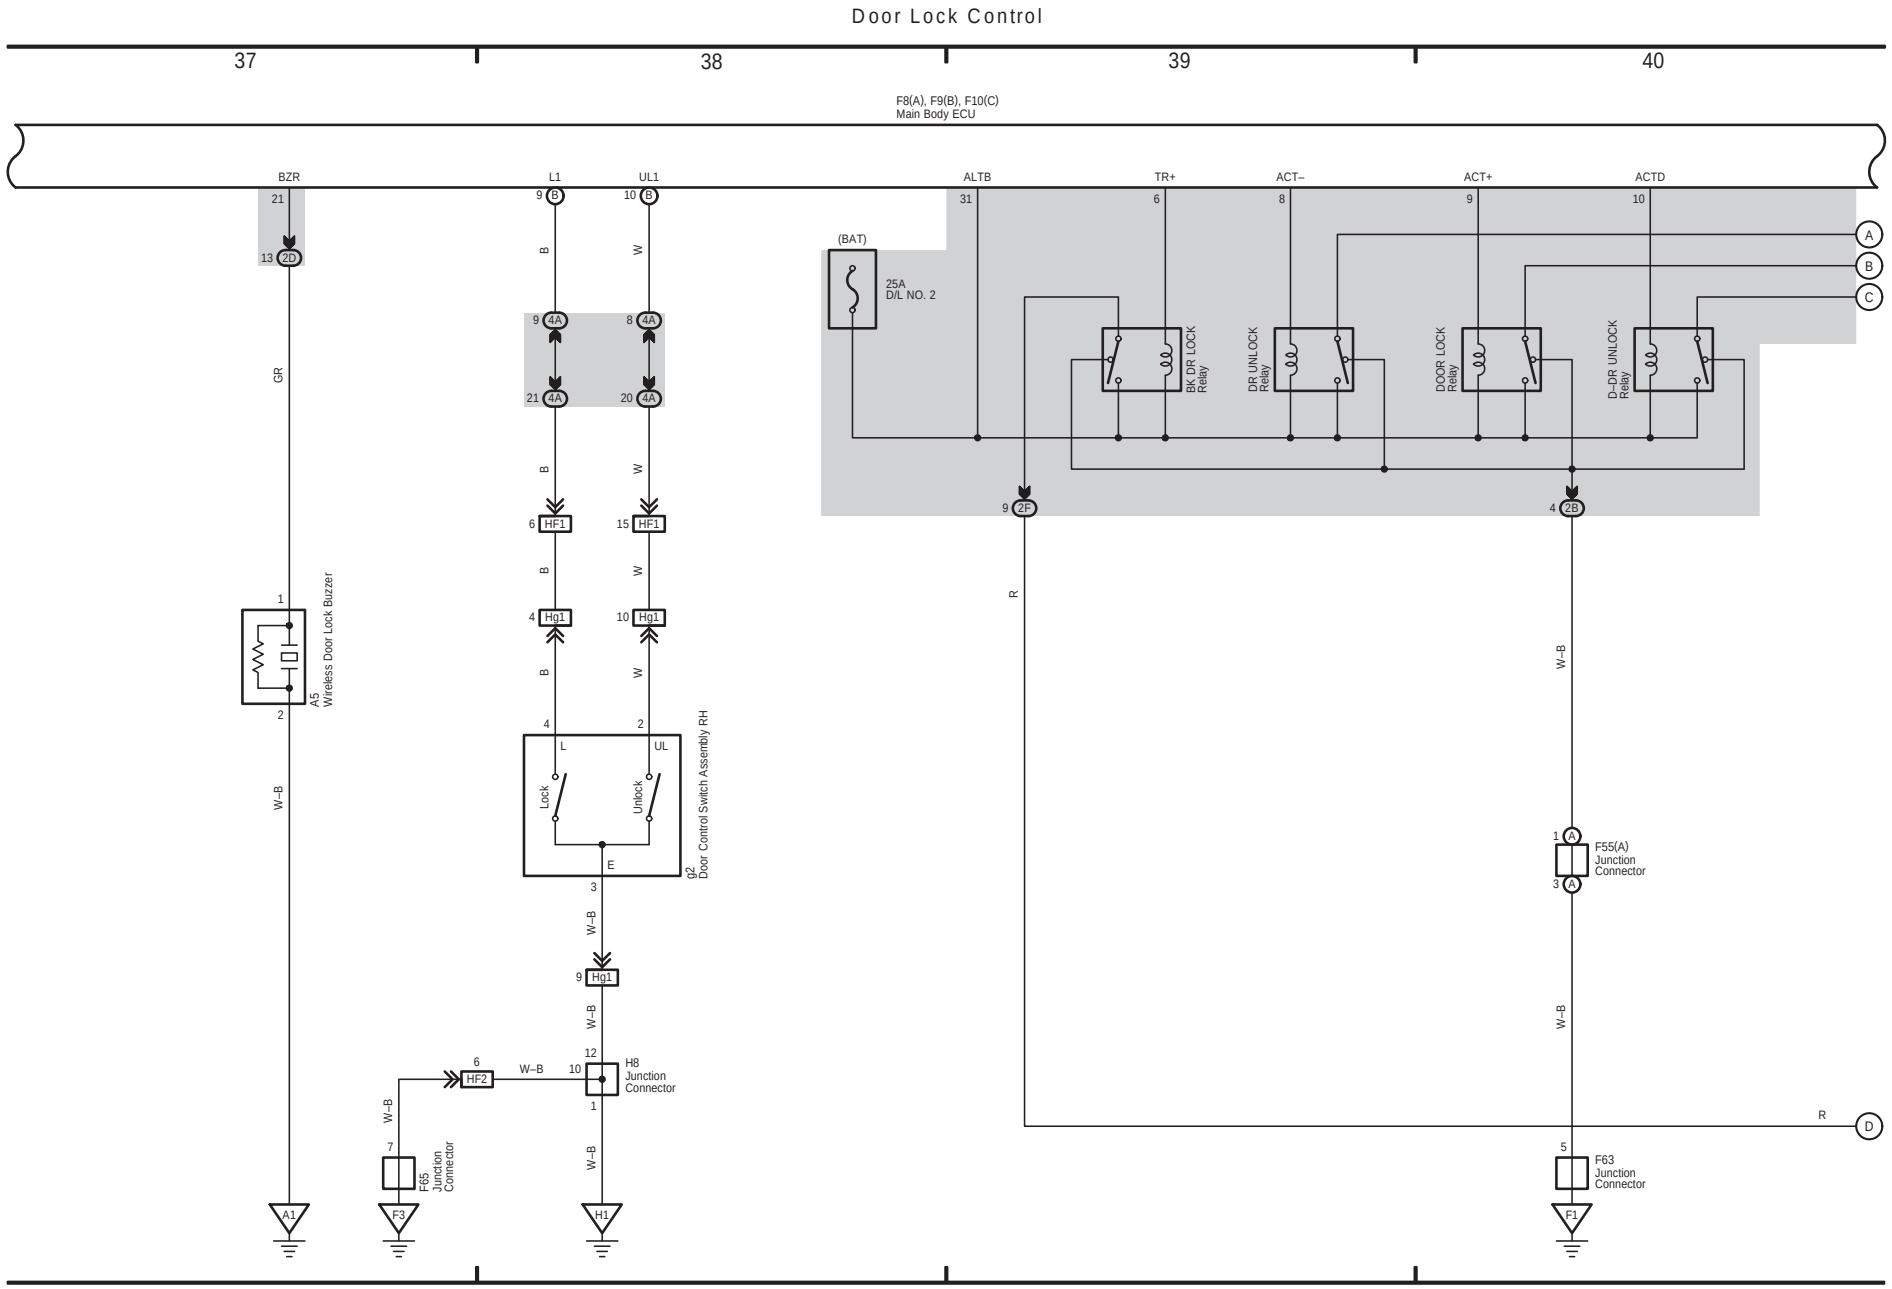


(Cont. next page)

Door Lock Control

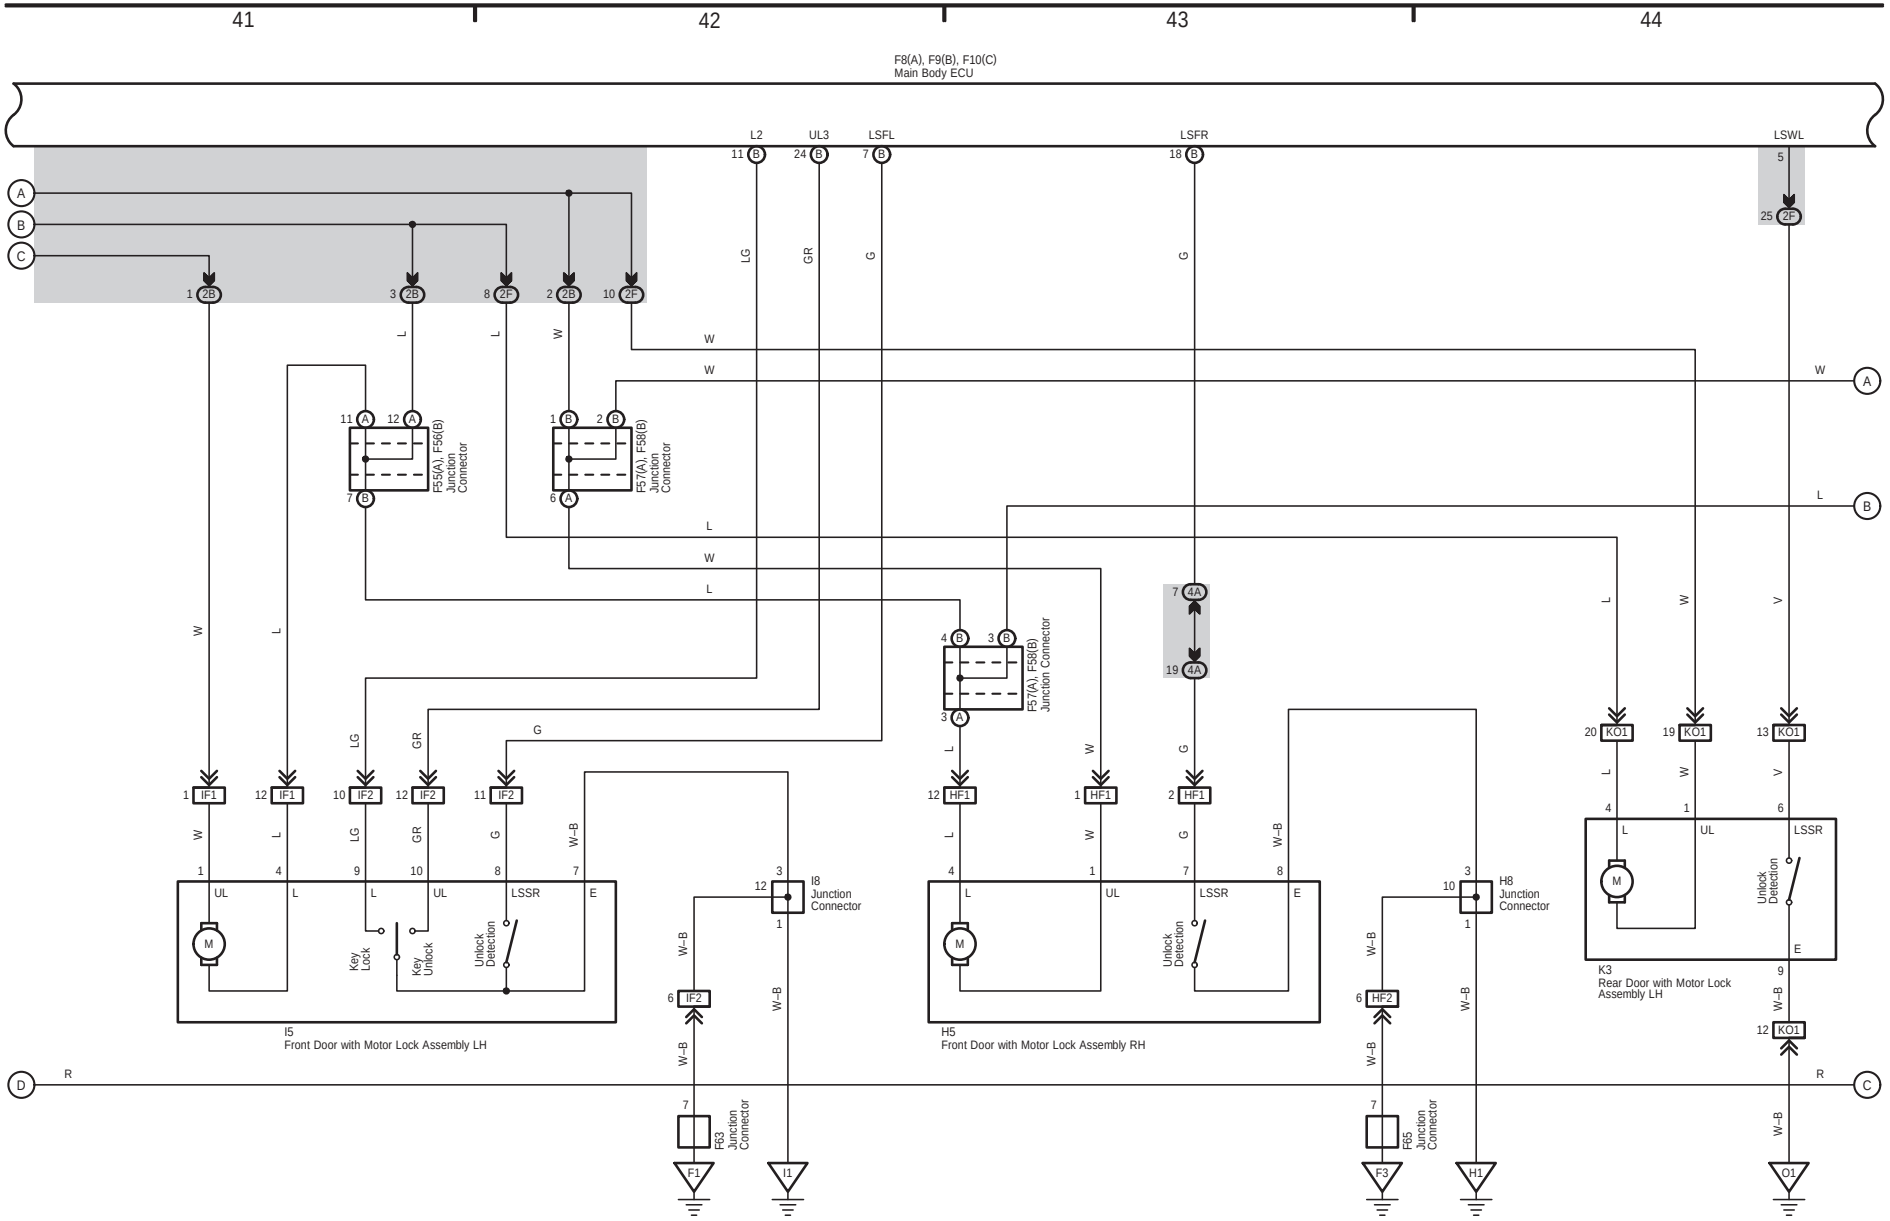


(Cont. next page)

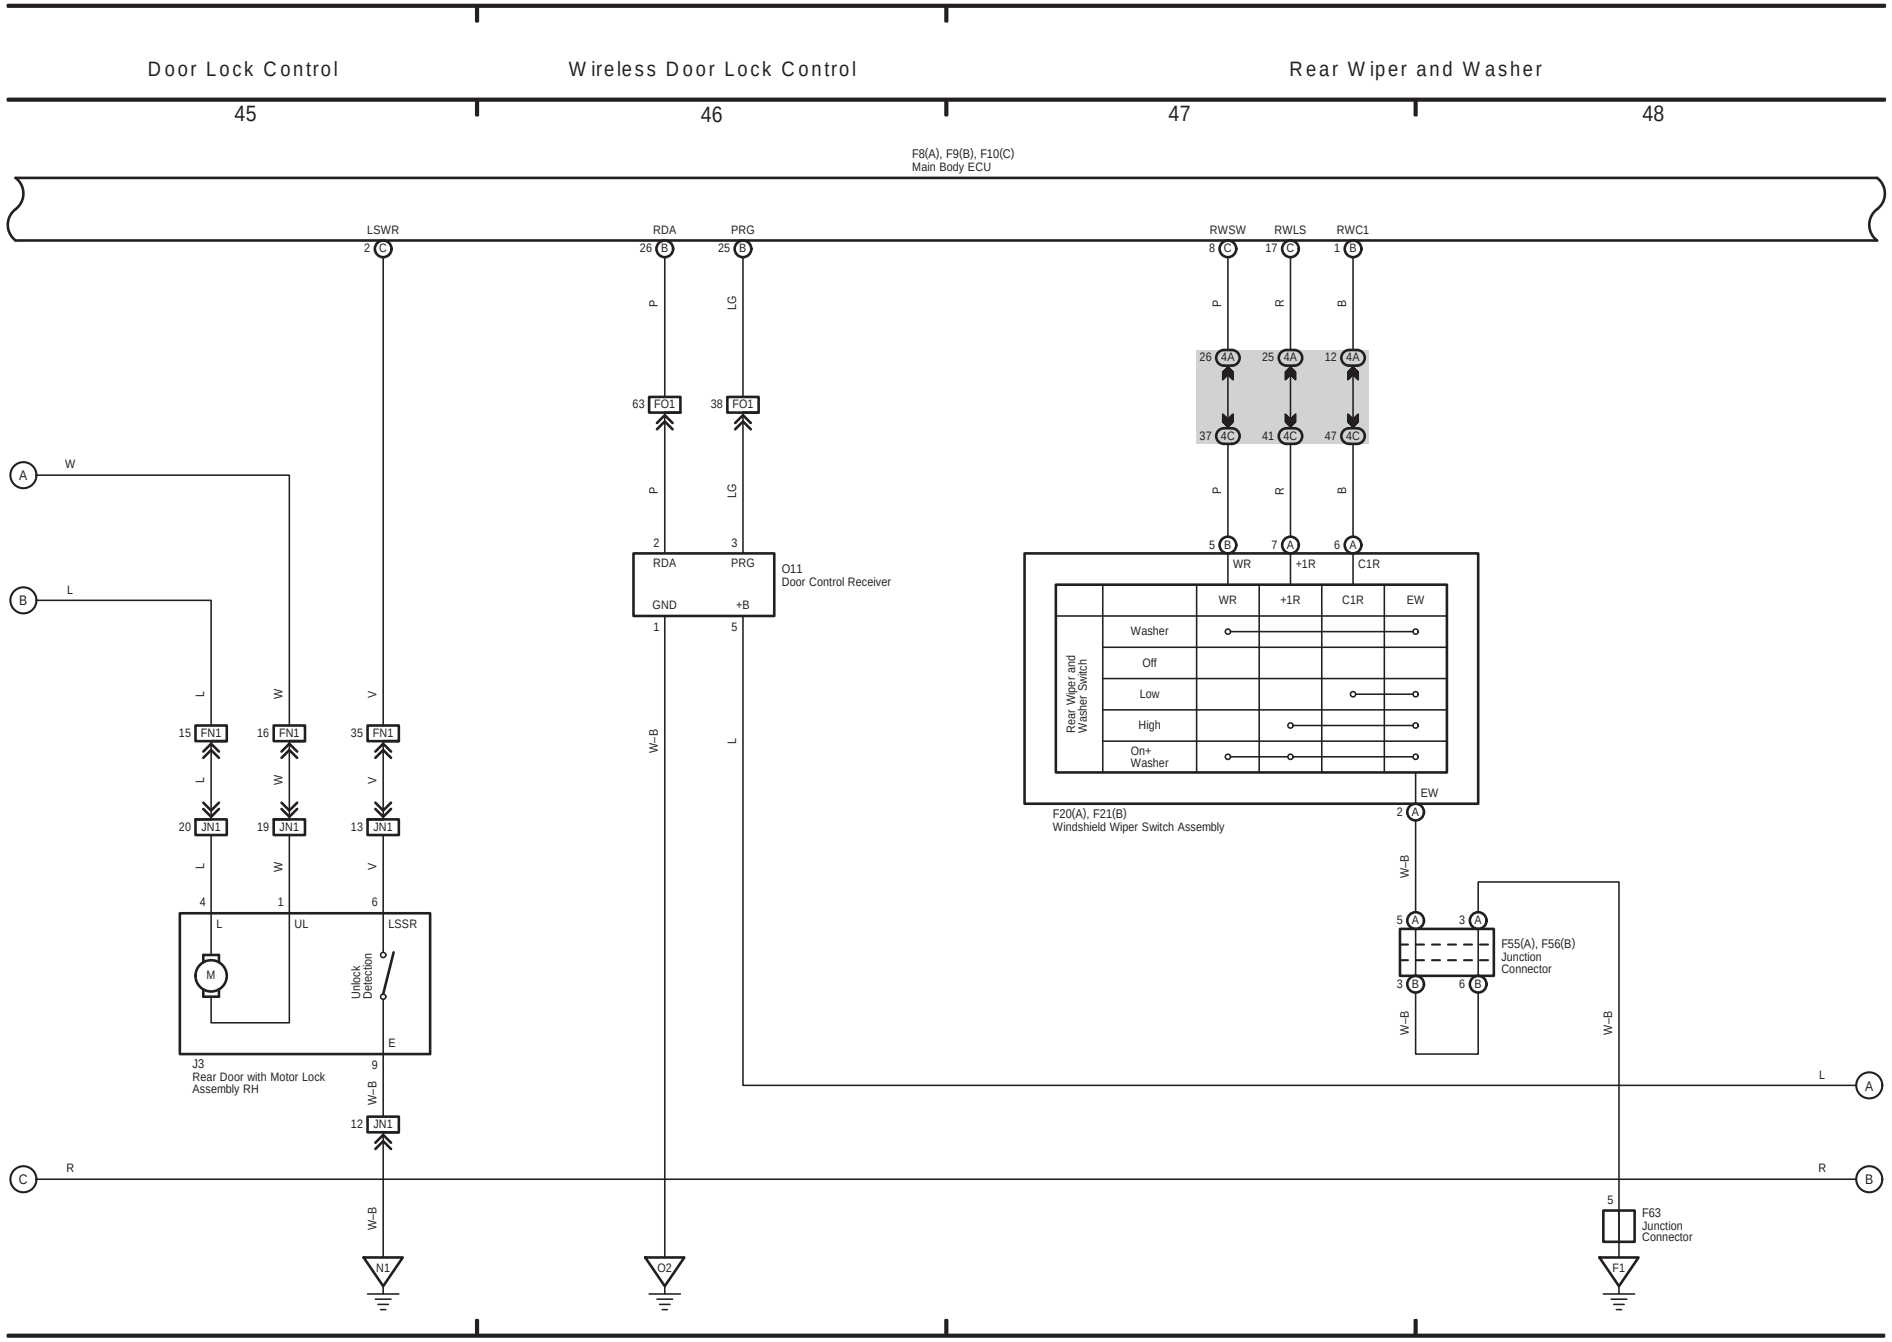

(Cont. next page)

Rear Wiper and Washer

∗ 8 : Before Aug. 2013 Production
∗ 9 : From Aug. 2013 Production

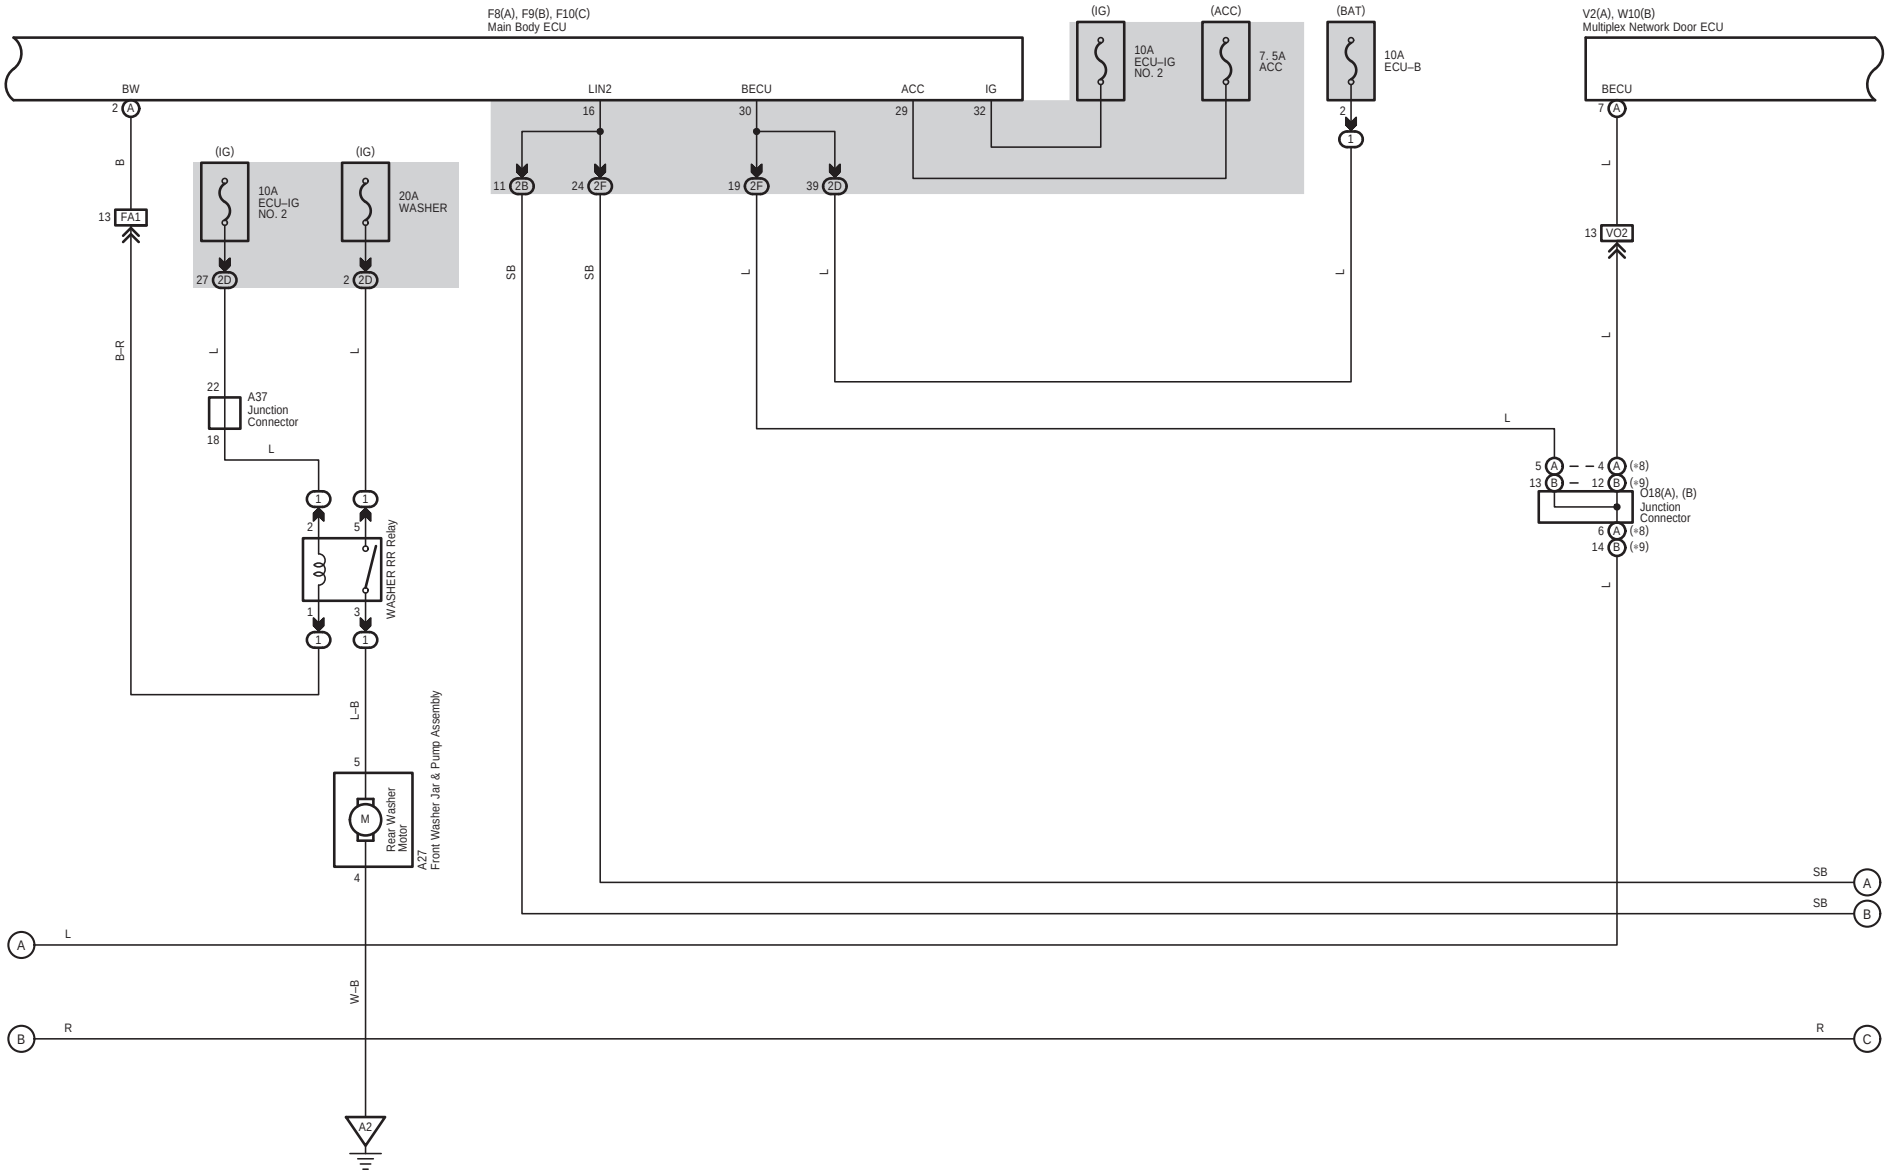


(Cont. next page)

Rear Wiper and Washer

Back Door Opener

53 54 55 56

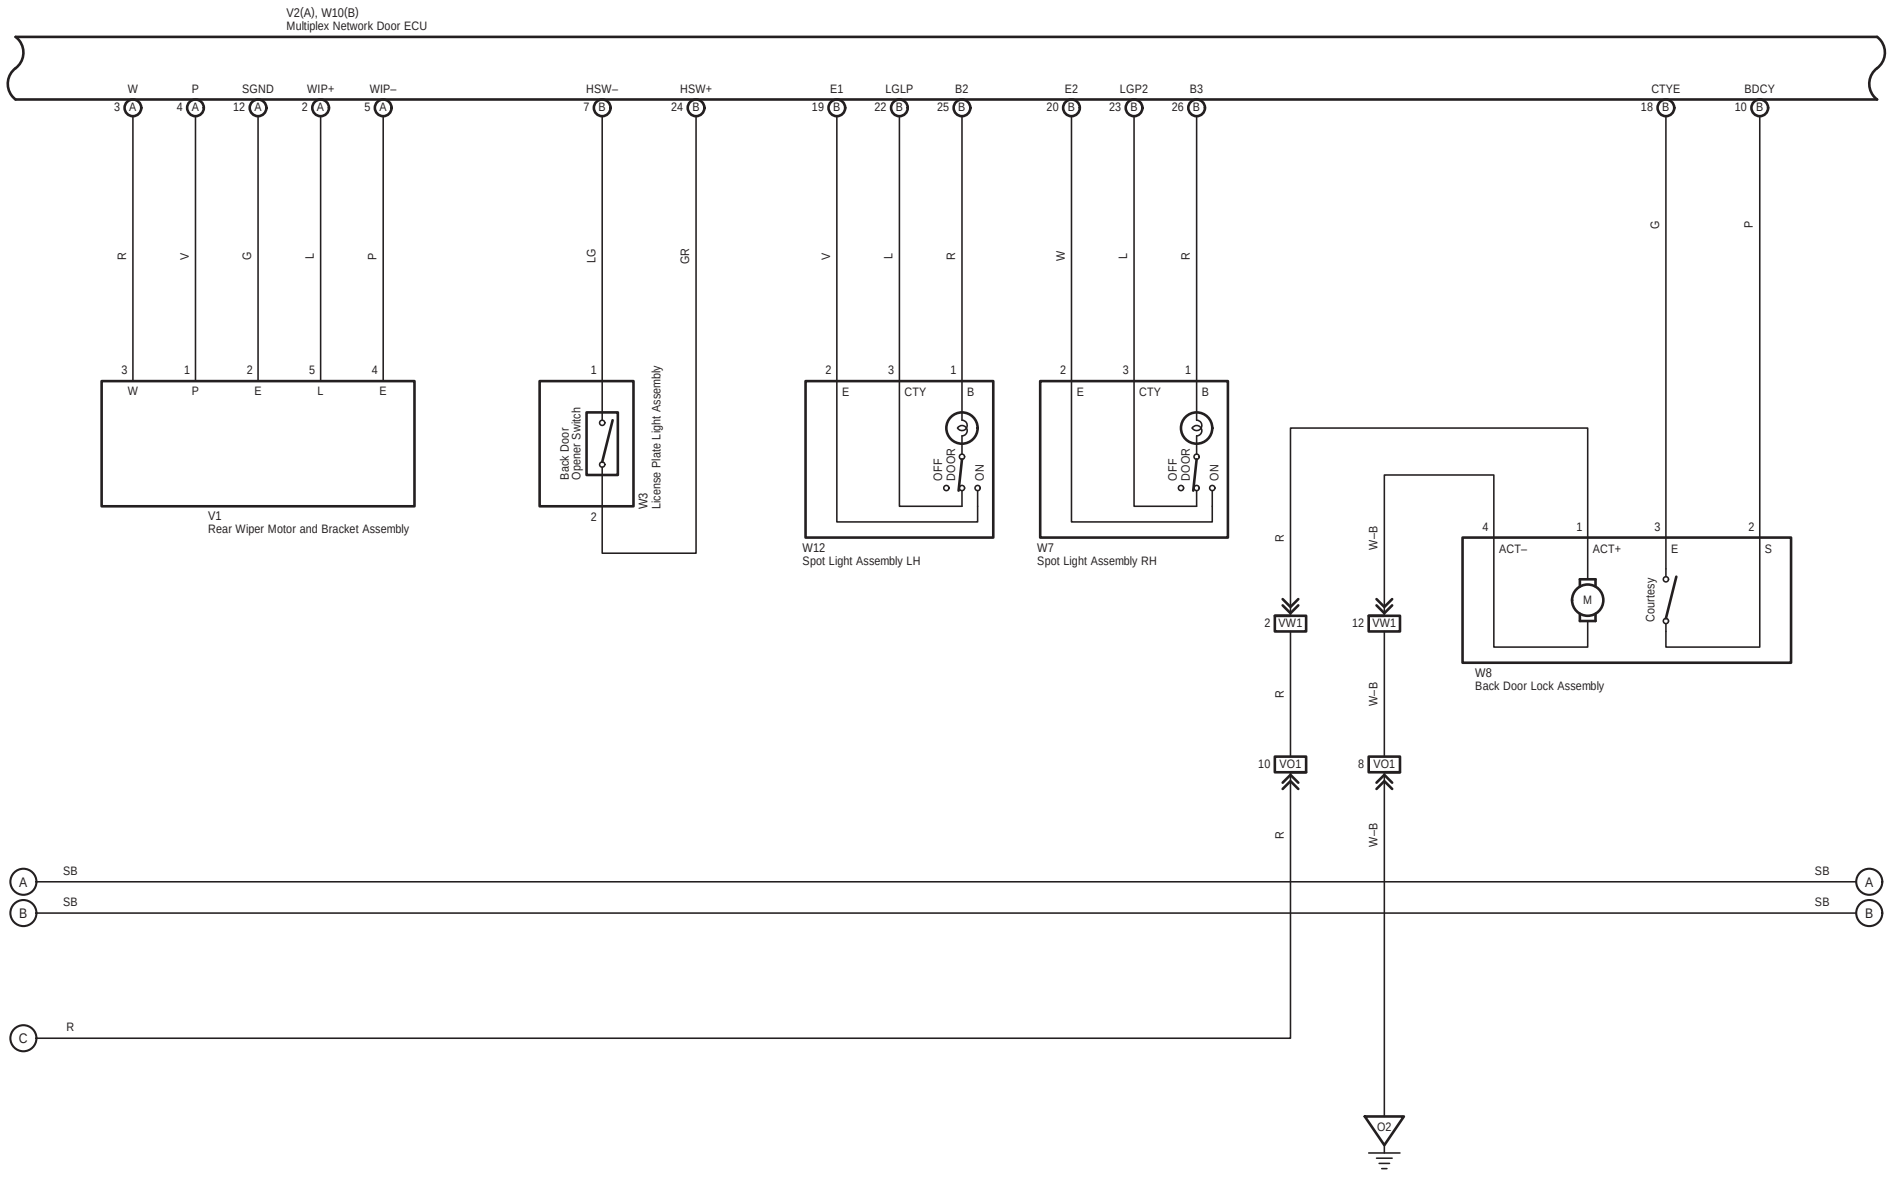


(Cont. next page)


Power Window

* 8 : Before Aug. 2013 Production
* 9 : From Aug. 2013 Production

57 58 59 60

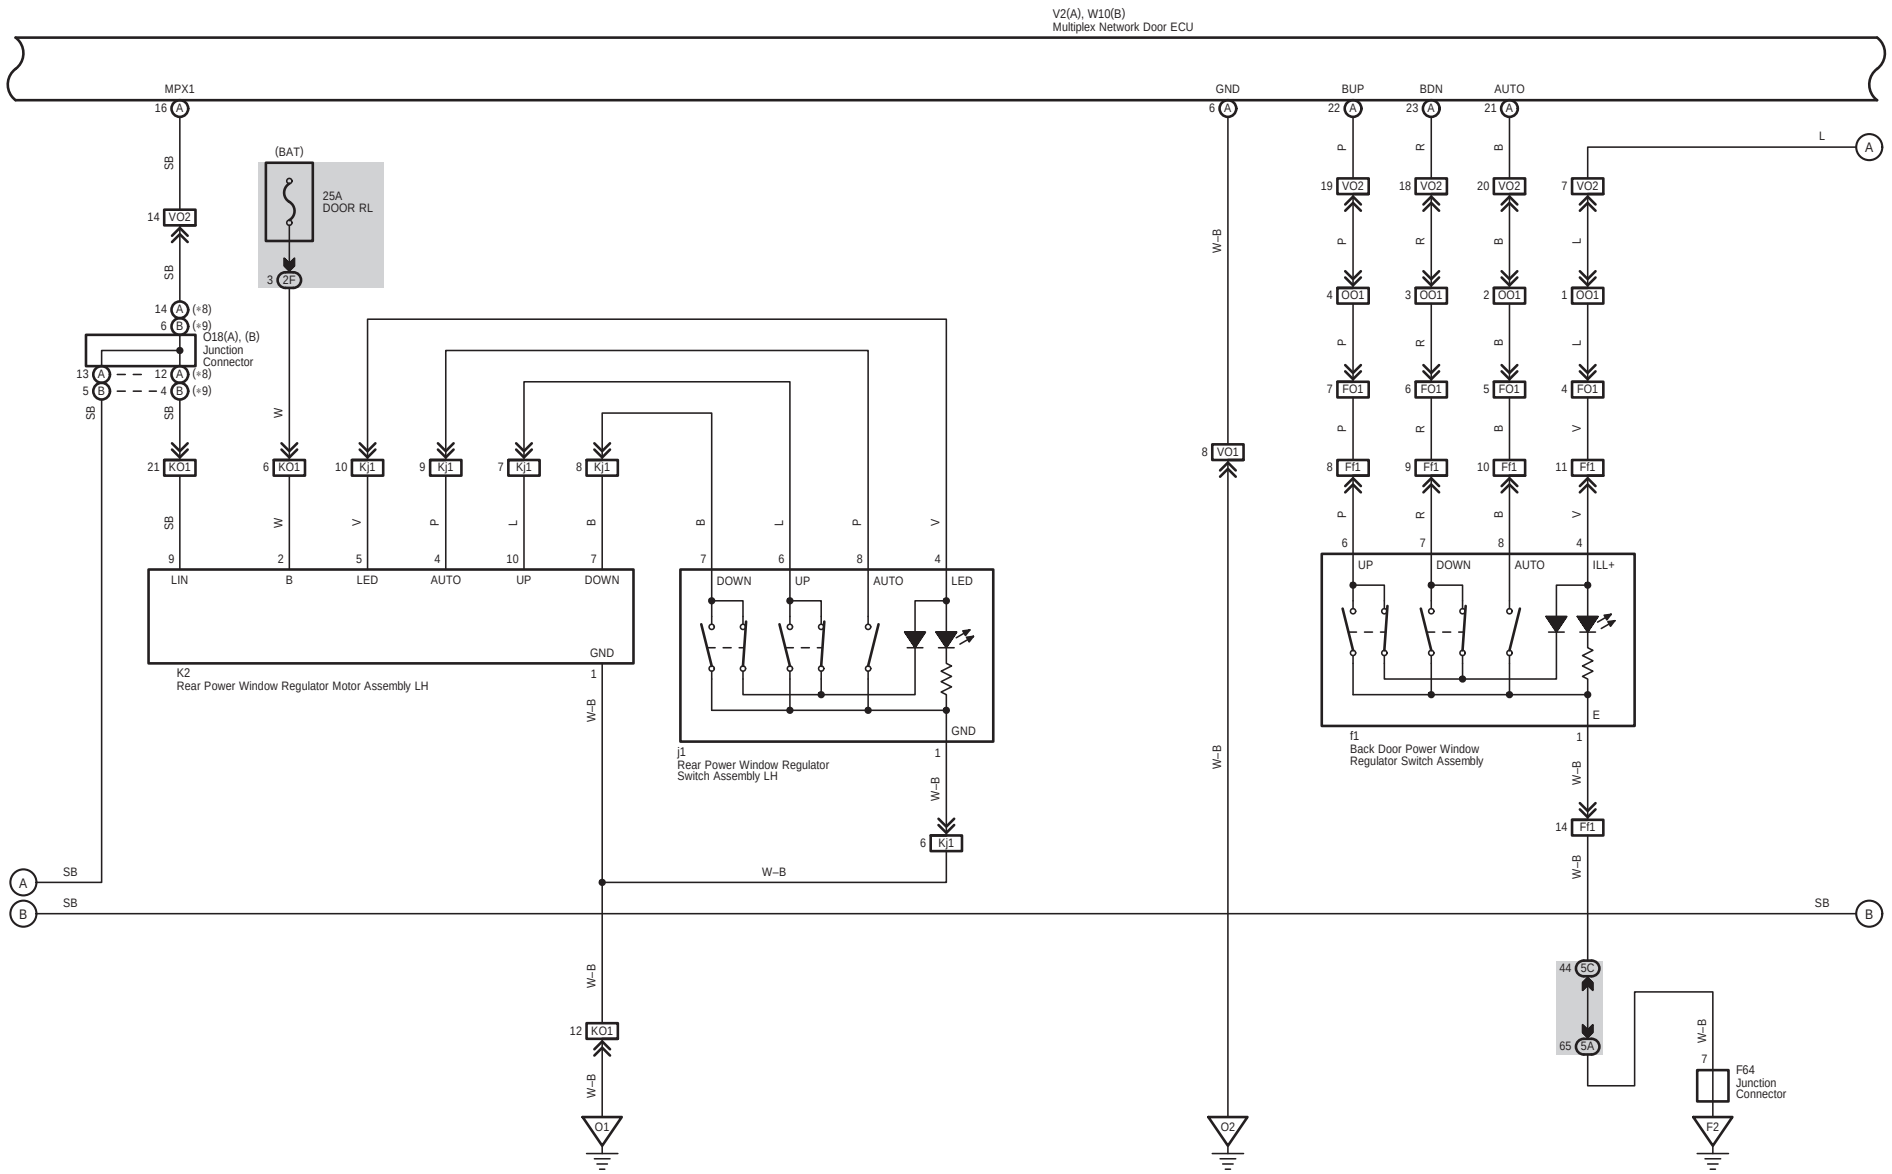


(Cont. next page)

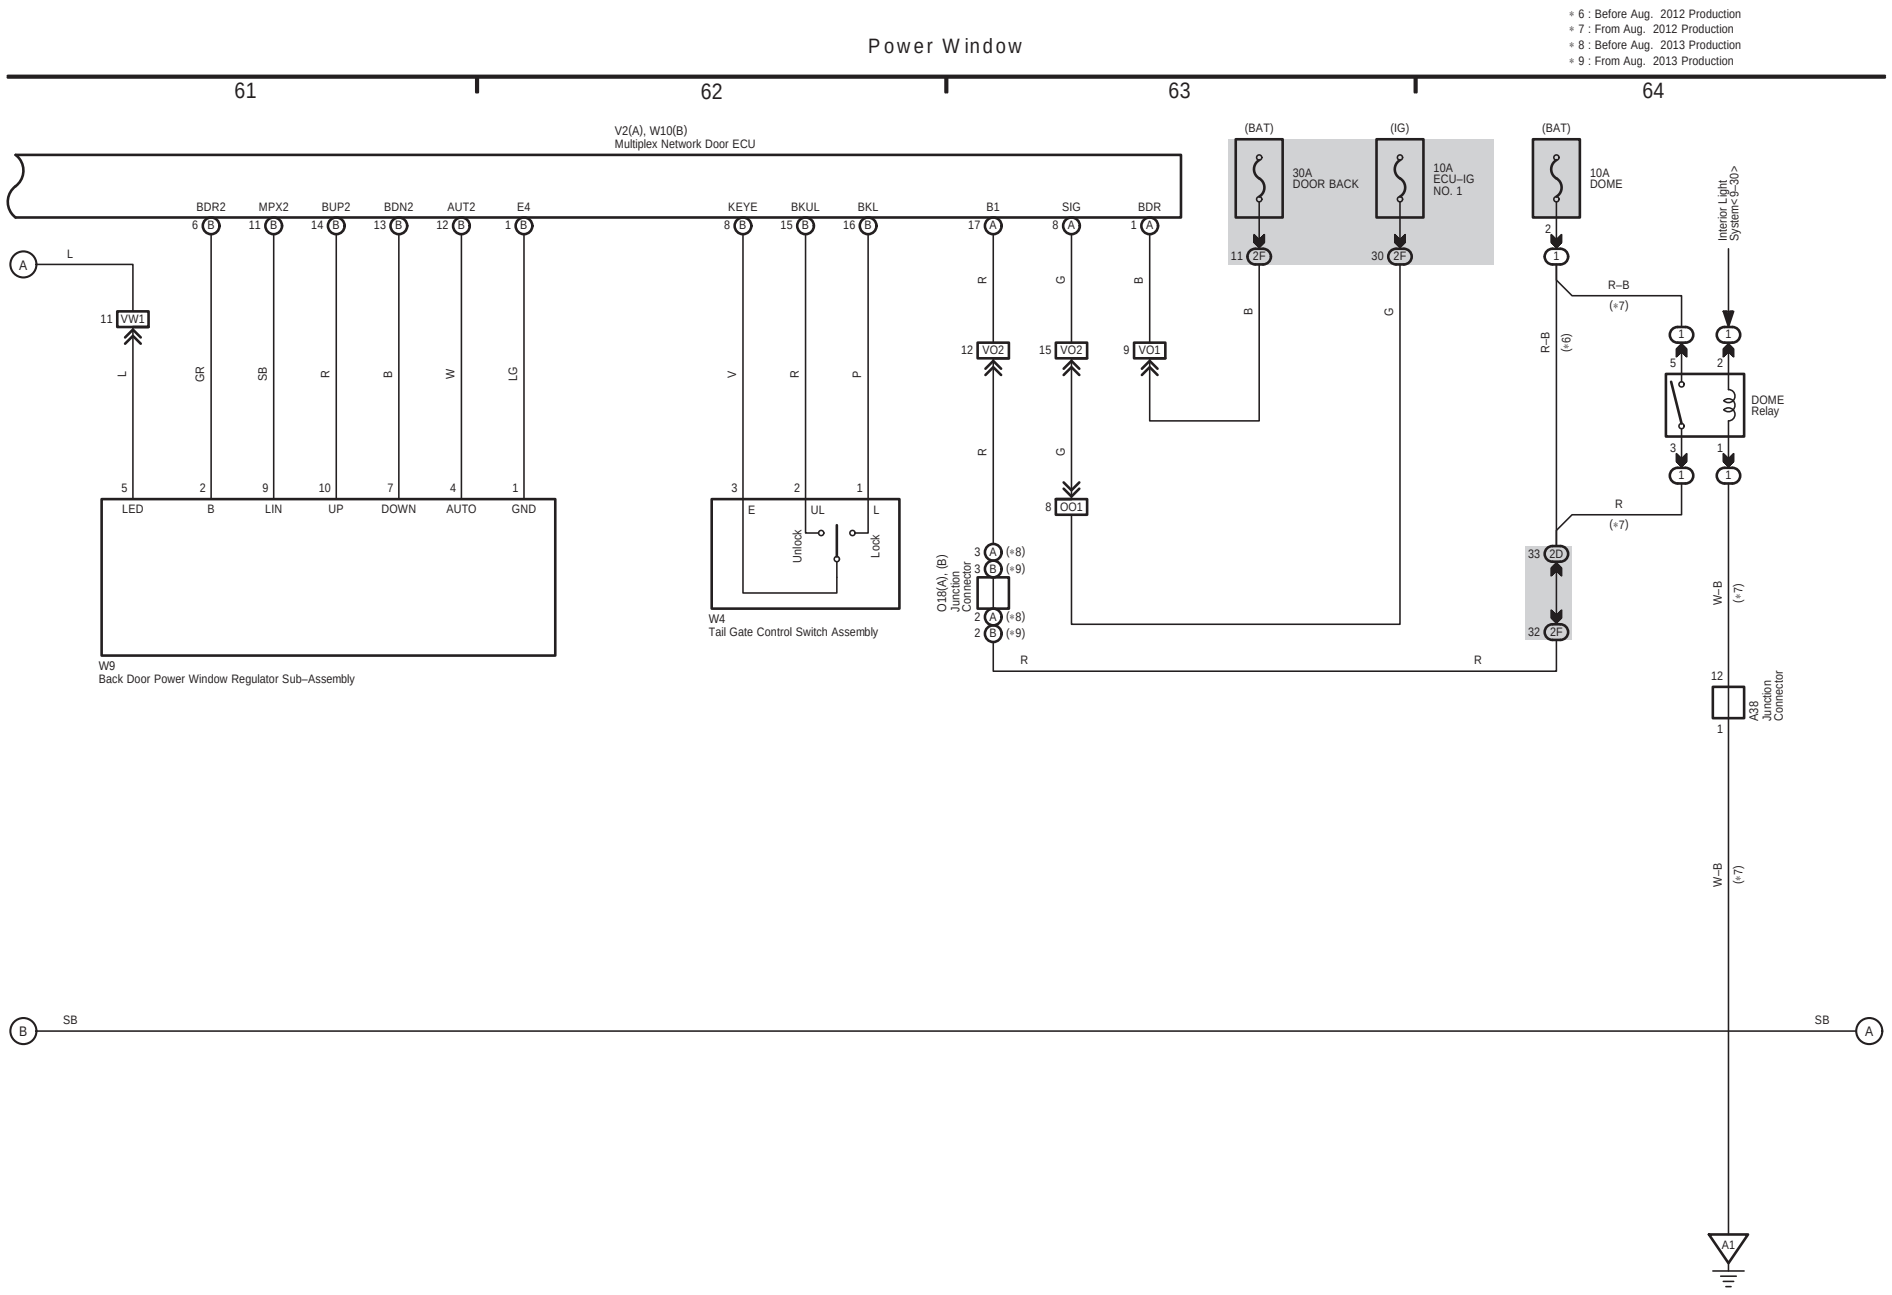


(Cont. next page)

Power Window

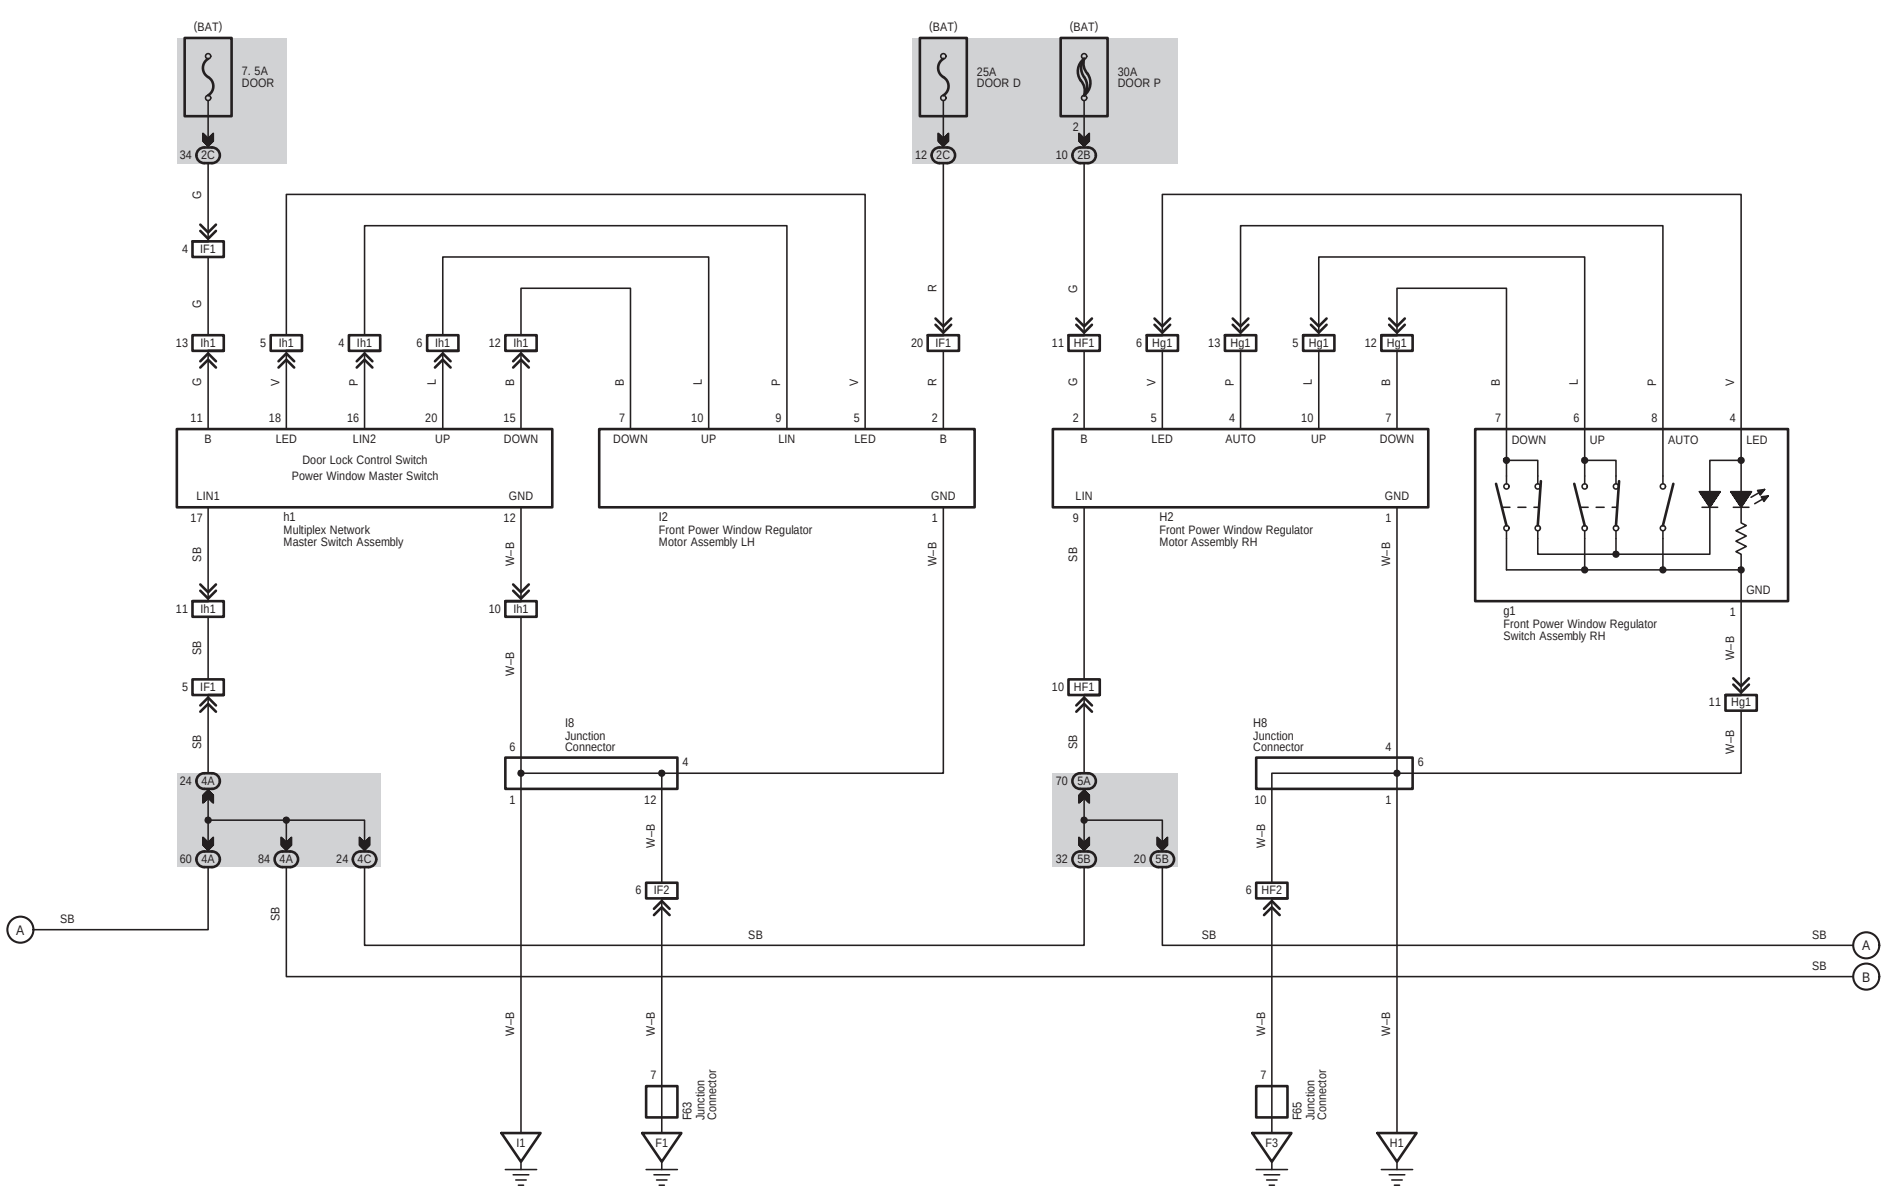

(Cont. next page)

Power Window

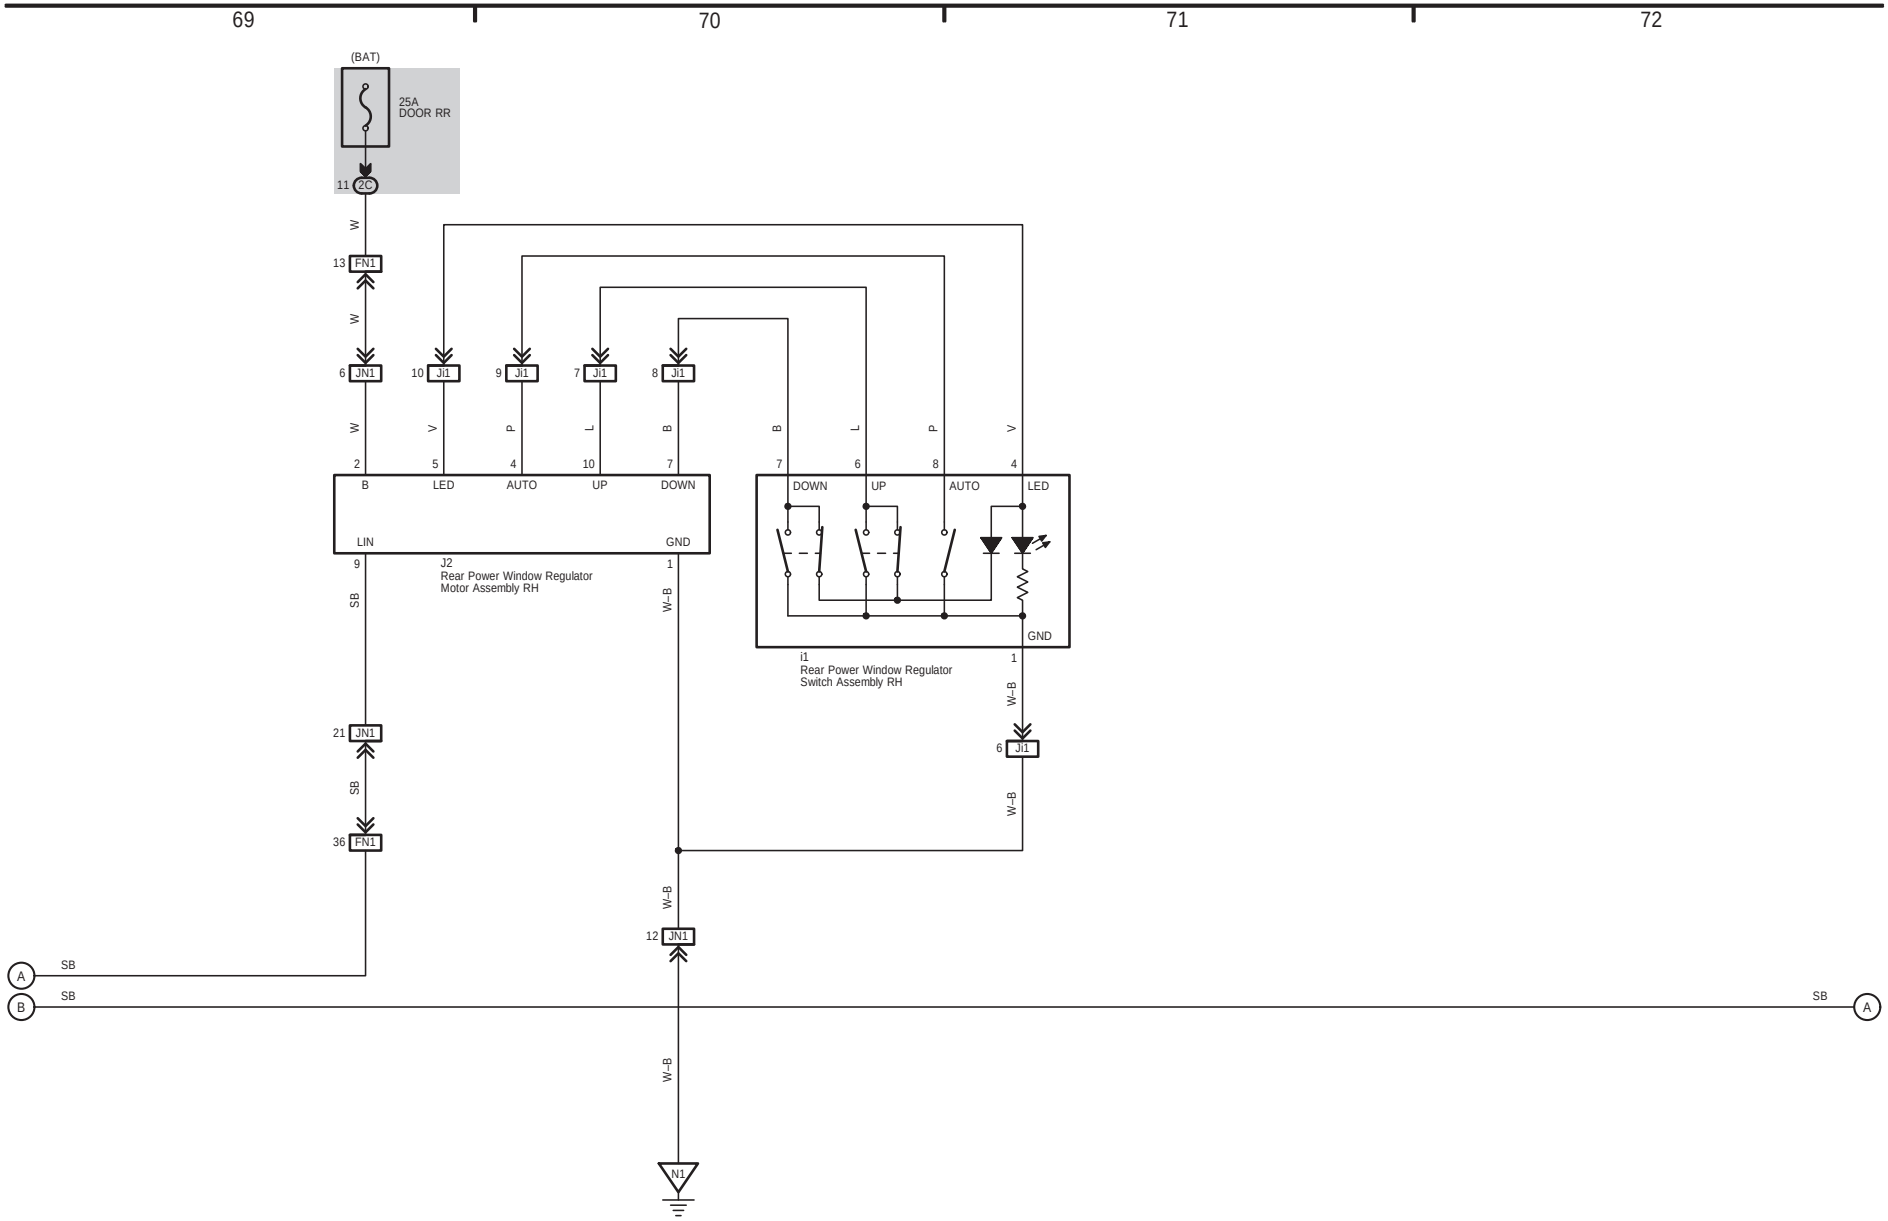

9 4RUNNER (Cont' d)

