

F RELAY LOCATIONS

: Driver Side J/B Assembly	Instrument Panel Reinforcement (See Page 20)

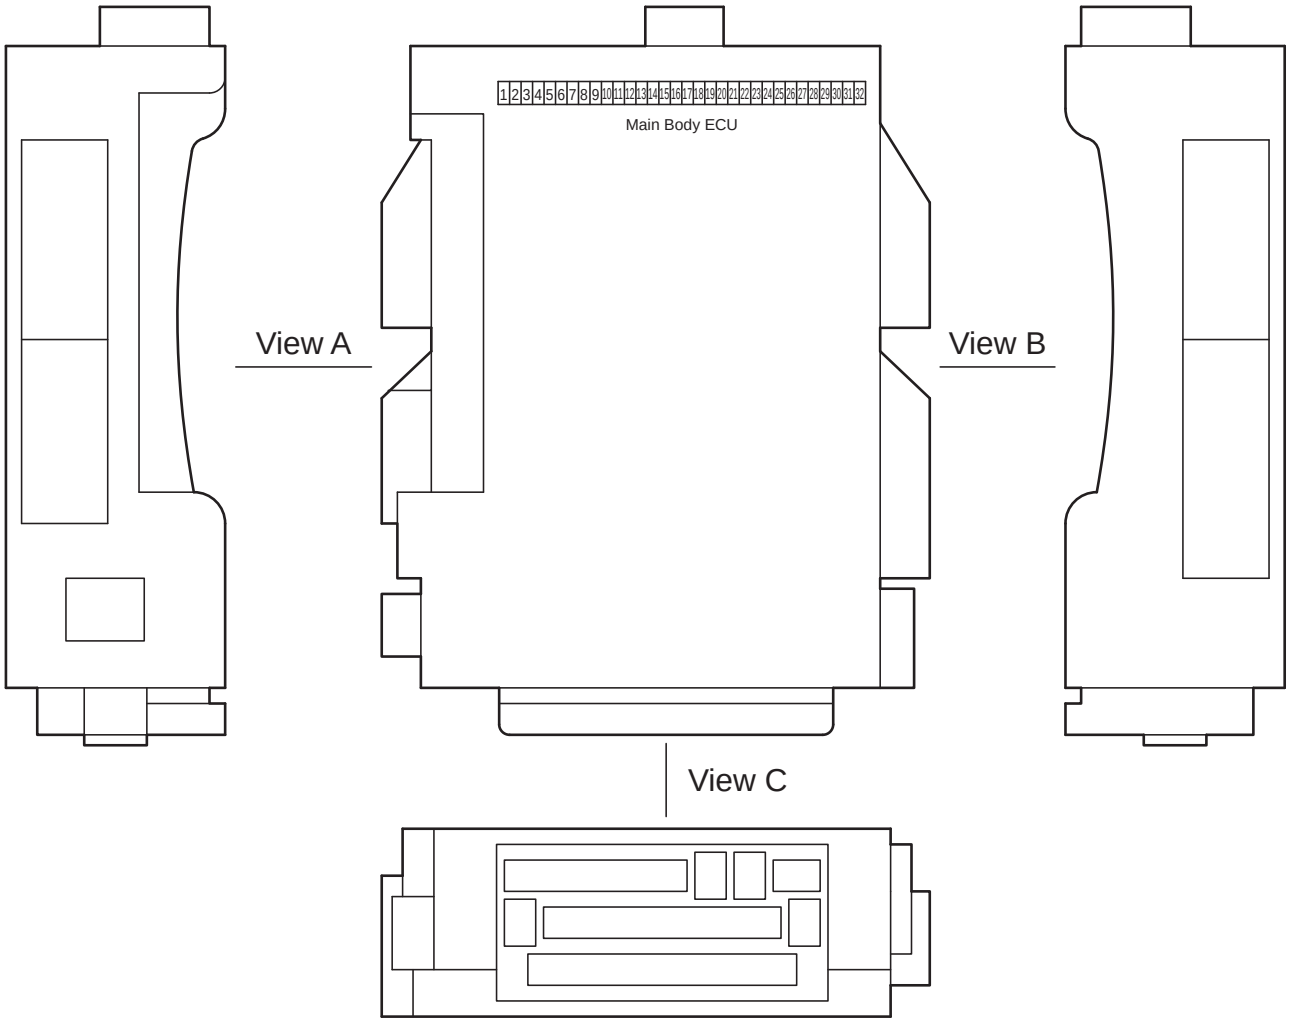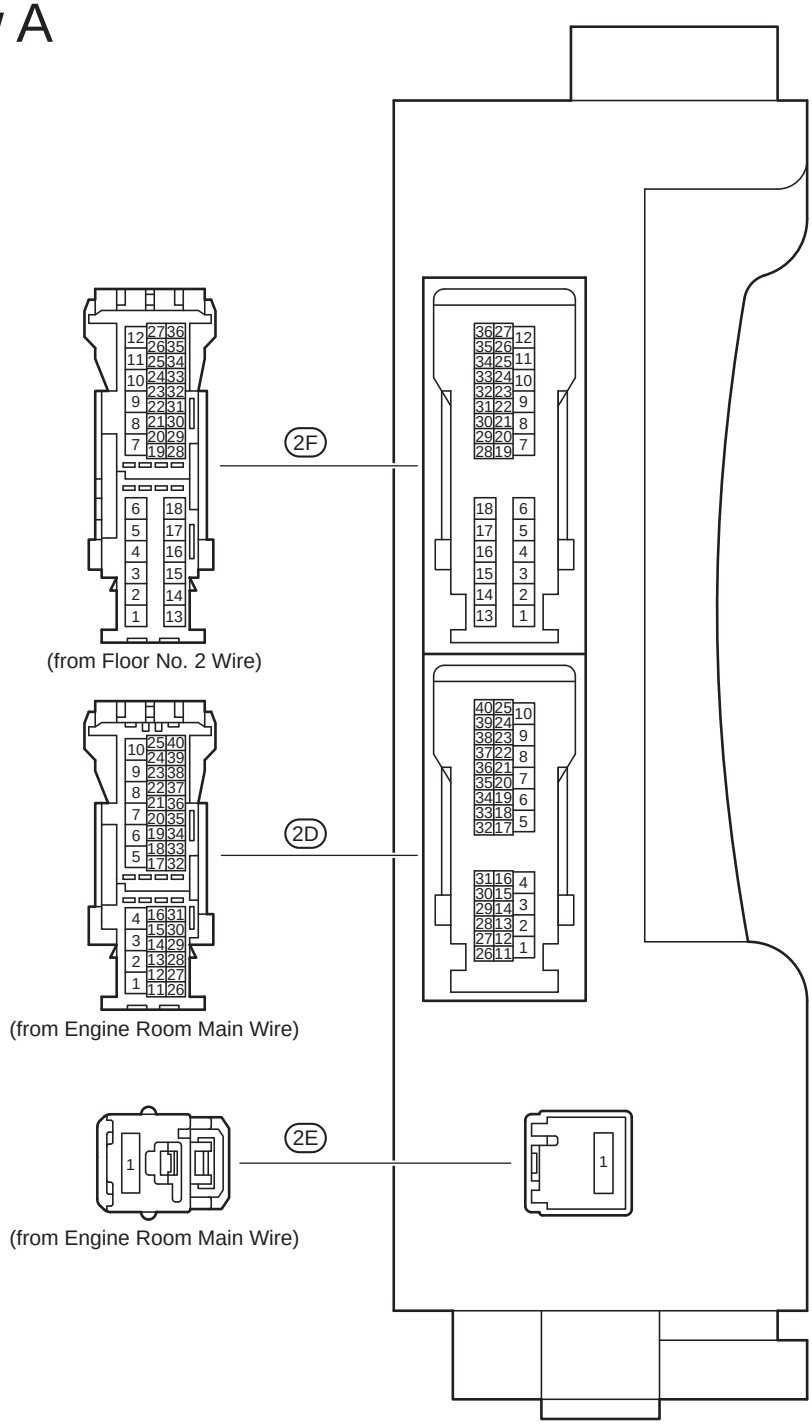


View A


2F
(from Floor No. 2 Wire)
2D
(from Engine Room Main Wire)
2E
(from Engine Room Main Wire)


F RELAY LOCATIONS

: Driver Side J/B Assembly	Instrument Panel Reinforcement (See Page 20)

View B

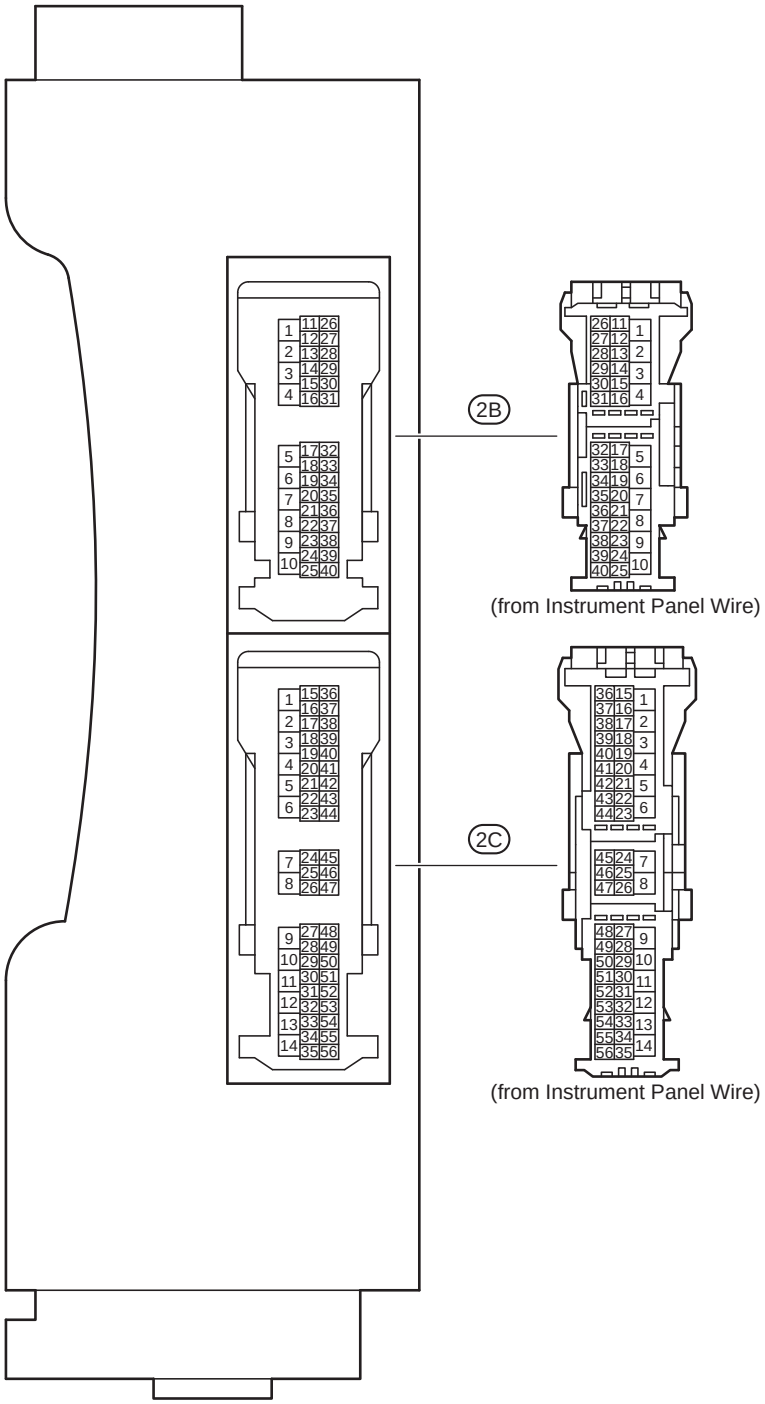

View C

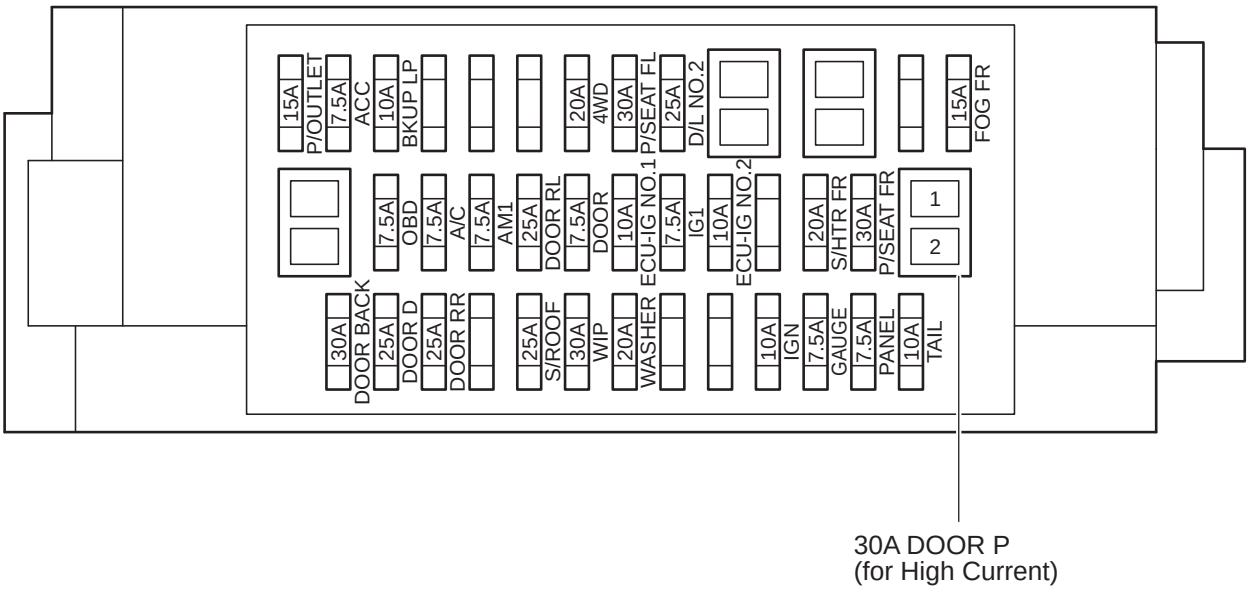
15A P/OUTLET
7.5A ACC
10A BKUP LP
20A 4WD
30A P/SEAT FL
25A D/L NO.2
15A FOG FR
7.5A OBD
7.5A A/C
7.5A AM1
25A DOOR RL
7.5A DOOR
10A ECU-IG NO.1
7.5A IG1
10A ECU-IG NO.2
20A S/HTR FR
30A P/SEAT FR
1
2
30A DOOR BACK
25A DOOR D
25A DOOR RR
25A S/ROOF
30A WIP
20A WASHER
10A IGN
7.5A GAUGE
7.5A PANEL
10A TAIL
30A DOOR P
(for High Current)