

F RELAY LOCATIONS

(1) : Engine Room R/B Assembly	Front Fender Apron LH (See Page 20)
⬭ : Engine Room J/B Assembly	

* 1:50A ABS NO.1 (for High Current)
* 2:30A ABS NO.2 (for High Current)
* 3:30A ST (for High Current)
* 4:50A HTR (for High Current)
* 5:140A ALT (for High Current)
* 6:80A P/I-B (for High Current)
* 7:WASHER RR Relay
* 8:S-HORN Relay
* 9:A/C COMP Relay
* 10:ST Relay
* 11:H-LP LO Relay
* 12:H-LP HI Relay
* 13:MIR HTR Relay
* 14:DEF Relay
* 15:STOP LP Relay
* 16:C/OPN Relay
* 17:DOME Relay
* 18:AI-VSV Relay
* 19:AIR PMP HTR Relay
* 20:50A AIR PMP (for High Current)

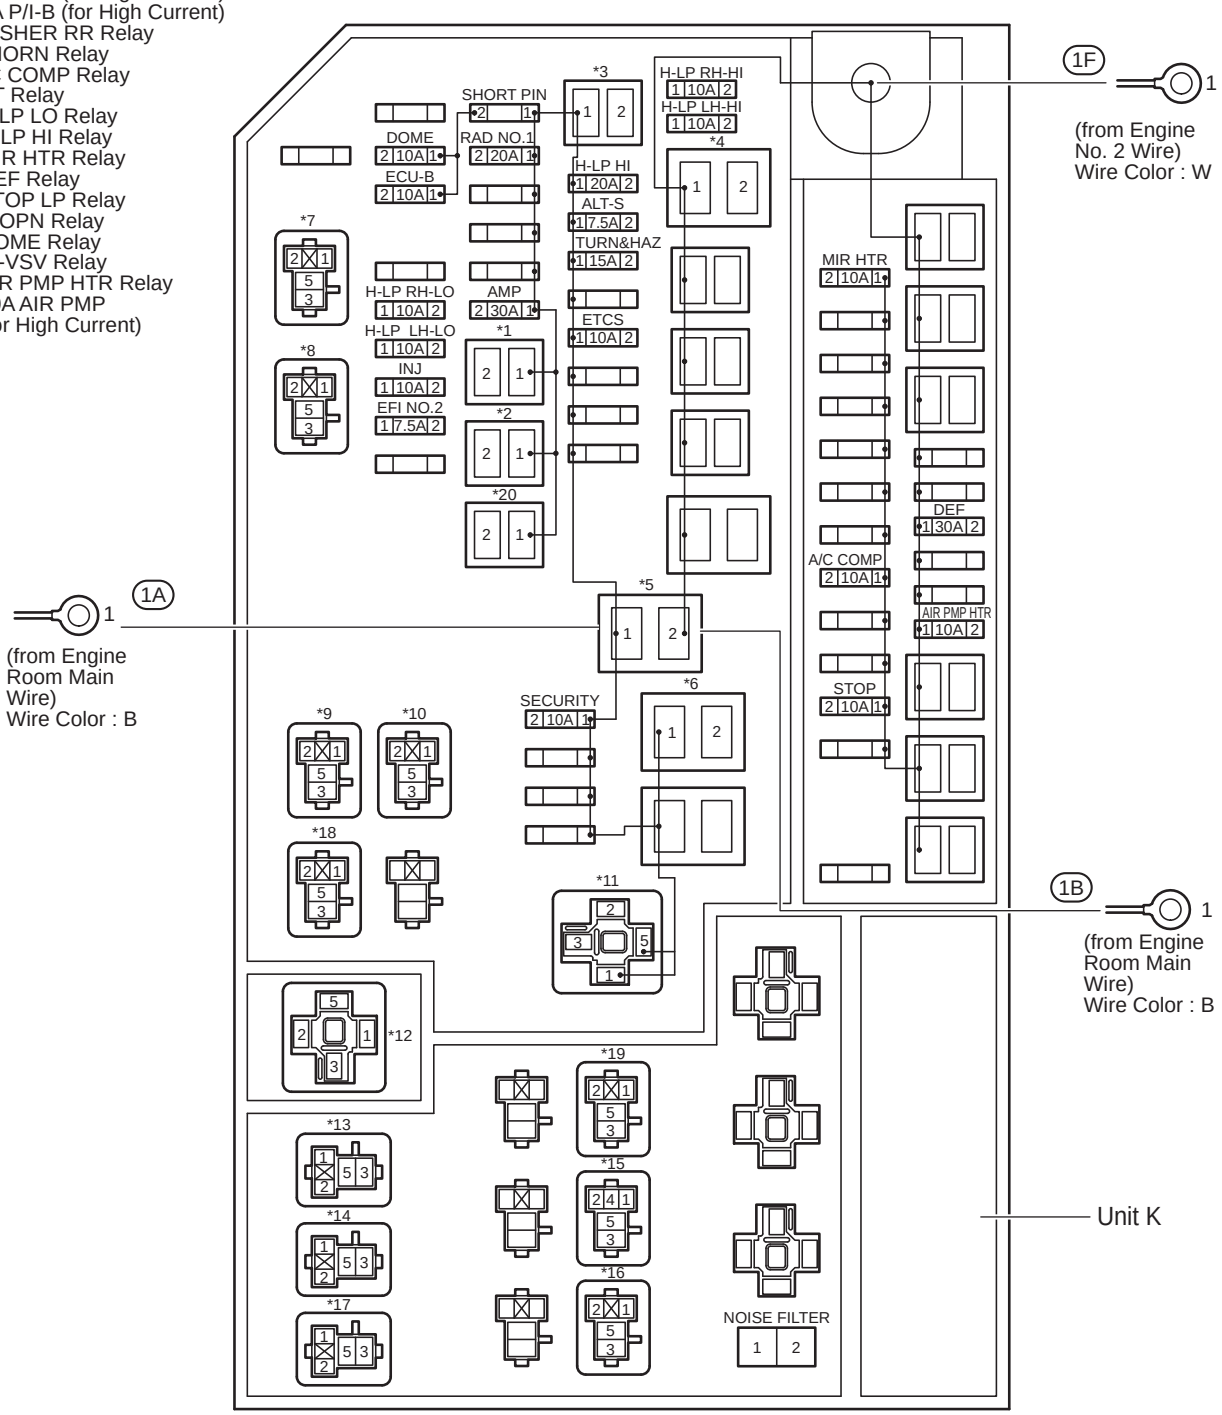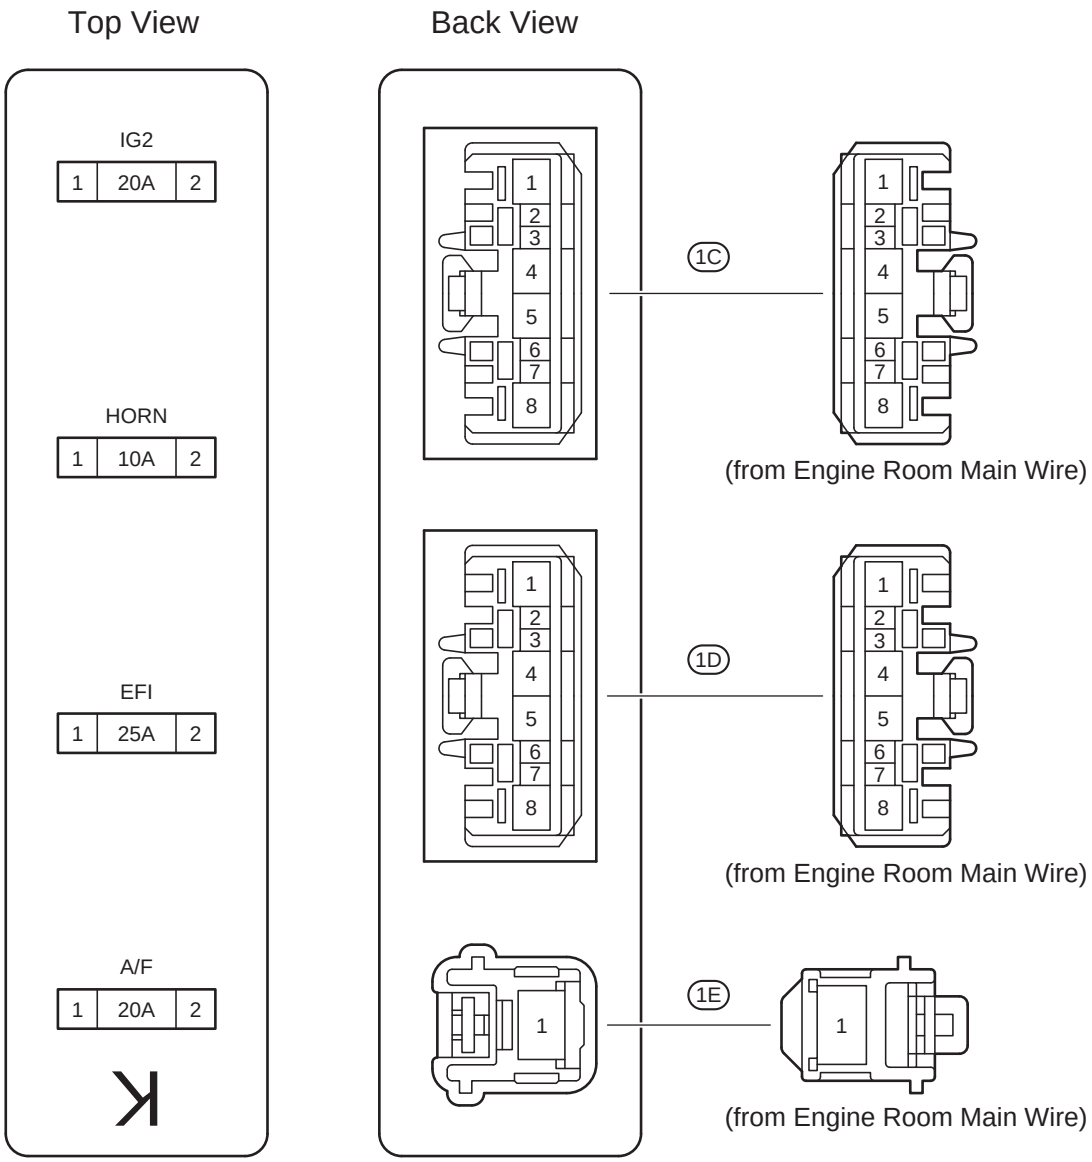

Unit K


Top View
Back View
IG2
1
20A
2
HORN
1
10A
2
EFI
1
25A
2
A/F
1
20A
2
K
1C
1D
1E
(from Engine Room Main Wire)
(from Engine Room Main Wire)
(from Engine Room Main Wire)