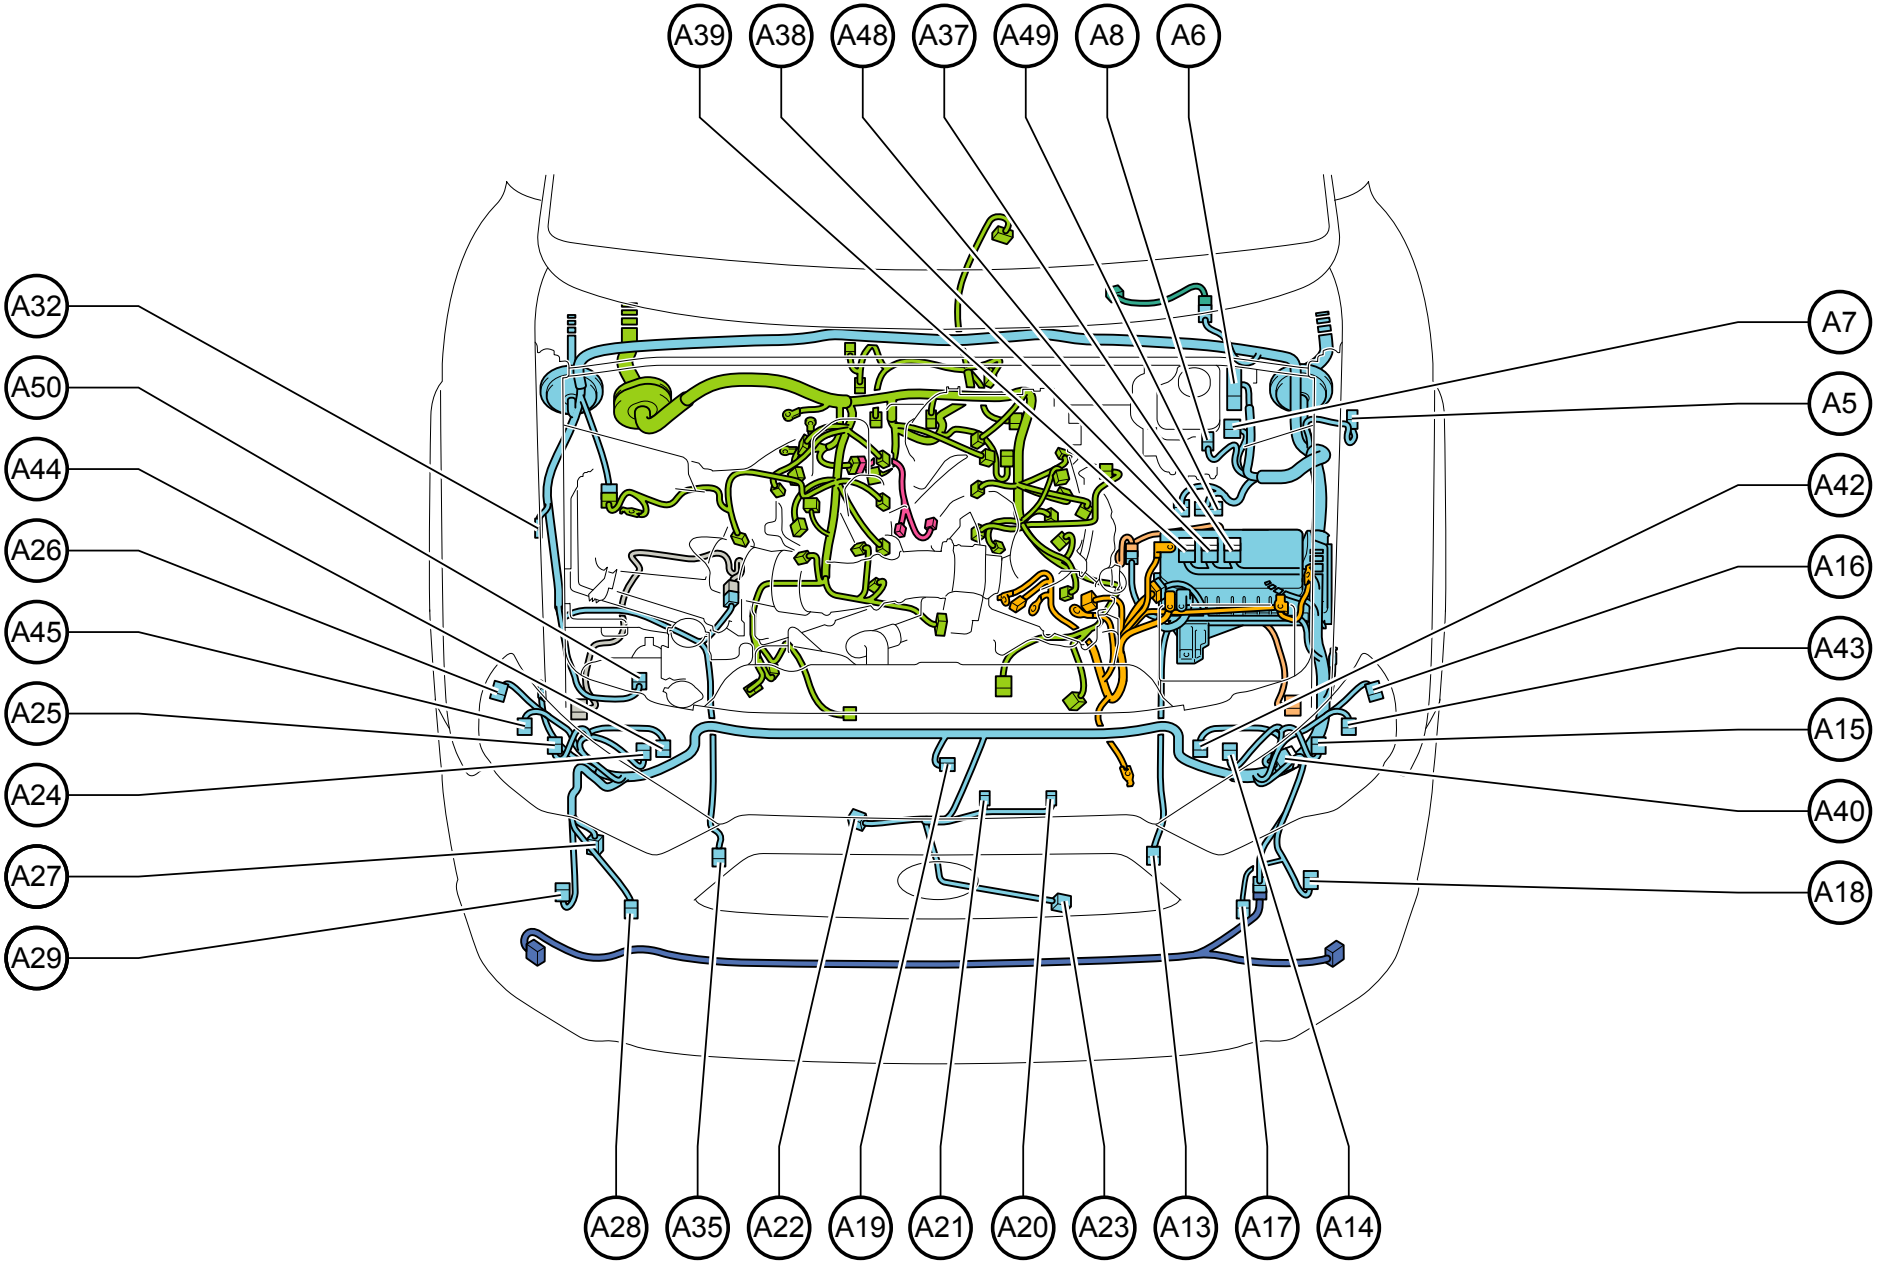
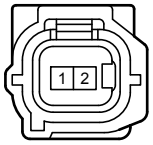
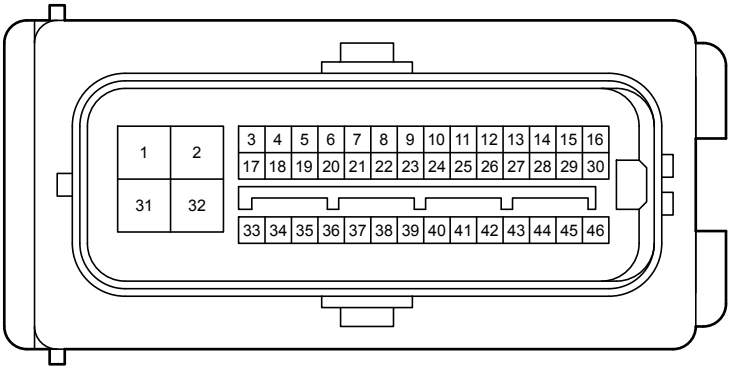

A39
A38
A48
A37
A49
A8
A6
A32
A50
A44
A26
A45
A25
A24
A27
A29
A7
A5
A42
A16
A43
A15
A40
A18
A28
A35
A22
A19
A21
A20
A23
A13
A17
A14

A 5 Wireless Door Lock Buzzer
A 6 Skid Control ECU with Actuator Assembly
A 7 Skid Control ECU with Actuator Assembly
A 8 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 13 Front Airbag Sensor LH
A 14 Headlight Assembly LH
A 15 Headlight Assembly LH
A 16 Headlight Assembly LH
A 17 Front Turn Signal Light Assembly LH
A 18 Front Fog Light Assembly LH
A 19 Engine Hood Courtesy Switch
A 20 High Pitched Horn Assembly
A 21 Low Pitched Horn Assembly
A 22 A/C Tube & Accessory Assembly
A 23 Cooler (Ambient Temperature Sensor) Thermistor
A 24 Headlight Assembly RH
A 25 Headlight Assembly RH
A 26 Headlight Assembly RH
A 27 Front Washer Jar & Pump Assembly
A 28 Front Turn Signal Light Assembly RH
A 29 Front Fog Light Assembly RH
A 32 Security Horn Assembly
A 35 Front Airbag Sensor RH
A 37 Junction Connector
A 38 Junction Connector
A 39 Junction Connector
A 40 Junction Connector
A 42 Headlight Assembly LH
A 43 Headlight Assembly LH
A 44 Headlight Assembly RH
A 45 Headlight Assembly RH
A 48 Air Injection Control Driver
A 49 Air Injection Control Driver
A 50 Air Pump Assembly

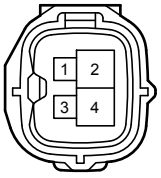
A 5
Gray



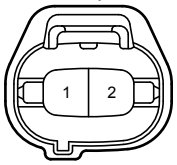

A 6
Black



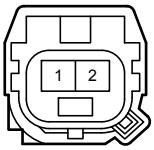

A 7
Black



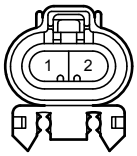

A 8
Gray



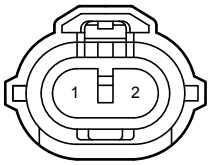

A 13
Yellow



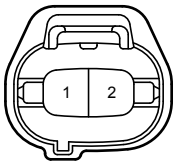

A 14
Black



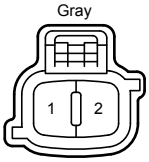

A 15
Black



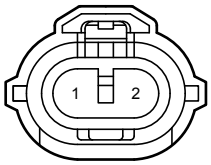

A 16
Brown




A 17
Gray





A 18
Black





A 19
Black



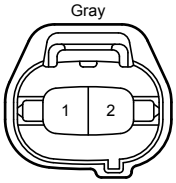

A 20
Black




A 21
Black



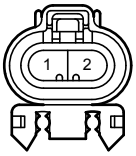

A 22
Gray



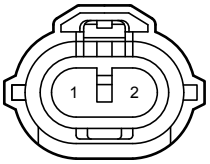

A 23
Black



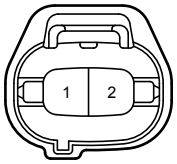

A 24
Black




A 25
Black



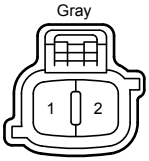

A 26
Brown



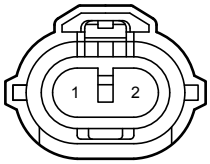

A 27
Dark Gray





A 28
Gray



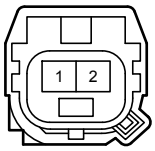

A 29
Black



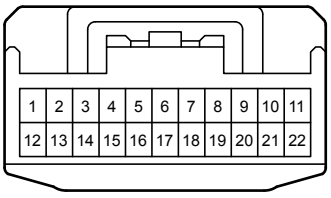

A 32
Black



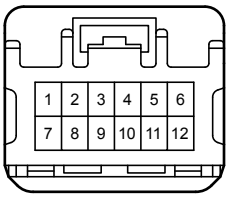

A 35
Yellow



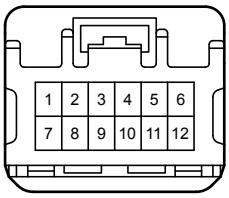

A 37
Black



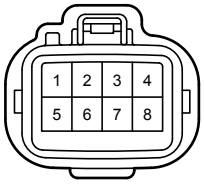

A 38
White




A 39
Black



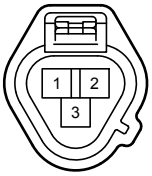
A 40
Dark Gray




A 42
White



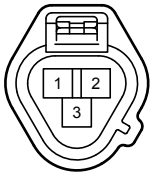

A 43
Gray



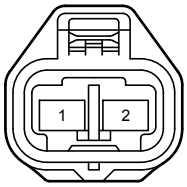

A 44
White



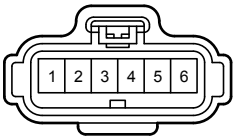

A 45
Gray




A 48
Black




A 49
Black




A 50
Black

