



* 1:Before Aug. 2012 Production
* 2:From Aug. 2012 Production
B33
B25
B32
B47
B29
B42
(*1)
B51
(*2)
B26
B23
B53
B35
B52
(*2)
B30
B34
B54
B24
(*2)
B50
B22
B31
B40
B43
B27
B41

B 22 VVT Sensor (Bank 2 Intake Side)
B 23 VVT Sensor (Bank 1 Exhaust Side)
B 24 VVT Sensor (Bank 2 Exhaust Side)
B 25 E.F.I. Engine Coolant Temperature Sensor
B 26 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 27 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
B 29 Oxygen Sensor (Bank 1 Sensor 2)
B 30 Oxygen Sensor (Bank 2 Sensor 2)
B 31 Power Steering Oil Pressure Switch
B 32 Electronically Controlled Transmission Solenoid
B 33 Transmission Revolution Sensor (Counter Gear)
B 34 Transmission Revolution Sensor (Turbine)
B 35 Intake Mass Air Flow Meter Sub-Assembly
B 40 Solenoid Valve Assembly
B 41 With Magnet Clutch Compressor Assembly
B 42 Park/Neutral Position Switch
B 43 Engine Oil Pressure Switch Assembly
B 47 Transfer Shift Actuator Assembly
B 50 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
B 51 Park/Neutral Position Switch
B 52 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
B 53 Air Switching Valve Assembly RH
B 54 Air Switching Valve Assembly LH


B 22
Black

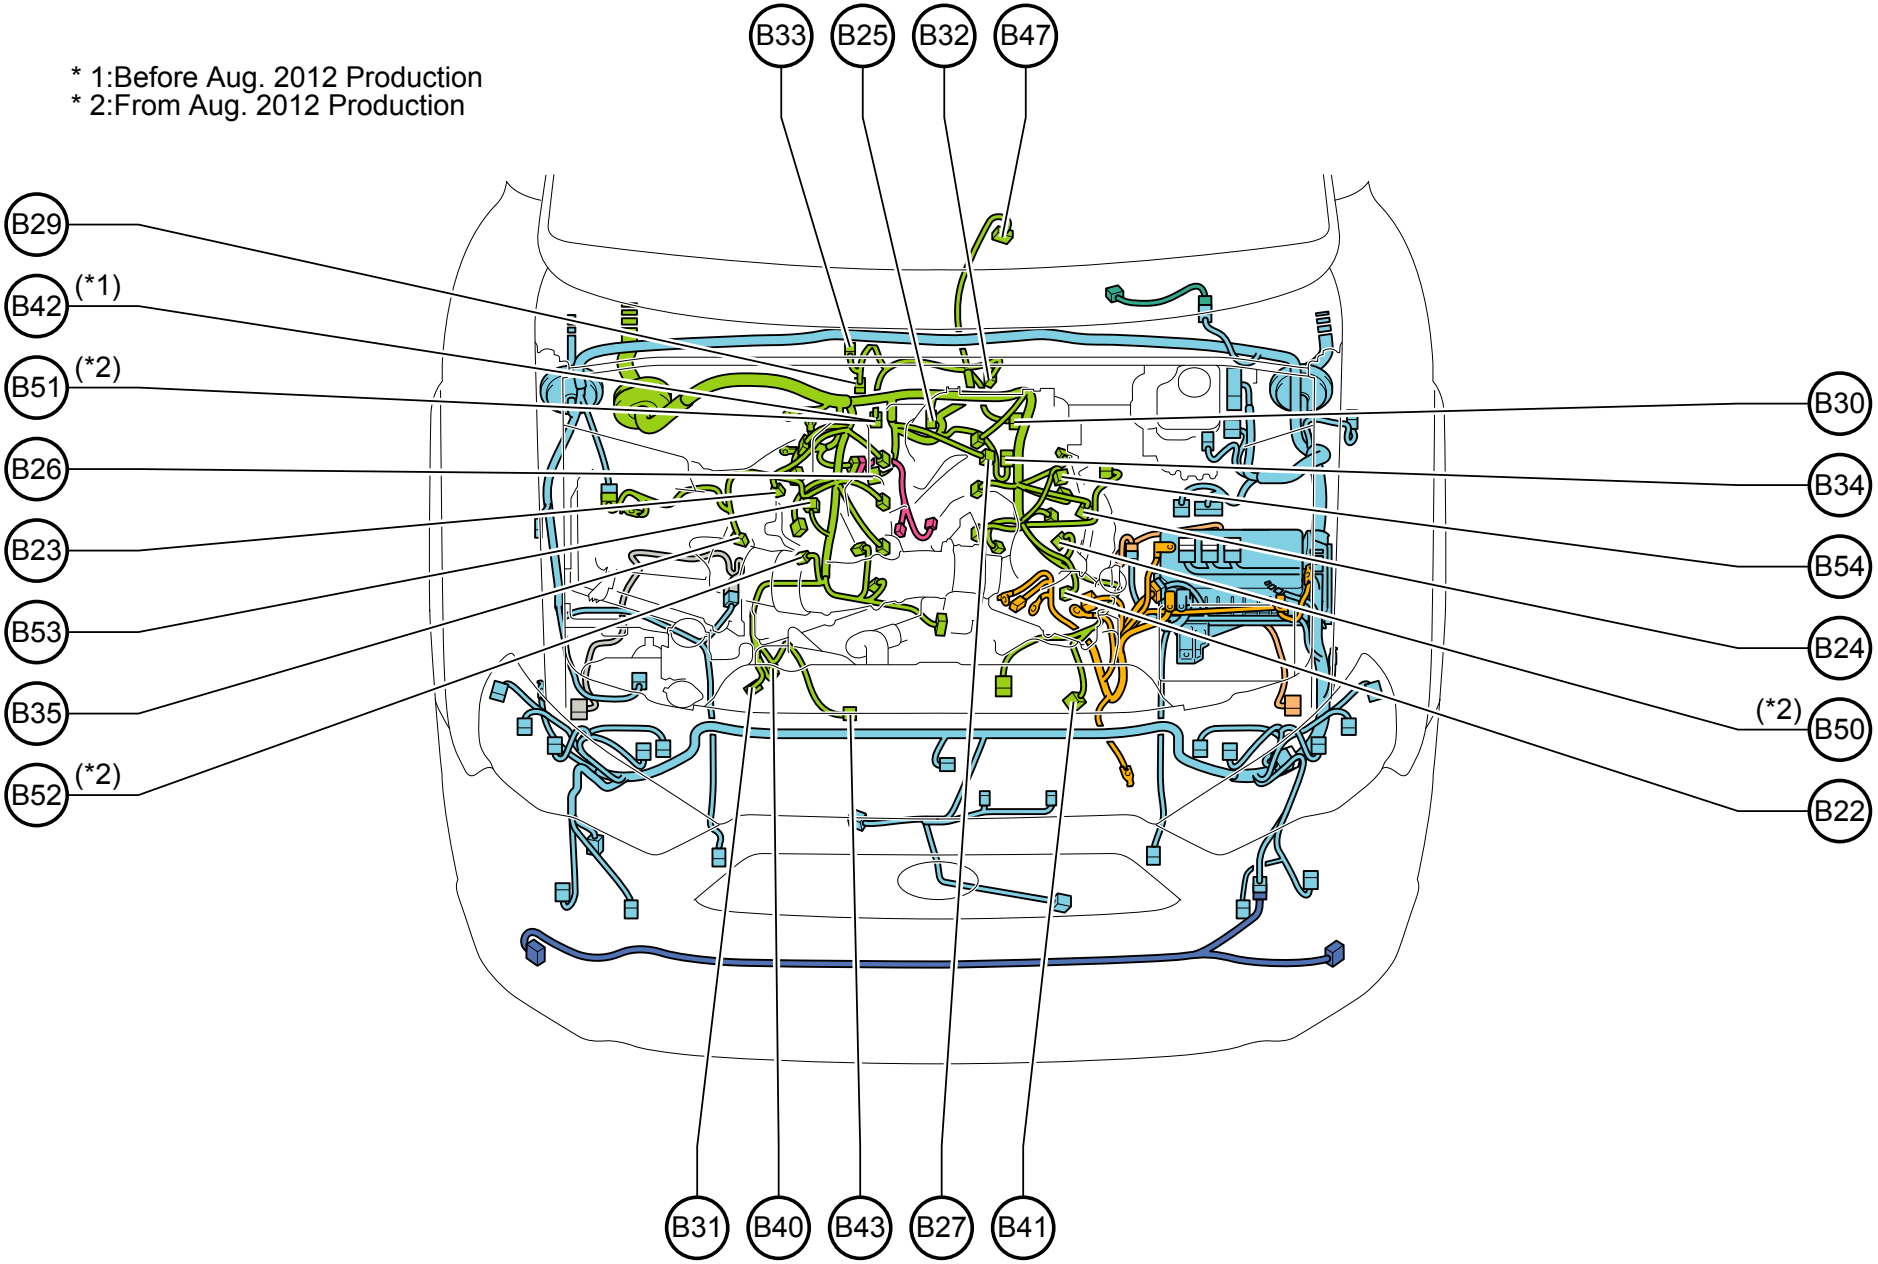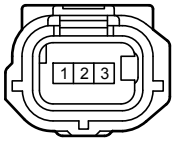

B 23
Black

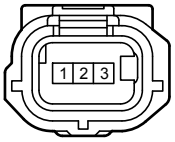

B 24
Black

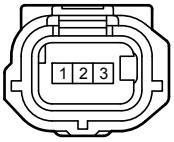

B 25
Black



B 26
Dark Gray



B 27
Dark Gray




B 29
Dark Gray




B 30
Dark Gray




B 31
Gray

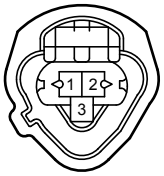


B 32
Gray

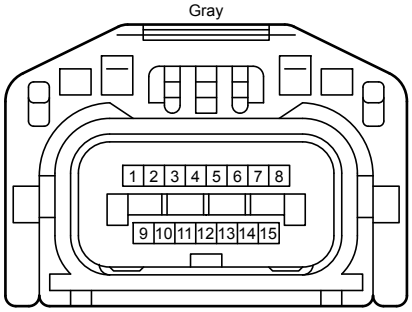


B 33
Black

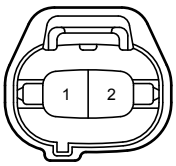


B 34
Black

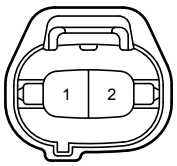

B 35
Black

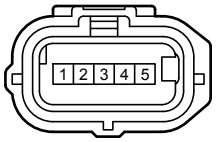


B 40
Black

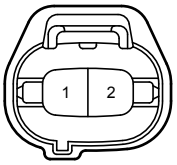

B 41
Gray




B 42
Gray

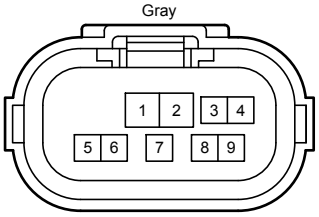

B 43
Gray




B 47
Black

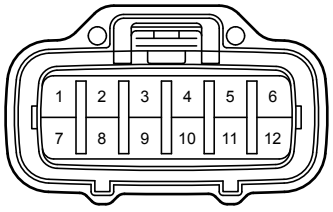

B 50
Black




B 51
Gray

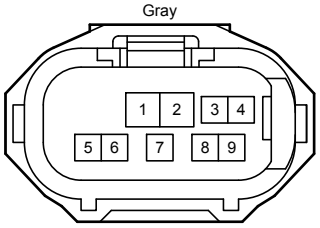

B 52
Black



B 53
Black

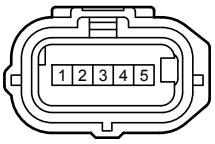

B 54
Black

