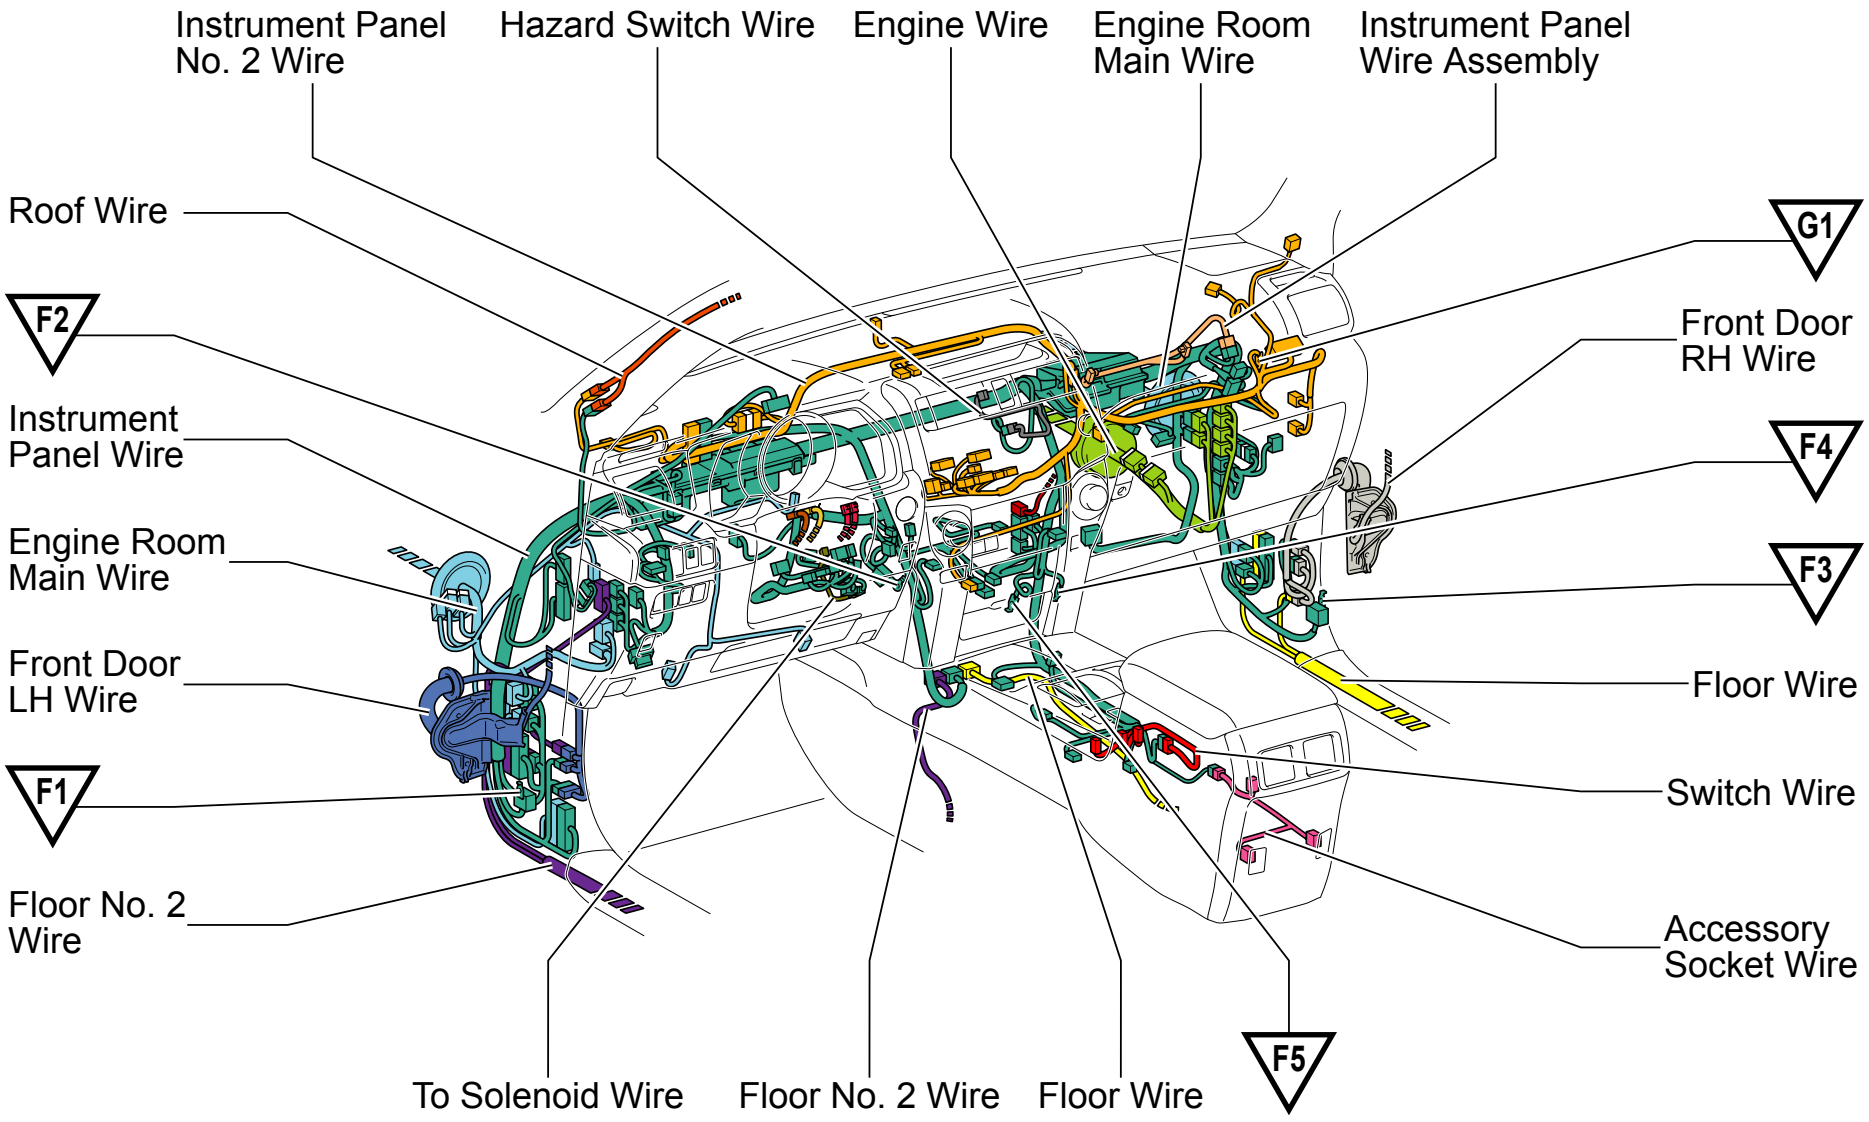

Instrument Panel No. 2 Wire
Hazard Switch Wire
Engine Wire
Engine Room Main Wire
Instrument Panel Wire Assembly
Roof Wire
F2
Instrument Panel Wire
Engine Room Main Wire
Front Door LH Wire
F1
Floor No. 2 Wire
G1
Front Door RH Wire
F4
F3
Floor Wire
Switch Wire
Accessory Socket Wire
F5
To Solenoid Wire
Floor No. 2 Wire
Floor Wire