



F81
F42
F41
F48
F49
F58
F47
F46
F55
F56
F82
F59
F63
F60
F57
F50
F51
F65
F43
F67
F77
F78
F64
F79
F80
F36
F74
F75
F73
F76

F 36 Yaw Rate Sensor Assembly
F 41 Power Steering ECU Assembly
F 42 A/C Amplifier Assembly
F 43 Blower with Fan Motor Sub-Assembly
F 46 Four Wheel Drive Control ECU
F 47 Four Wheel Drive Control ECU
F 48 No. 2 Power Point Socket Assembly
F 49 Glove Box Light Assembly
F 50 ECM
F 51 ECM
F 55 Junction Connector
F 56 Junction Connector
F 57 Junction Connector
F 58 Junction Connector
F 59 Junction Connector
F 60 Junction Connector
F 63 Junction Connector
F 64 Junction Connector
F 65 Junction Connector
F 67 Turn Signal Flasher Assembly
F 73 Transfer Position Switch
F 74 Shift Position Indicator (Indicator Light Wire Sub-Assembly)
F 75 Shift Lock Control ECU Sub-Assembly
F 76 Transmission Control Switch
F 77 Back Sonar or Clearance Sonar Switch Assembly
F 78 Clearance Warning ECU Assembly
F 79 No. 1 Clearance Warning Buzzer
F 80 Refreshing Seat Switch
F 81 A/C Amplifier Assembly
F 82 Junction Connector


F 36
Black

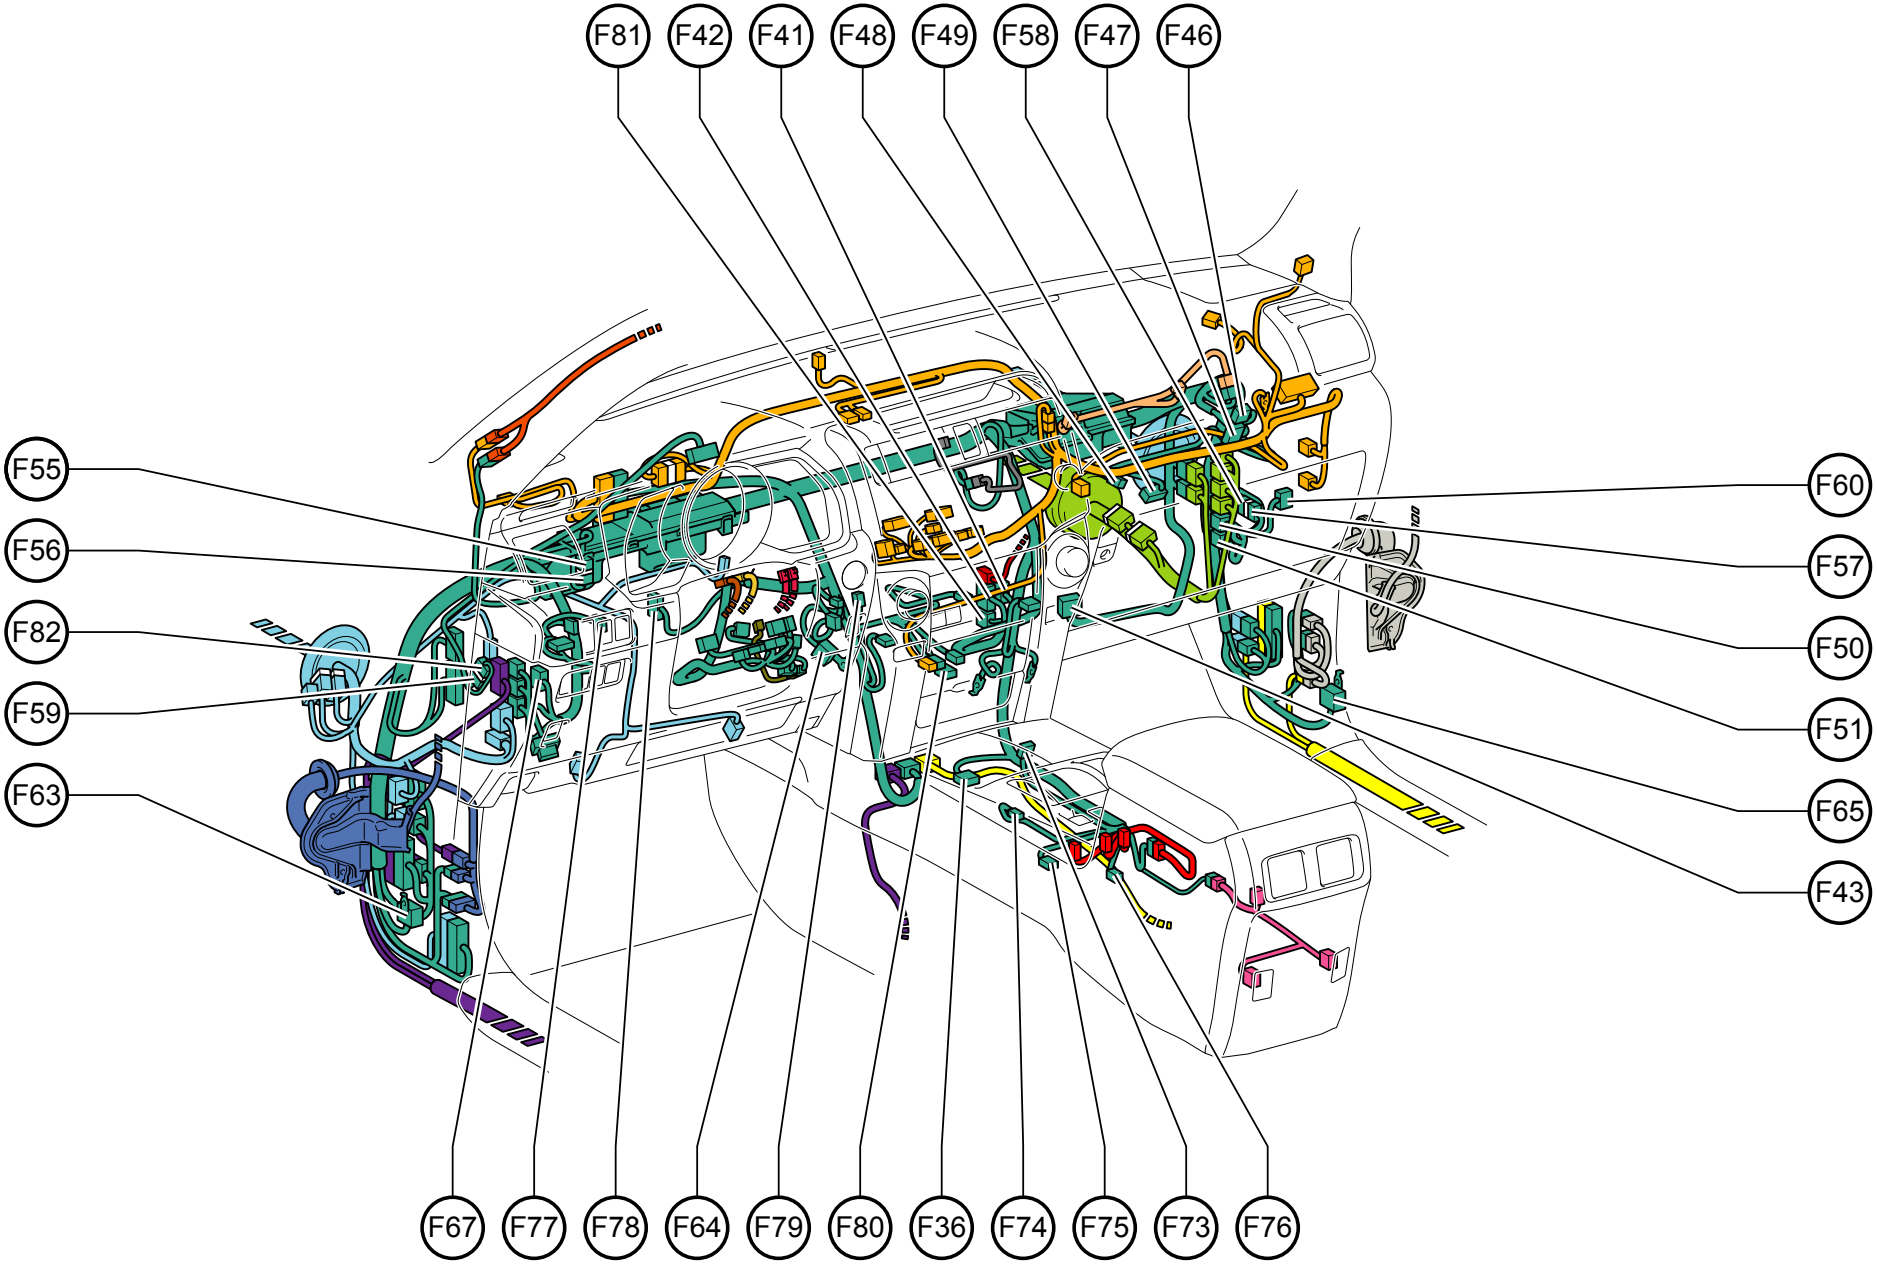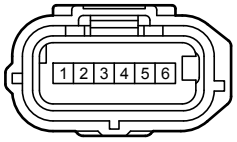


F 41
White

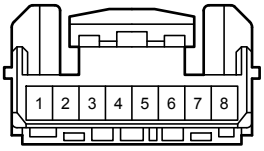


F 42
White

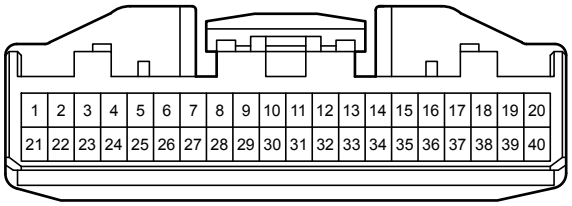


F 43
Black

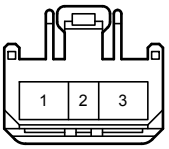


F 46
Black

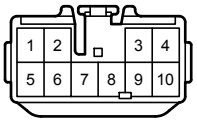


F 47
Black

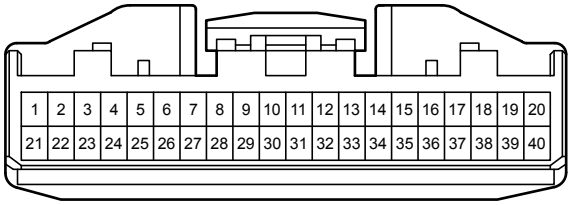


F 48
White




F 49
Black




F 50
White

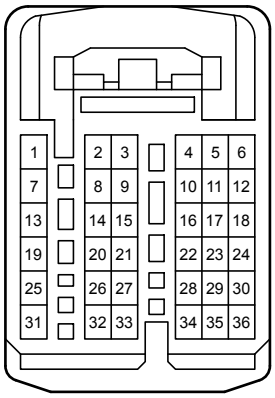


F 51
White

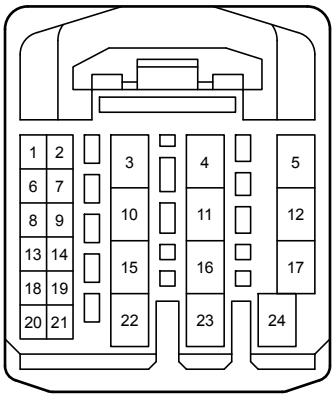


F 55
Gray

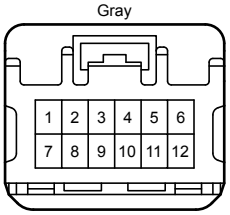


F 56
Gray

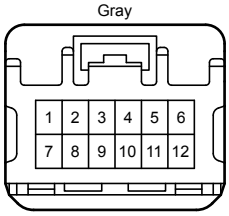


F 57
Black

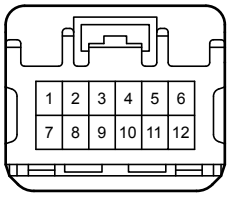


F 58
Black

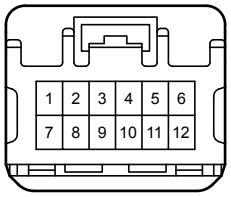


F 59
Gray

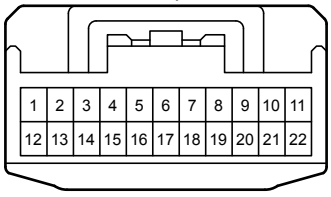


F 60
Gray

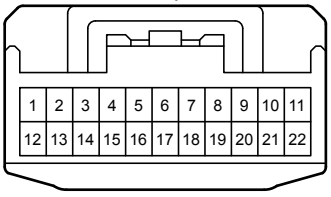


F 63
White

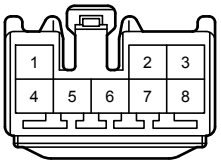


F 64
White

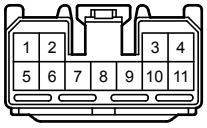


F 65
White

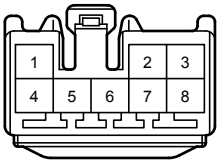

F 67
Black




F 73
Black

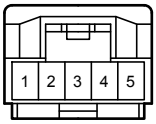


F 74
White




F 75
White

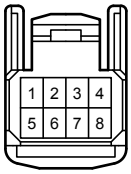


F 76
Black

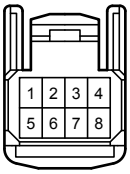


F 77
Black

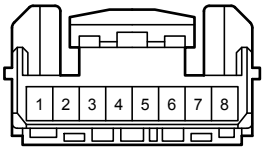


F 78
White

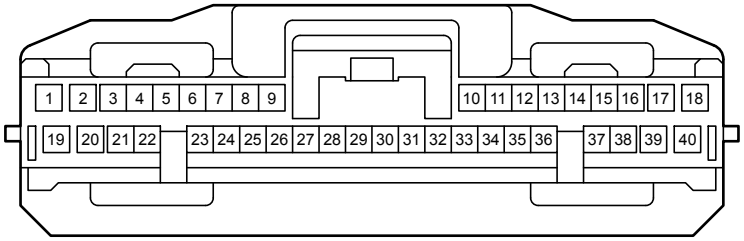


F 79
Black



F 80
Black

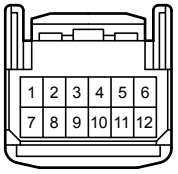

F 81
White

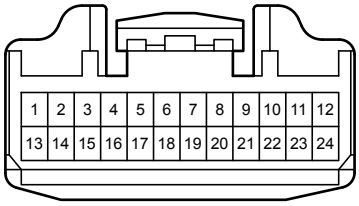

F 82
White

