



(ACC)
7. 5A
ACC
17 2B
P
50 4A
87 4A
P
46 FG1
P
(BAT)
30A
AMP
2
1
L
12 FA1
SB
10 FG1
G5(A), G6(B), G7(C), G8(D), G9(E)
Radio Receiver Assembly
B
ACC
SPD
GND
4 B
SB
3 B
GR
22 A
12 B
G13(A), G14(B)
Junction
Connector
P
3 E
SB
3 A
8 B
G13(A), G14(B)
Junction
Connector
SB
48 FG1
SB
7 B
BR
A6(A)
Skid Control ECU with Actuator Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
18 A
4 A
3 A
17 A
20 A
6 A
5 A
19 A
12 A
R
G
B
W
R
G
B
W
G–W
Speed Sensors
11 FA2
F14
Combination Meter Assembly
SI
+S
29
28
G
SB
20 4B
90 4A
G1


* 1 : w/ Bluetooth
* 2 : w/ Steering Pad Switch Assembly

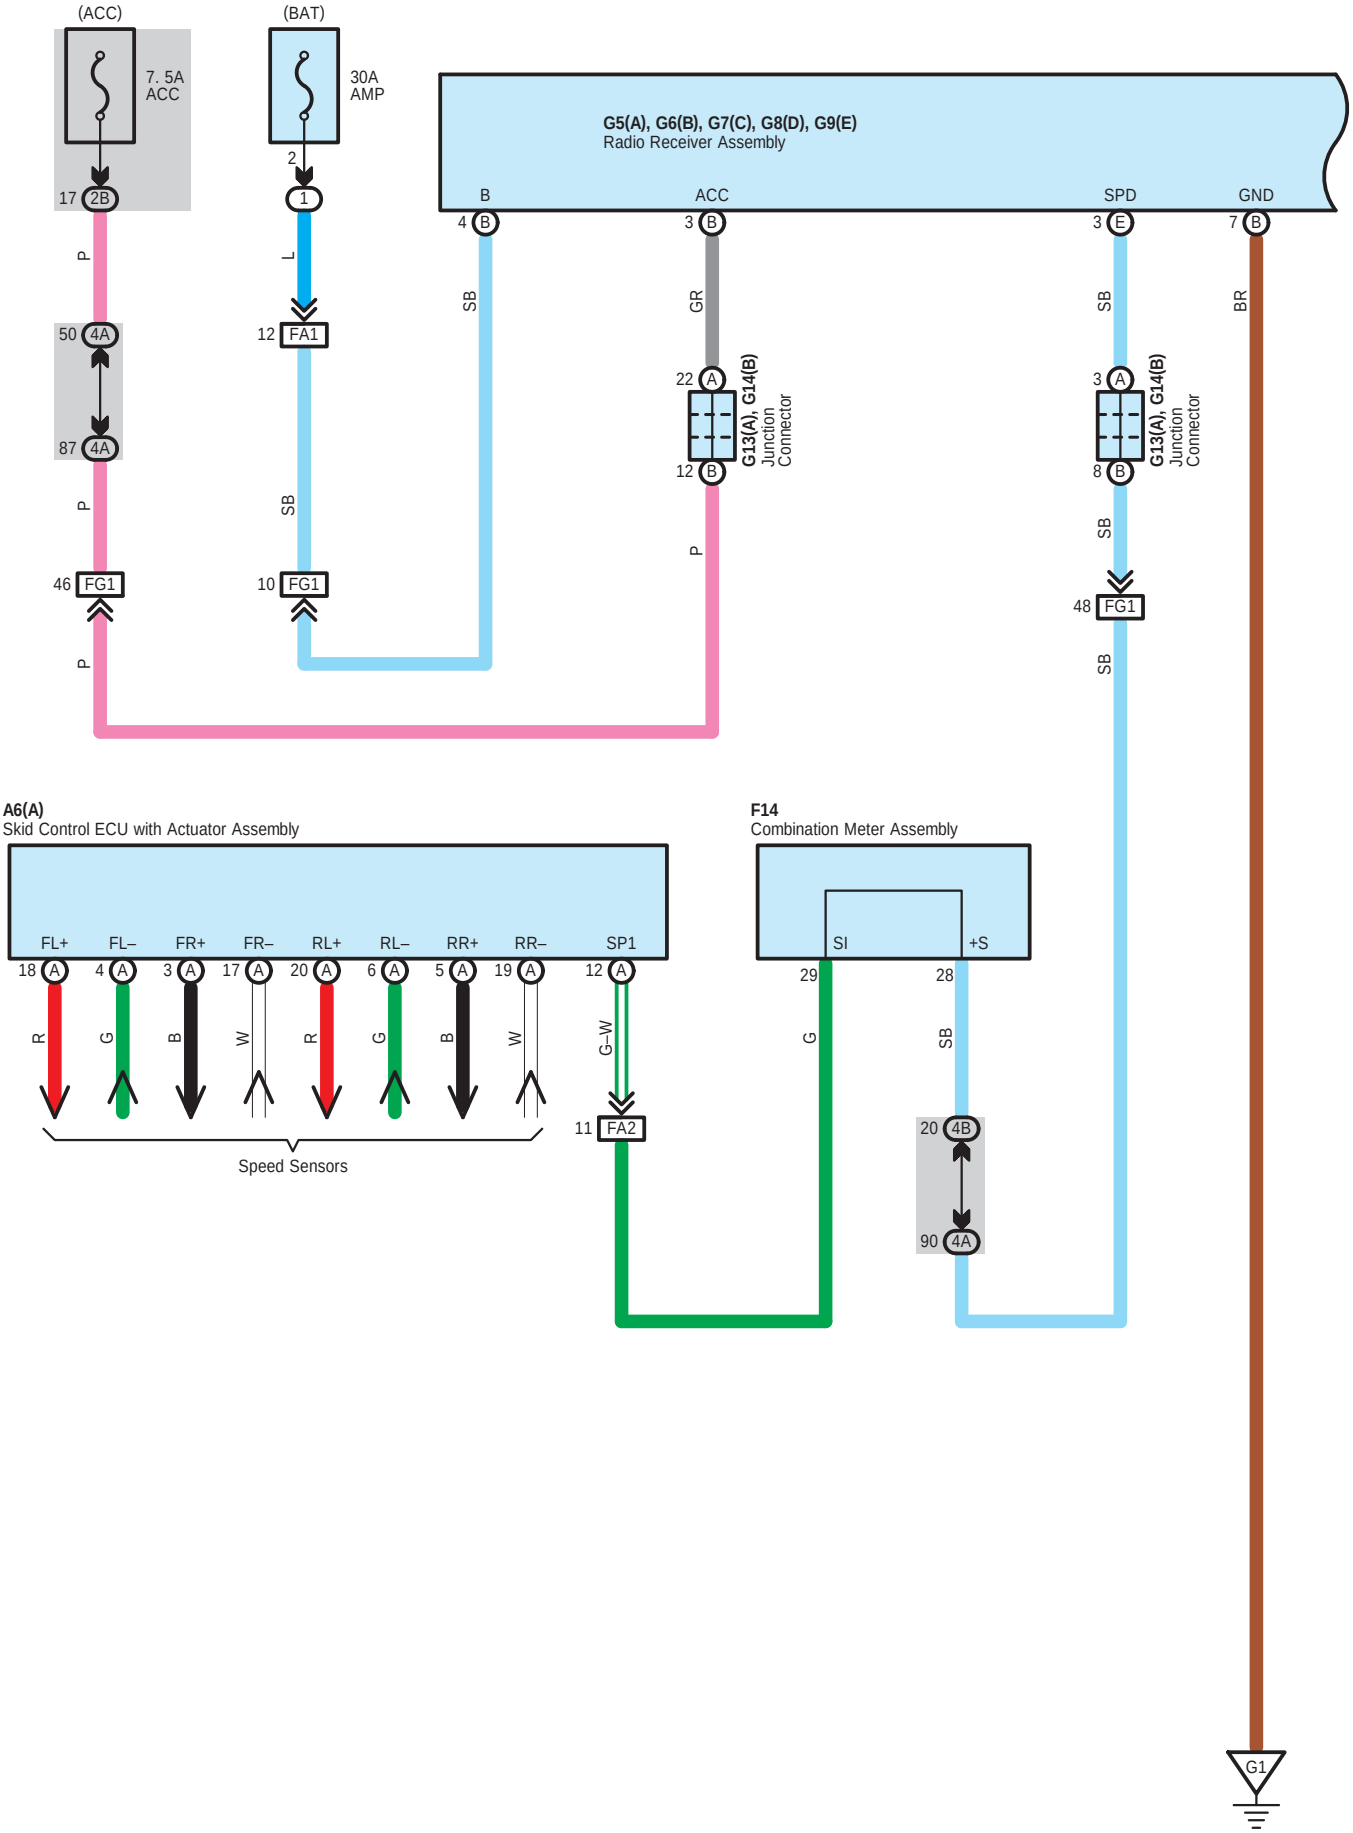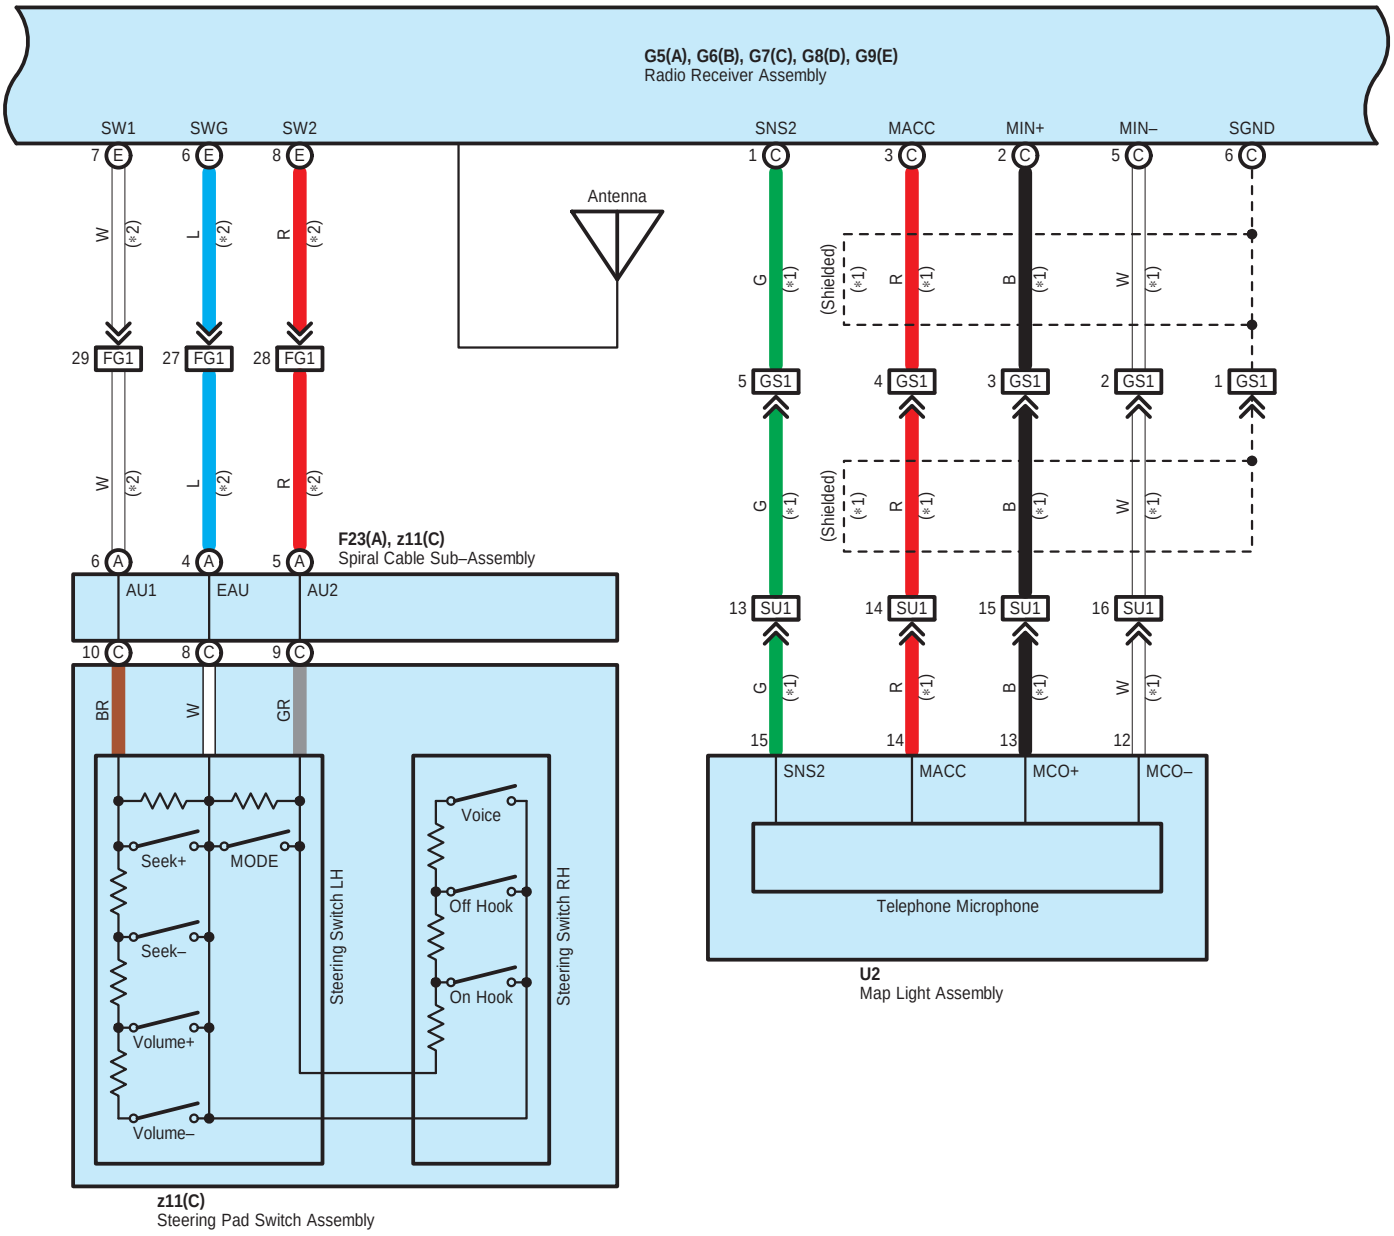


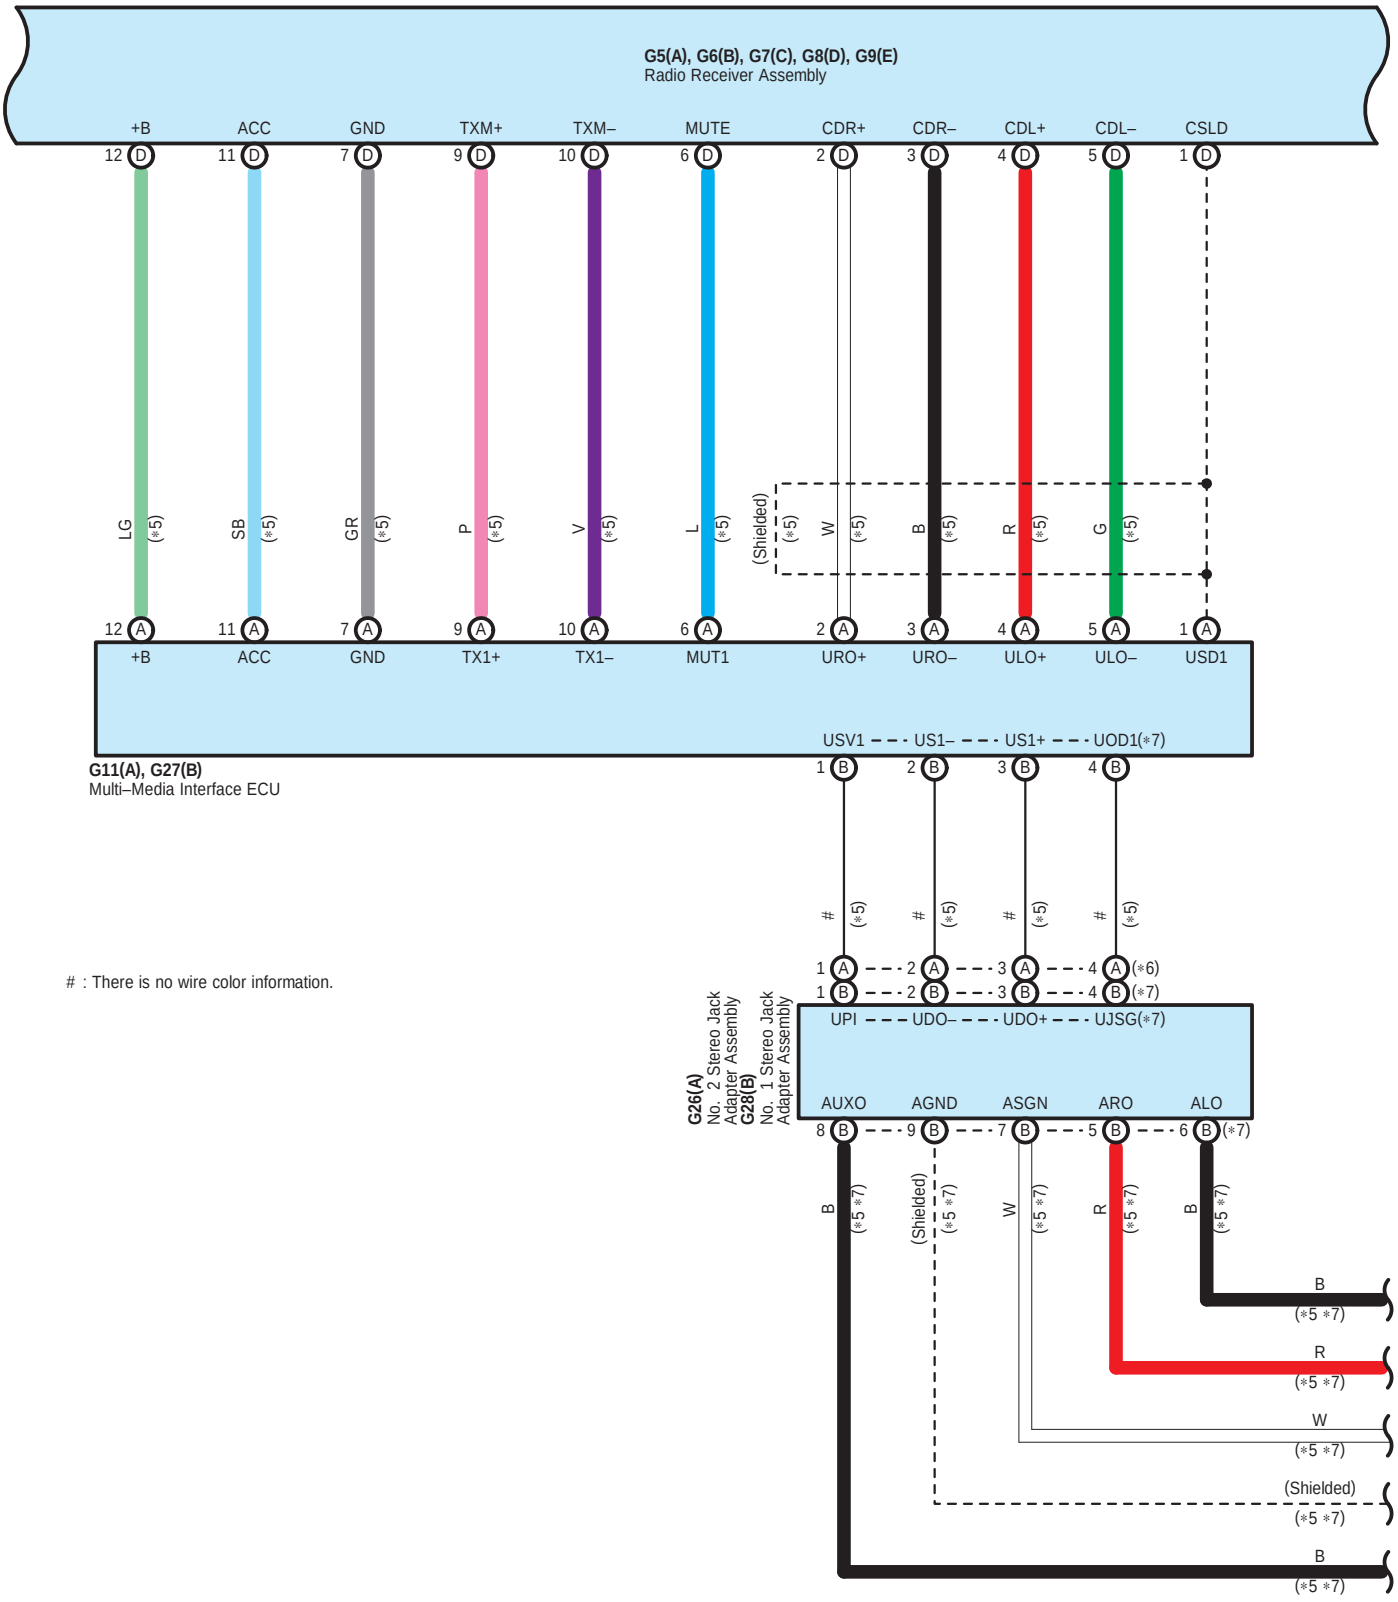


: There is no wire color information.


∗ 5 : w/ Multi–Media Interface ECU
∗ 6 : Before Aug. 2012 Production
∗ 7 : From Aug. 2012 Production

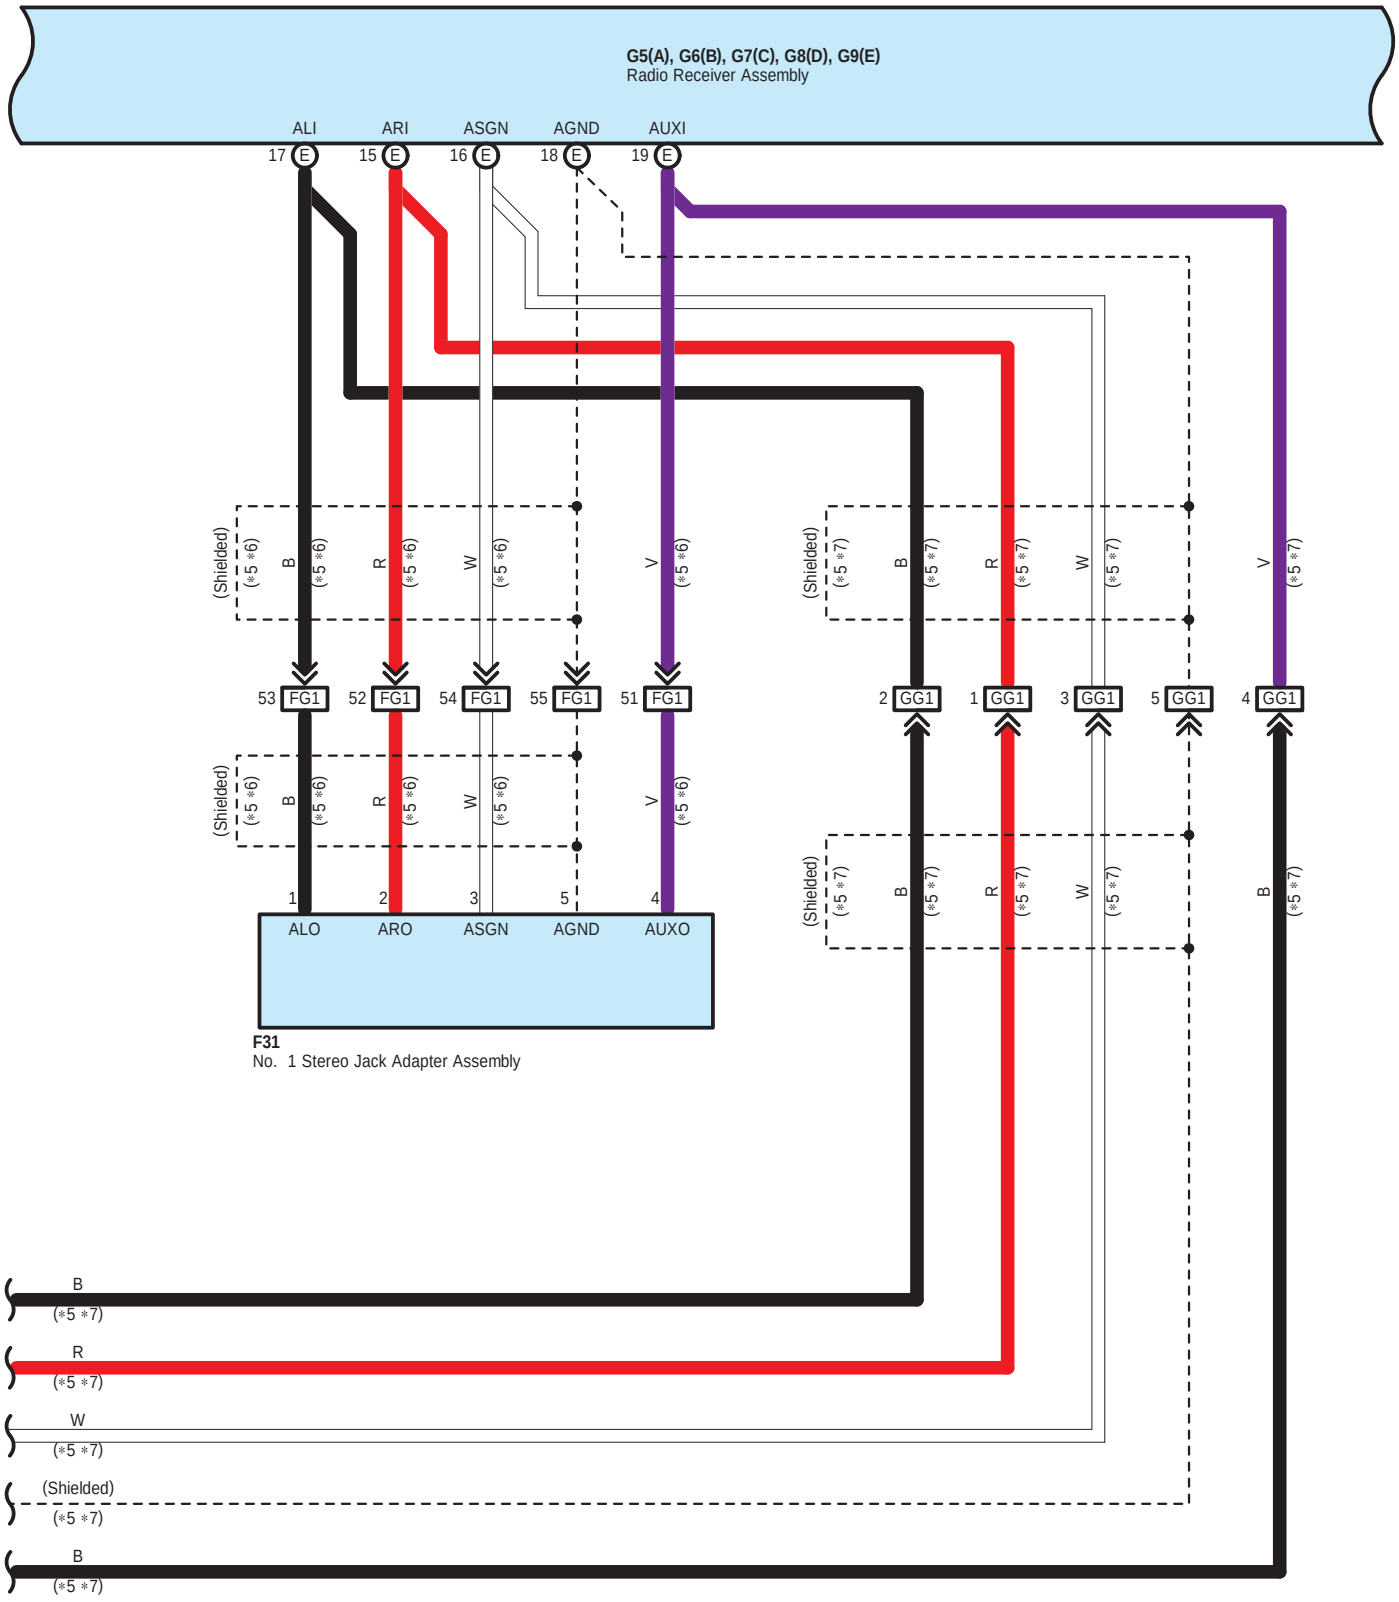

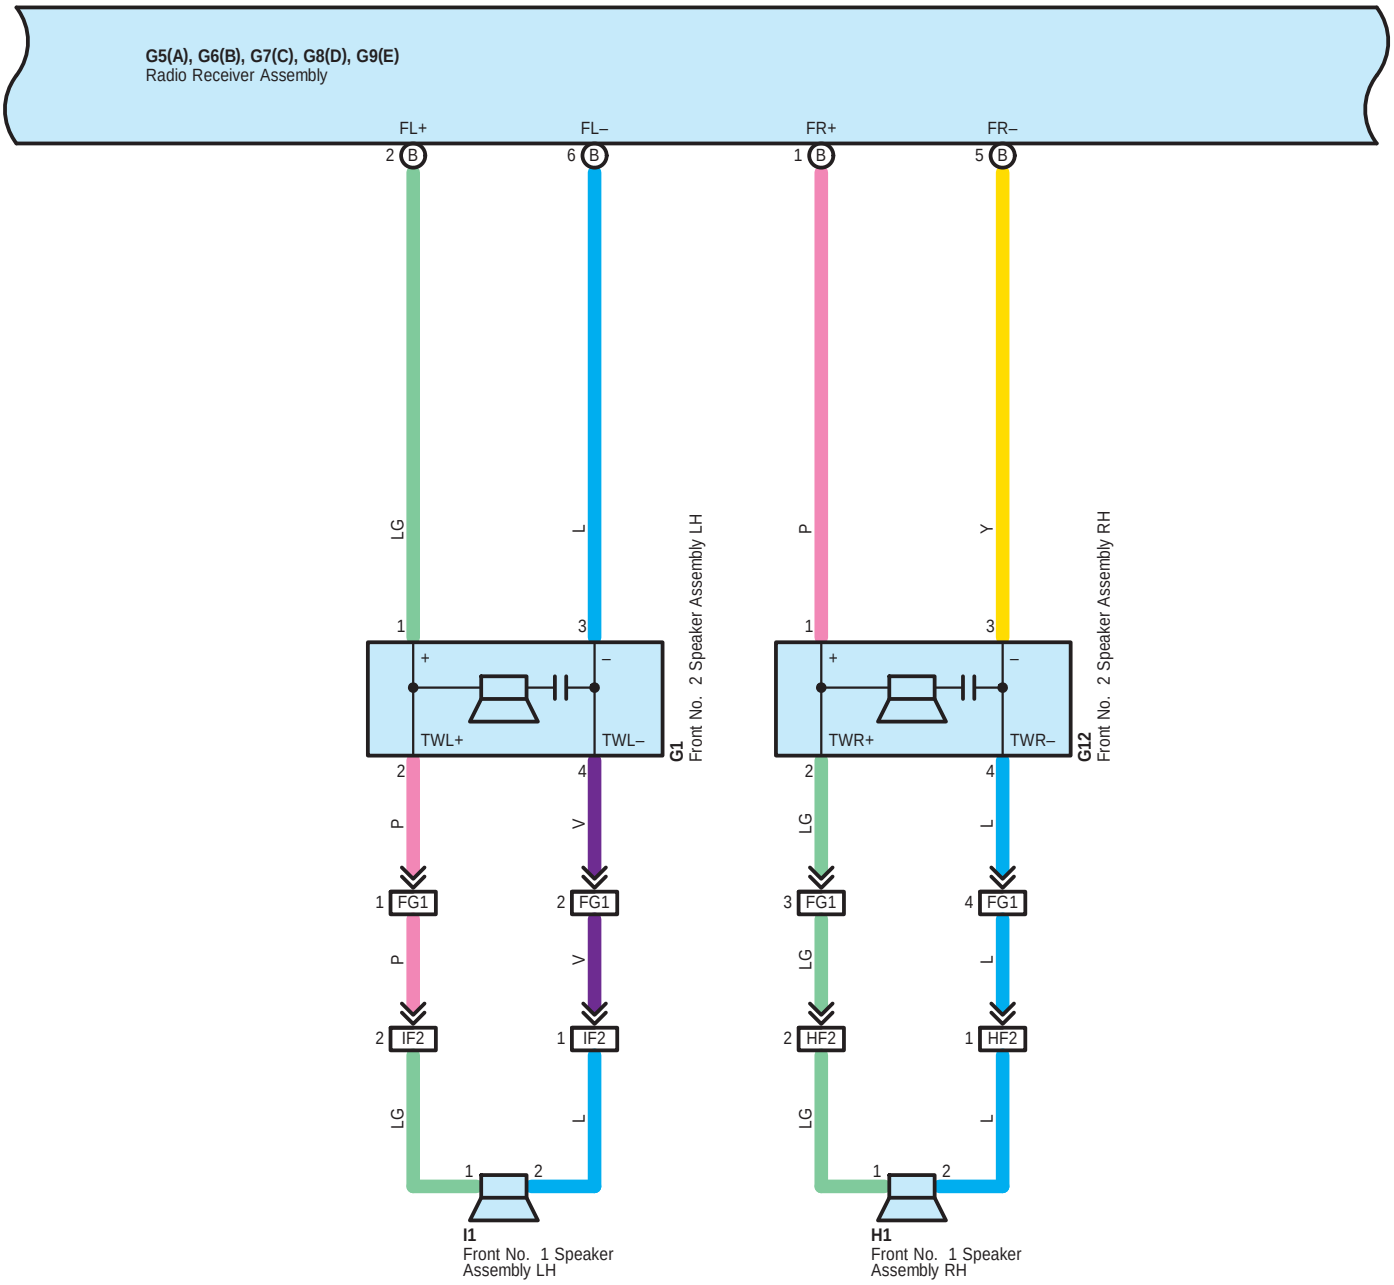

G5(A), G6(B), G7(C), G8(D), G9(E)
Radio Receiver Assembly
FL+
FL–
FR+
FR–
2 B
6 B
1 B
5 B
LG
L
P
Y
1
3
+
–
TWL+
TWL–
TWR+
TWR–
G1
Front No. 2 Speaker Assembly LH
G12
Front No. 2 Speaker Assembly RH
2
4
P
V
LG
L
1 FG1
2 FG1
3 FG1
4 FG1
2 IF2
1 IF2
2 HF2
1 HF2
I1
Front No. 1 Speaker Assembly LH
H1
Front No. 1 Speaker Assembly RH

* 1 : w/ Bluetooth

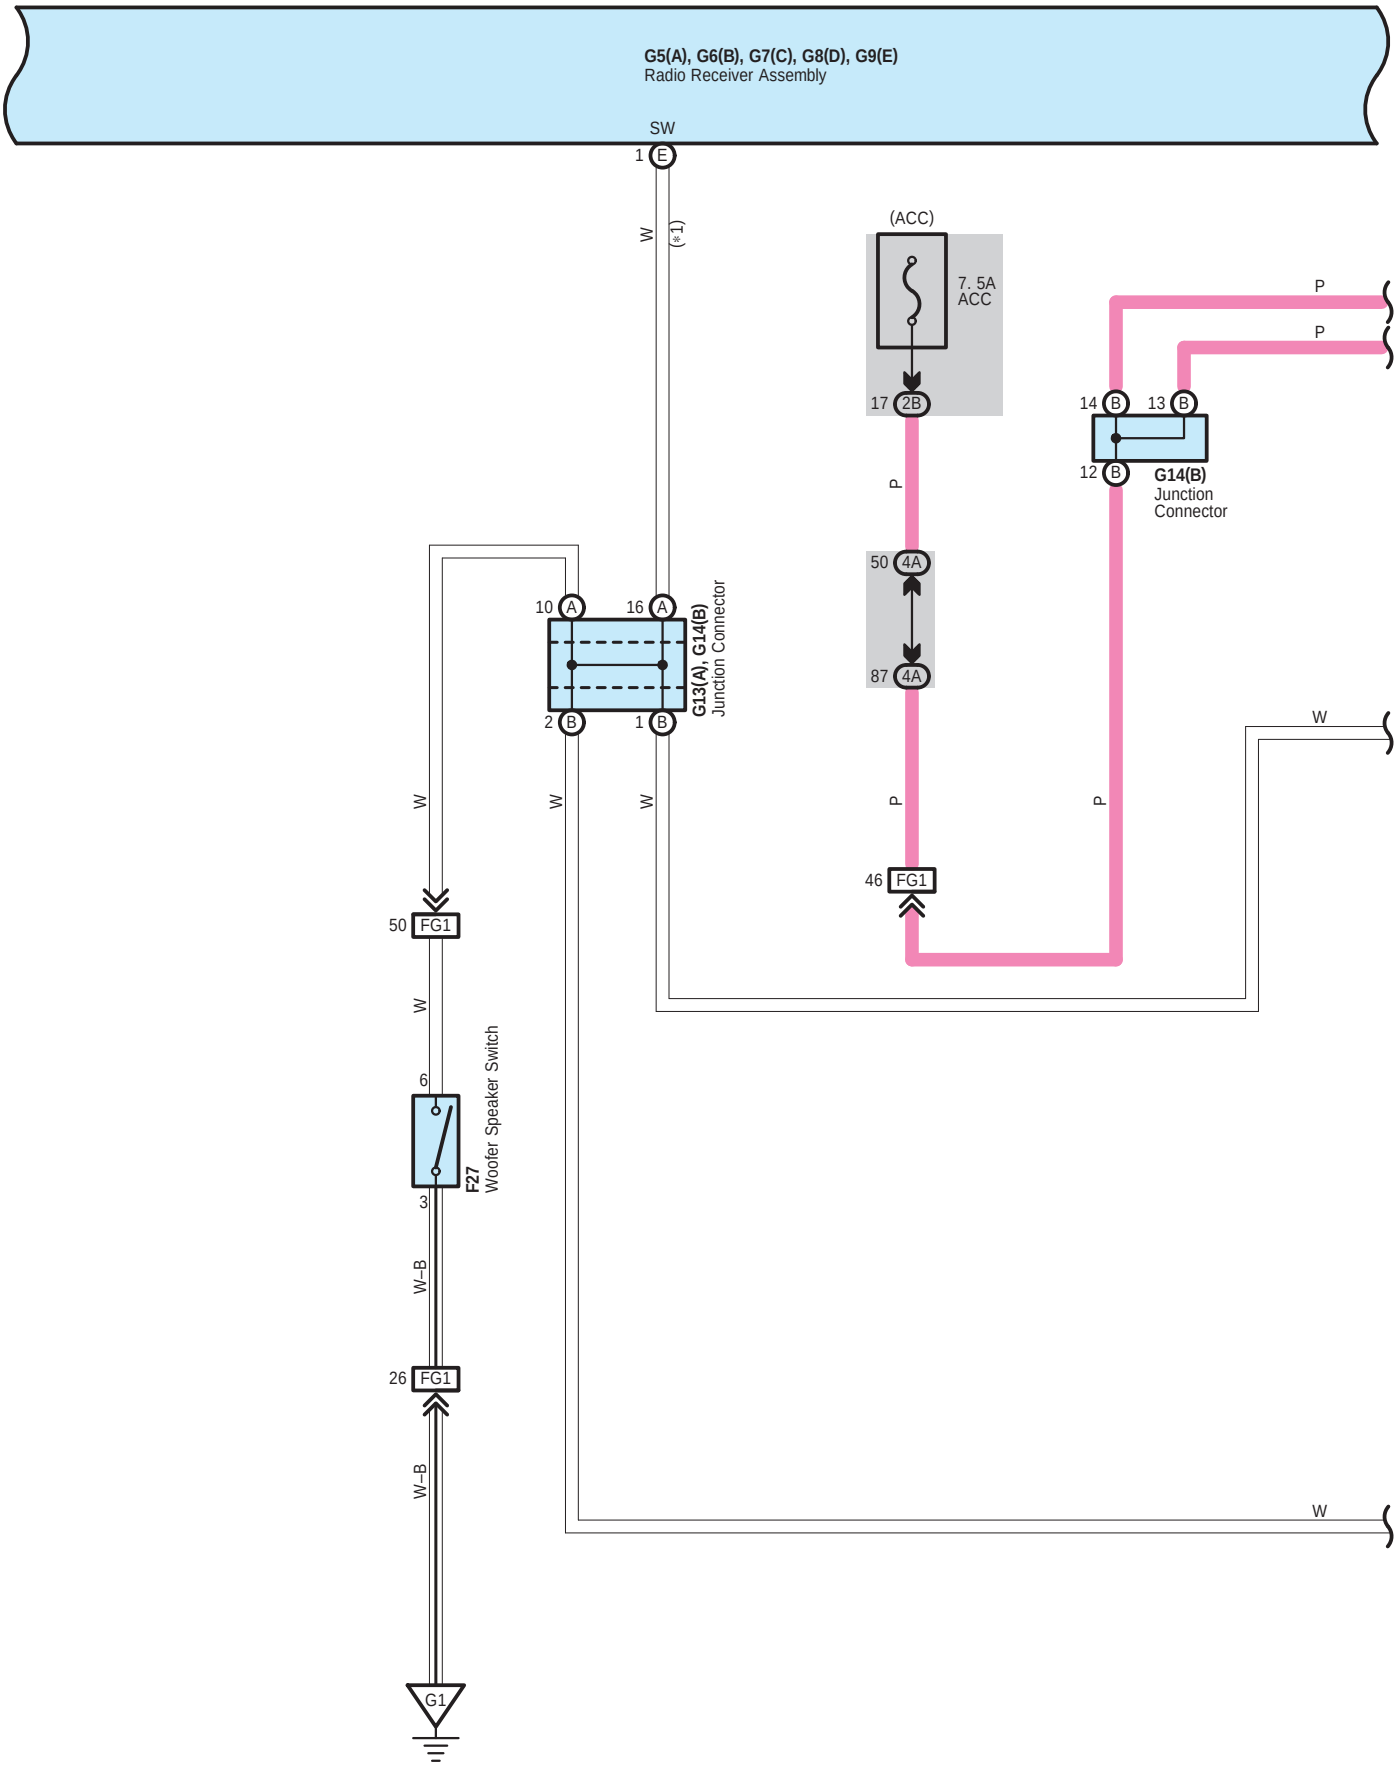


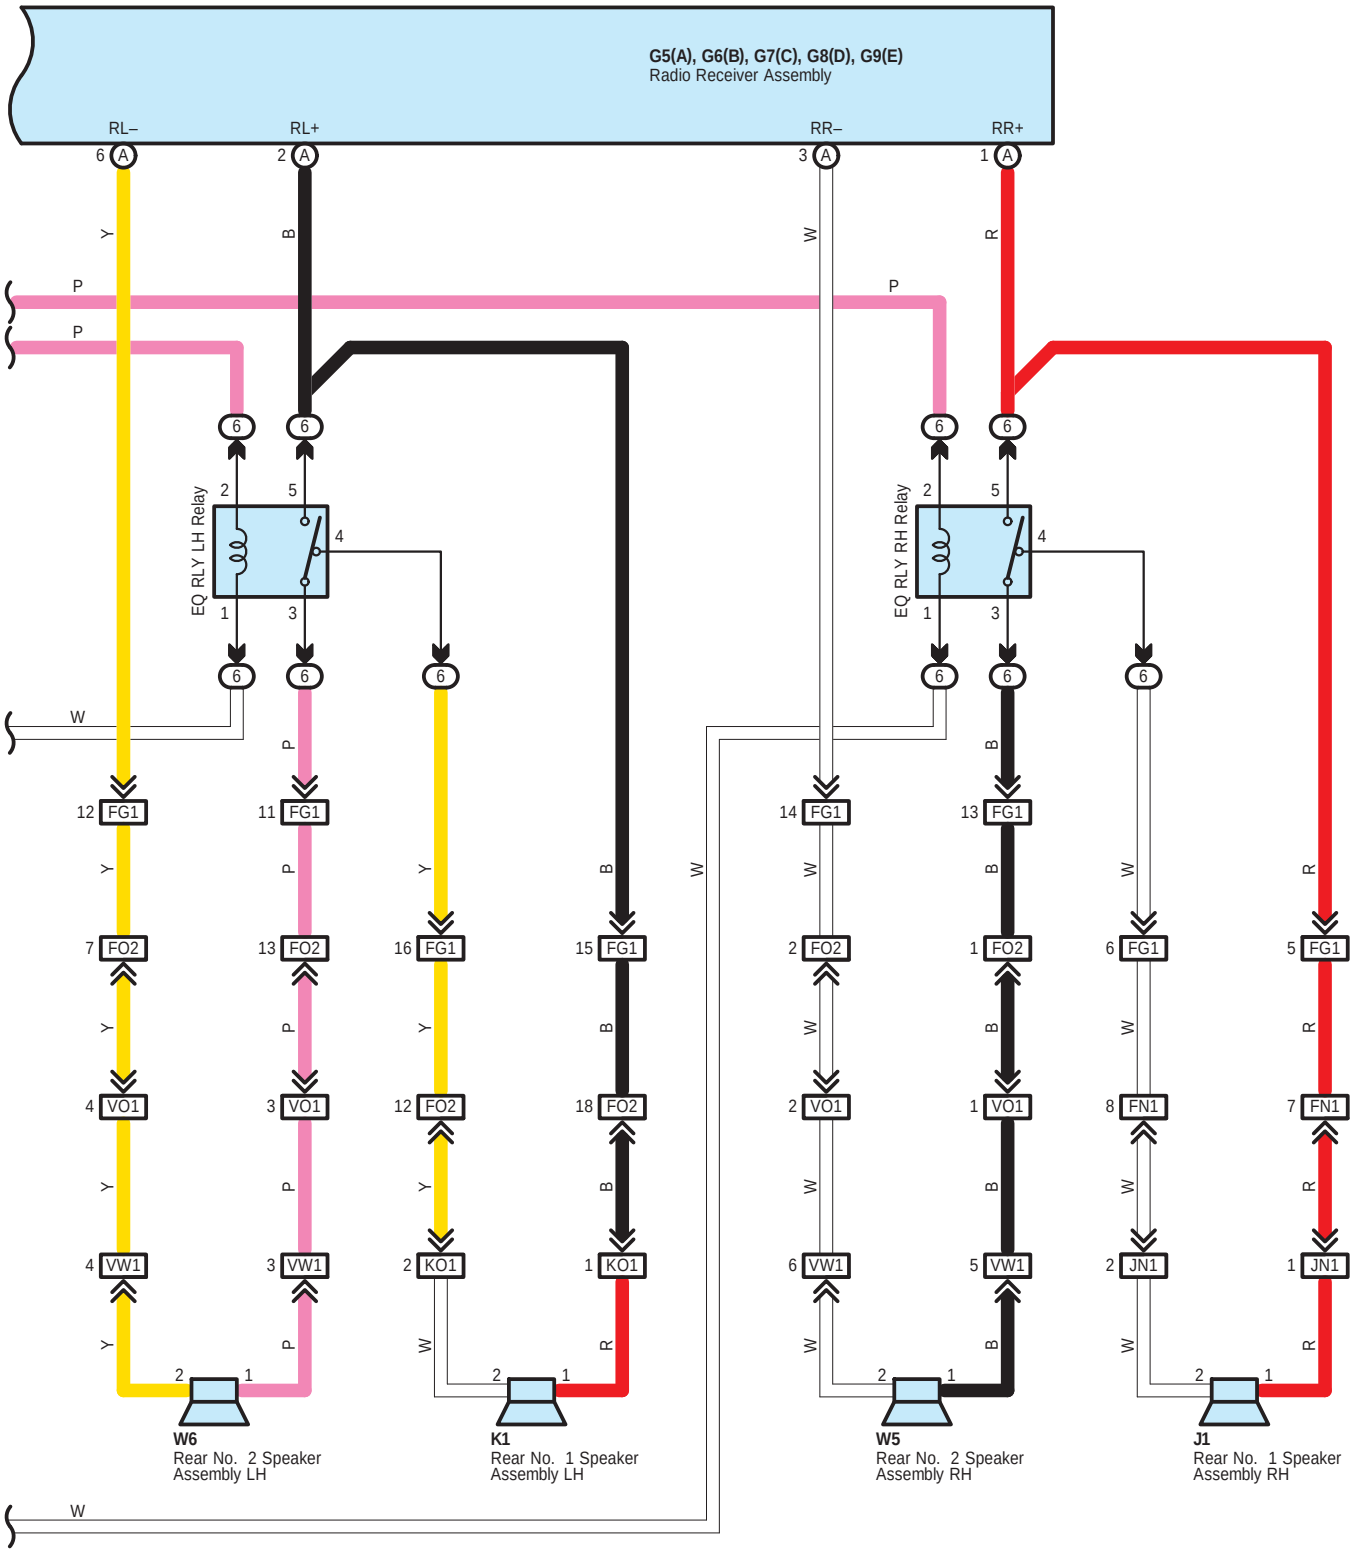
G5(A), G6(B), G7(C), G8(D), G9(E)
Radio Receiver Assembly
RL–
RL+
RR–
RR+
EQ RLY LH Relay
EQ RLY RH Relay
W6
Rear No. 2 Speaker Assembly LH
K1
Rear No. 1 Speaker Assembly LH
W5
Rear No. 2 Speaker Assembly RH
J1
Rear No. 1 Speaker Assembly RH

A 6
Black

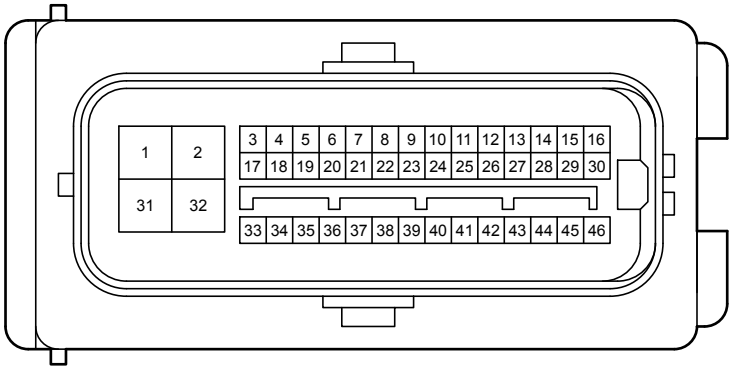


F 14
White

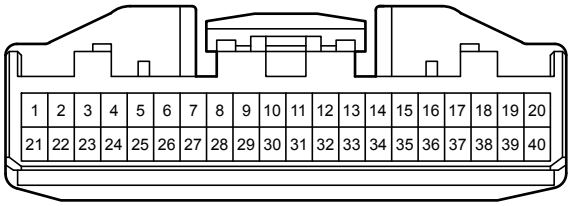


F 23
Black




F 27
Black

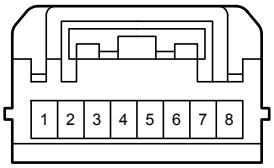

F 31
White

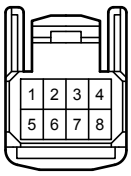


G 1
White




G 5
White




G 6
White

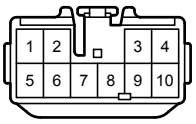


G 7
White

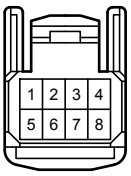


G 8
White

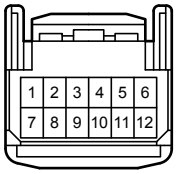


G 9
White

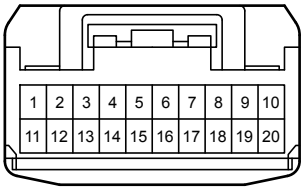


G 11
White

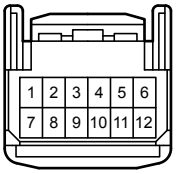


G 12
White




G 13
Black

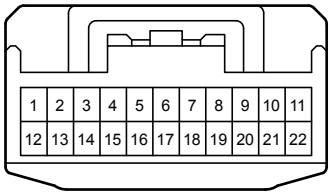


G 14
Black

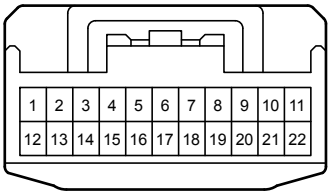


G 26
Black

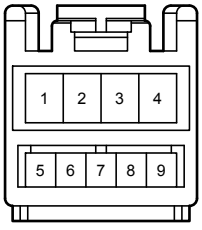

G 27
Brown

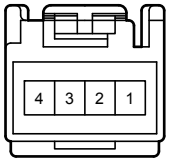

G 28
Black

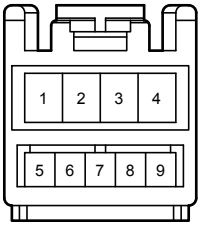

H 1
White



I 1
White




J 1
White



K 1
White



U 2
White

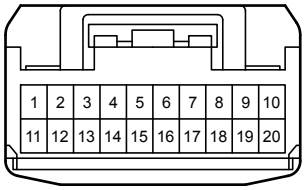


W 5
Black




W 6
Black




z 11
White

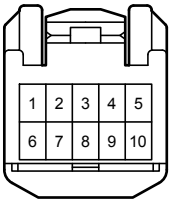


2B
White

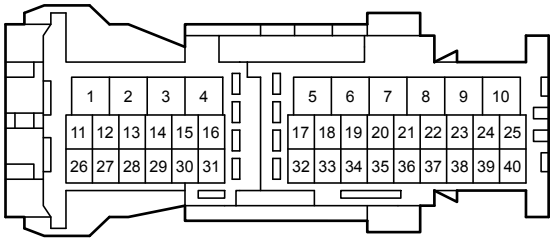

4A
White

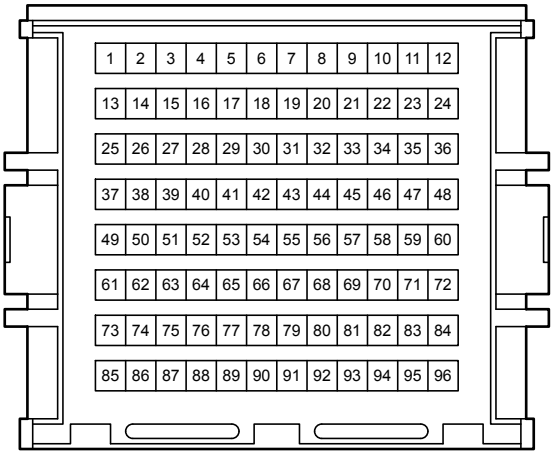


4B
White

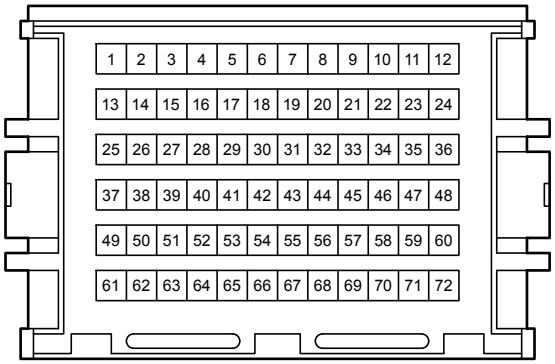


FA1

White

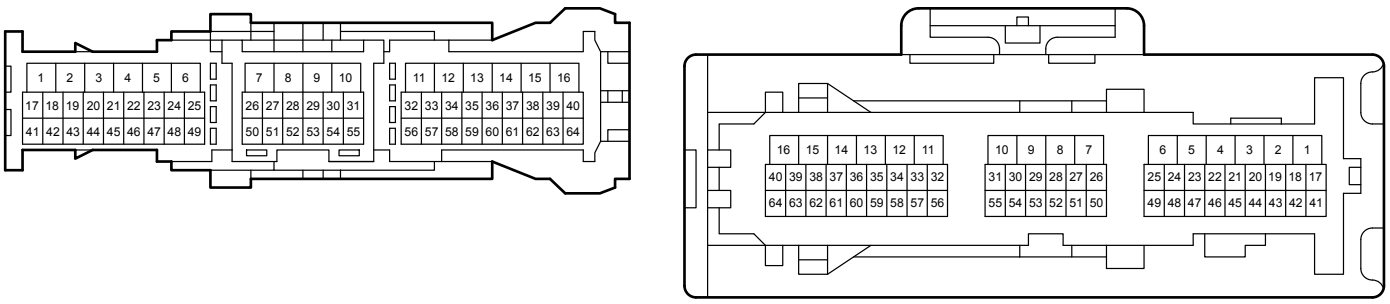


FA2

White

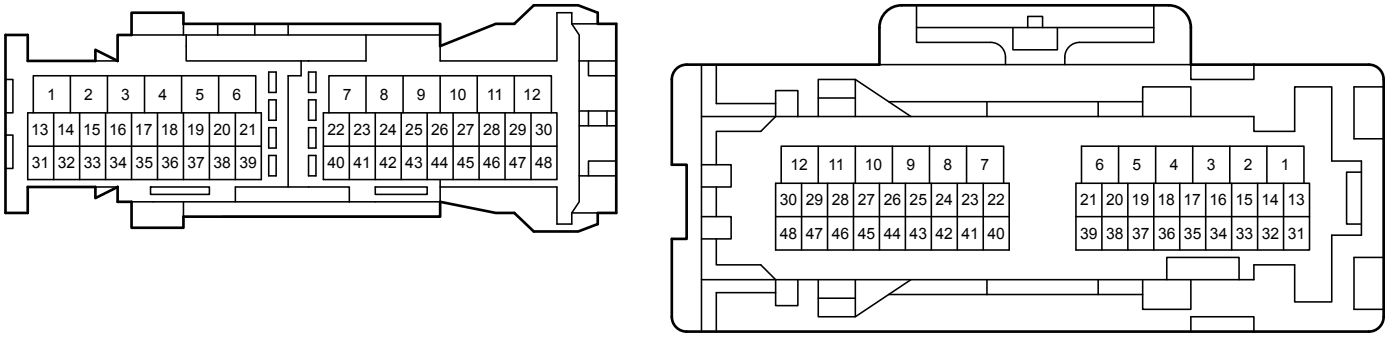


FG1

White

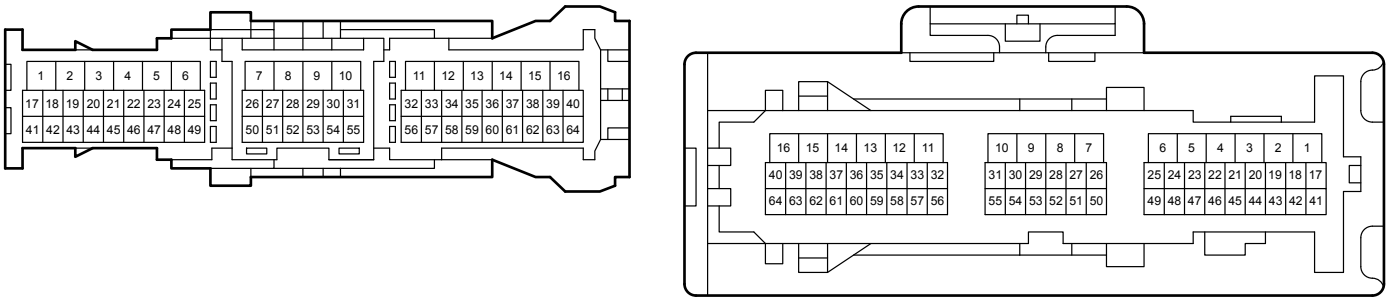


FN1


White

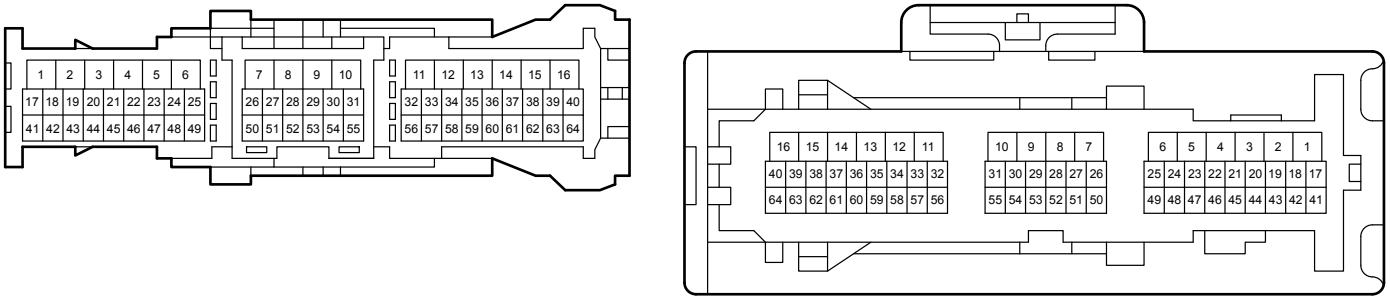


FO2
Gray

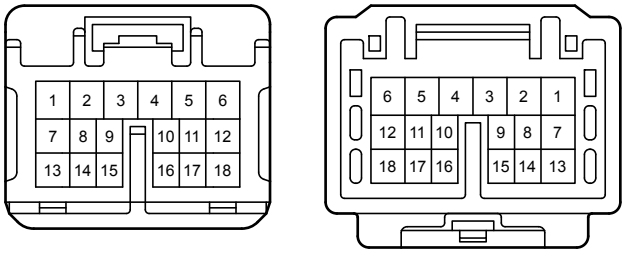


GG1
White

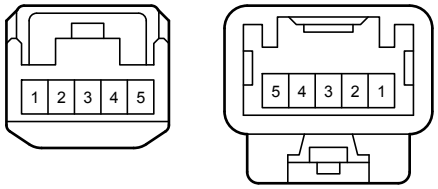


GS1
Gray

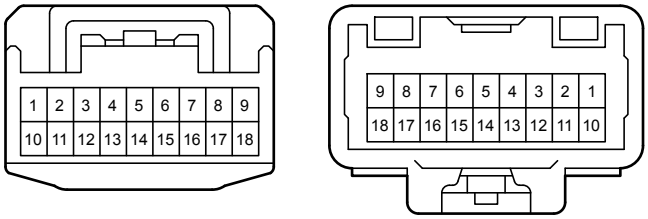


HF2
Black

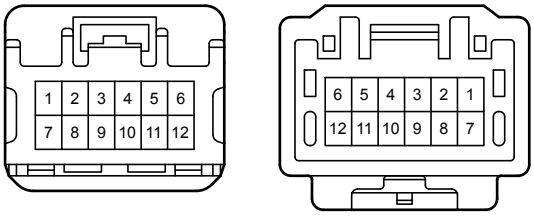


IF2
Black

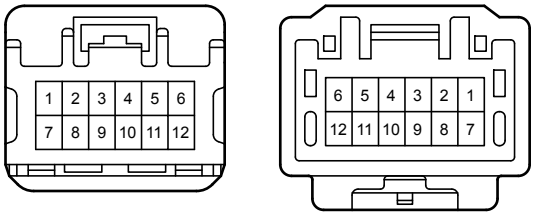


JN1
White

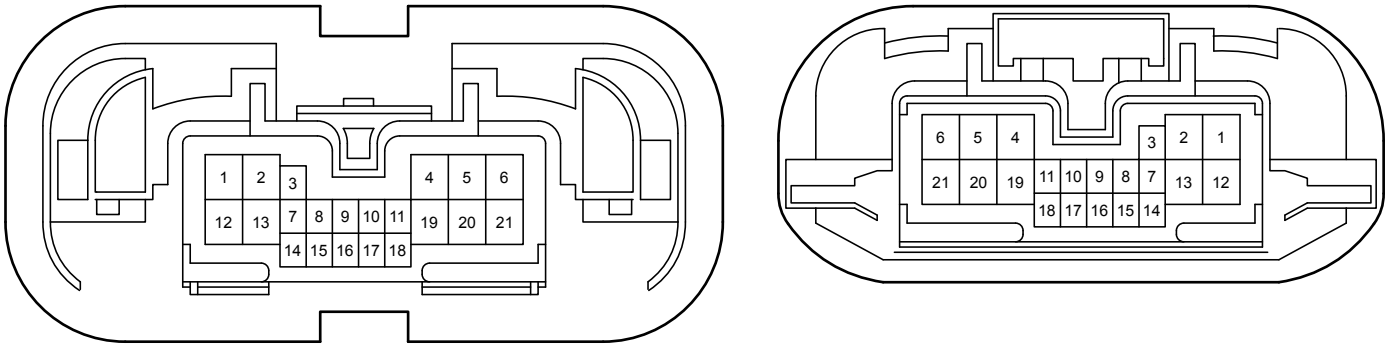


KO1
White

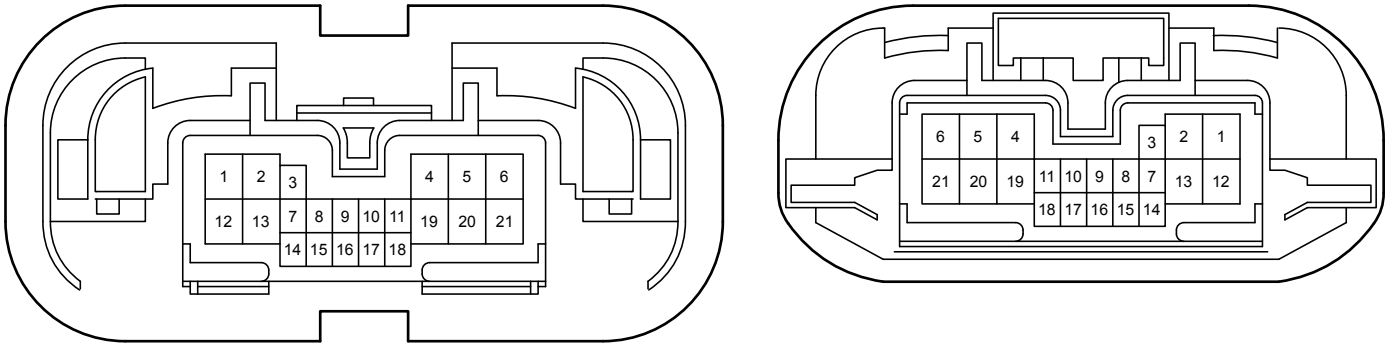

SU1
White

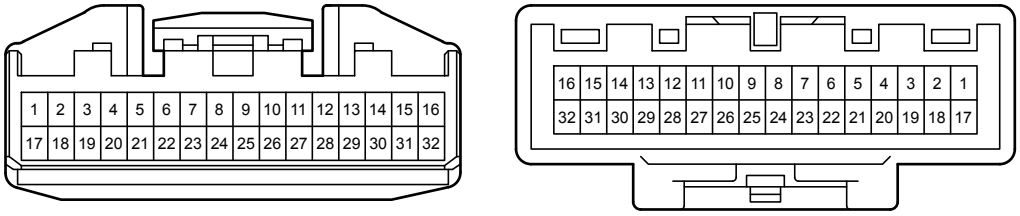

VO1
Blue

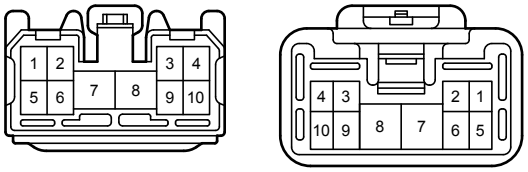

VW1
White

