




(IG)
(ACC)
(BAT)
10A
ECU–IG
NO. 2
7. 5A
ACC
20A
RAD
NO. 1
G29(C), G30(D), G32(E), G33(F), G35(A), G36(B)
Radio & Display Receiver Assembly
B
ACC
IG
GND
39 2B
17 2B
2
1
4 B
3 B
1 C
7 B
L
P
L
SB
GR
L
BR
66 4A
50 4A
14 FA1
91 4A
87 4A
22 A
13 A
G13(A), G14(B)
Junction
Connector
L
P
SB
47 FG1
46 FG1
9 FG1
12 B
22 B
L
P
SB
P
L
G1



G29(C), G30(D), G32(E), G33(F), G35(A), G36(B)
Radio & Display Receiver Assembly
PKB
REV
15 C
2 C
LG
R
25 FG1
49 FG1
(IG)
10A
ECU–IG
NO. 1
31 2C
G
R
64 4A
20 4C
24 2B
17 2D
23 4C
95 4A
33 5B
57 5B
LG
R
R
G
19 BF2
35 5B
59 5B
1
A2
Parking Brake
Switch Assembly
R
6
7
B48
Junction Connector
R
G
1 B
RB
RL
R
2 B
B51(B)
Park/Neutral Position
Switch
21 BF2
G

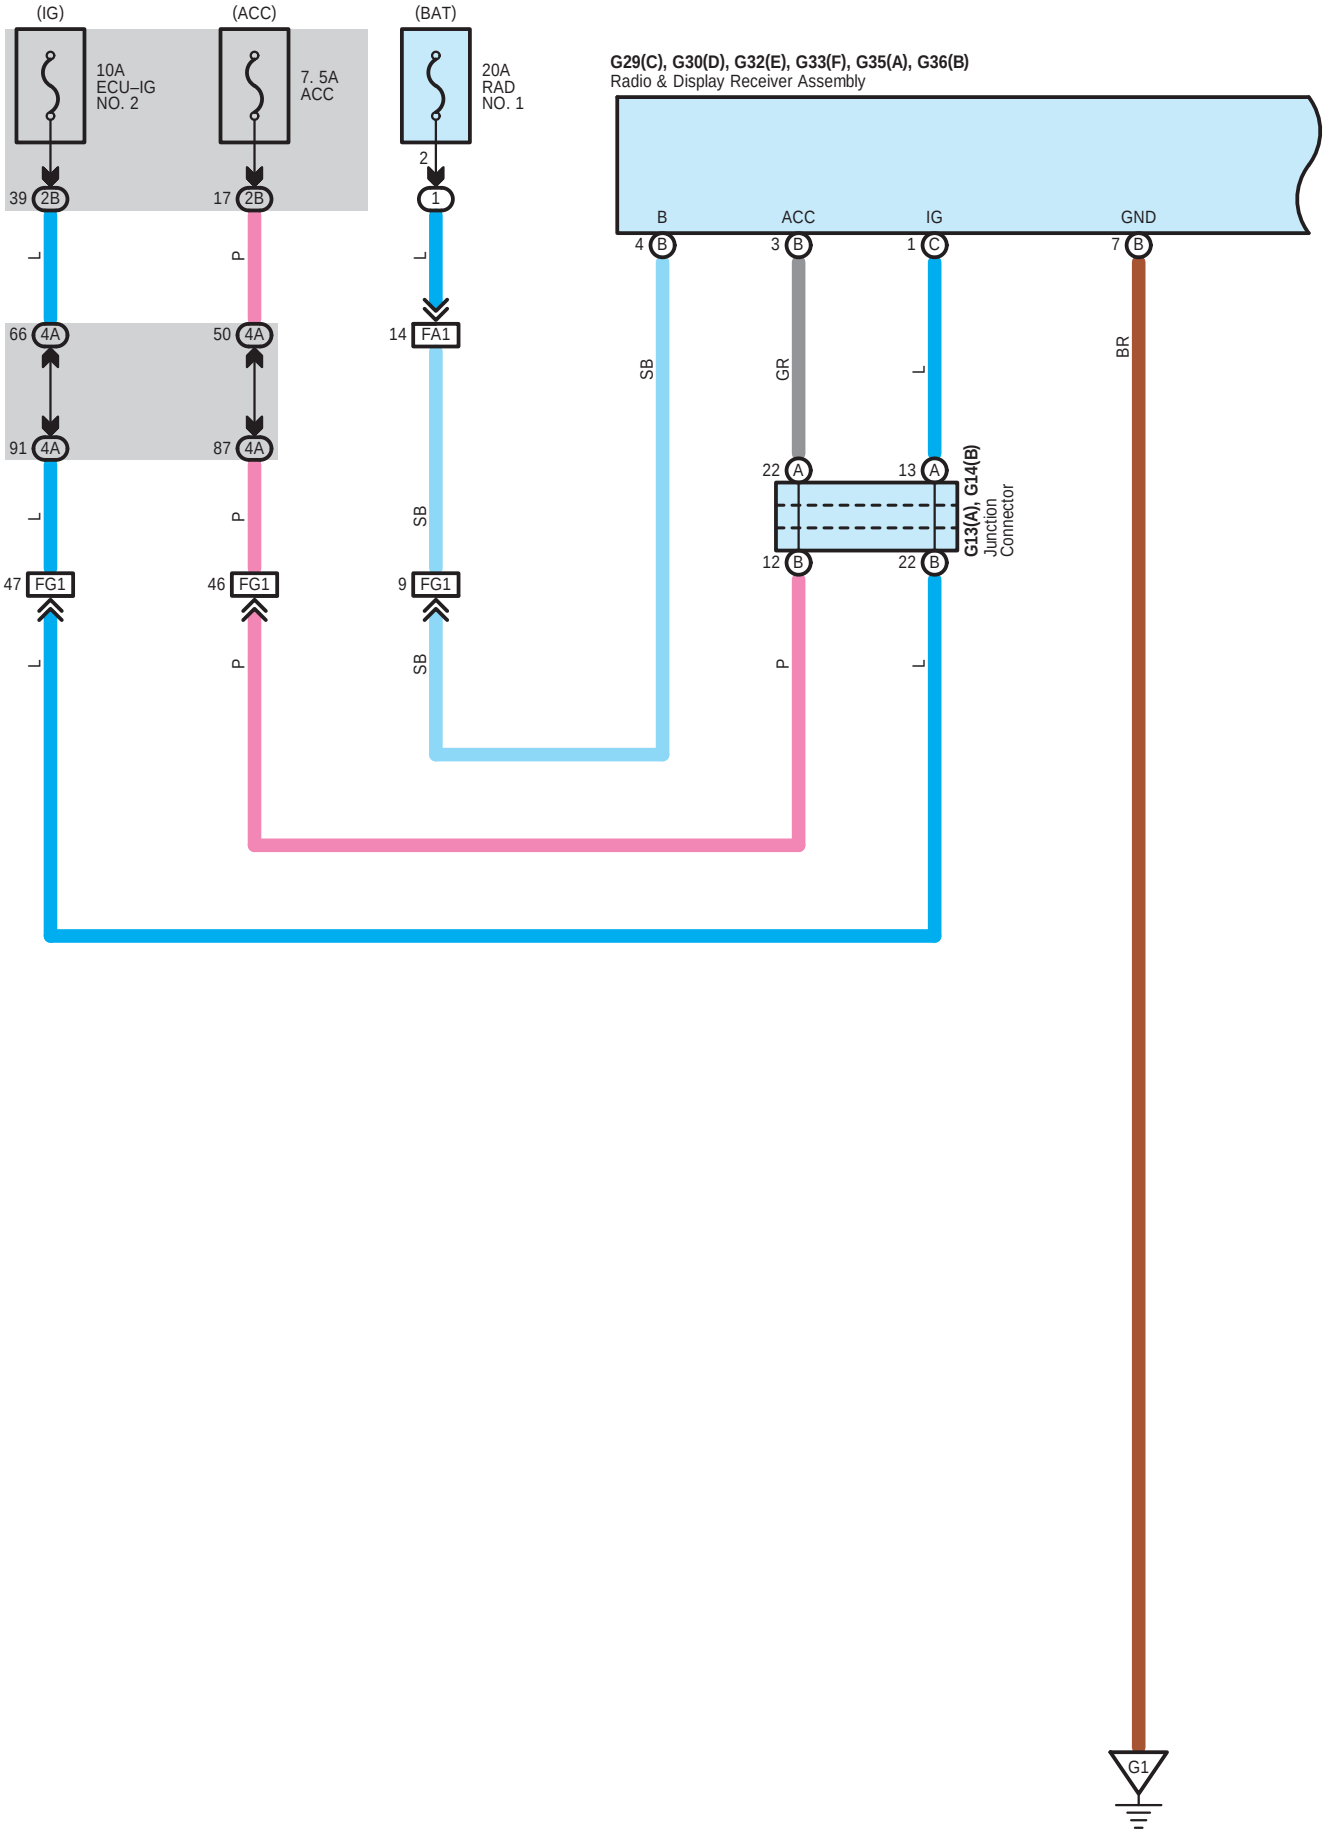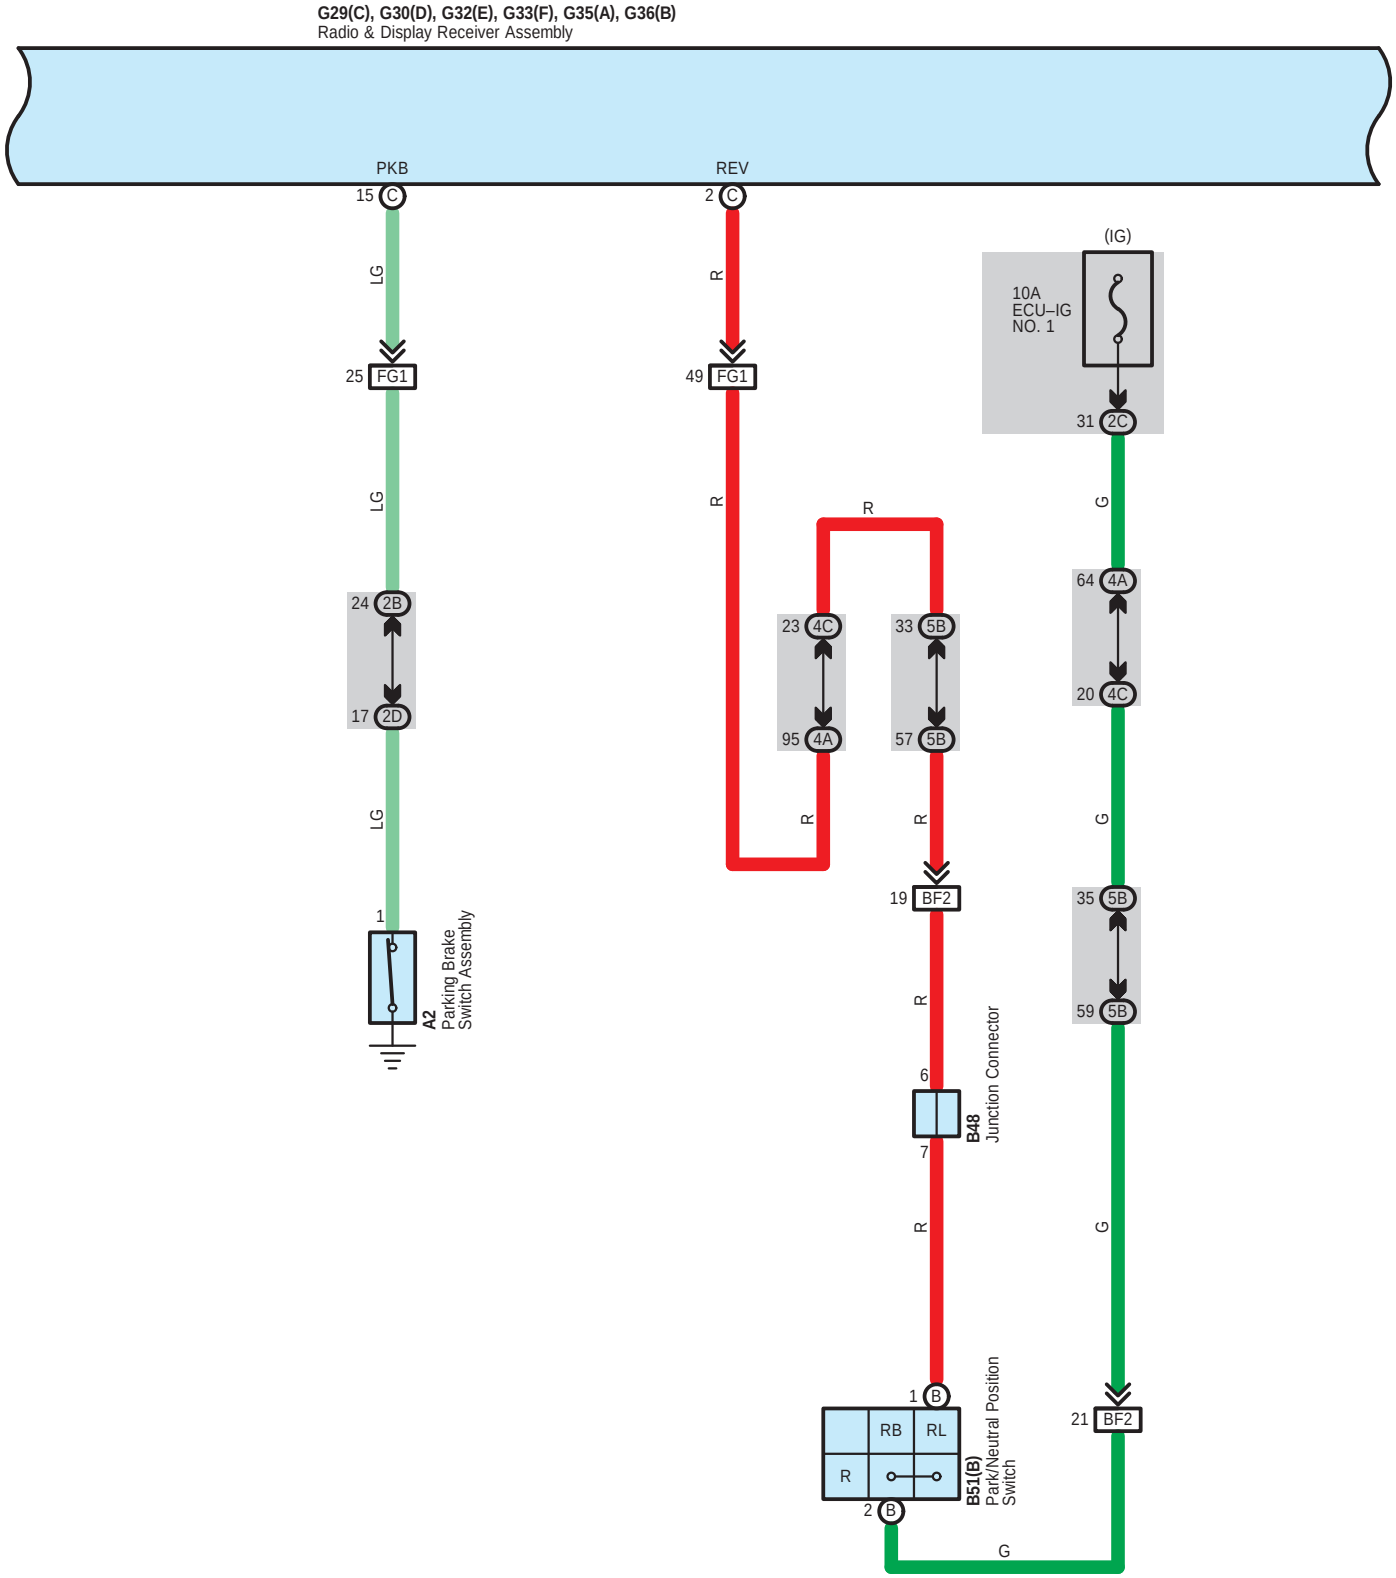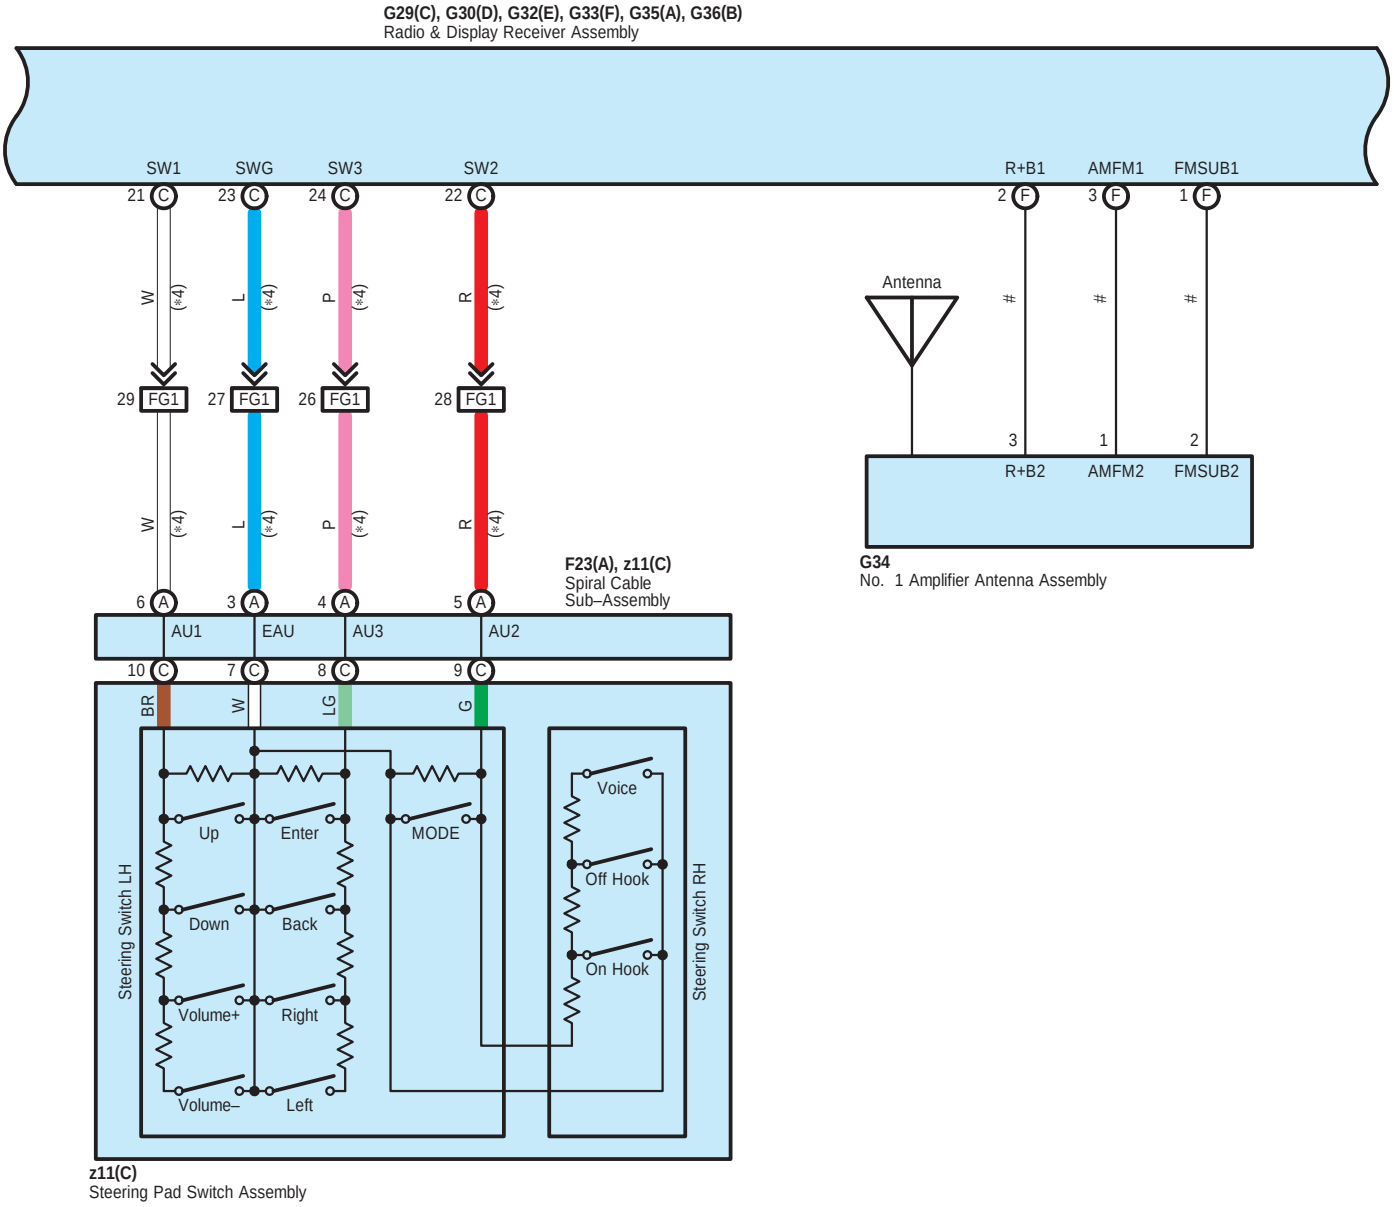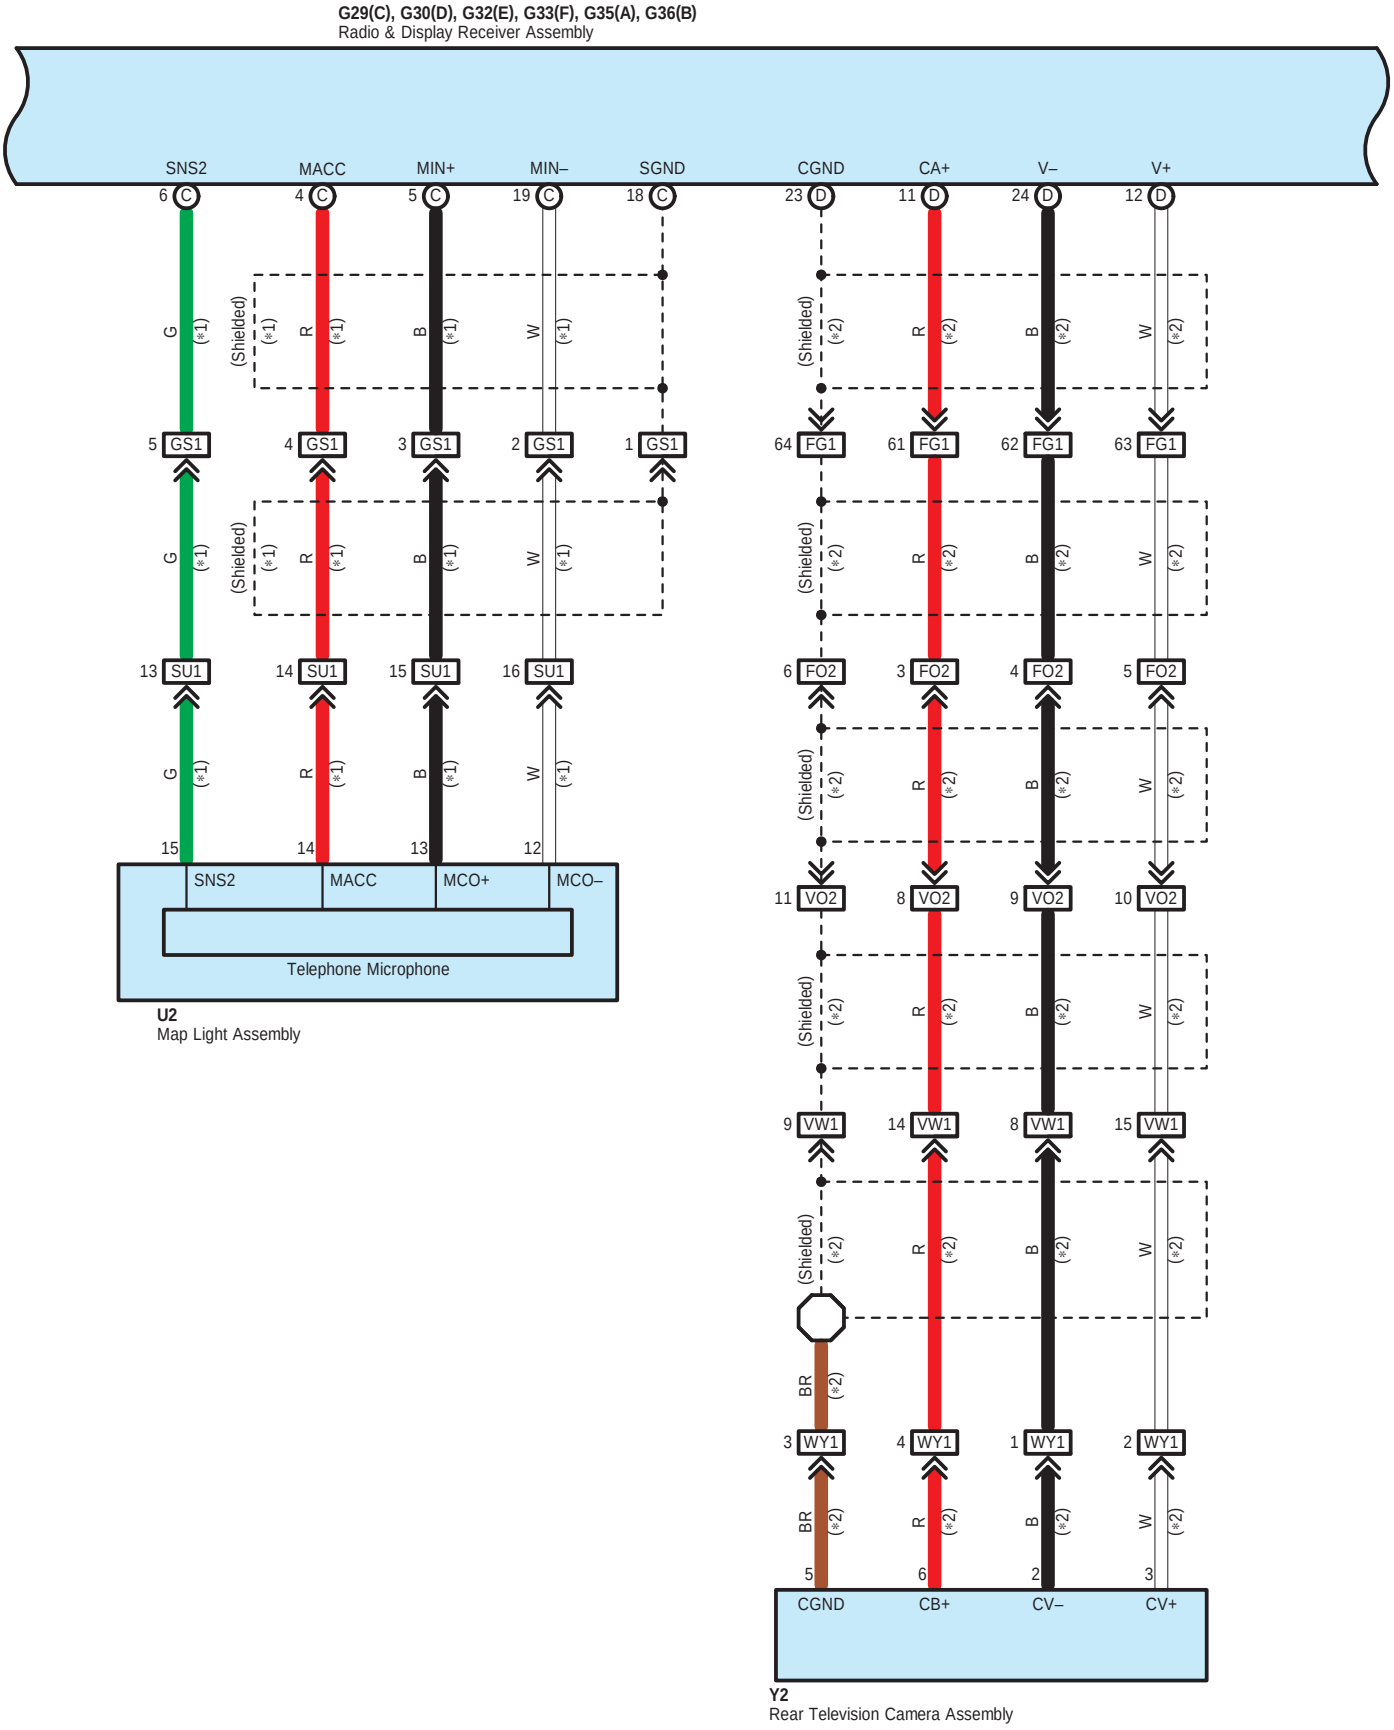



∗ 1 : w/ Bluetooth Hands–Free System
∗ 2 : w/ Parking Assist (Rear View Monitor)
∗ 4 : w/ Steering Pad Switch Assembly

: There is no wire color information.


G29(C), G30(D), G32(E), G33(F), G35(A), G36(B)
Radio & Display Receiver Assembly
SNS2
MACC
MIN+
MIN–
SGND
CGND
CA+
V–
V+
(Shielded)
GS1
SU1
FG1
FO2
VO2
VW1
WY1
SNS2
MACC
MCO+
MCO–
Telephone Microphone
U2
Map Light Assembly
CGND
CB+
CV–
CV+
Y2
Rear Television Camera Assembly

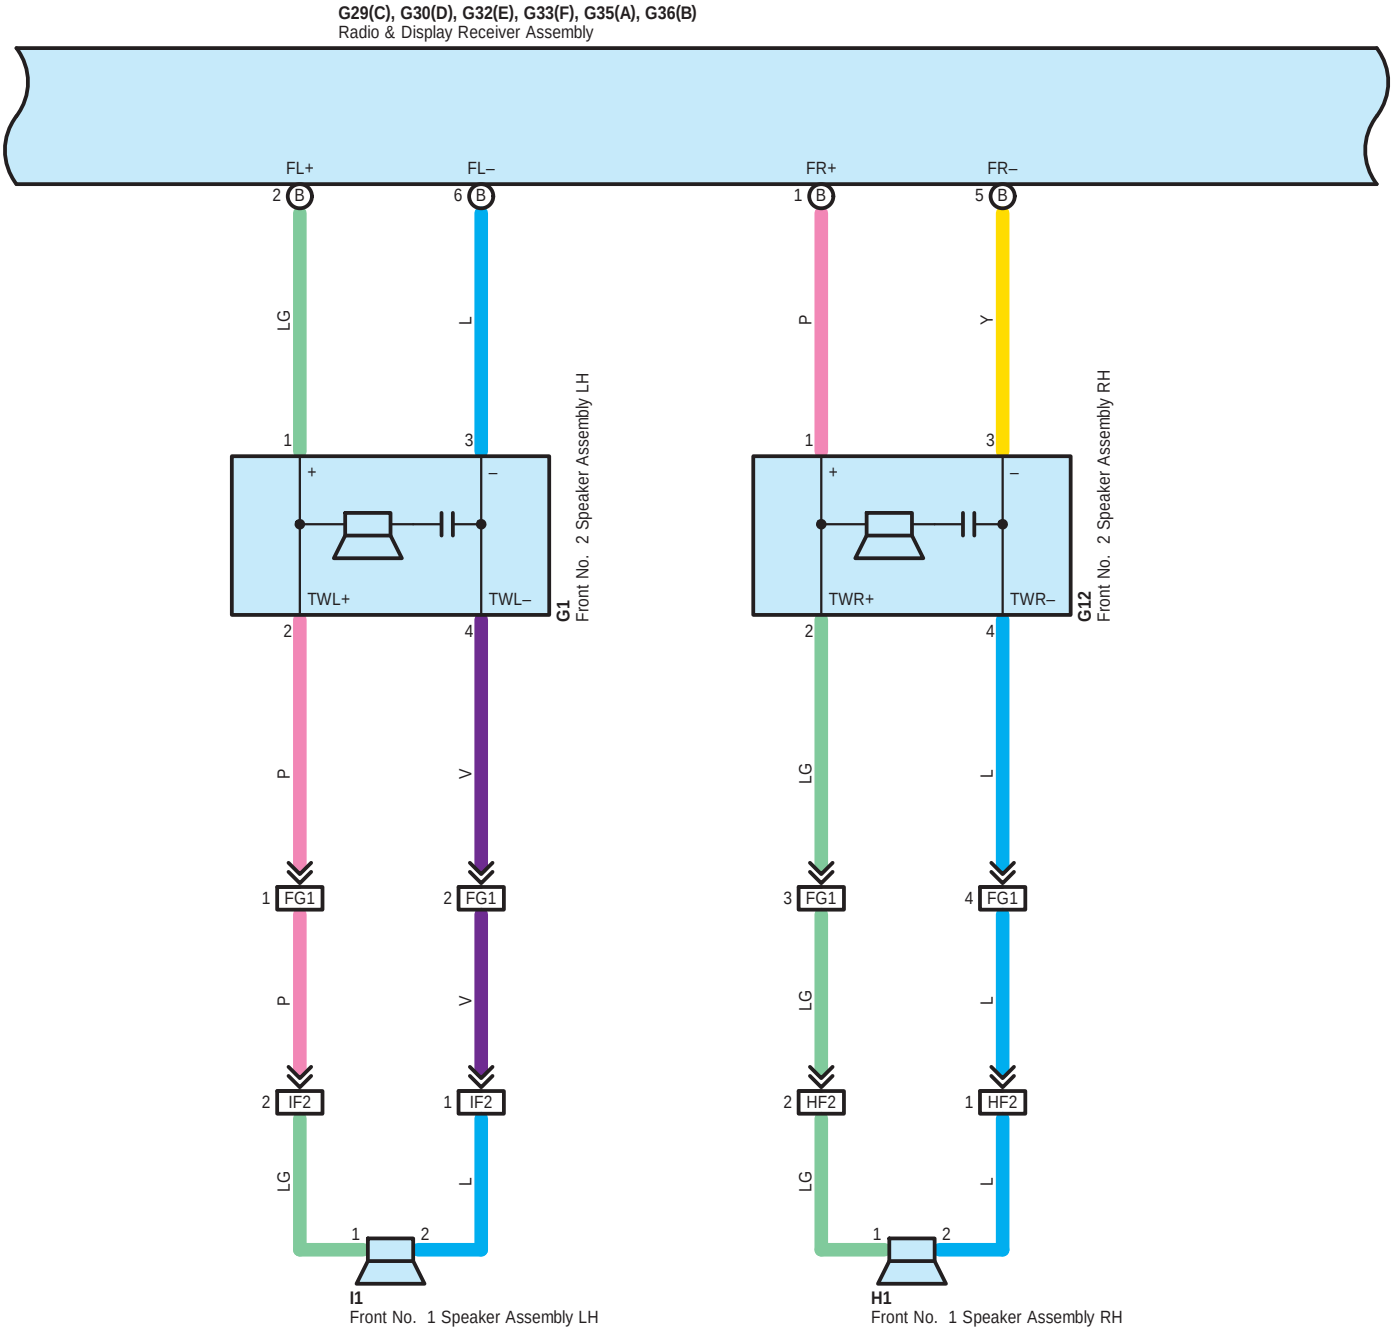

G29(C), G30(D), G32(E), G33(F), G35(A), G36(B)
Radio & Display Receiver Assembly
FL+
FL–
FR+
FR–
2 B
6 B
1 B
5 B
LG
L
P
Y
1
3
+
–
TWL+
TWL–
TWR+
TWR–
G1
Front No. 2 Speaker Assembly LH
G12
Front No. 2 Speaker Assembly RH
2
4
P
V
LG
L
1 FG1
2 FG1
3 FG1
4 FG1
2 IF2
1 IF2
2 HF2
1 HF2
I1
Front No. 1 Speaker Assembly LH
H1
Front No. 1 Speaker Assembly RH

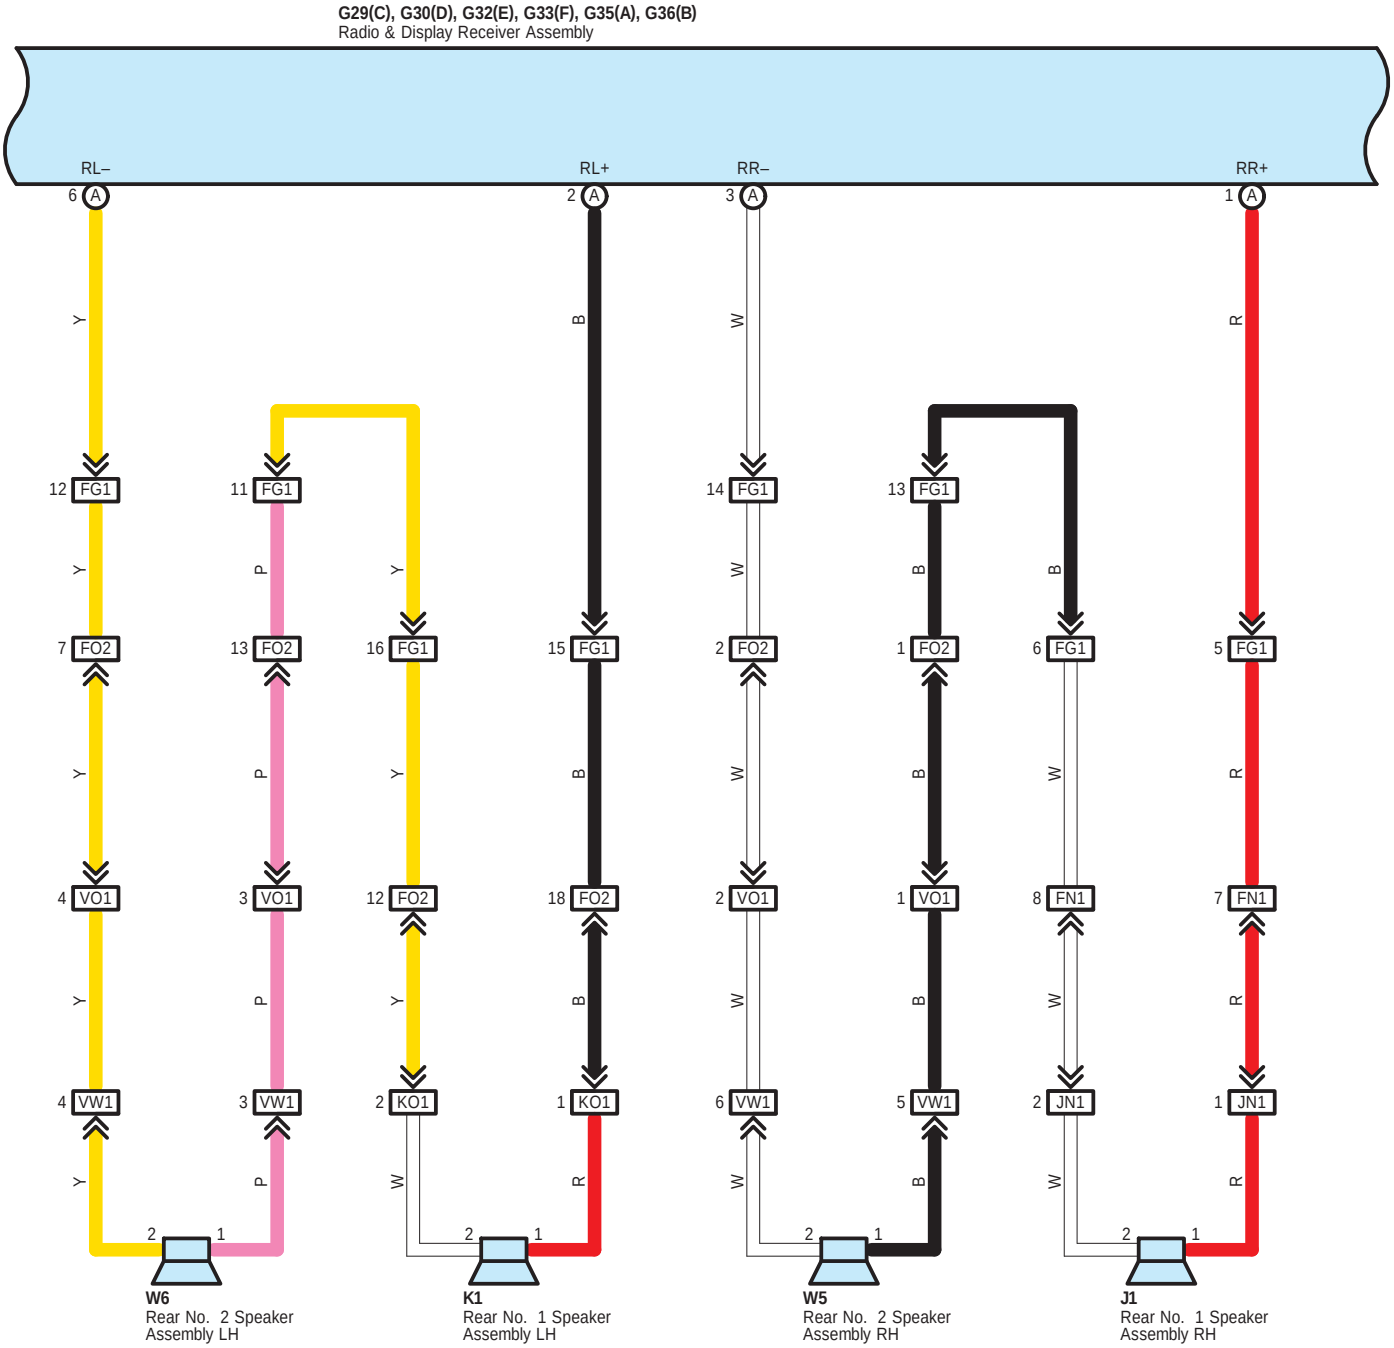

G29(C), G30(D), G32(E), G33(F), G35(A), G36(B)
Radio & Display Receiver Assembly
RL–
RL+
RR–
RR+
6 A
2 A
3 A
1 A
Y
B
W
R
12 FG1
11 FG1
14 FG1
13 FG1
7 FO2
13 FO2
16 FG1
15 FG1
2 FO2
1 FO2
6 FG1
5 FG1
4 VO1
3 VO1
12 FO2
18 FO2
2 VO1
1 VO1
8 FN1
7 FN1
4 VW1
3 VW1
2 KO1
1 KO1
6 VW1
5 VW1
2 JN1
1 JN1
P
B
W
R
2 1
W6
Rear No. 2 Speaker Assembly LH
K1
Rear No. 1 Speaker Assembly LH
W5
Rear No. 2 Speaker Assembly RH
J1
Rear No. 1 Speaker Assembly RH

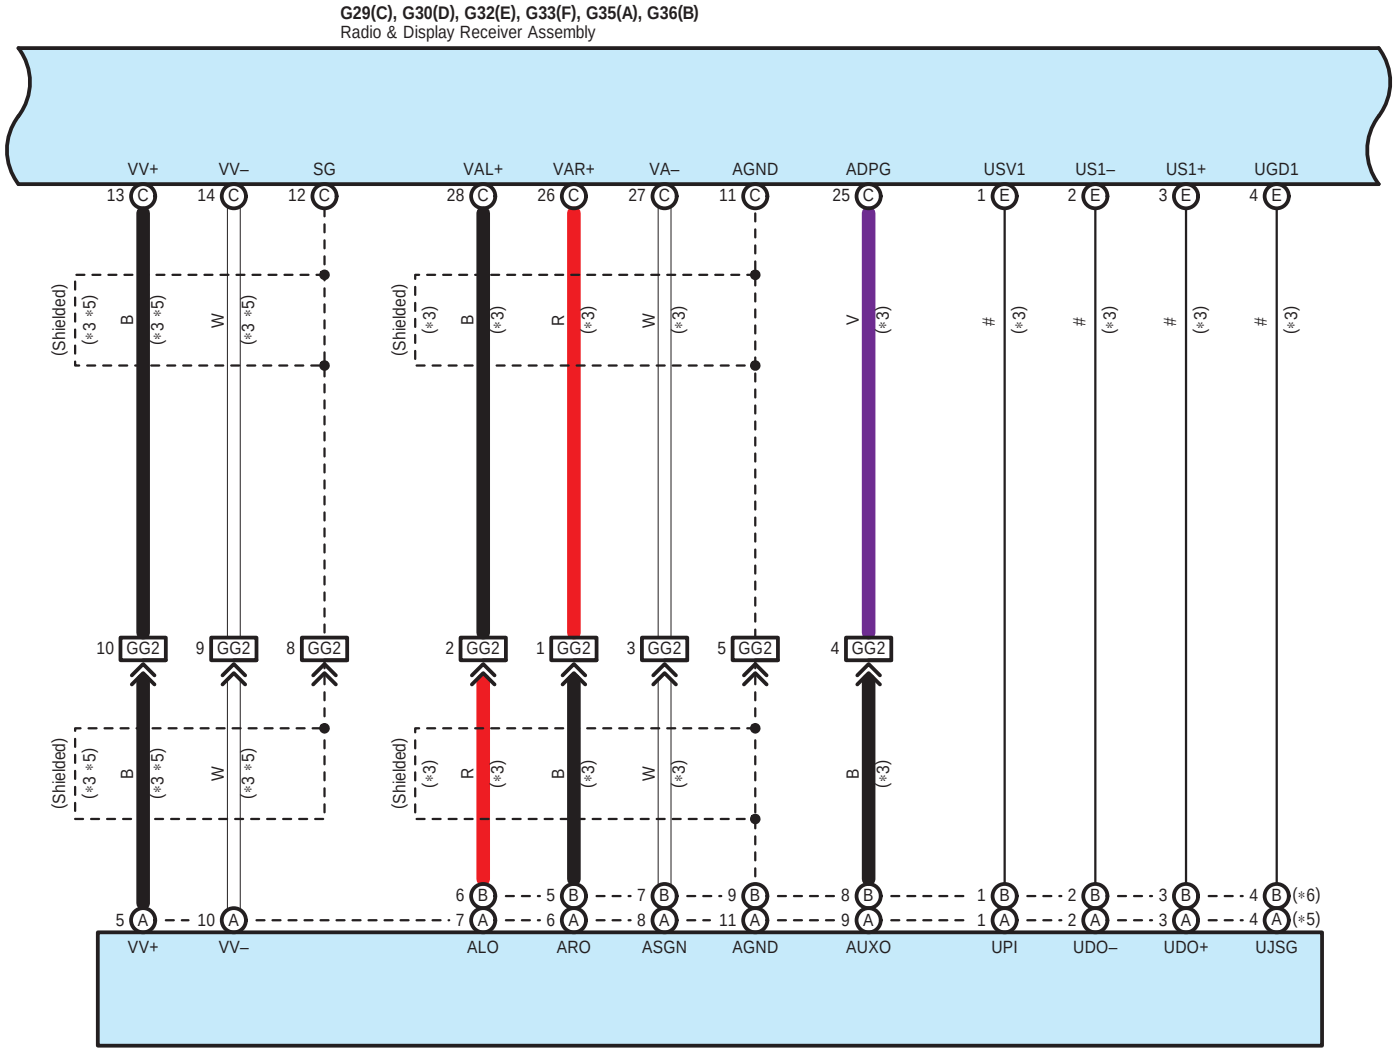

∗ 3 : w/ No. 1 Stereo Jack Adapter Assembly
∗ 5 : Before Aug. 2015 Production
∗ 6 : From Aug. 2015 Production

: There is no wire color information.

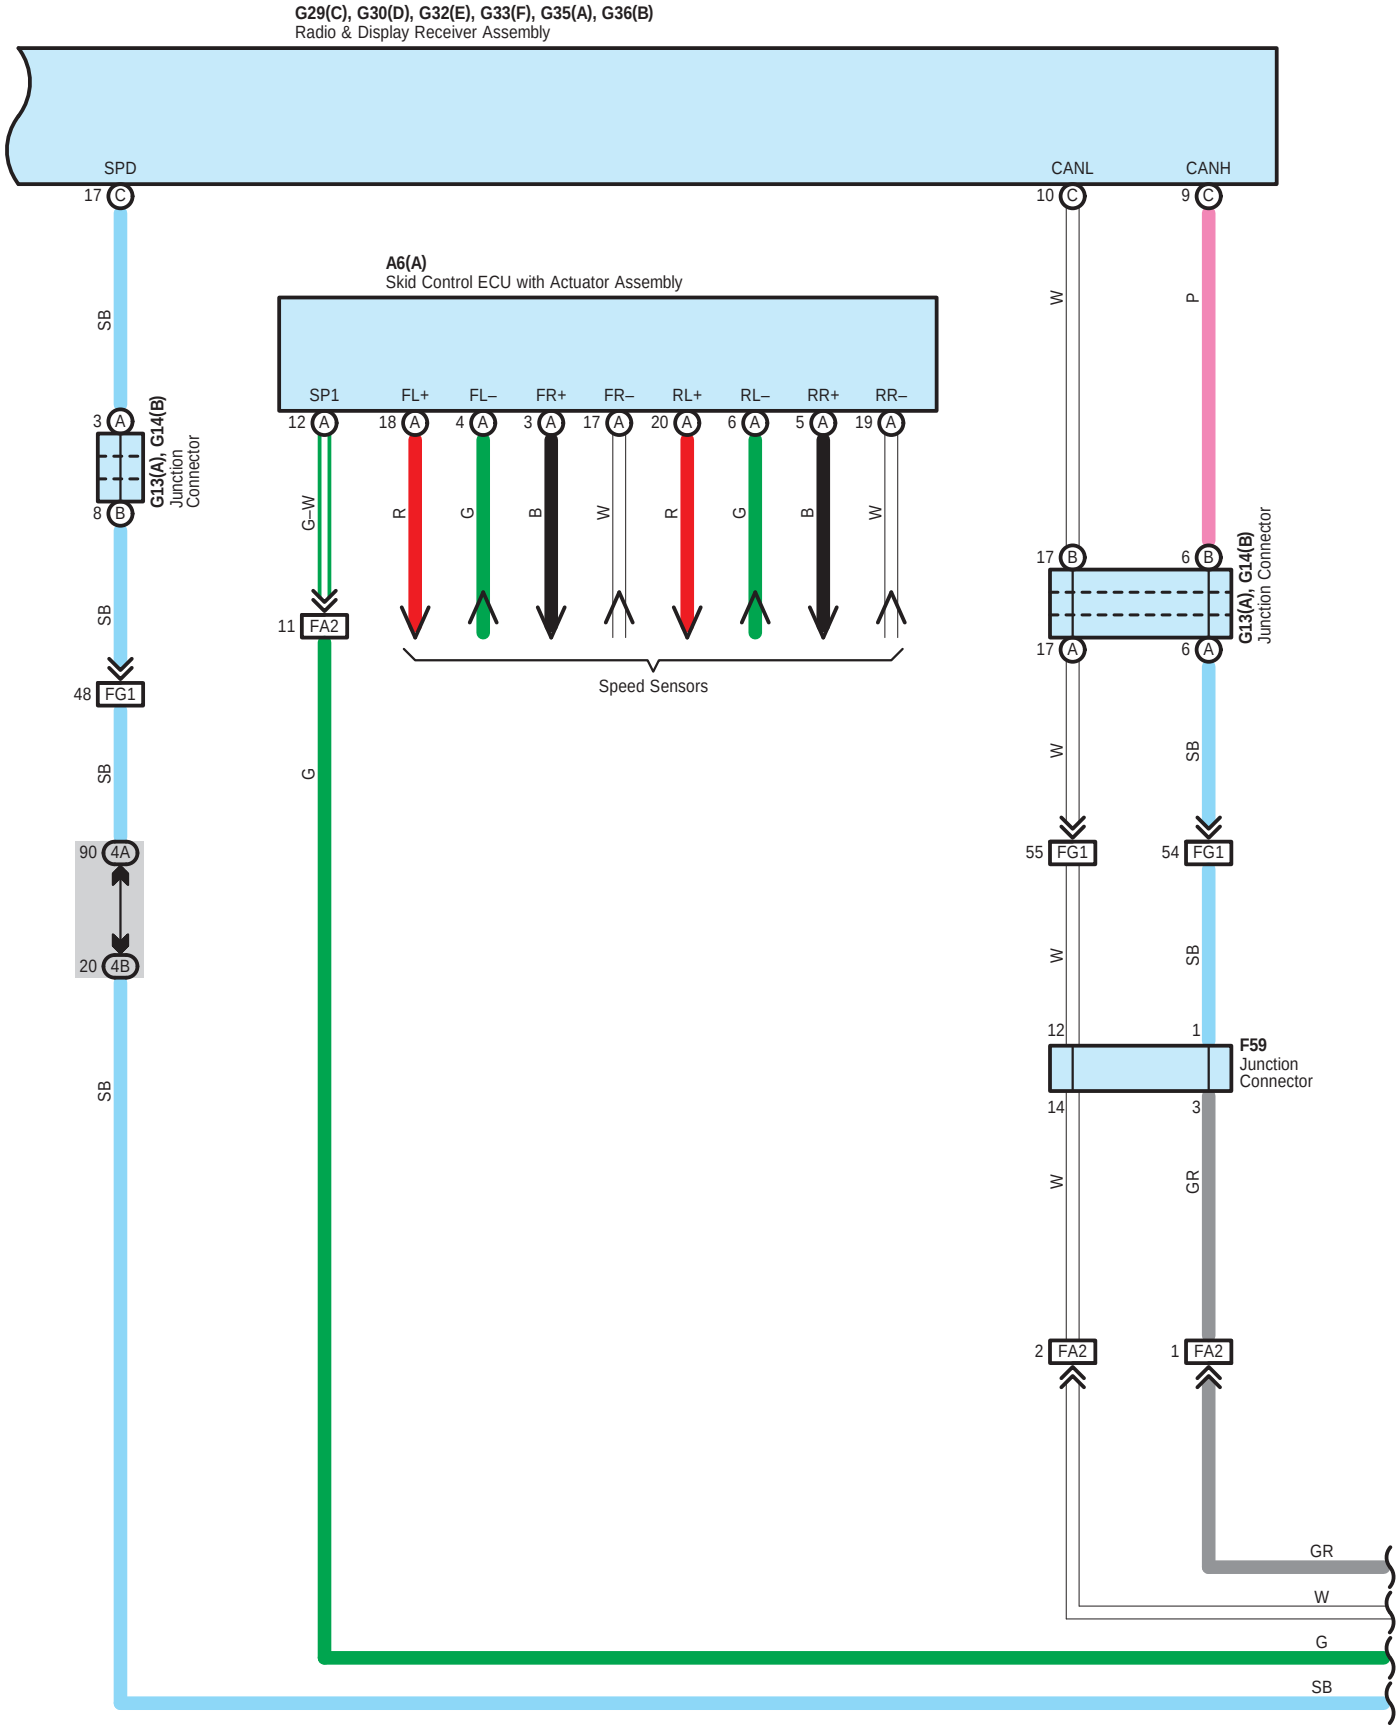

G29(C), G30(D), G32(E), G33(F), G35(A), G36(B)
Radio & Display Receiver Assembly
SPD
17 C
SB
3 A
8 B
G13(A), G14(B)
Junction Connector
SB
48 FG1
SB
90 4A
20 4B
SB
A6(A)
Skid Control ECU with Actuator Assembly
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
12 A
18 A
4 A
3 A
17 A
20 A
6 A
5 A
19 A
G–W
R
G
B
W
R
G
B
W
11 FA2
G
Speed Sensors
CANL
CANH
10 C
9 C
W
P
17 B
6 B
G13(A), G14(B)
Junction Connector
17 A
6 A
W
SB
55 FG1
54 FG1
W
SB
12
1
F59
Junction Connector
14
3
W
GR
2 FA2
1 FA2
GR
W
G
SB

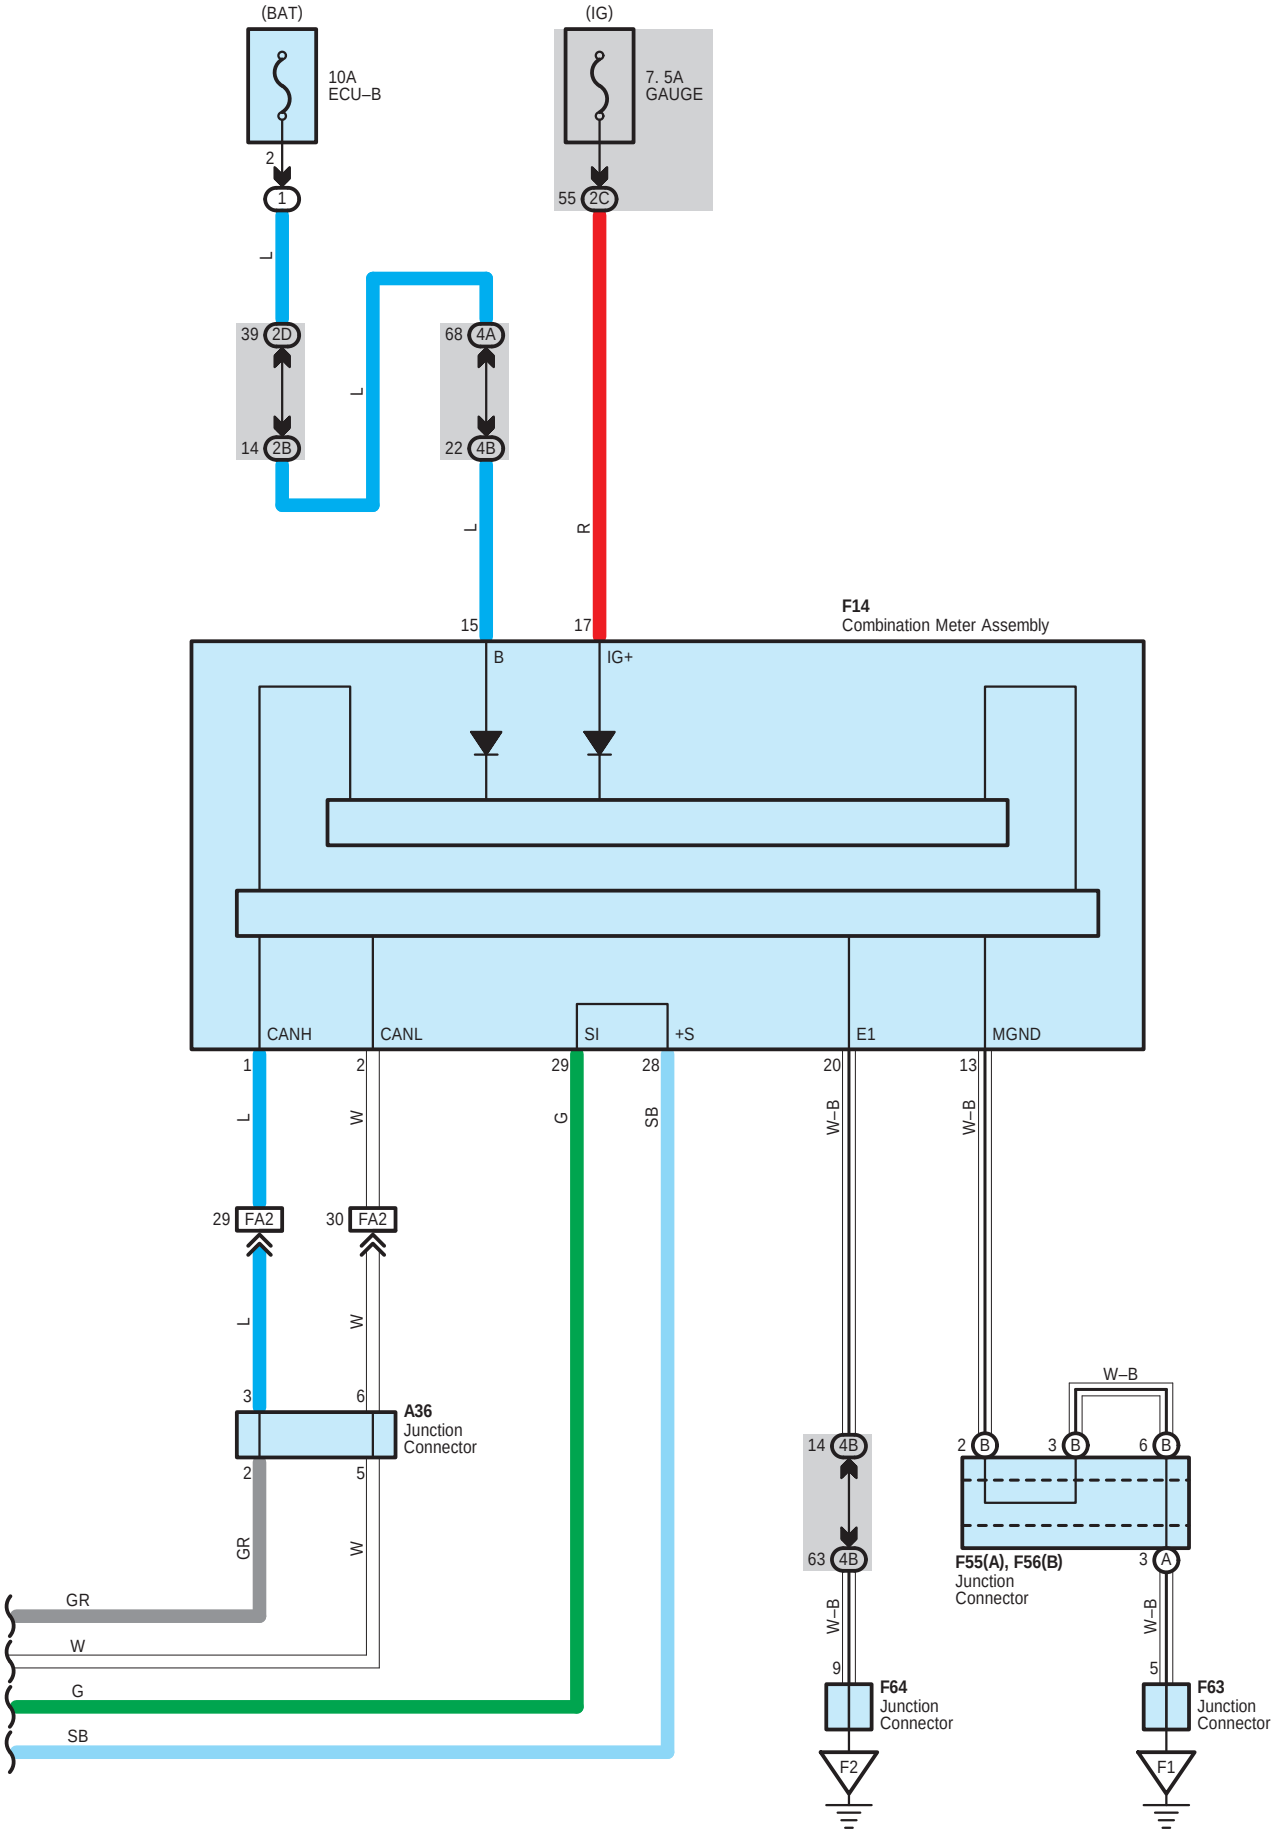
(BAT)
10A
ECU–B
2
1
L
39 2D
14 2B
L
68 4A
22 4B
L
15
(IG)
7. 5A
GAUGE
55 2C
R
17
F14
Combination Meter Assembly
B
IG+
CANH
CANL
SI
+S
E1
MGND
1
2
29
28
20
13
L
W
G
SB
W–B
W–B
29 FA2
30 FA2
L
W
3
6
A36
Junction
Connector
2
5
GR
W
GR
W
G
SB
14 4B
63 4B
W–B
9
F64
Junction
Connector
F2
W–B
2 B
3 B
6 B
F55(A), F56(B)
Junction
Connector
3 A
W–B
5
F63
Junction
Connector
F1


A 2
White




A 6
Black

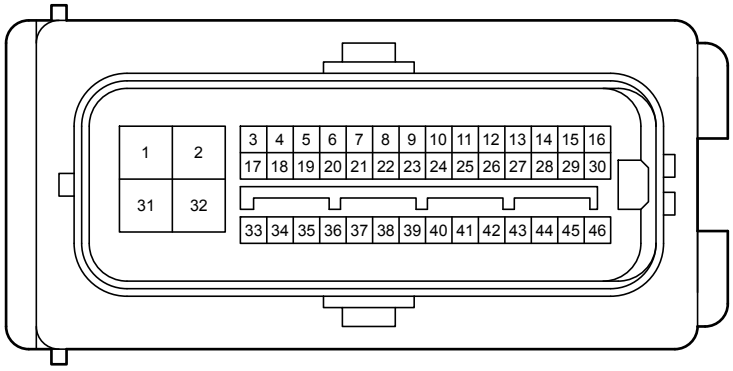


A 36
White

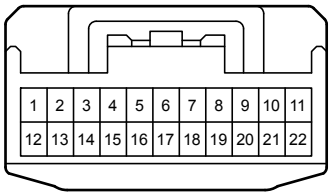


B 48
Black



B 51
Gray

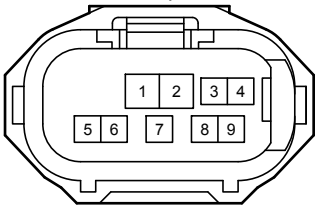


F 14
White

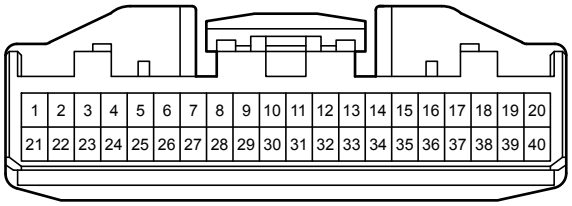


F 23
Black




F 55
Gray

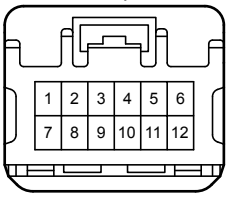


F 56
Gray

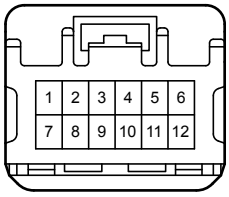


F 59
Gray

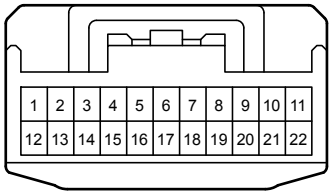


F 63
White

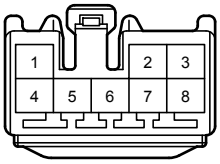


F 64
White

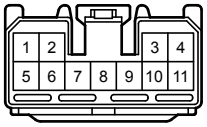


G 1
White




G 12
White




G 13
Black

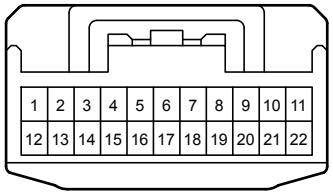


G 14
Black

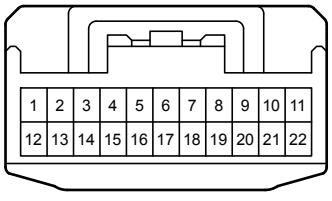


G 29
White

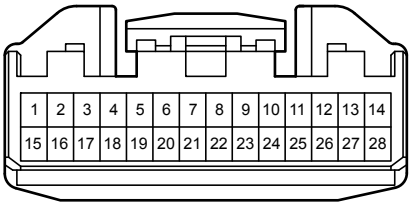


G 30
White

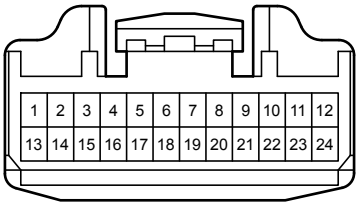


G 31
Black

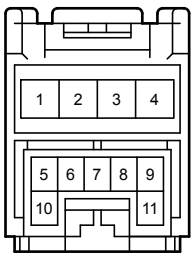


G 32
Gray

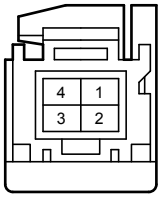

G 33
White

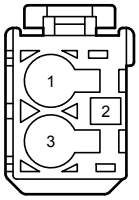


G 34
White

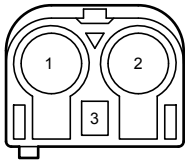


G 35
White



G 36
White

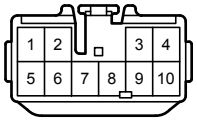

G 37
Black

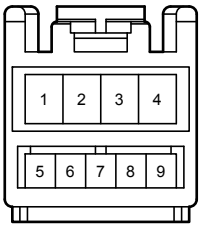

H 1
White



I 1
White




J 1
White



K 1
White



U 2
White

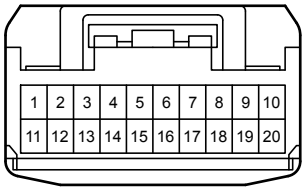


W 5
Black




W 6
Black




Y 2
Gray

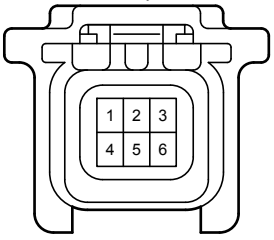


z 11
White

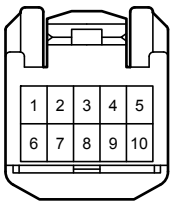


2B
White

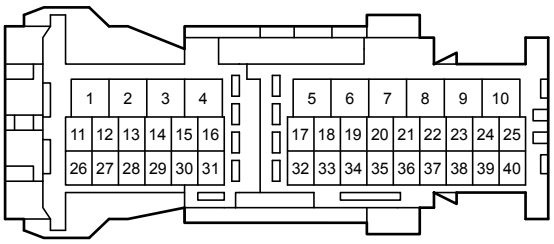


2C
White

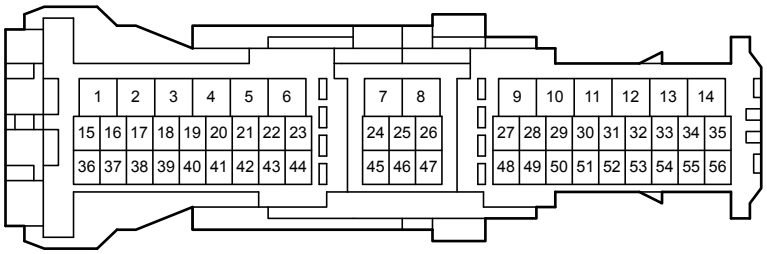


2D
White

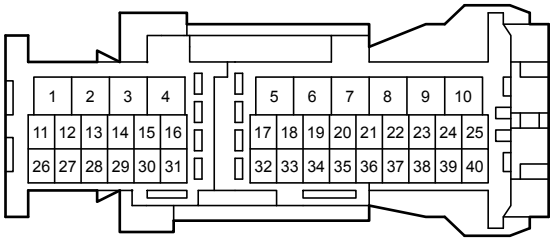


4A
White

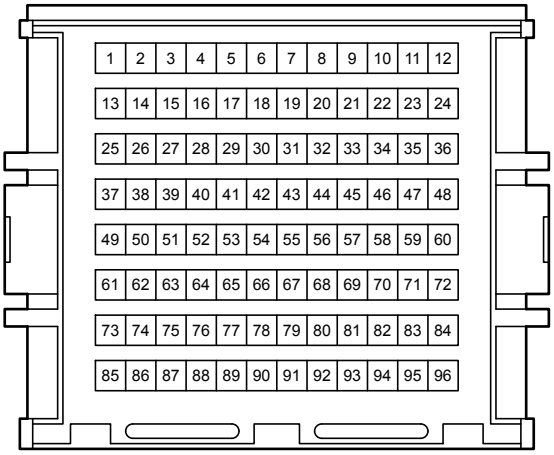


4B
White

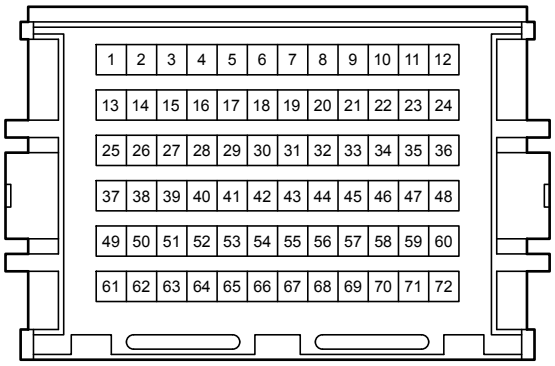


4C
White

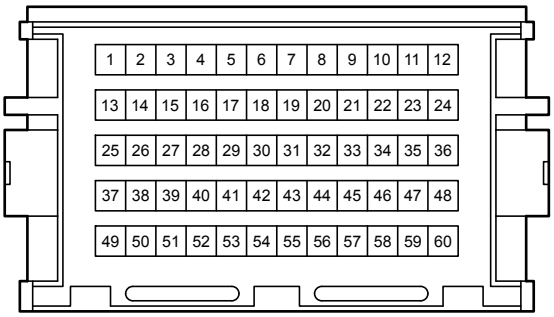

5B
White

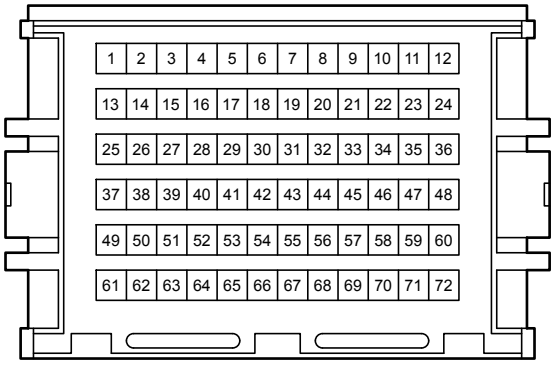


BF2
White

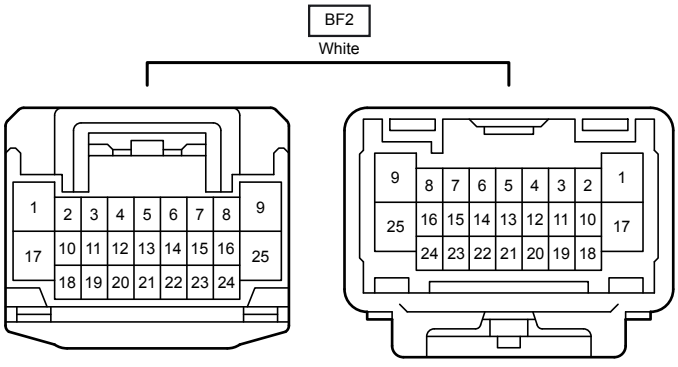


FA1

White

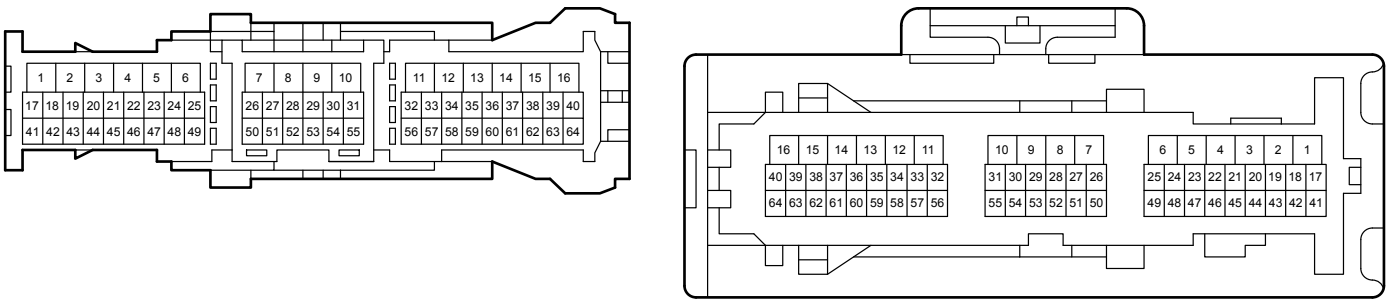


FA2

White

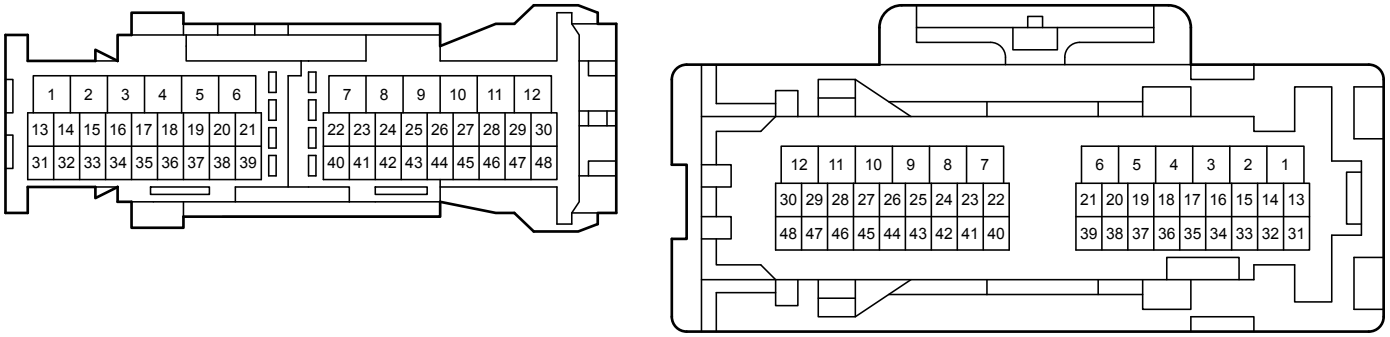


FG1

White

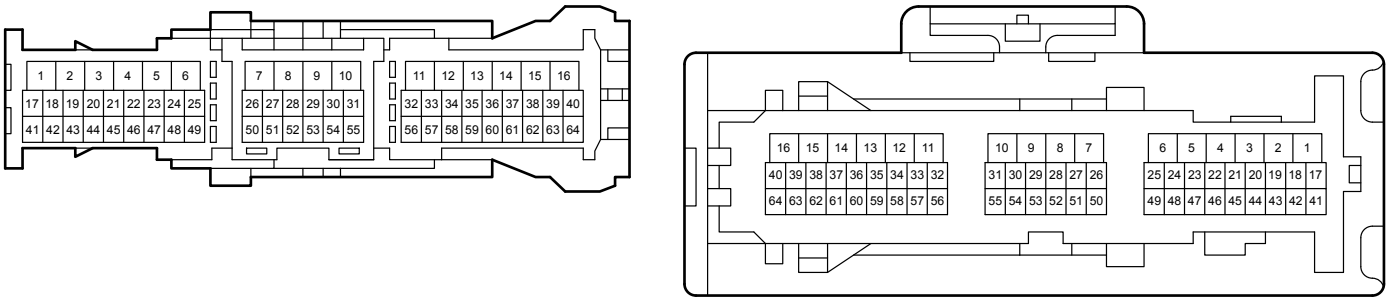


FN1


White

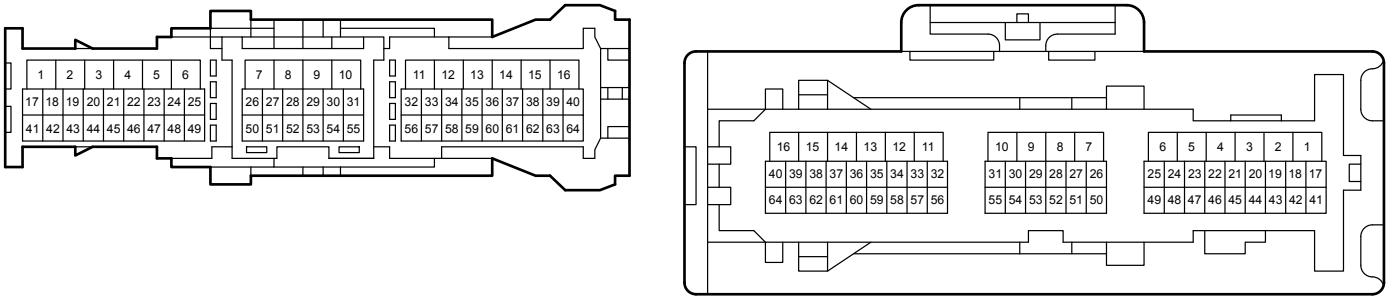


FO2
Gray

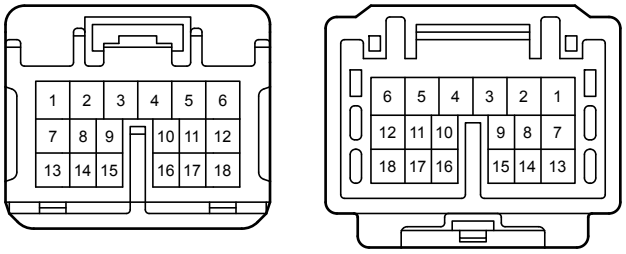


GG2
White

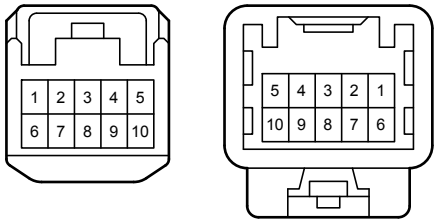


GS1
Gray

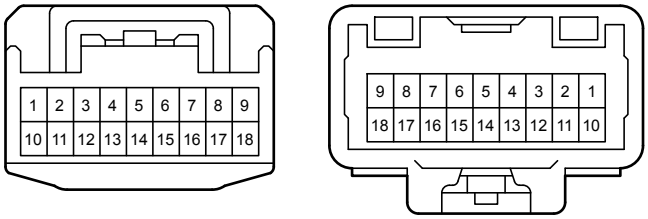


HF2
Black

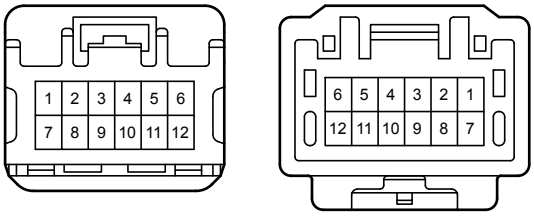


IF2
Black

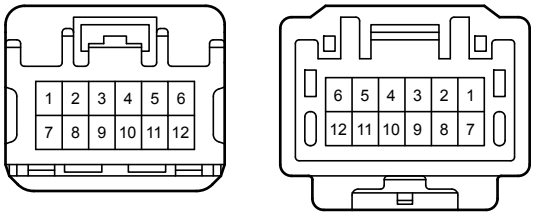


JN1
White

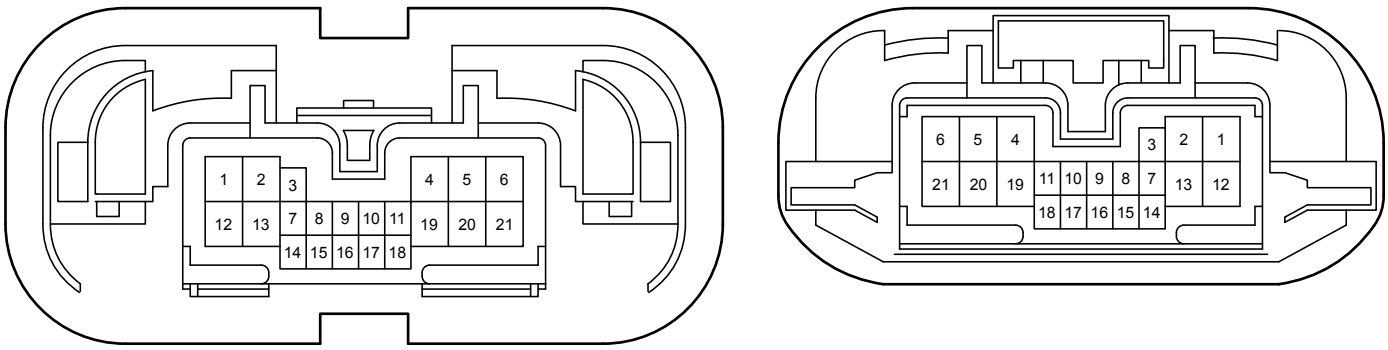


KO1
White

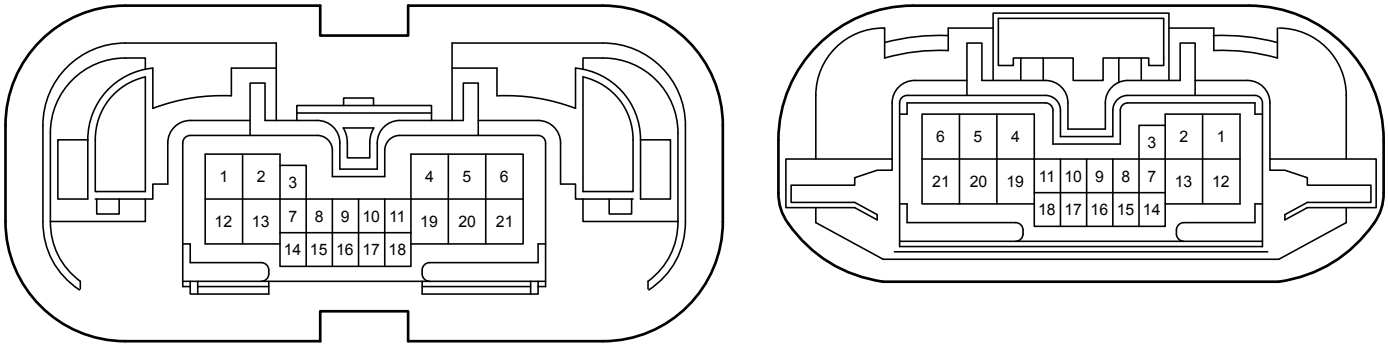


SU1
White

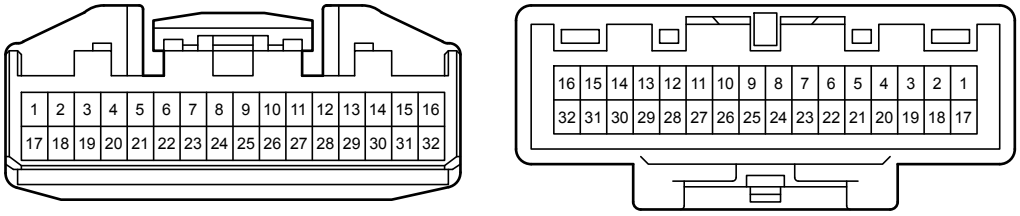


VO1
Blue

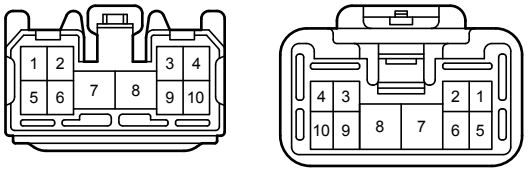

VO2
White

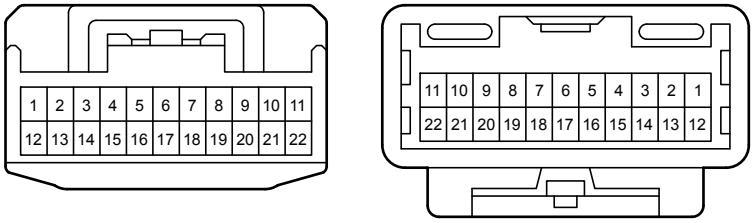

VW1
White

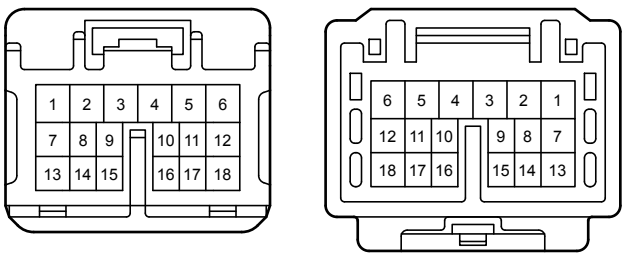

WY1
White

