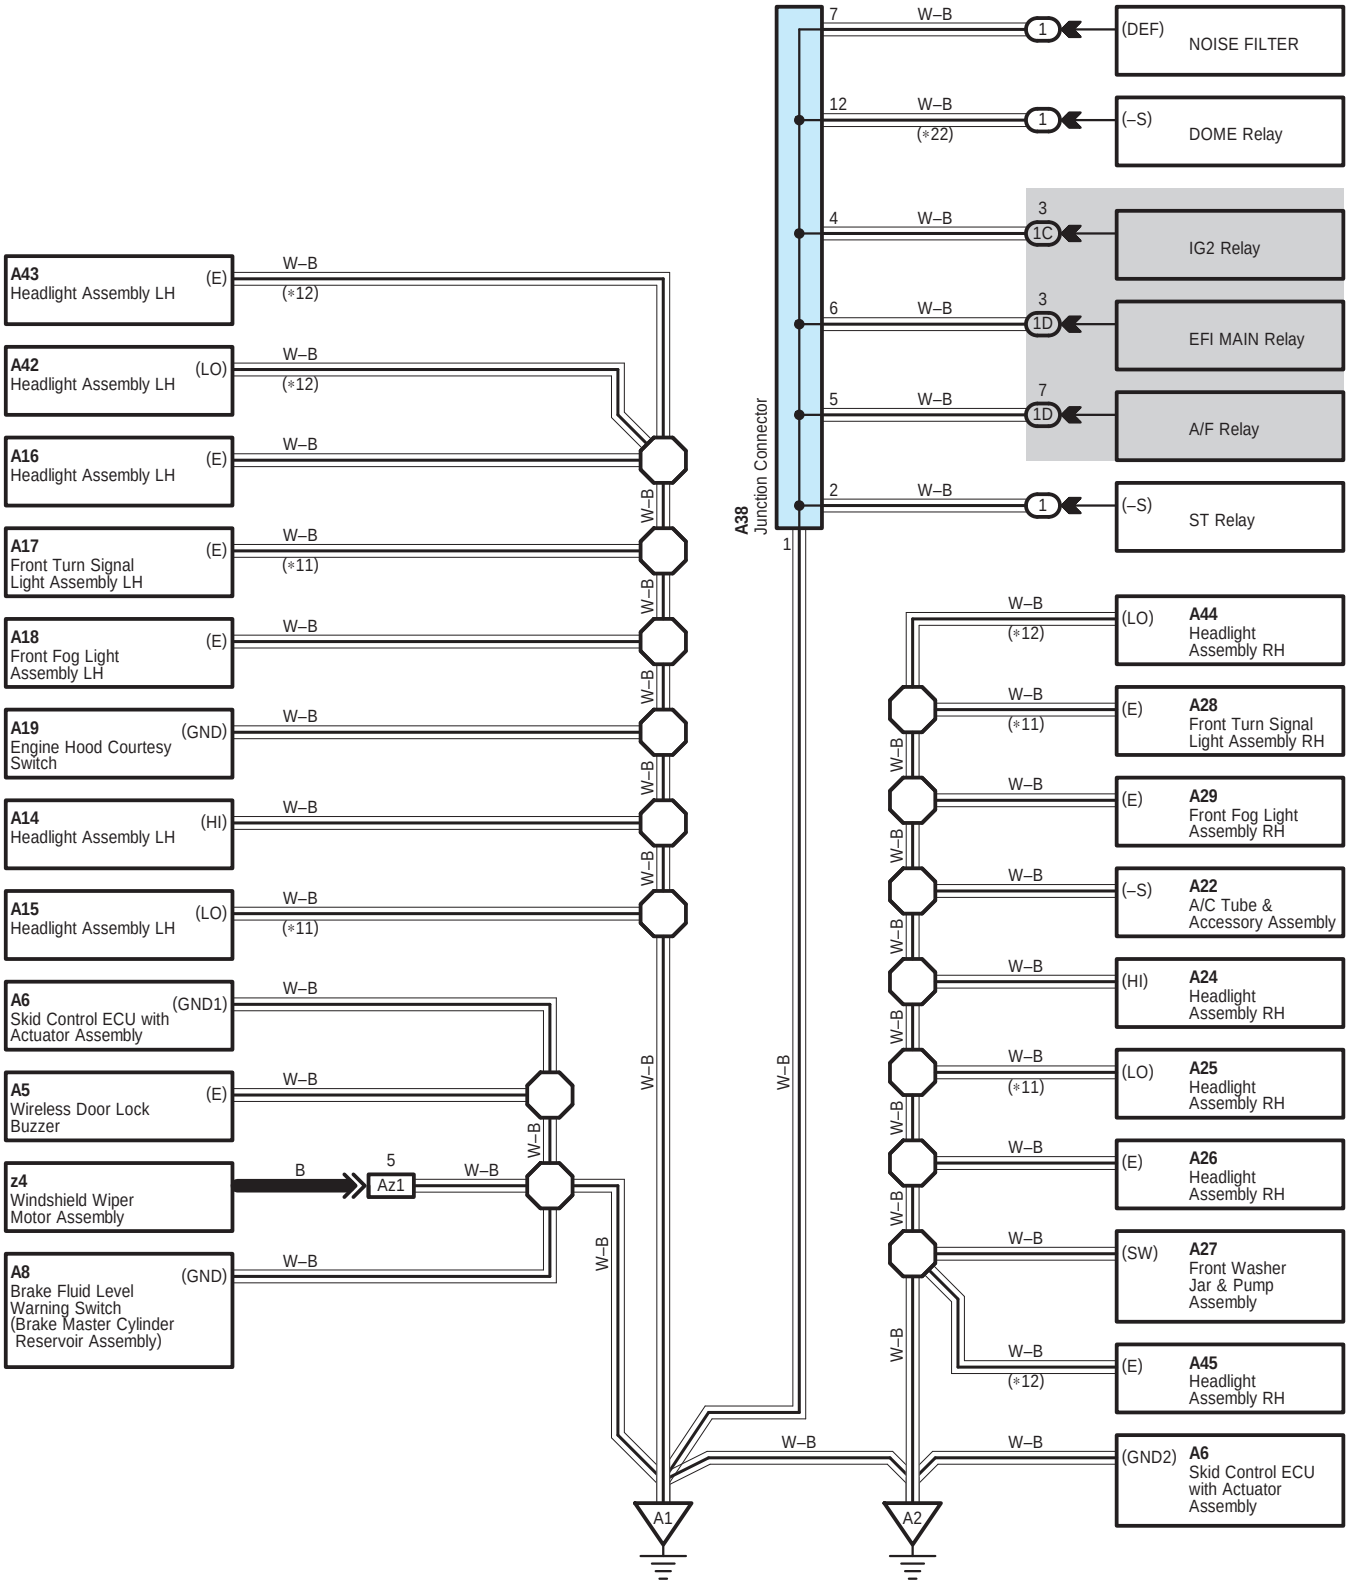
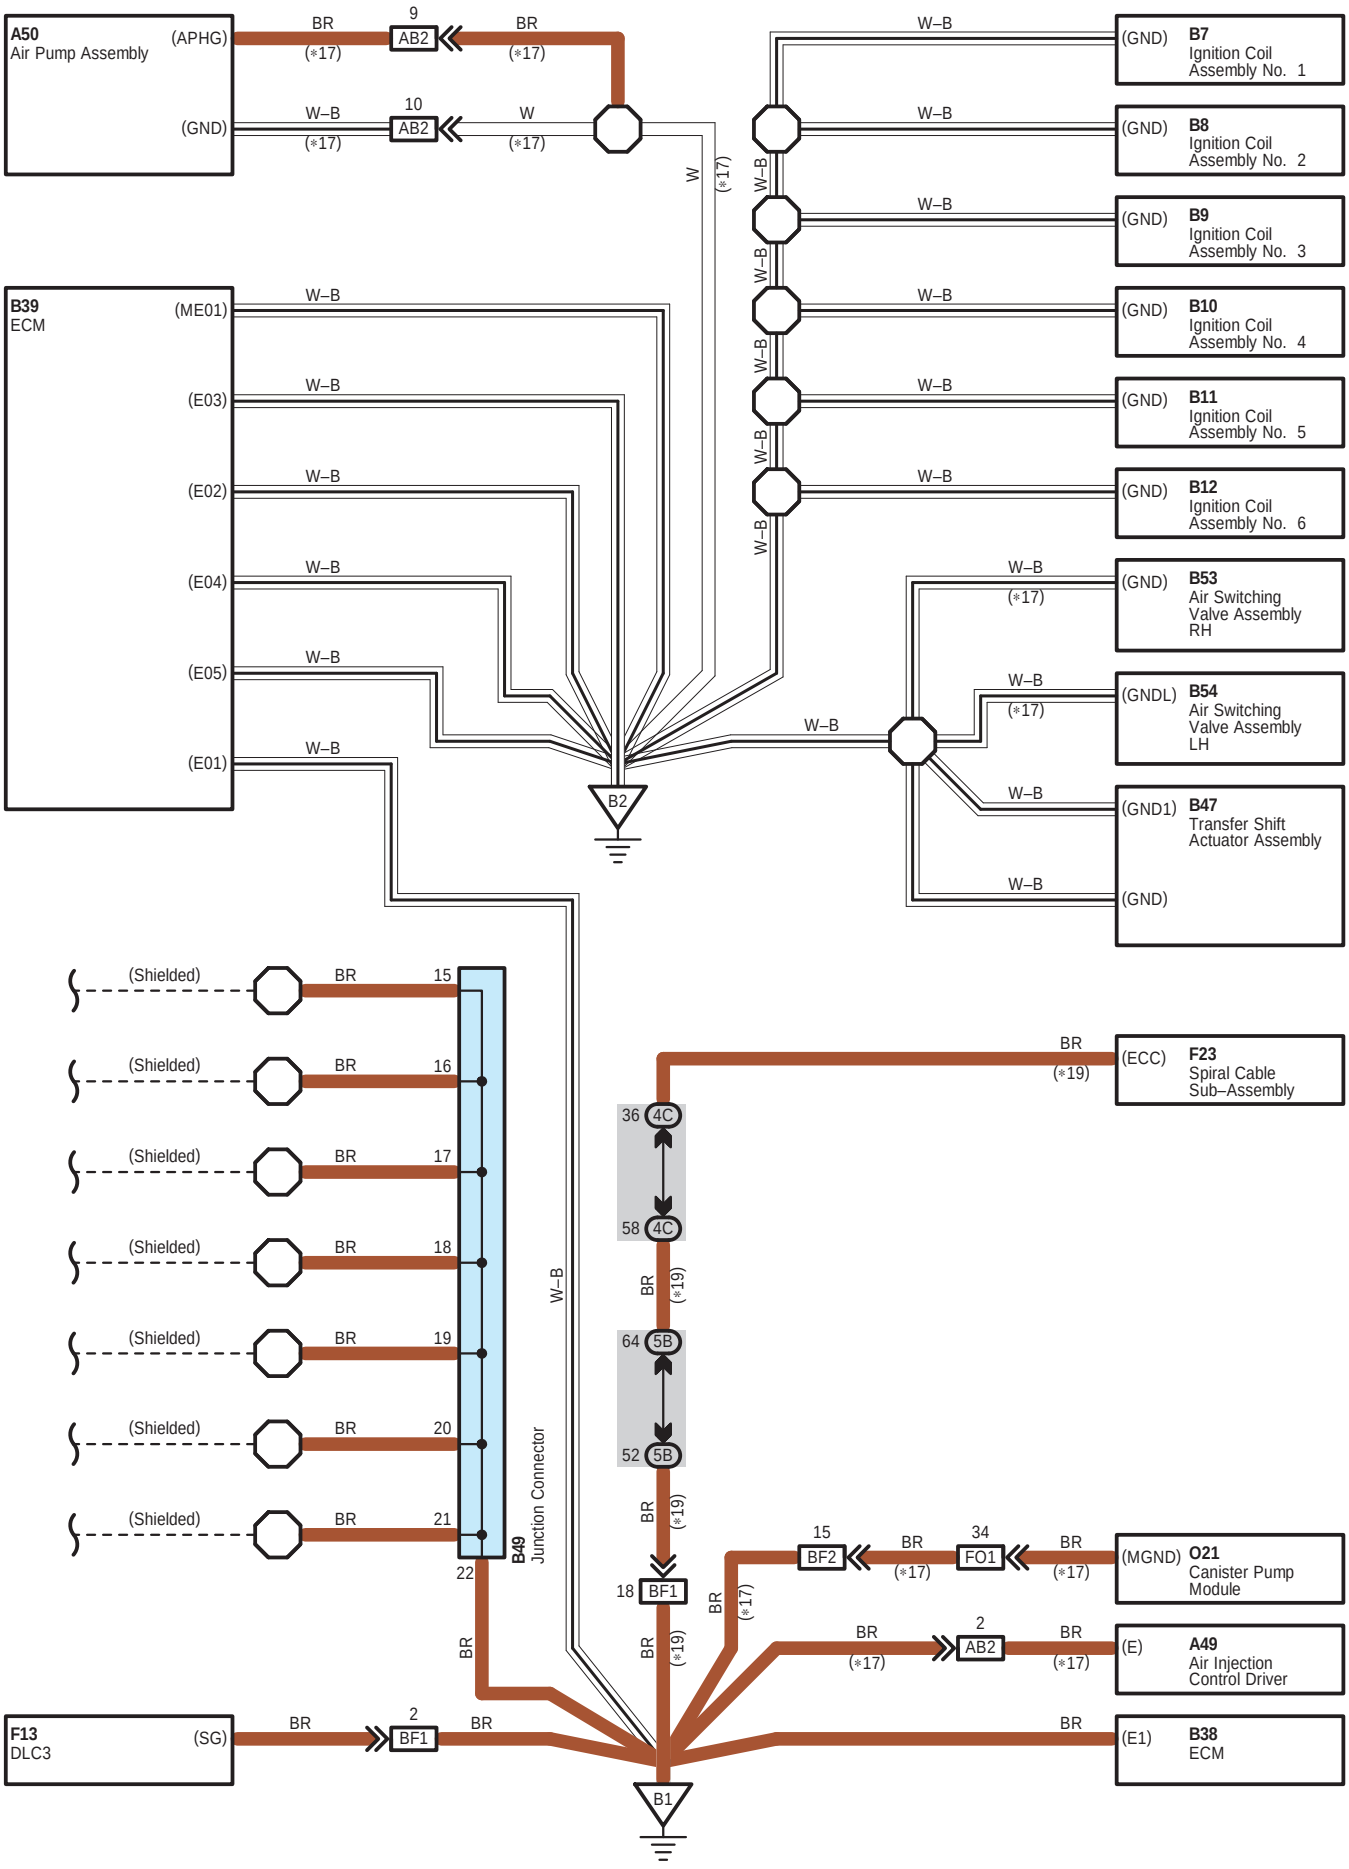
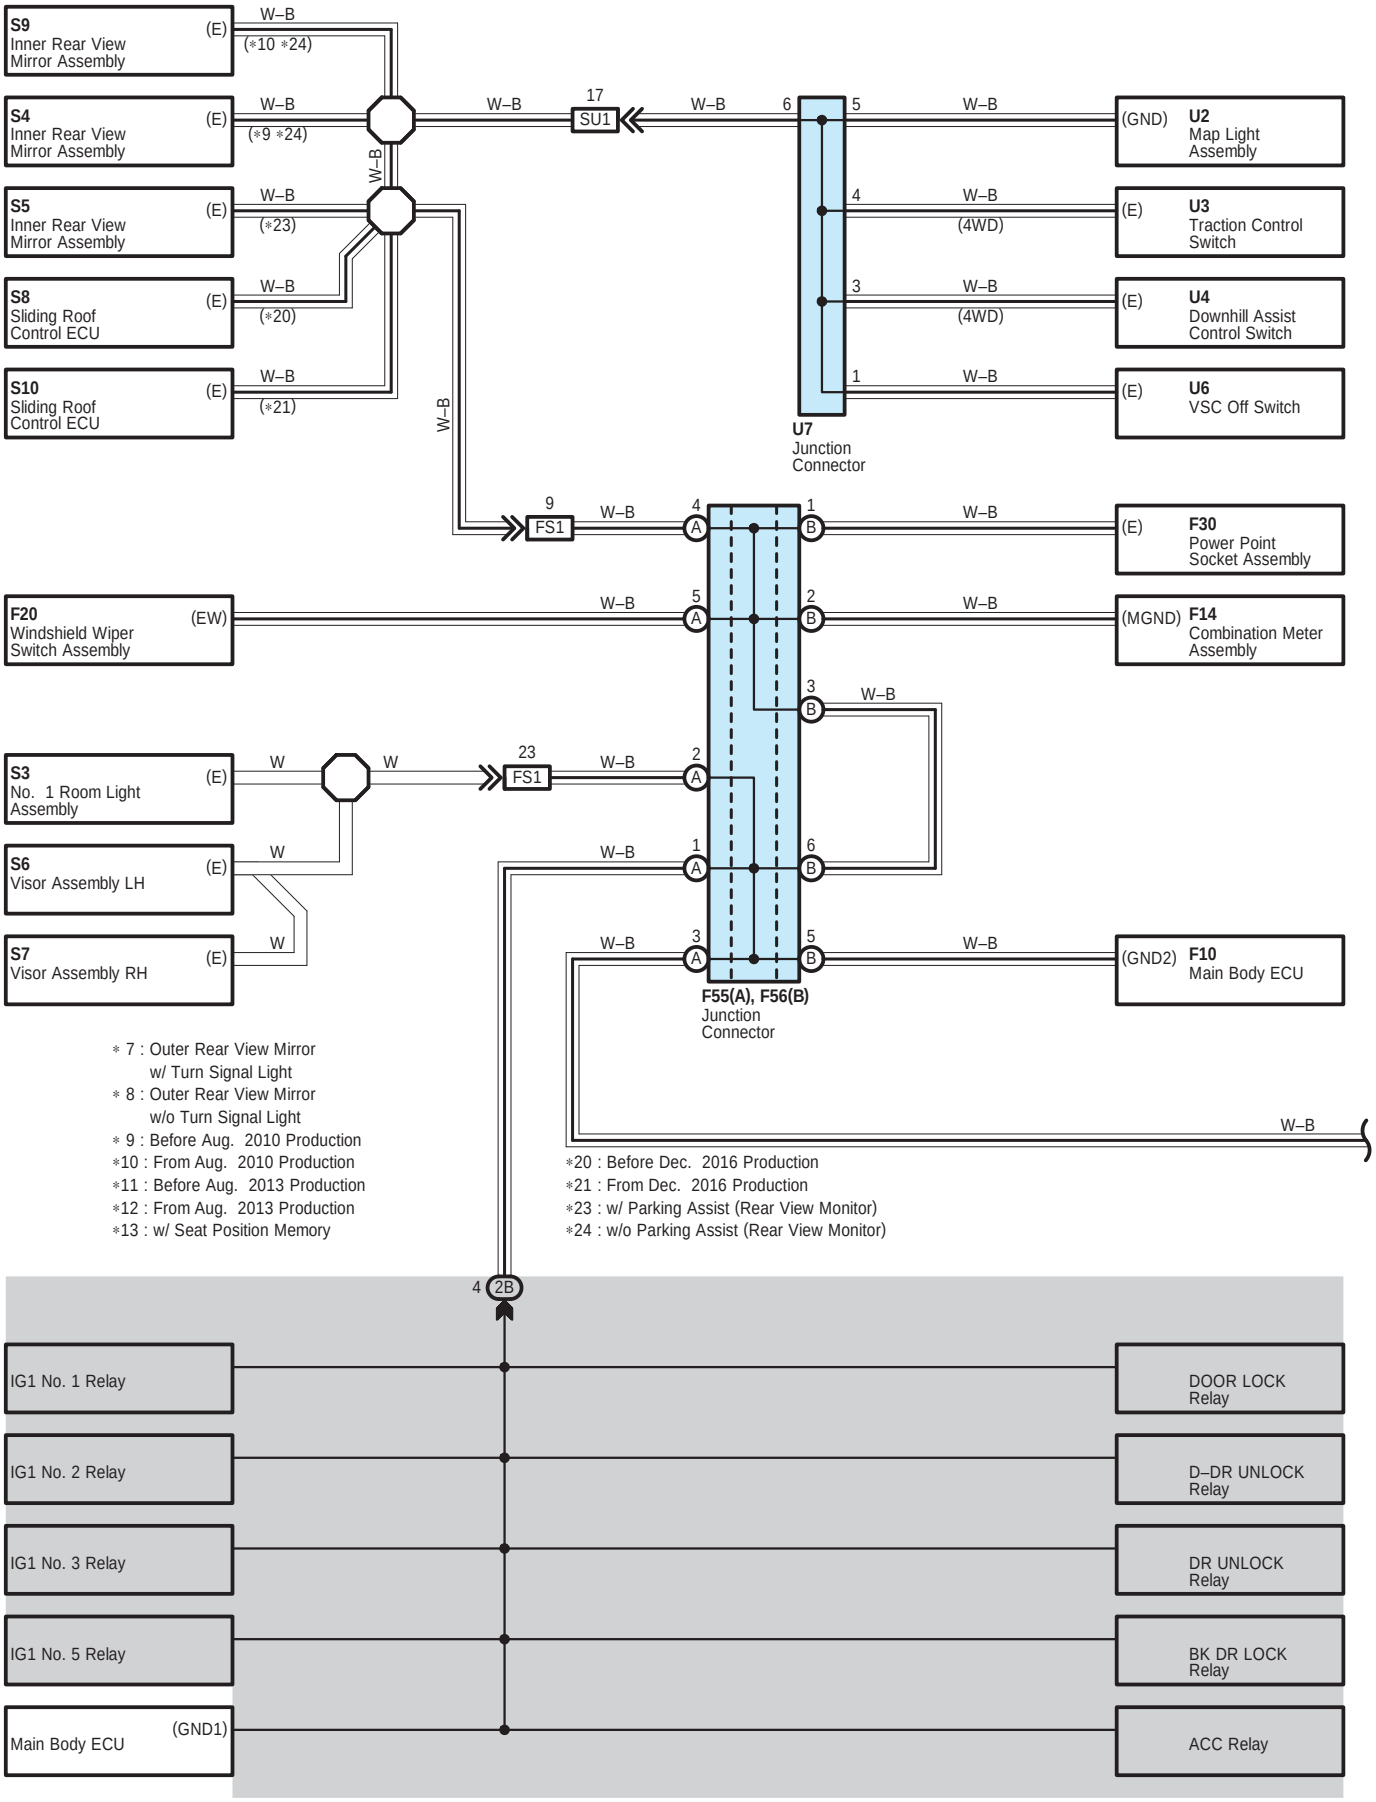
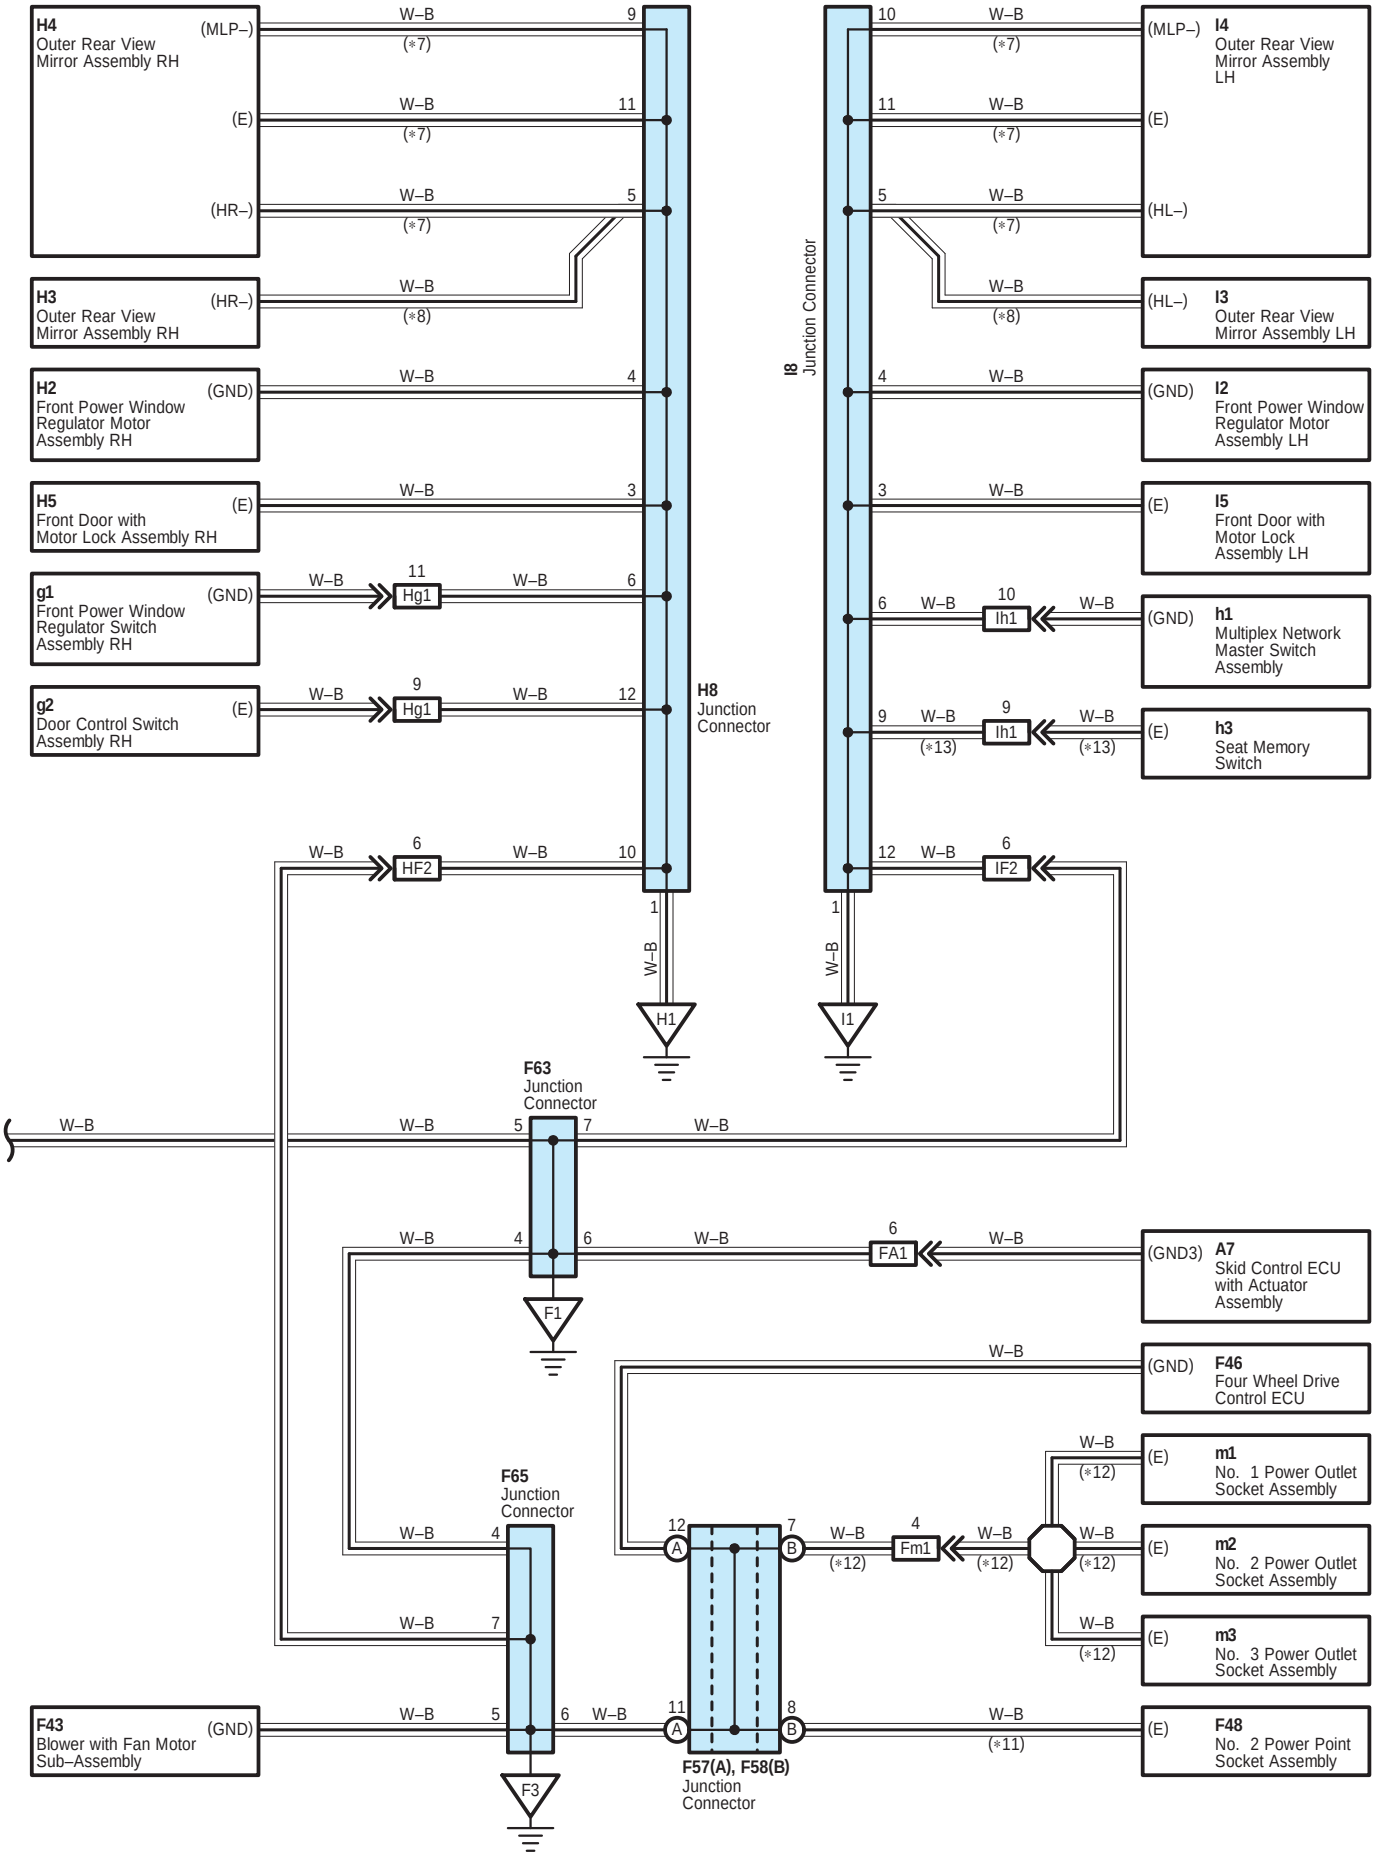
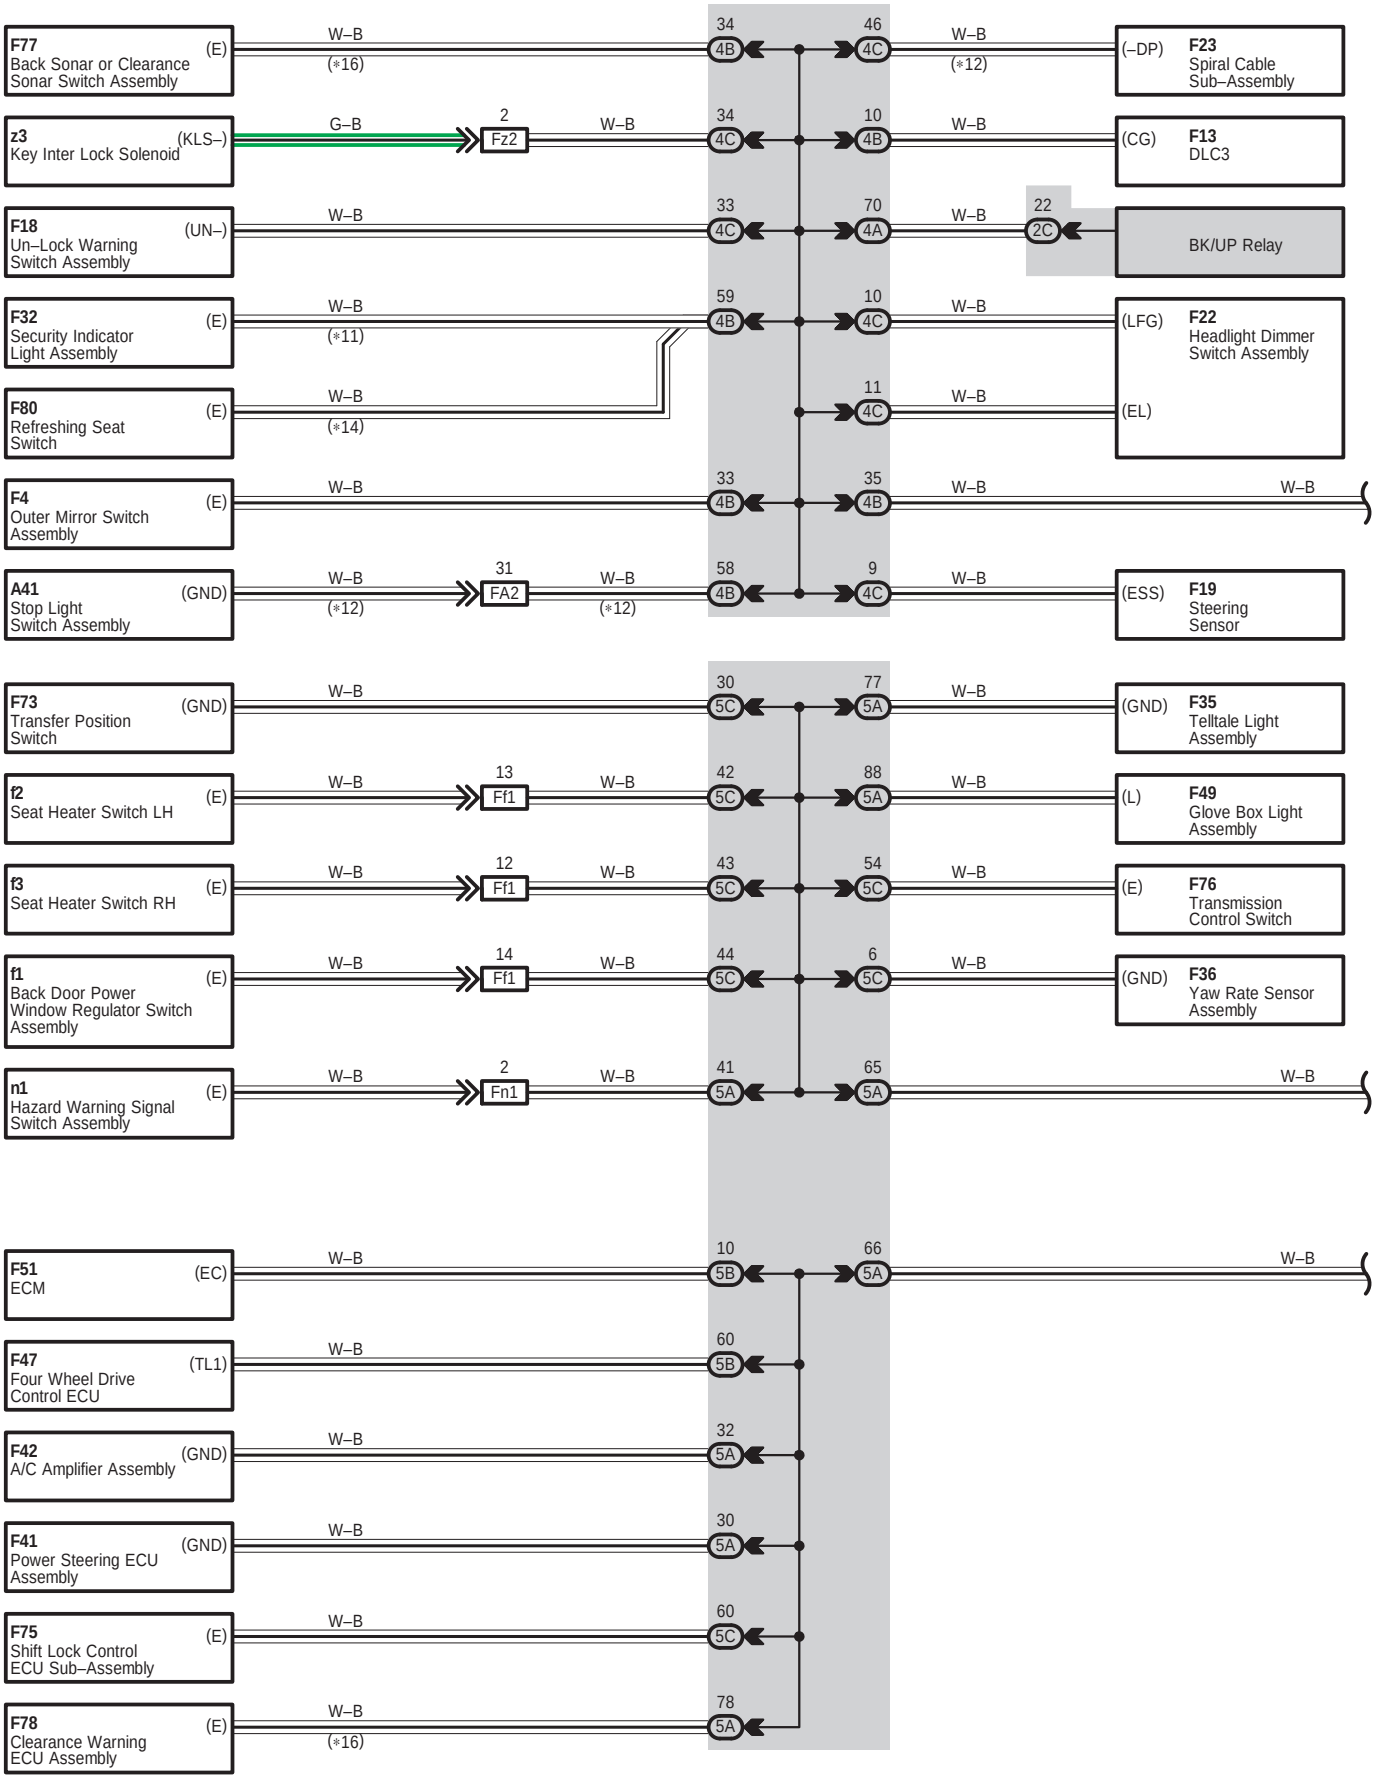



∗11 : Before Aug. 2013 Production
∗12 : From Aug. 2013 Production
∗17 : Chile
∗19 : w/ Cruise Control
∗22 : From Aug. 2016 Production

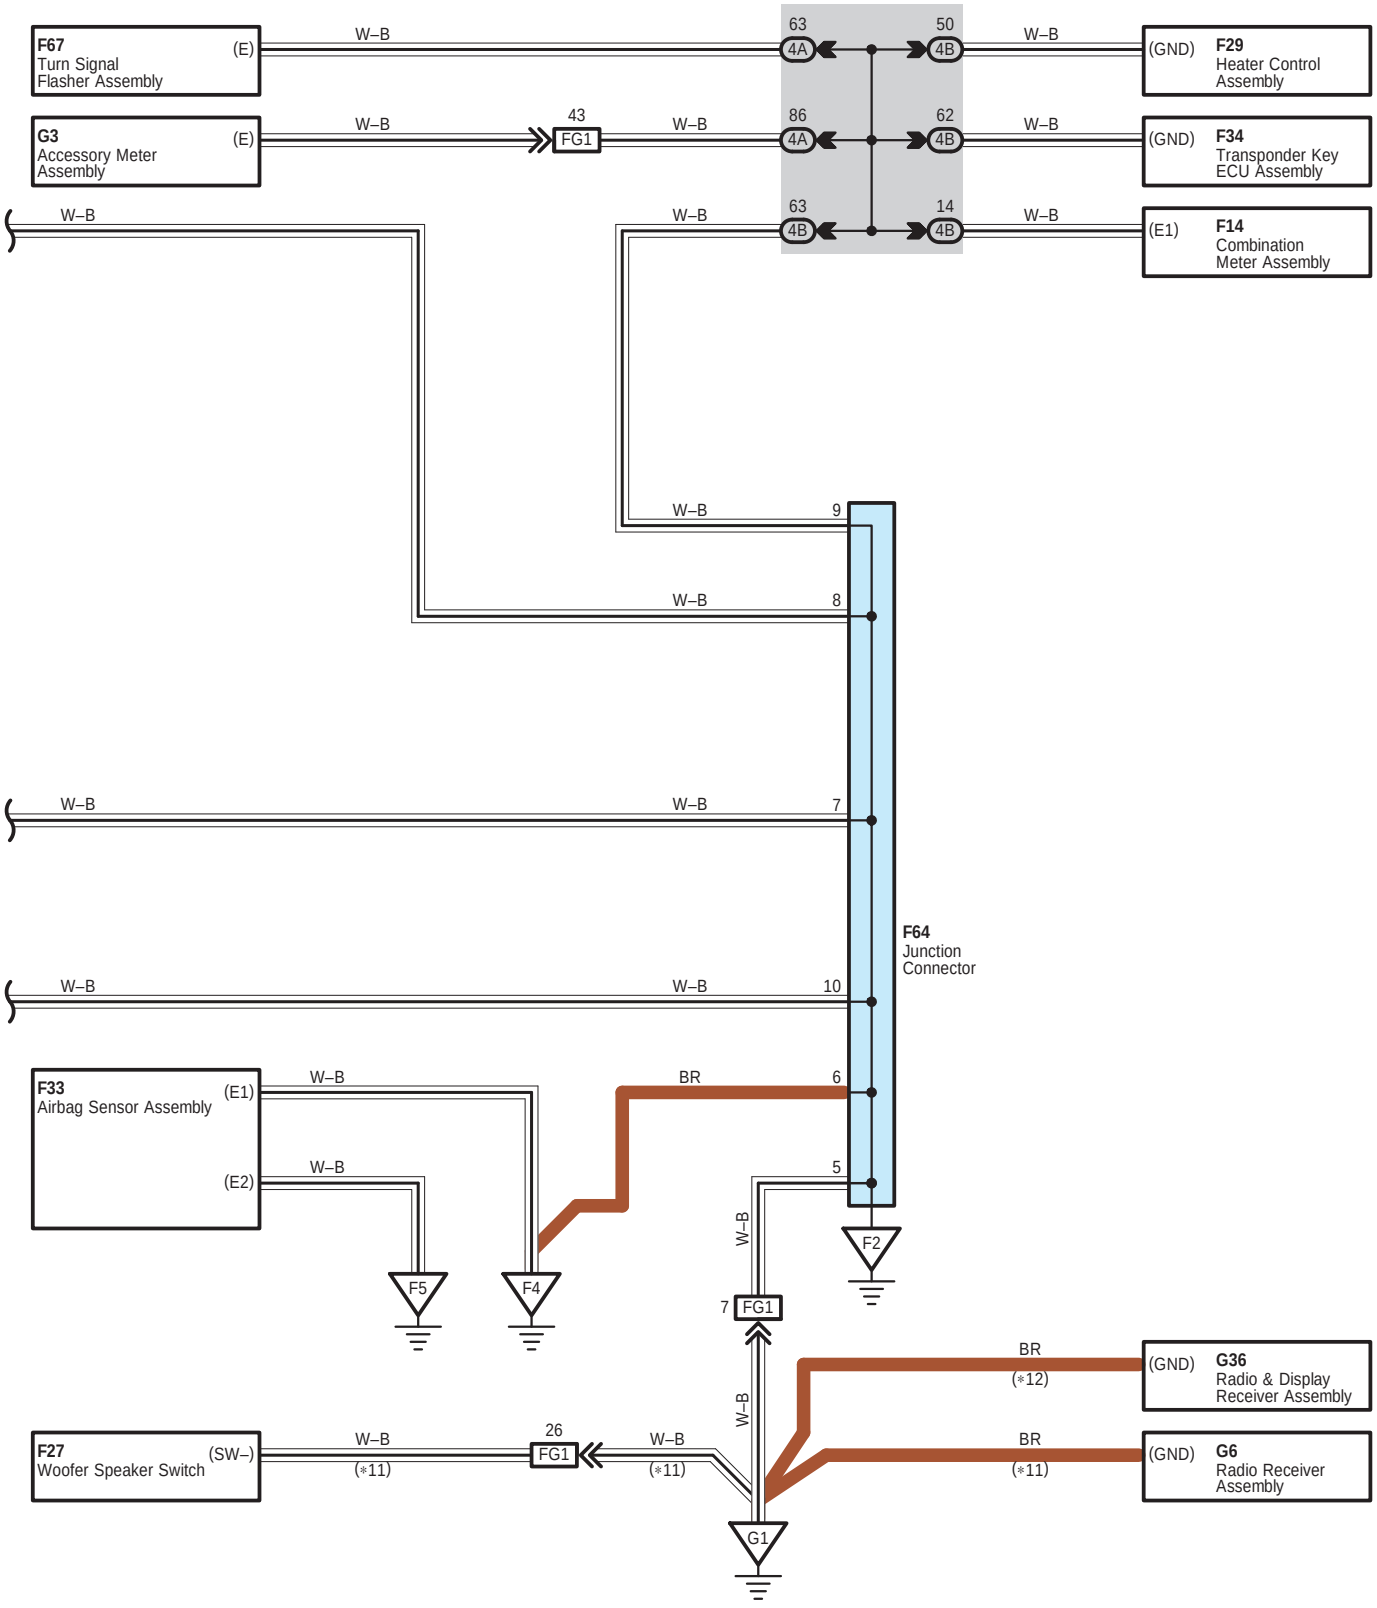

A50
Air Pump Assembly
(APHG)
(GND)
BR
(*17)
9
AB2
BR
(*17)
W–B
(*17)
10
AB2
W
(*17)
W
(*17)
B39
ECM
(ME01)
(E03)
(E02)
(E04)
(E05)
(E01)
W–B
B2
W–B
(GND) B7 Ignition Coil Assembly No. 1
(GND) B8 Ignition Coil Assembly No. 2
(GND) B9 Ignition Coil Assembly No. 3
(GND) B10 Ignition Coil Assembly No. 4
(GND) B11 Ignition Coil Assembly No. 5
(GND) B12 Ignition Coil Assembly No. 6
(GND) B53 Air Switching Valve Assembly RH
(GNDL) B54 Air Switching Valve Assembly LH
(GND1) B47 Transfer Shift Actuator Assembly
(GND)
(Shielded)
BR
15
16
17
18
19
20
21
22
B49 Junction Connector
BR
(*19)
(ECC) F23 Spiral Cable Sub–Assembly
36 4C
58 4C
64 5B
52 5B
18 BF1
15 BF2
34 FO1
(MGND) O21 Canister Pump Module
2 AB2
(E) A49 Air Injection Control Driver
F13
DLC3
(SG)
2 BF1
(E1) B38 ECM
B1


S9
Inner Rear View Mirror Assembly
(E)
W–B
(∗10 ∗24)
S4
Inner Rear View Mirror Assembly
(E)
W–B
(∗9 ∗24)
S5
Inner Rear View Mirror Assembly
(E)
W–B
(∗23)
S8
Sliding Roof Control ECU
(E)
W–B
(∗20)
S10
Sliding Roof Control ECU
(E)
W–B
(∗21)
W–B
17
SU1
W–B
6
5
W–B
(GND)
U2
Map Light Assembly
4
W–B
(4WD)
(E)
U3
Traction Control Switch
3
W–B
(4WD)
(E)
U4
Downhill Assist Control Switch
1
W–B
(E)
U6
VSC Off Switch
U7
Junction Connector
9
FS1
W–B
4
A
1
B
W–B
(E)
F30
Power Point Socket Assembly
F20
Windshield Wiper Switch Assembly
(EW)
W–B
5
A
2
B
W–B
(MGND)
F14
Combination Meter Assembly
3
B
W–B
S3
No. 1 Room Light Assembly
(E)
W
W
23
FS1
W–B
2
A
S6
Visor Assembly LH
(E)
W
W–B
1
A
6
B
S7
Visor Assembly RH
(E)
W
W–B
3
A
5
B
W–B
(GND2)
F10
Main Body ECU
F55(A), F56(B)
Junction Connector
W–B
∗ 7 : Outer Rear View Mirror w/ Turn Signal Light
∗ 8 : Outer Rear View Mirror w/o Turn Signal Light
∗ 9 : Before Aug. 2010 Production
∗10 : From Aug. 2010 Production
∗11 : Before Aug. 2013 Production
∗12 : From Aug. 2013 Production
∗13 : w/ Seat Position Memory
∗20 : Before Dec. 2016 Production
∗21 : From Dec. 2016 Production
∗23 : w/ Parking Assist (Rear View Monitor)
∗24 : w/o Parking Assist (Rear View Monitor)
4
2B
IG1 No. 1 Relay
IG1 No. 2 Relay
IG1 No. 3 Relay
IG1 No. 5 Relay
Main Body ECU
(GND1)
DOOR LOCK Relay
D–DR UNLOCK Relay
DR UNLOCK Relay
BK DR LOCK Relay
ACC Relay

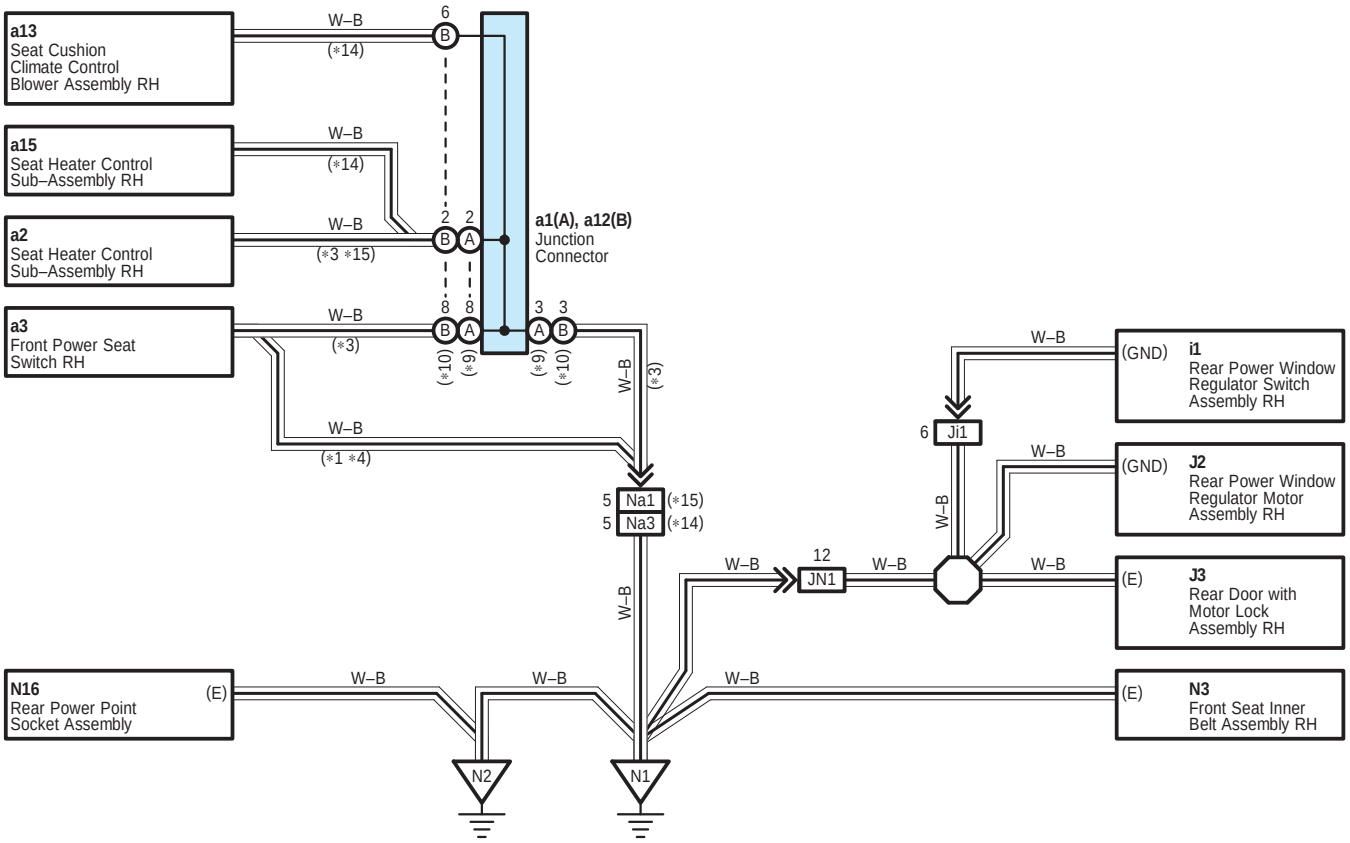

H4
Outer Rear View Mirror Assembly RH
(MLP–)
(E)
(HR–)
H3
Outer Rear View Mirror Assembly RH
(HR–)
H2
Front Power Window Regulator Motor Assembly RH
(GND)
H5
Front Door with Motor Lock Assembly RH
(E)
g1
Front Power Window Regulator Switch Assembly RH
(GND)
g2
Door Control Switch Assembly RH
(E)
W–B
(*7)
(*8)
Hg1
HF2
H8
Junction Connector
H1
I8
Junction Connector
I1
I4
Outer Rear View Mirror Assembly LH
I3
Outer Rear View Mirror Assembly LH
I2
Front Power Window Regulator Motor Assembly LH
I5
Front Door with Motor Lock Assembly LH
h1
Multiplex Network Master Switch Assembly
h3
Seat Memory Switch
Ih1
IF2
F63
Junction Connector
F1
FA1
A7
Skid Control ECU with Actuator Assembly
F46
Four Wheel Drive Control ECU
m1
No. 1 Power Outlet Socket Assembly
m2
No. 2 Power Outlet Socket Assembly
m3
No. 3 Power Outlet Socket Assembly
Fm1
(*12)
F65
Junction Connector
F43
Blower with Fan Motor Sub–Assembly
F3
F57(A), F58(B)
Junction Connector
F48
No. 2 Power Point Socket Assembly
(*11)

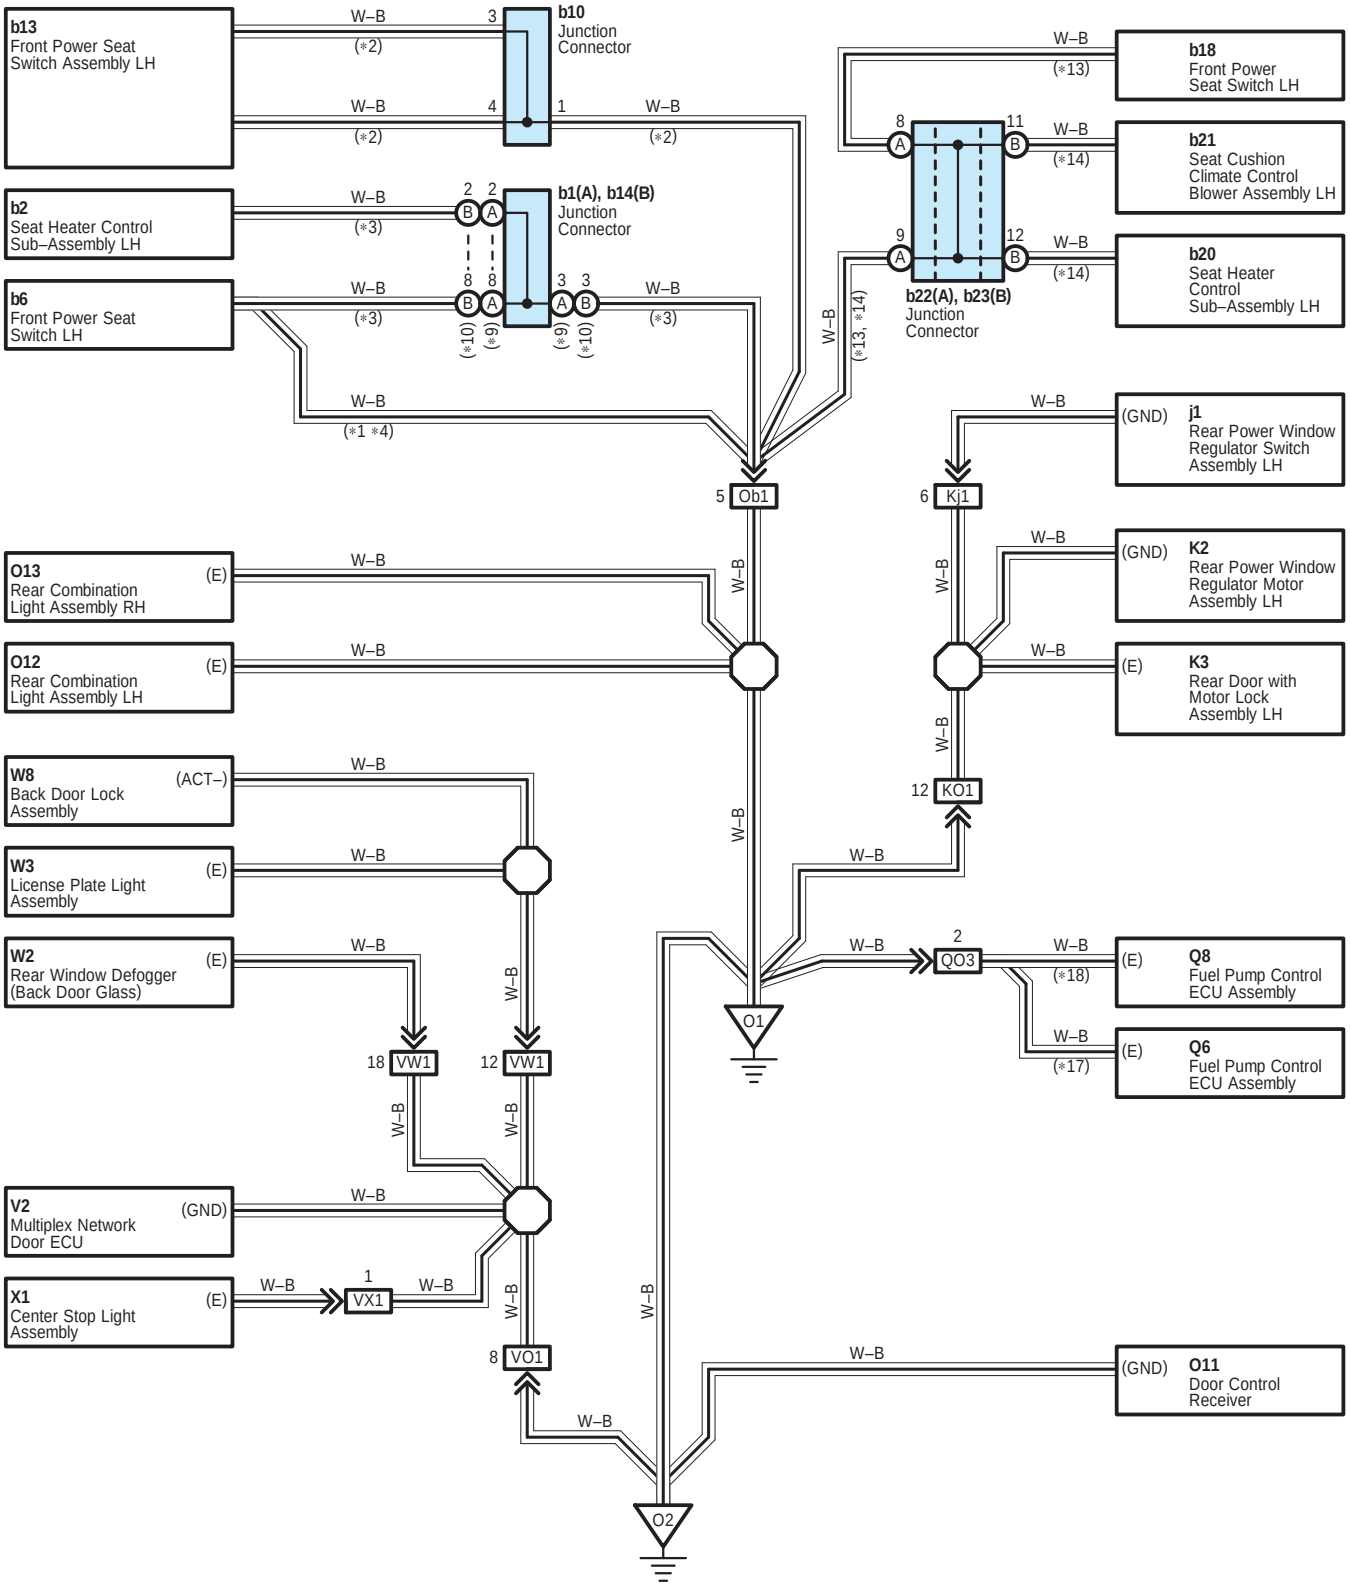

F77
Back Sonar or Clearance Sonar Switch Assembly
(E)
W–B
(*16)
34
4B
46
4C
W–B
(*12)
(–DP)
F23
Spiral Cable Sub–Assembly
z3
Key Inter Lock Solenoid
(KLS–)
G–B
2
Fz2
W–B
34
4C
10
4B
W–B
(CG)
F13
DLC3
F18
Un–Lock Warning Switch Assembly
(UN–)
W–B
33
4C
70
4A
W–B
22
2C
BK/UP Relay
F32
Security Indicator Light Assembly
(E)
W–B
(*11)
59
4B
10
4C
W–B
(LFG)
F22
Headlight Dimmer Switch Assembly
F80
Refreshing Seat Switch
(E)
W–B
(*14)
11
4C
W–B
(EL)
F4
Outer Mirror Switch Assembly
(E)
W–B
33
4B
35
4B
W–B
W–B
A41
Stop Light Switch Assembly
(GND)
W–B
(*12)
31
FA2
W–B
(*12)
58
4B
9
4C
W–B
(ESS)
F19
Steering Sensor
F73
Transfer Position Switch
(GND)
W–B
30
5C
77
5A
W–B
(GND)
F35
Telltale Light Assembly
f2
Seat Heater Switch LH
(E)
W–B
13
Ff1
W–B
42
5C
88
5A
W–B
(L)
F49
Glove Box Light Assembly
f3
Seat Heater Switch RH
(E)
W–B
12
Ff1
W–B
43
5C
54
5C
W–B
(E)
F76
Transmission Control Switch
f1
Back Door Power Window Regulator Switch Assembly
(E)
W–B
14
Ff1
W–B
44
5C
6
5C
W–B
(GND)
F36
Yaw Rate Sensor Assembly
n1
Hazard Warning Signal Switch Assembly
(E)
W–B
2
Fn1
W–B
41
5A
65
5A
W–B
F51
ECM
(EC)
W–B
10
5B
66
5A
W–B
F47
Four Wheel Drive Control ECU
(TL1)
W–B
60
5B
F42
A/C Amplifier Assembly
(GND)
W–B
32
5A
F41
Power Steering ECU Assembly
(GND)
W–B
30
5A
F75
Shift Lock Control ECU Sub–Assembly
(E)
W–B
60
5C
F78
Clearance Warning ECU Assembly
(E)
W–B
(*16)
78
5A

∗11 : Before Aug. 2013 Production
∗12 : From Aug. 2013 Production
∗14 : w/ Climate Control Seat
∗16 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)

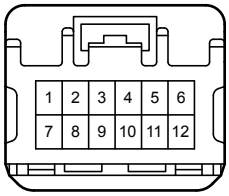


∗ 1 : w/ Power Seat (Front Passenger' s Seat)
∗ 2 : w/o Power Seat (Front Passenger' s Seat)
∗ 3 : w/ Seat Heater
∗ 4 : w/o Seat Heater
∗ 9 : Before Aug. 2010 Production
∗10 : From Aug. 2010 Production
∗13 : w/ Seat Position Memory
∗14 : w/ Climate Control Seat
∗15 : w/o Climate Control Seat
∗17 : Chile
∗18 : Except Chile

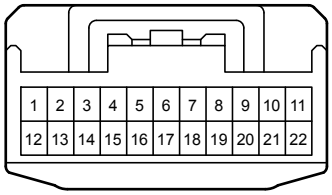



b13
Front Power Seat
Switch Assembly LH
b2
Seat Heater Control
Sub–Assembly LH
b6
Front Power Seat
Switch LH
b10
Junction
Connector
b1(A), b14(B)
Junction
Connector
b22(A), b23(B)
Junction
Connector
b18
Front Power
Seat Switch LH
b21
Seat Cushion
Climate Control
Blower Assembly LH
b20
Seat Heater
Control
Sub–Assembly LH
j1
Rear Power Window
Regulator Switch
Assembly LH
K2
Rear Power Window
Regulator Motor
Assembly LH
K3
Rear Door with
Motor Lock
Assembly LH
O13
Rear Combination
Light Assembly RH
O12
Rear Combination
Light Assembly LH
W8
Back Door Lock
Assembly
W3
License Plate Light
Assembly
W2
Rear Window Defogger
(Back Door Glass)
V2
Multiplex Network
Door ECU
X1
Center Stop Light
Assembly
Q8
Fuel Pump Control
ECU Assembly
Q6
Fuel Pump Control
ECU Assembly
O11
Door Control
Receiver
Ob1
Kj1
KO1
QO3
VW1
VX1
VO1
O1
O2
W–B
(*1 *4)
(*2)
(*3)
(*9)
(*10)
(*13, *14)
(*14)
(*17)
(*18)
(E)
(GND)
(ACT–)

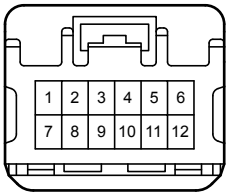
A 38
White



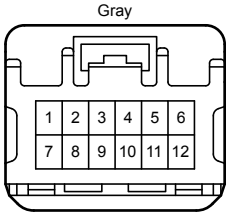

B 49
Gray



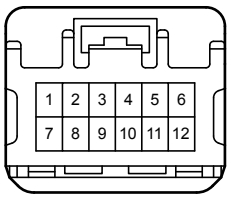

F 55
Gray



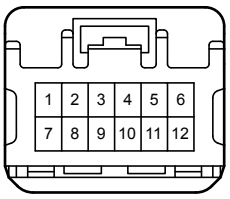

F 56
Gray



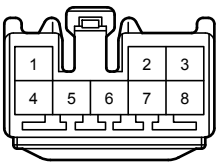

F 57
Black



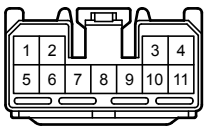

F 58
Black



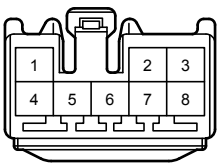

F 63
White



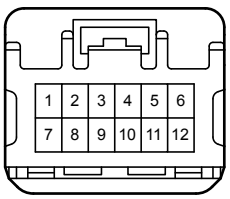

F 64
White



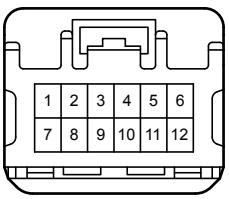

F 65
White



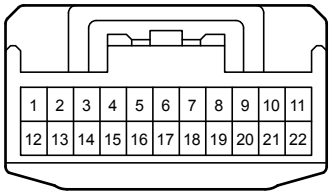

H 8
White



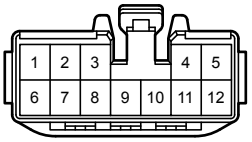

I 8
White



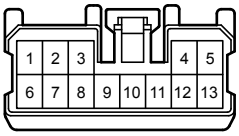

U 7
Black



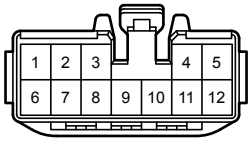

a 1
Black





a 12
White



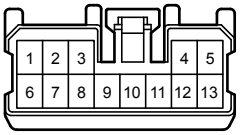

b 1
Black



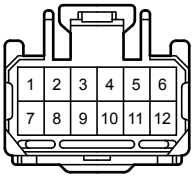

b 10
Black



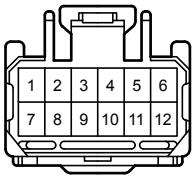

b 14
White



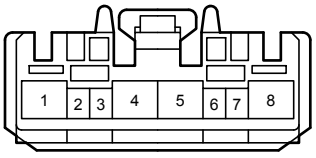

b 22
White



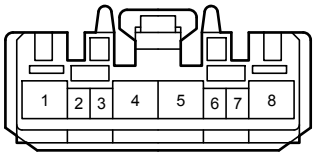

b 23
Black



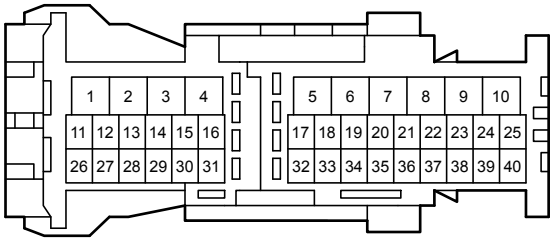

1C
White



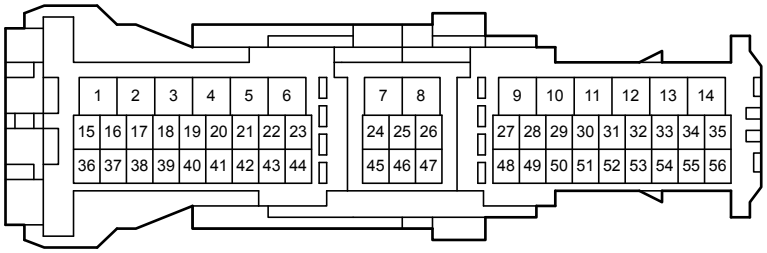

1D
White



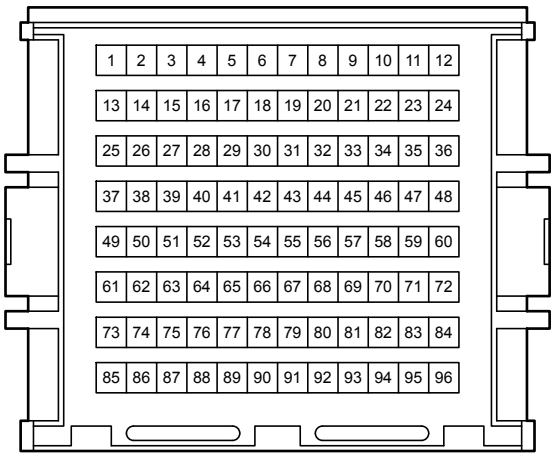
2B
White



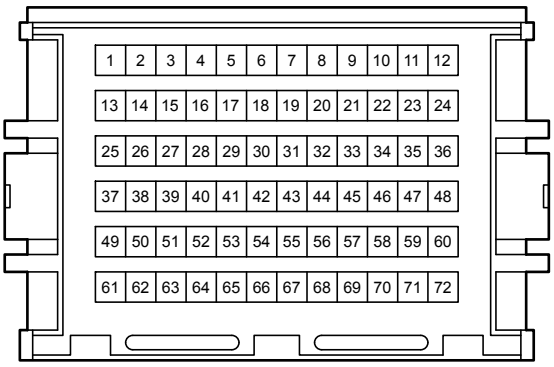

2C
White



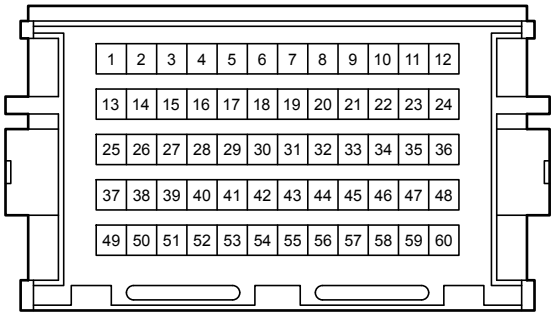

4A
White



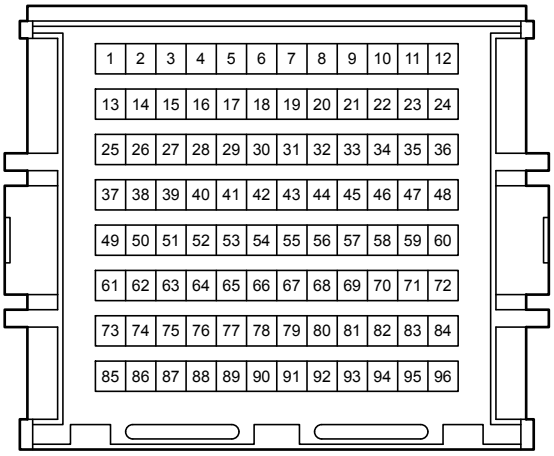

4B
White



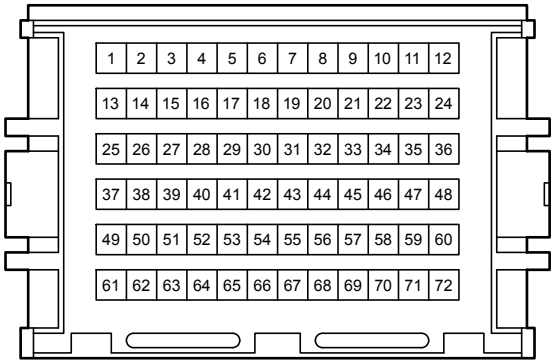

4C
White



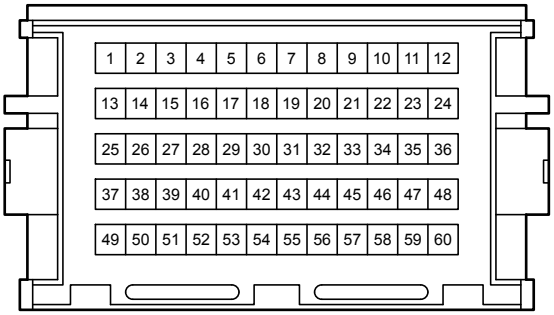

5A
White



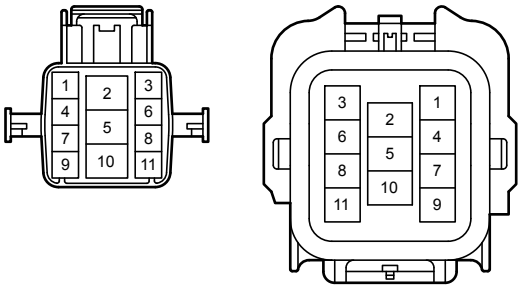
5B
White



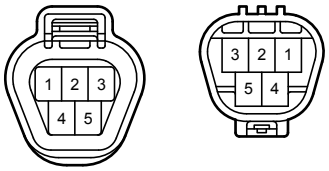

5C
White



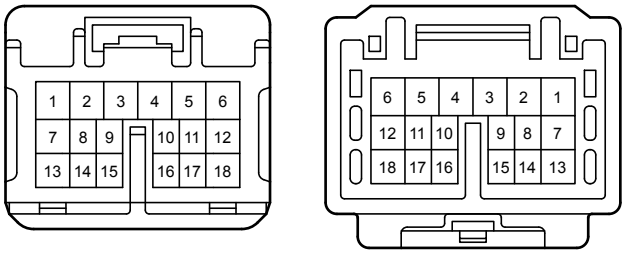

AB2
Black



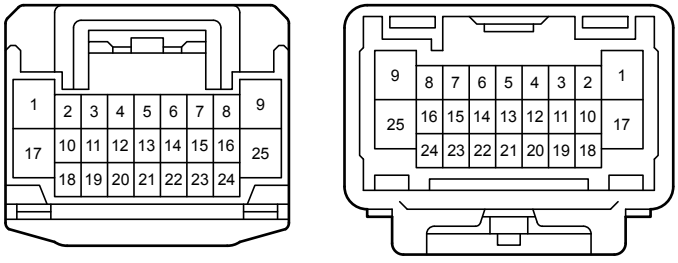

Az1
Gray



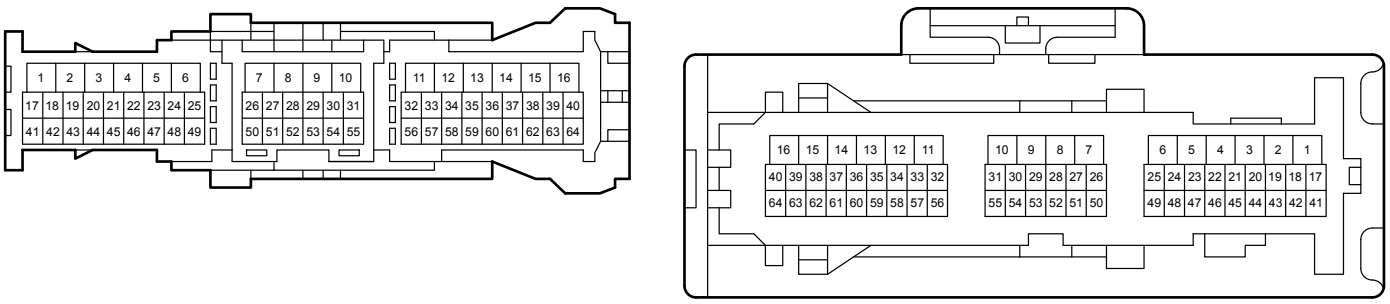

BF1
White



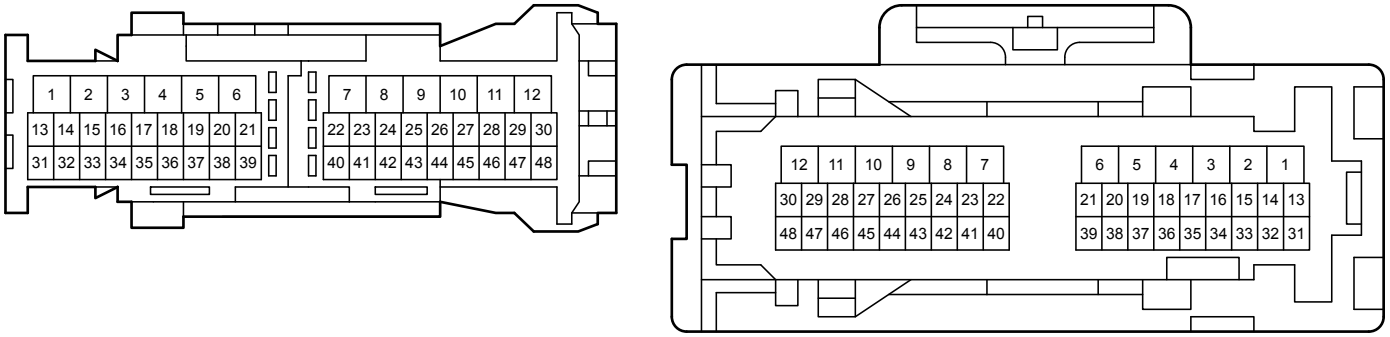

BF2
White



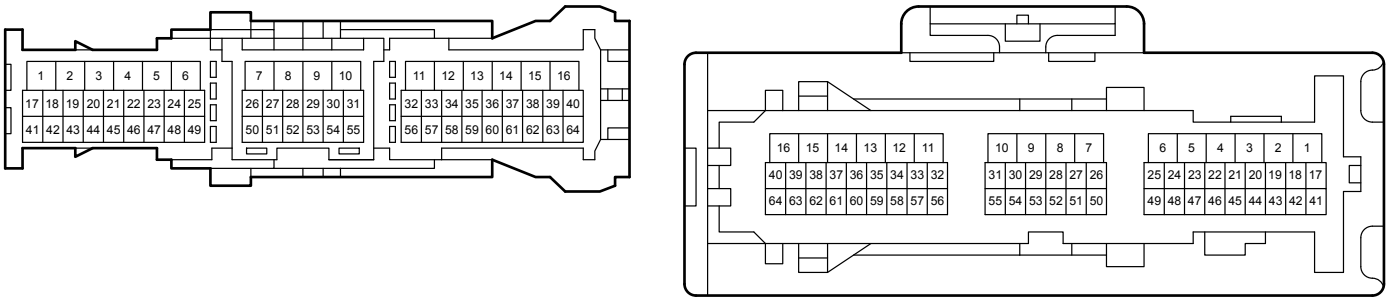
FA1
White



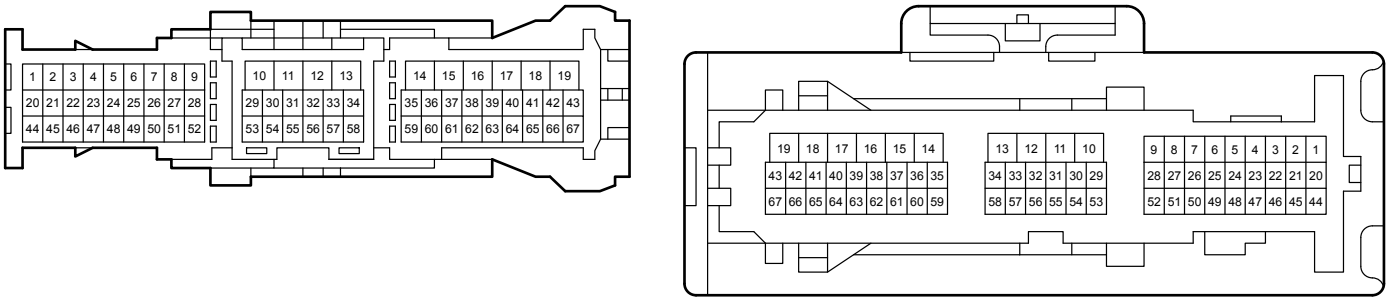

FA2
White



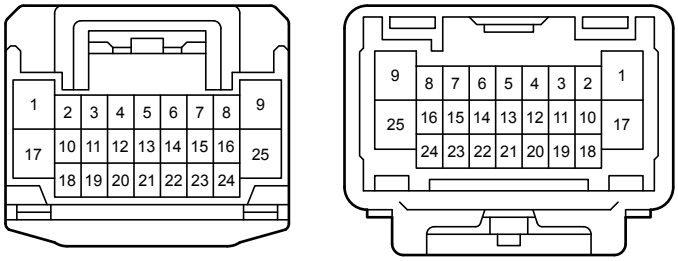

FG1
White



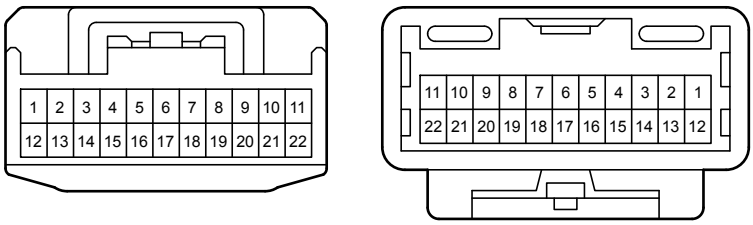

FO1
White



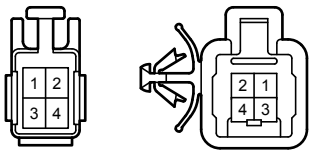
FS1
White



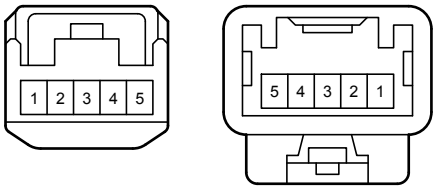

Ff1
White



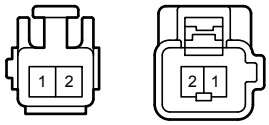

Fm1
White



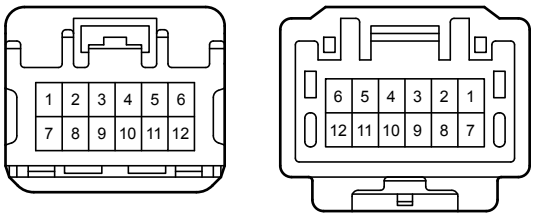

Fn1
White



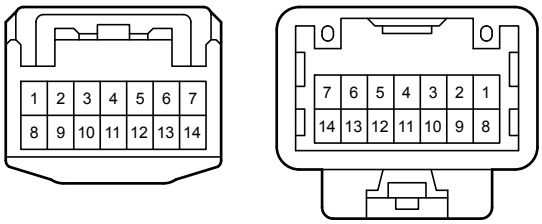

Fz2
Black



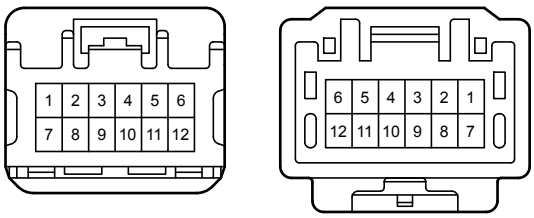

HF2
Black



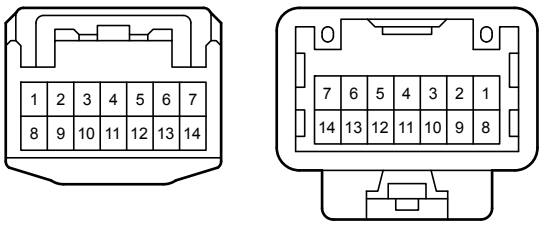

Hg1
White



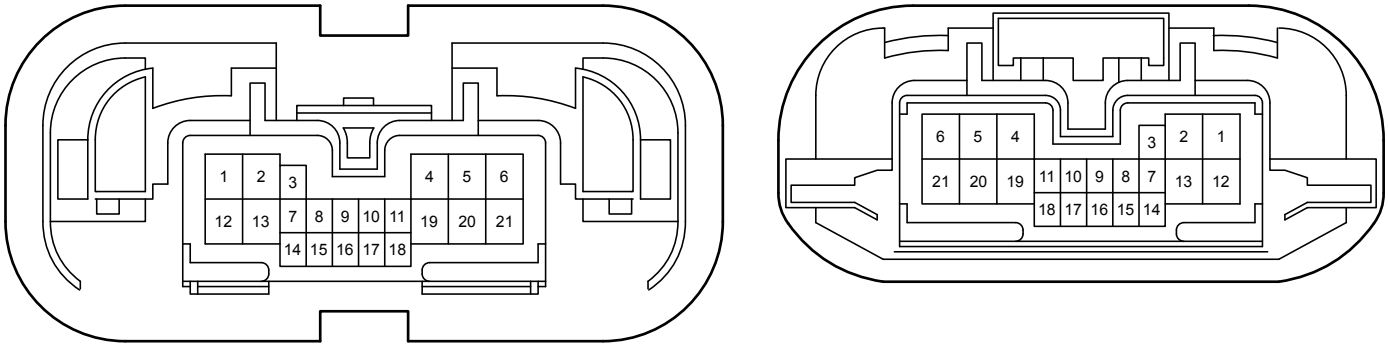

IF2
Black



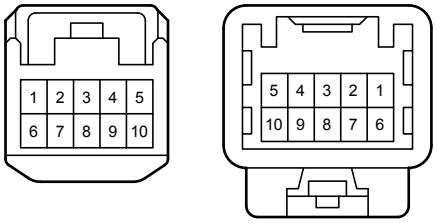

Ih1
White



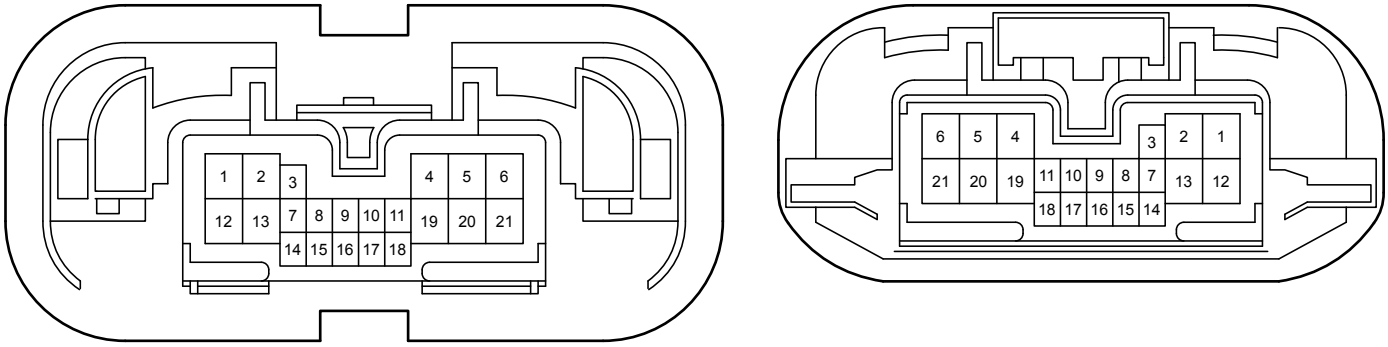
JN1
White



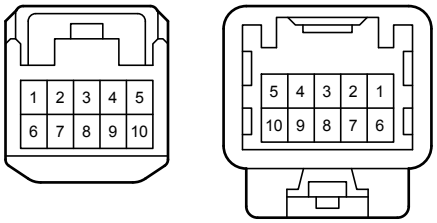

Ji1
White



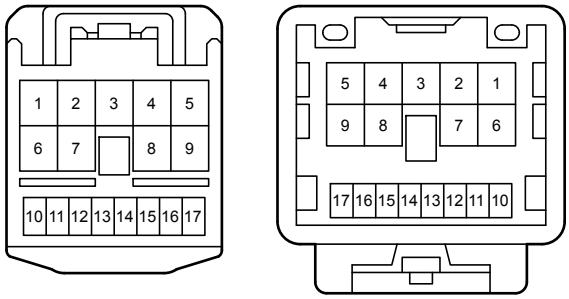

KO1
White



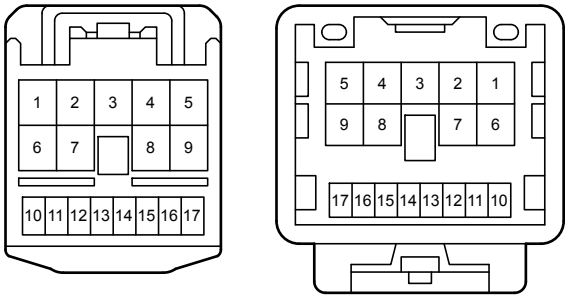

Kj1
White



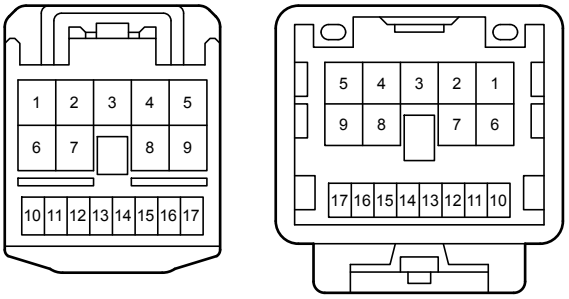

Na1
White



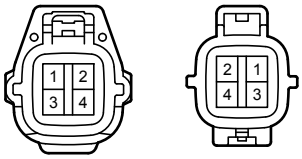
Na3
Black



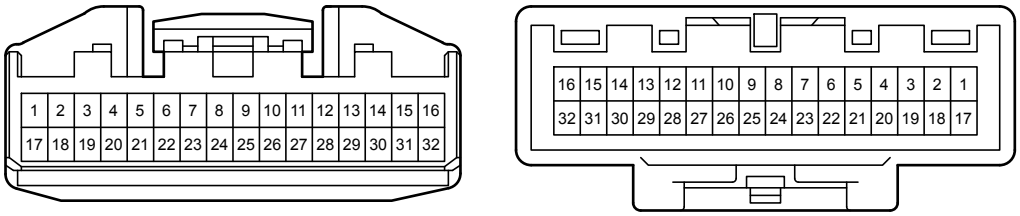

Ob1
White



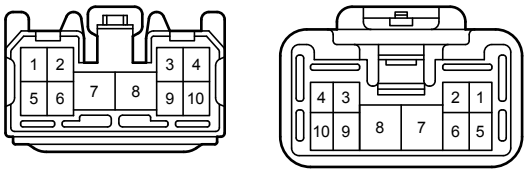

QO3
White



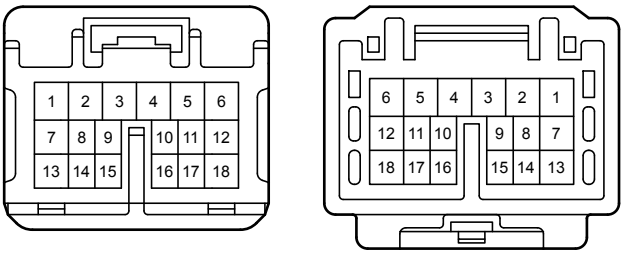

SU1
White




VO1
Blue




VW1
White




VX1
Black

