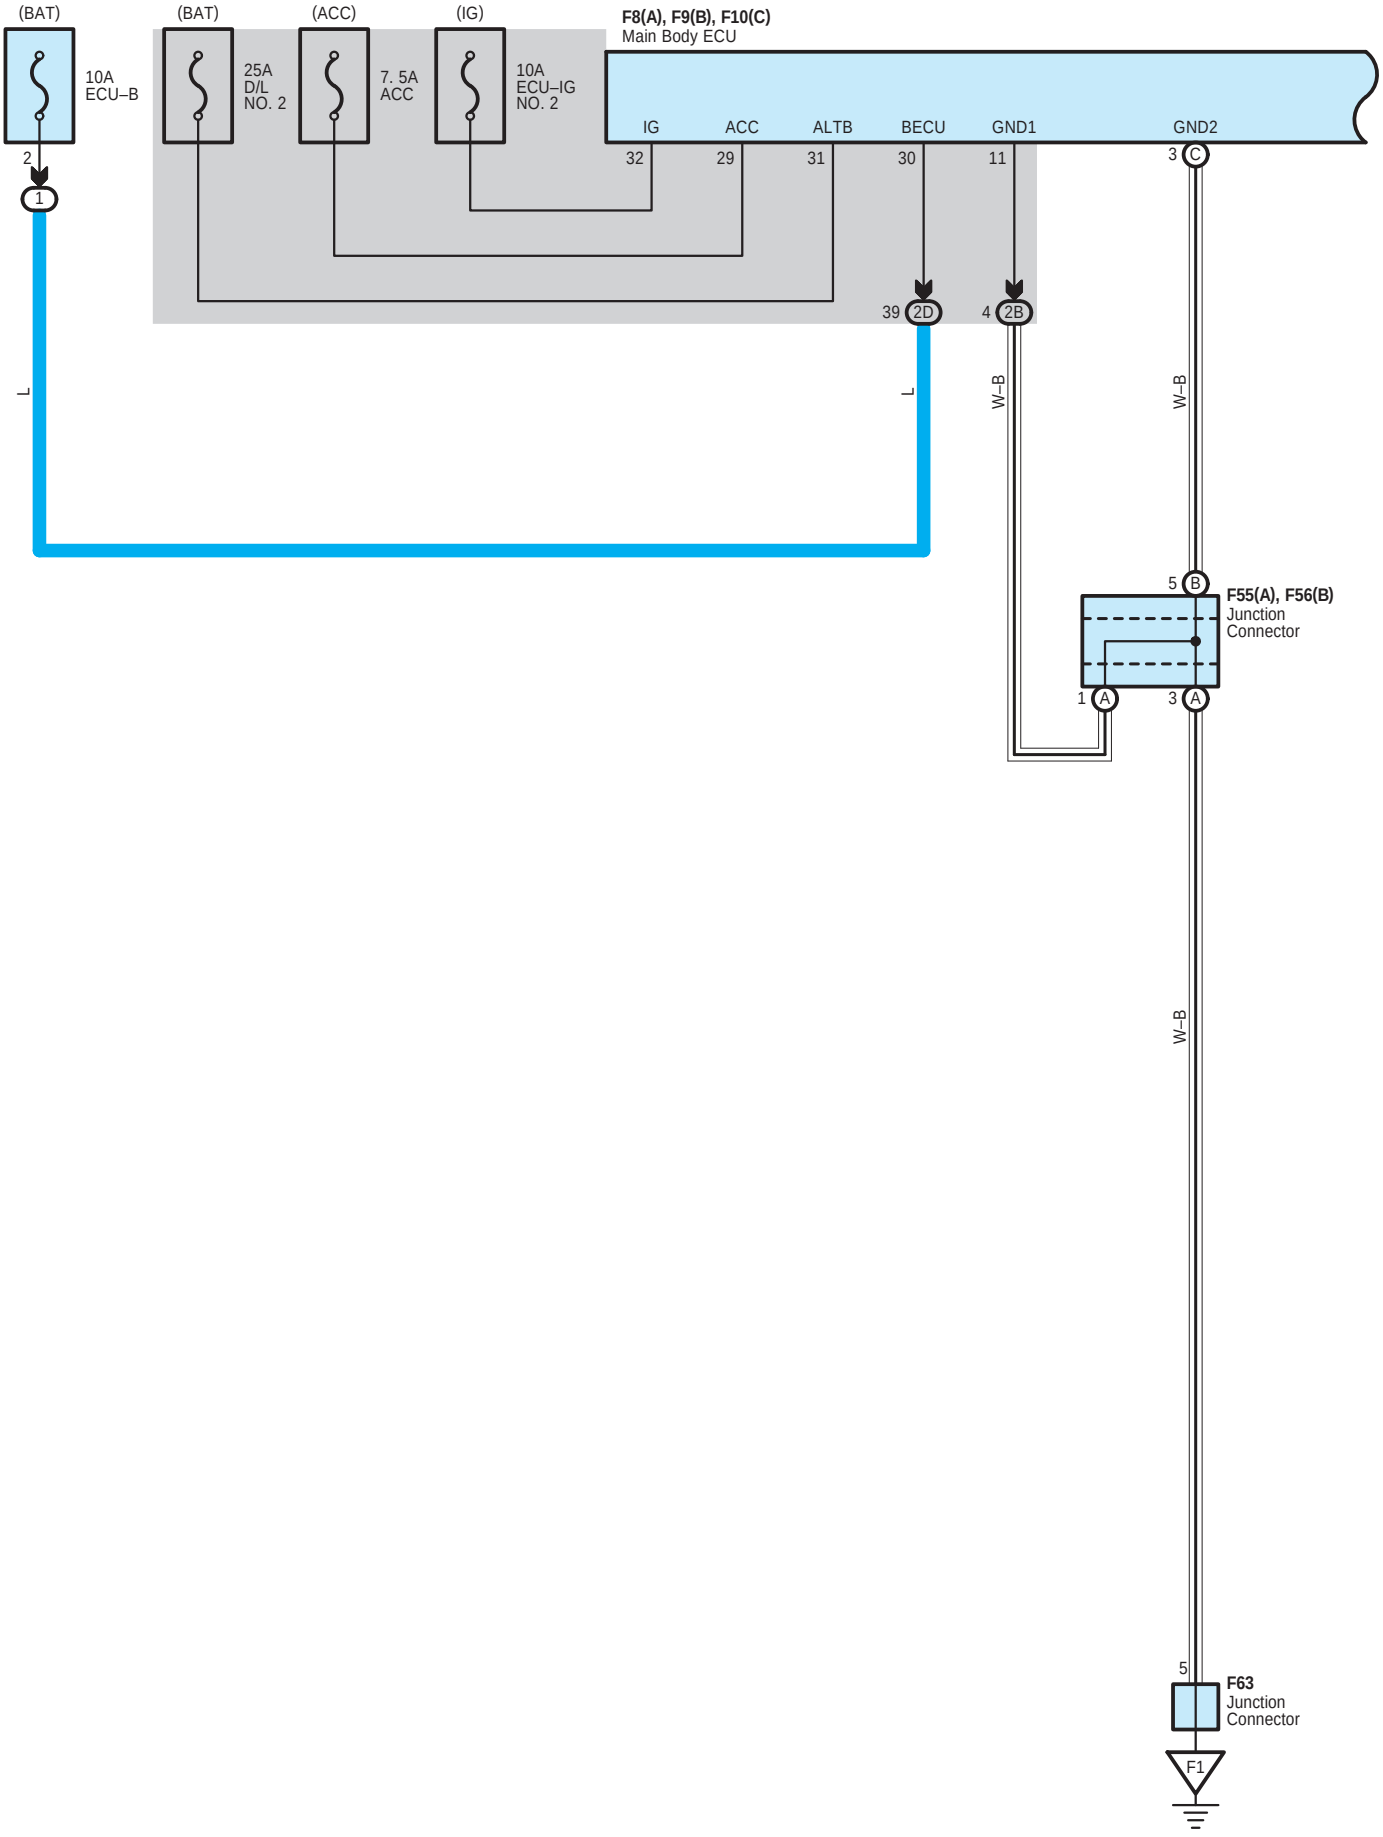
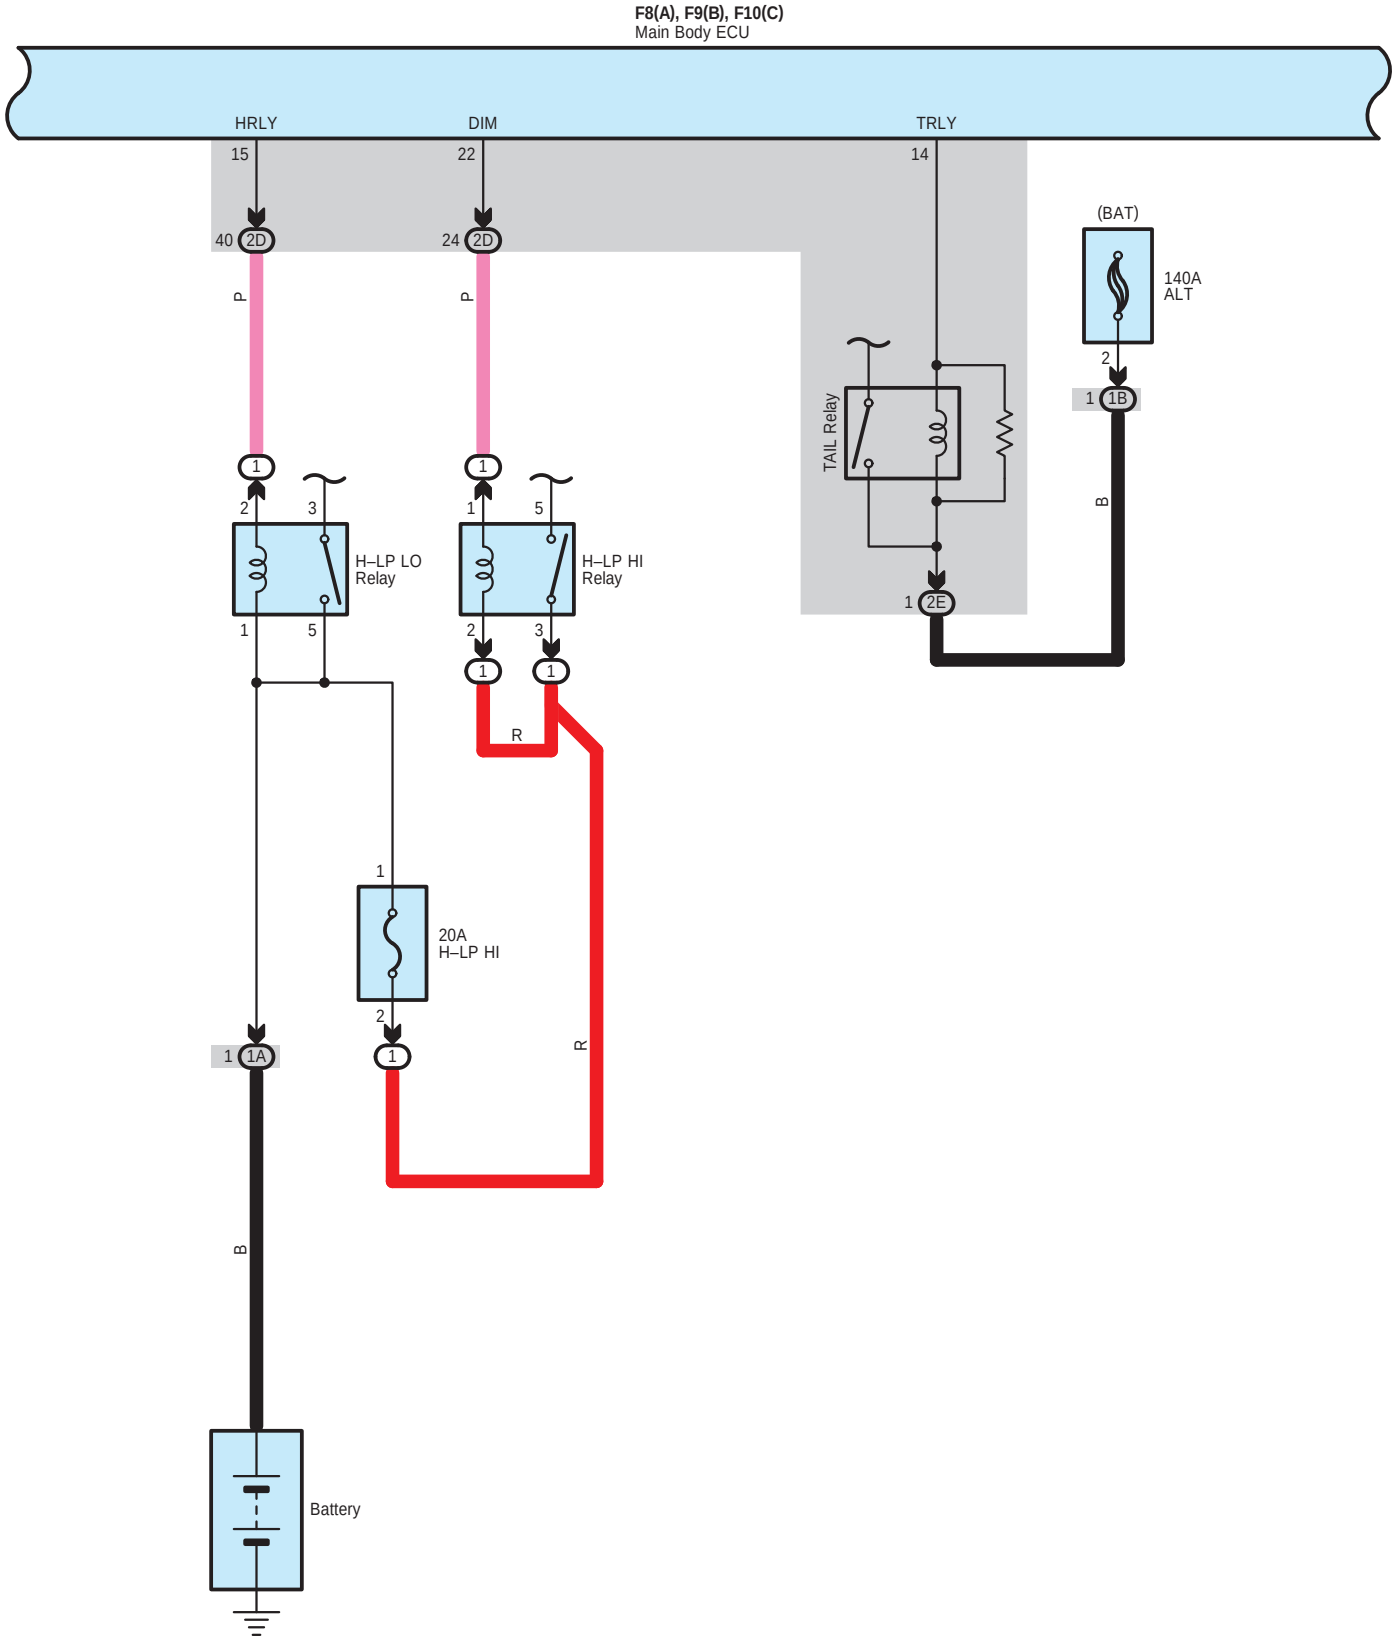
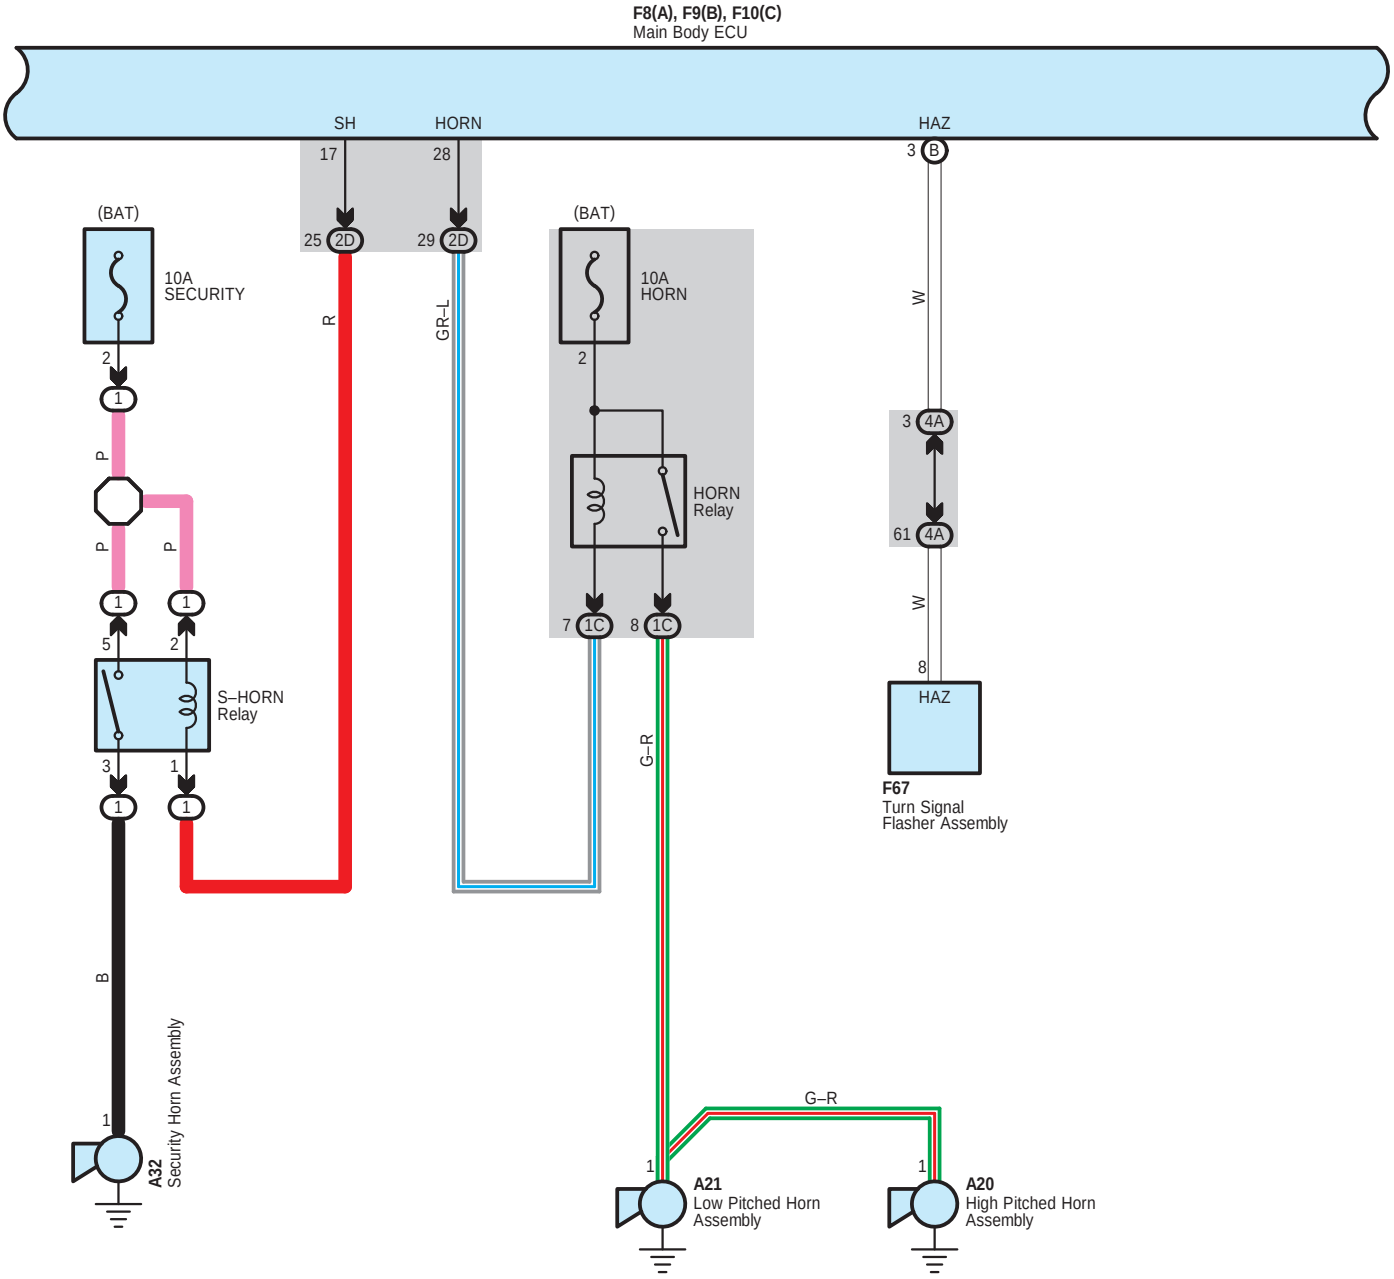
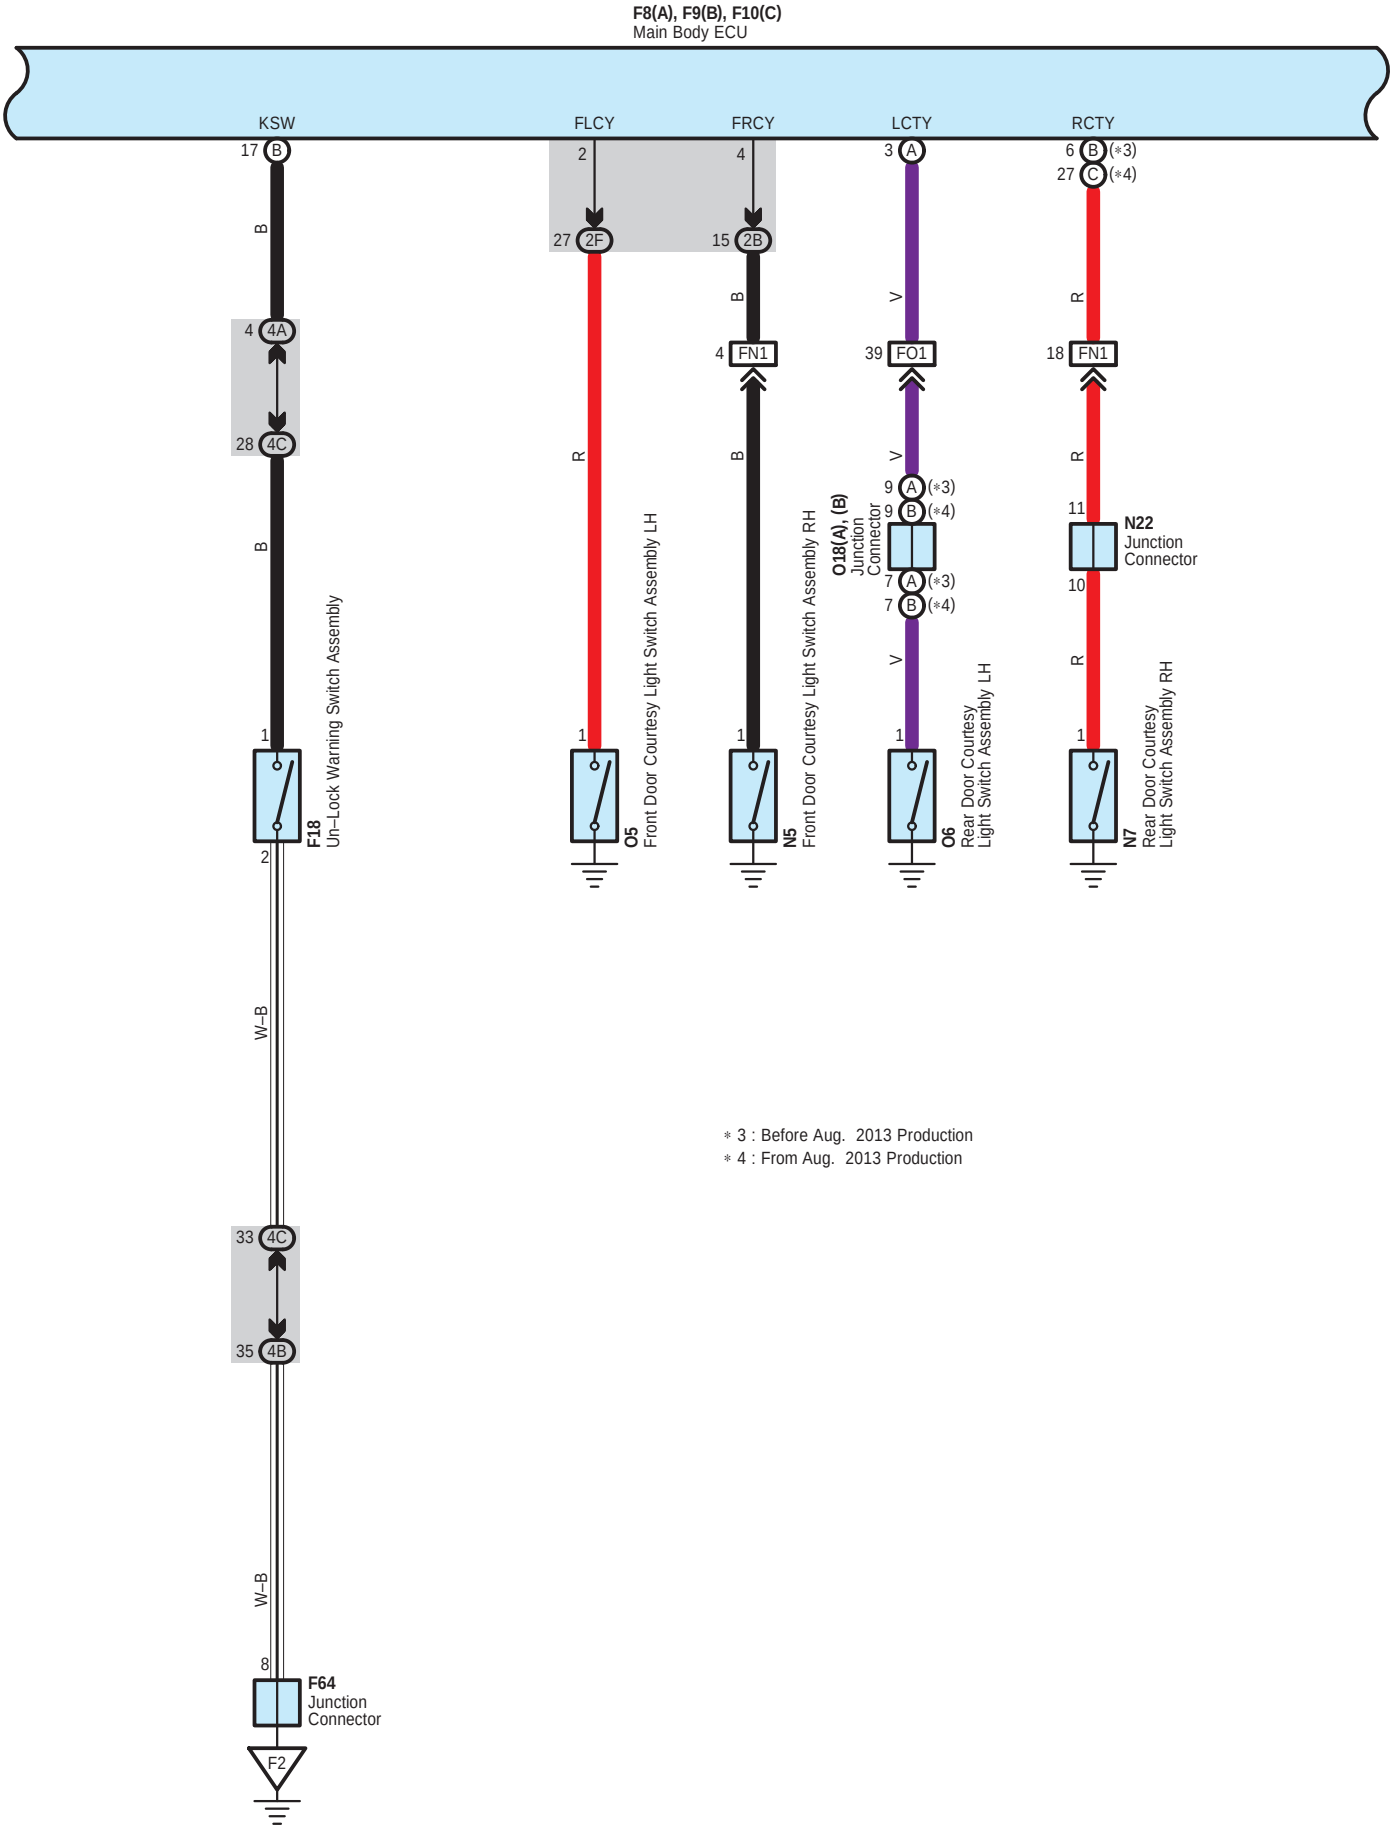
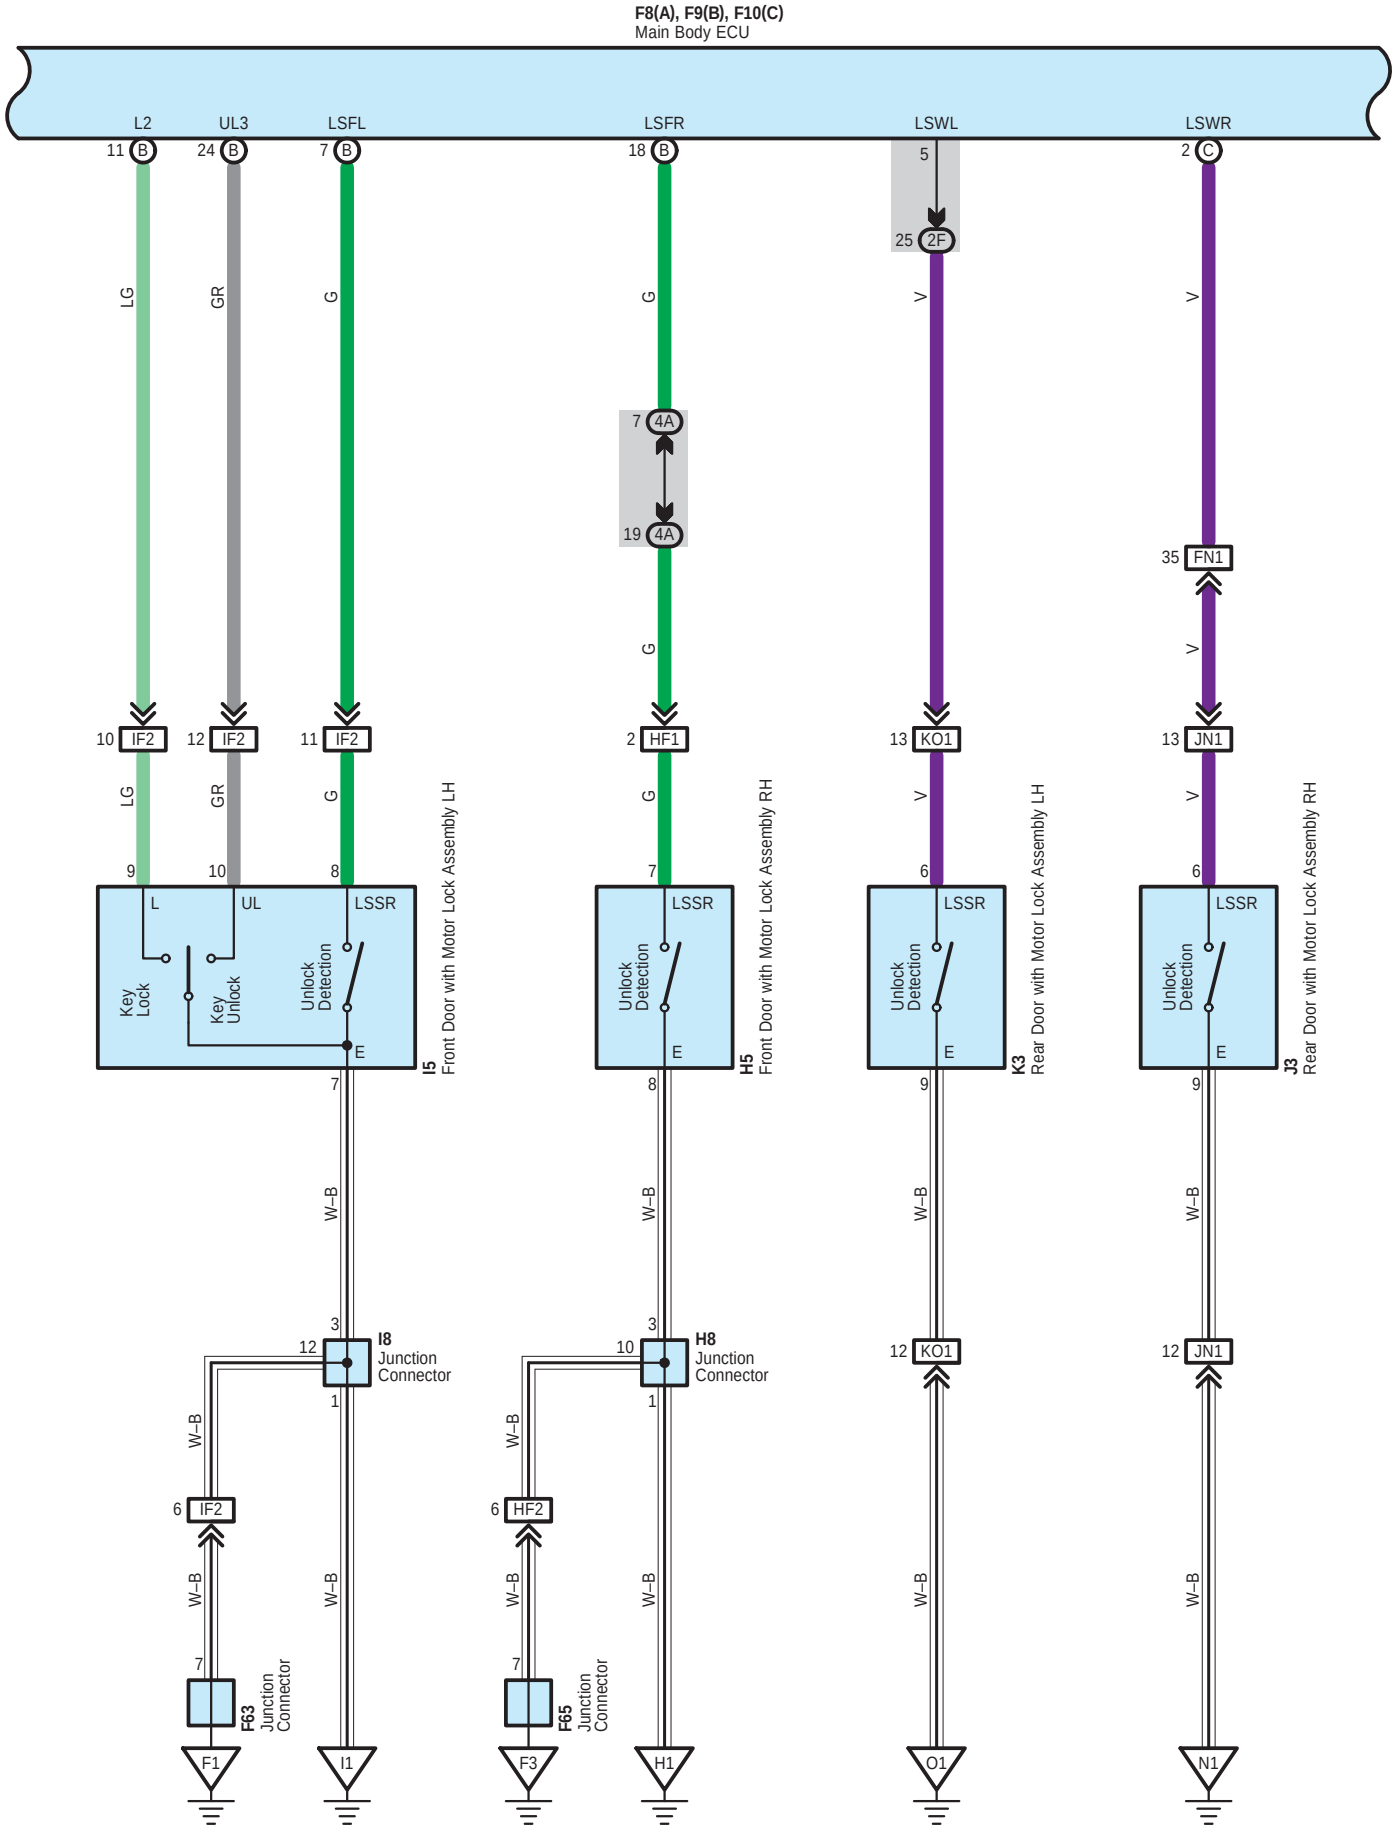
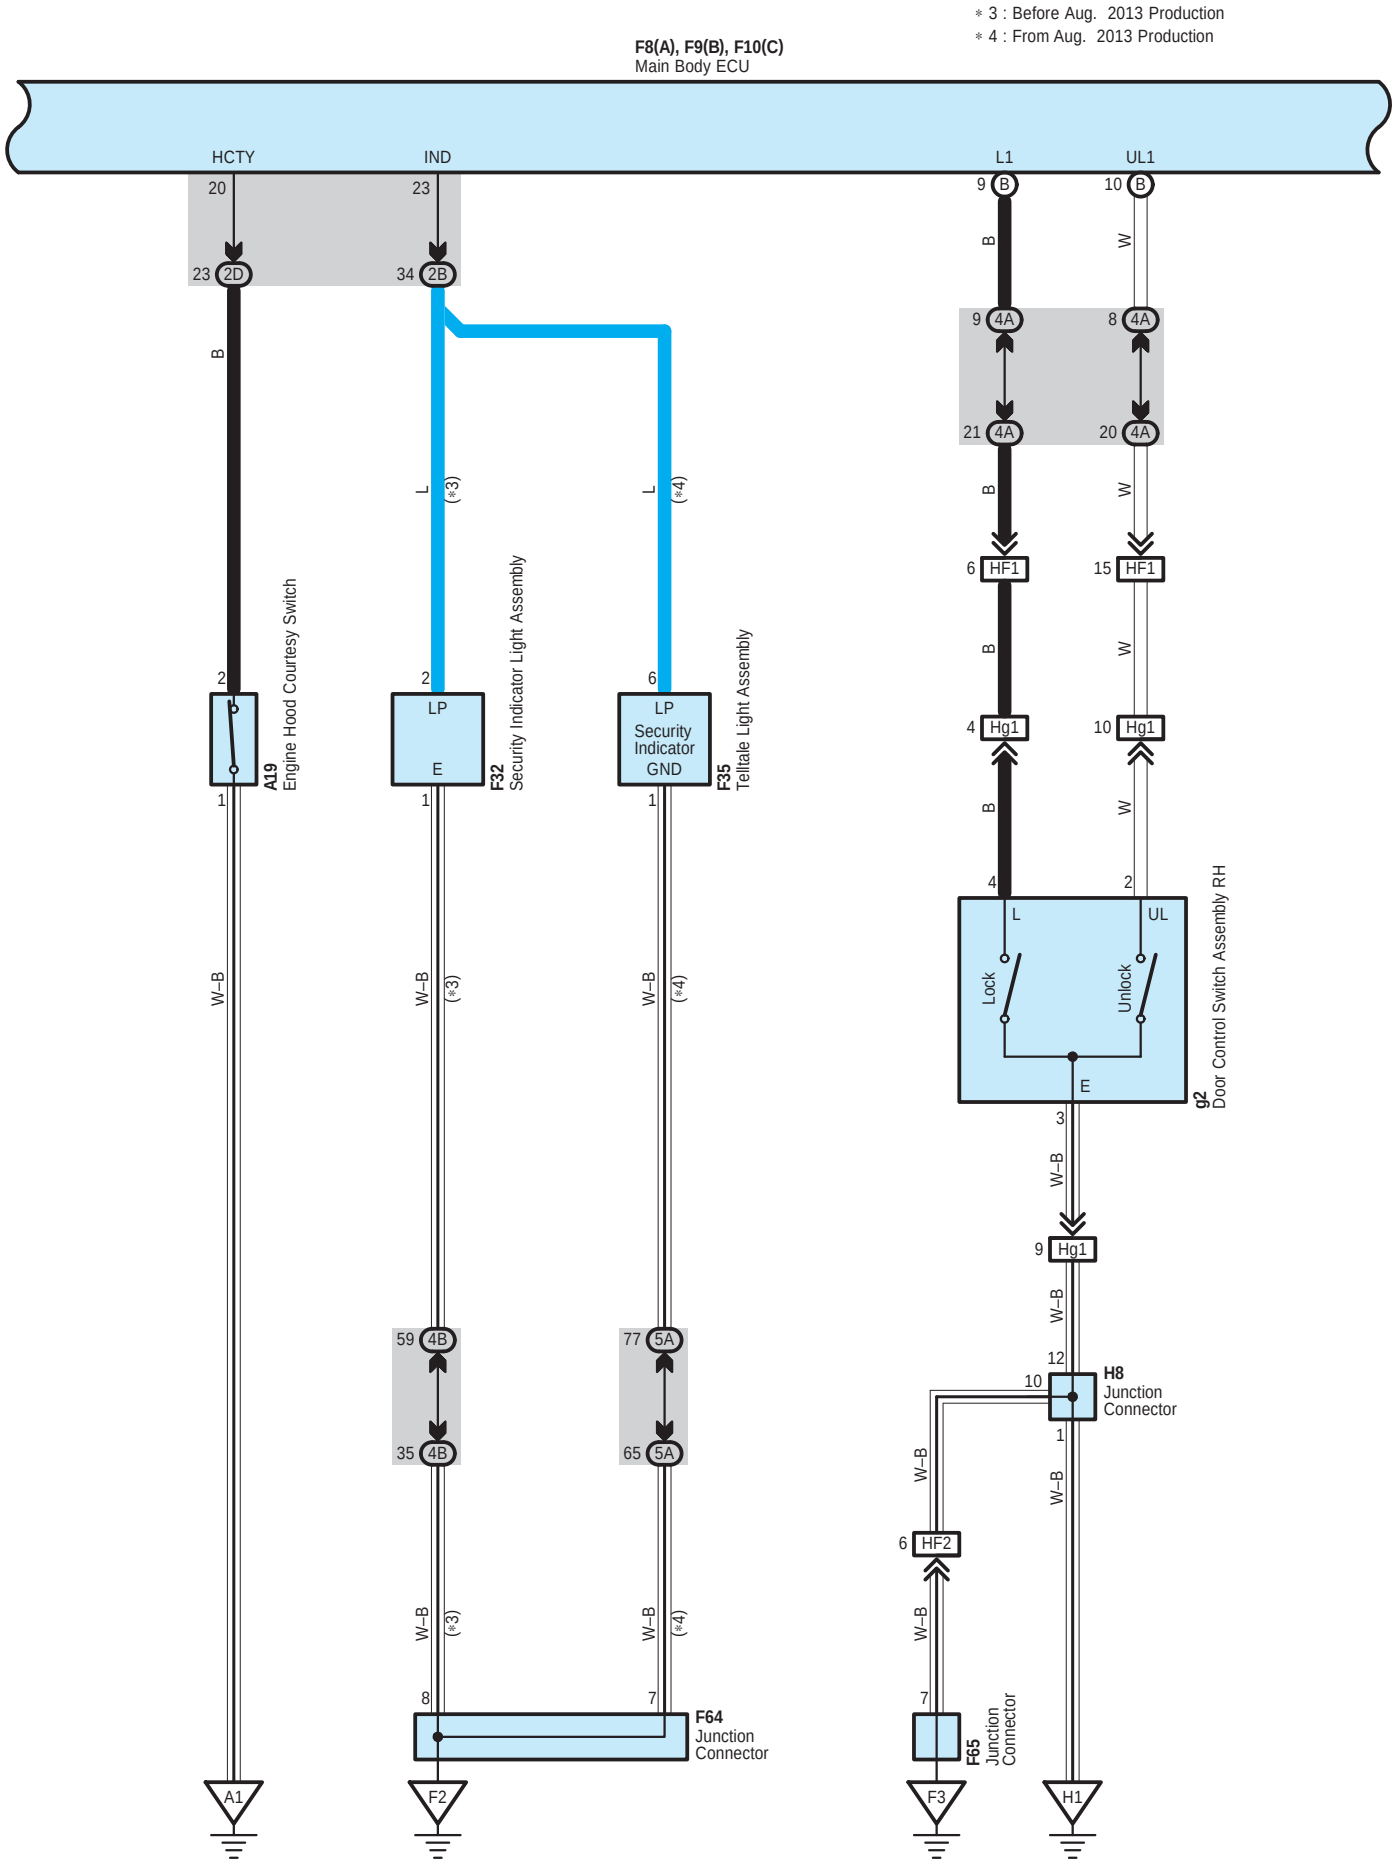

(BAT)
10A
ECU–B
2
1
(BAT)
25A
D/L
NO. 2
(ACC)
7. 5A
ACC
(IG)
10A
ECU–IG
NO. 2
F8(A), F9(B), F10(C)
Main Body ECU
IG
ACC
ALTB
BECU
GND1
GND2
32
29
31
30
11
3
C
39
2D
4
2B
L
L
W–B
W–B
5
B
F55(A), F56(B)
Junction
Connector
1
A
3
A
W–B
5
F63
Junction
Connector
F1



F8(A), F9(B), F10(C)
Main Body ECU
HRLY
DIM
TRLY
15
22
14
40 2D
24 2D
P
P
(BAT)
140A
ALT
2
1 1B
B
TAIL Relay
1
2
3
H–LP LO
Relay
1
5
1
2
3
H–LP HI
Relay
1
5
1 2E
1
1
R
1
20A
H–LP HI
2
1
R
1 1A
B
Battery



F8(A), F9(B), F10(C)
Main Body ECU
SH
HORN
HAZ
17
28
3 B
25 2D
29 2D
(BAT)
(BAT)
10A
SECURITY
10A
HORN
2
2
W
R
GR–L
3 4A
61 4A
W
P
P
P
HORN
Relay
1
1
1
7 1C
8 1C
8
HAZ
5
2
S–HORN
Relay
G–R
F67
Turn Signal
Flasher Assembly
3
1
1
1
B
G–R
1
1
1
A32
Security Horn Assembly
A21
Low Pitched Horn
Assembly
A20
High Pitched Horn
Assembly



F8(A), F9(B), F10(C)
Main Body ECU
KSW
FLCY
FRCY
LCTY
RCTY
17 B
B
4 4A
28 4C
B
1
F18
Un–Lock Warning Switch Assembly
2
W–B
33 4C
35 4B
W–B
8
F64
Junction Connector
F2
2
27 2F
R
1
O5
Front Door Courtesy Light Switch Assembly LH
4
15 2B
B
4 FN1
B
1
N5
Front Door Courtesy Light Switch Assembly RH
3 A
V
39 FO1
V
9 A (*3)
9 B (*4)
O18(A), (B)
Junction Connector
7 A (*3)
7 B (*4)
V
1
O6
Rear Door Courtesy Light Switch Assembly LH
6 B (*3)
27 C (*4)
R
18 FN1
R
11
N22
Junction Connector
10
R
1
N7
Rear Door Courtesy Light Switch Assembly RH
* 3 : Before Aug. 2013 Production
* 4 : From Aug. 2013 Production



F8(A), F9(B), F10(C)
Main Body ECU
L2
UL3
LSFL
LSFR
LSWL
LSWR
11 B
24 B
7 B
18 B
5
25 2F
2 C
LG
GR
G
G
V
V
7 4A
19 4A
35 FN1
10 IF2
12 IF2
11 IF2
2 HF1
13 KO1
13 JN1
LG
GR
G
G
V
V
9
10
8
7
6
6
L
UL
LSSR
LSSR
LSSR
LSSR
Key Lock
Key Unlock
Unlock Detection
Unlock Detection
Unlock Detection
Unlock Detection
E
E
E
E
I5 Front Door with Motor Lock Assembly LH
H5 Front Door with Motor Lock Assembly RH
K3 Rear Door with Motor Lock Assembly LH
J3 Rear Door with Motor Lock Assembly RH
7
8
9
9
W-B
W-B
W-B
W-B
3
3
12
10
12
12
I8 Junction Connector
H8 Junction Connector
KO1
JN1
1
1
W-B
W-B
W-B
W-B
6 IF2
6 HF2
W-B
W-B
7
7
F63 Junction Connector
F65 Junction Connector
F1
I1
F3
H1
O1
N1



∗ 3 : Before Aug. 2013 Production
∗ 4 : From Aug. 2013 Production
F8(A), F9(B), F10(C)
Main Body ECU
HCTY
IND
L1
UL1
20
23
9 B
10 B
23 2D
34 2B
B
W
9 4A
8 4A
21 4A
20 4A
L (∗3)
L (∗4)
6 HF1
15 HF1
2
LP
E
LP
Security Indicator
GND
4 Hg1
10 Hg1
A19
Engine Hood Courtesy Switch
F32
Security Indicator Light Assembly
F35
Telltale Light Assembly
1
W–B
4
2
L
UL
Lock
Unlock
E
g2
Door Control Switch Assembly RH
3
9 Hg1
12
10
H8
Junction Connector
1
59 4B
35 4B
77 5A
65 5A
6 HF2
8
7
F64
Junction Connector
F65
Junction Connector
A1
F2
F3
H1

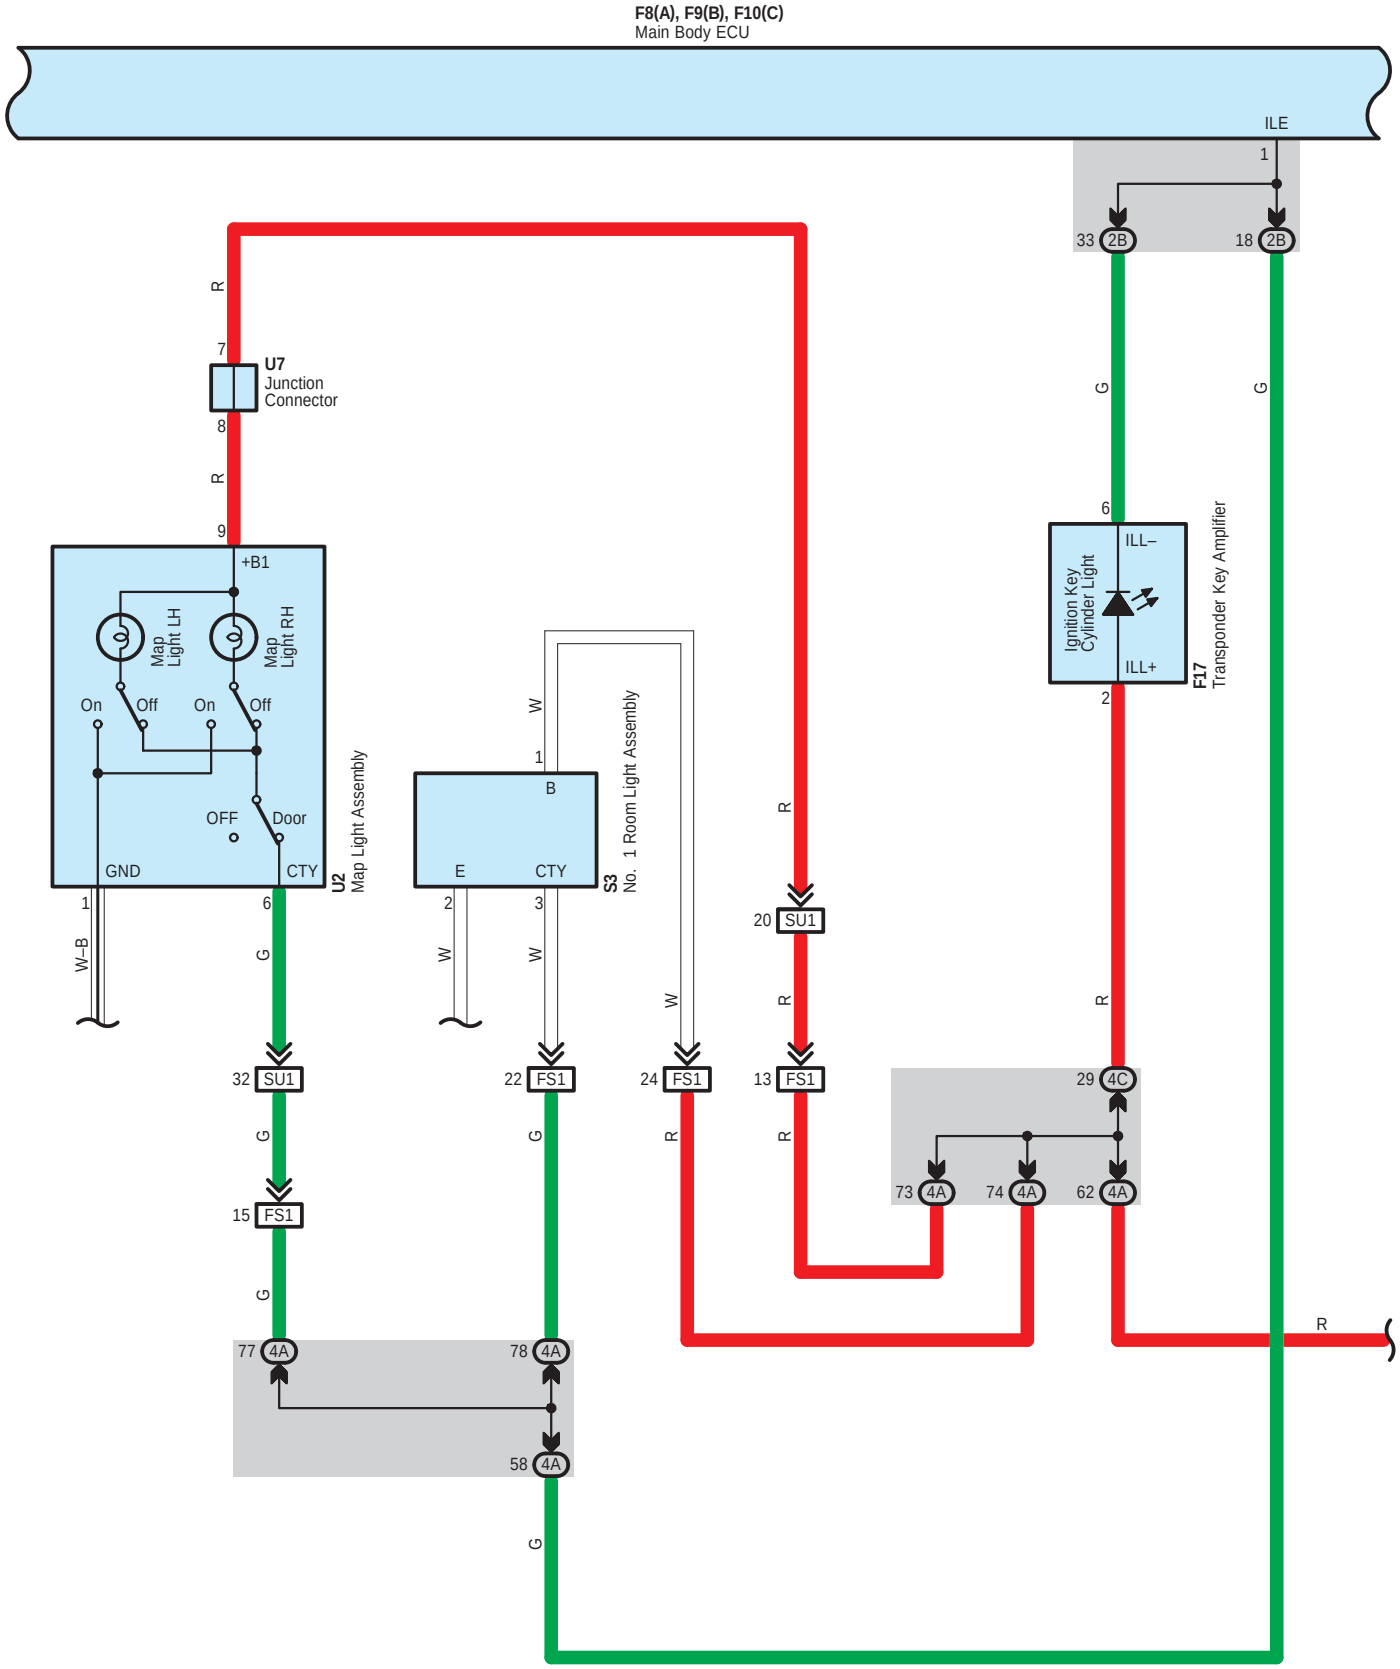
F8(A), F9(B), F10(C)
Main Body ECU
ILE
1
33 2B
18 2B
R
7
U7
Junction
Connector
8
R
9
+B1
Map
Light LH
Map
Light RH
On
Off
On
Off
OFF
Door
GND
CTY
U2
Map Light Assembly
1
W–B
6
G
32 SU1
G
15 FS1
G
77 4A
78 4A
58 4A
G
W
1
B
E
CTY
S3
No. 1 Room Light Assembly
2
W
3
W
22 FS1
G
W
24 FS1
R
20 SU1
R
13 FS1
R
G
6
Ignition Key
Cylinder Light
ILL–
ILL+
F17
Transponder Key Amplifier
2
R
29 4C
73 4A
74 4A
62 4A
R
G
R

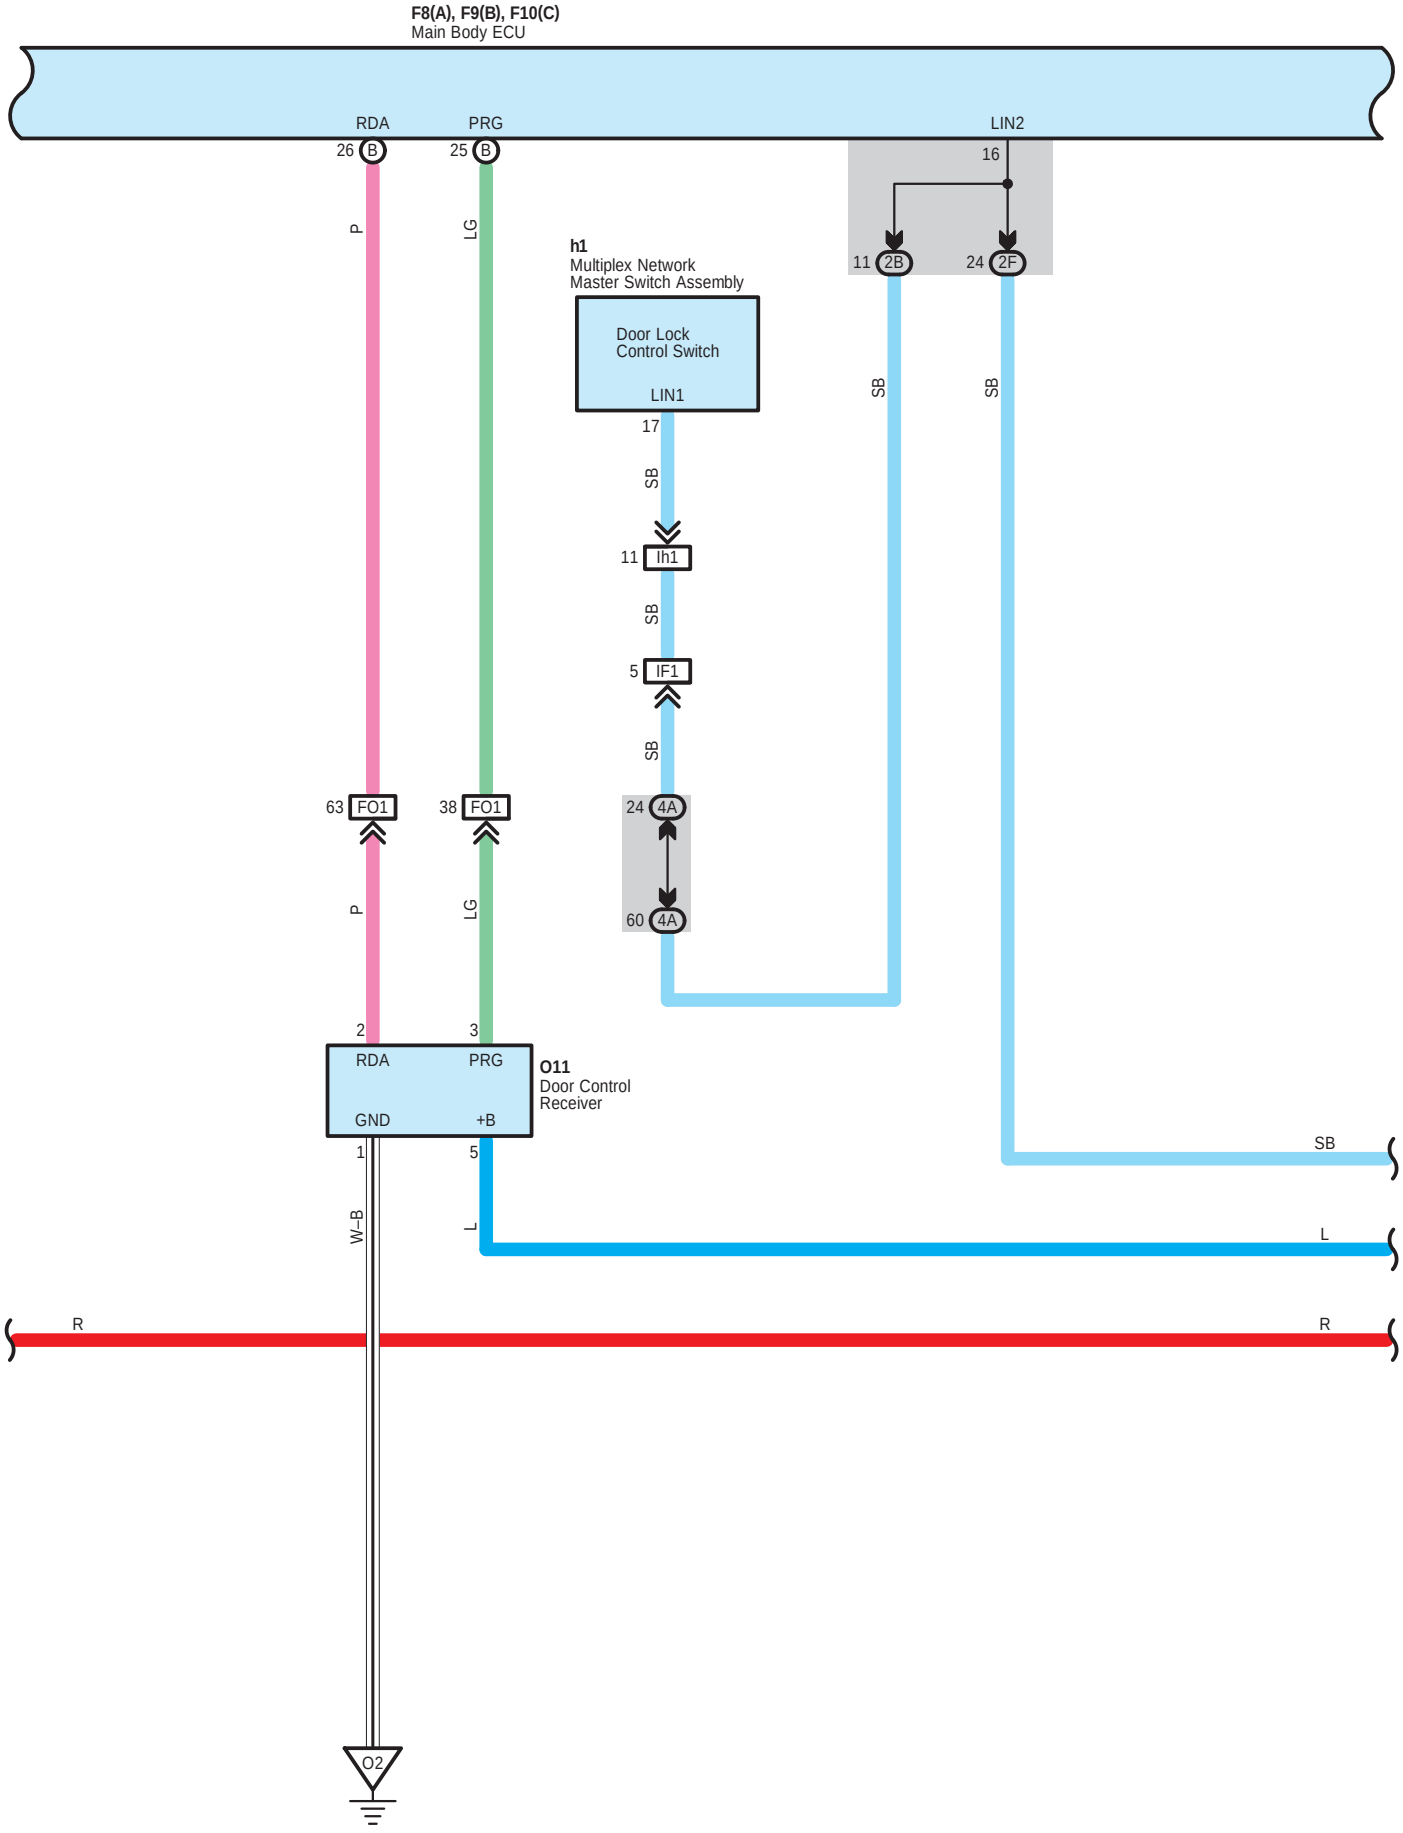

F8(A), F9(B), F10(C)
Main Body ECU
RDA
PRG
LIN2
26 B
25 B
16
P
LG
h1
Multiplex Network
Master Switch Assembly
Door Lock
Control Switch
LIN1
11 2B
24 2F
SB
SB
17
SB
11 Ih1
SB
5 IF1
SB
63 FO1
38 FO1
24 4A
60 4A
P
LG
2
3
RDA
PRG
GND
+B
O11
Door Control
Receiver
1
5
SB
W–B
L
L
R
R
O2

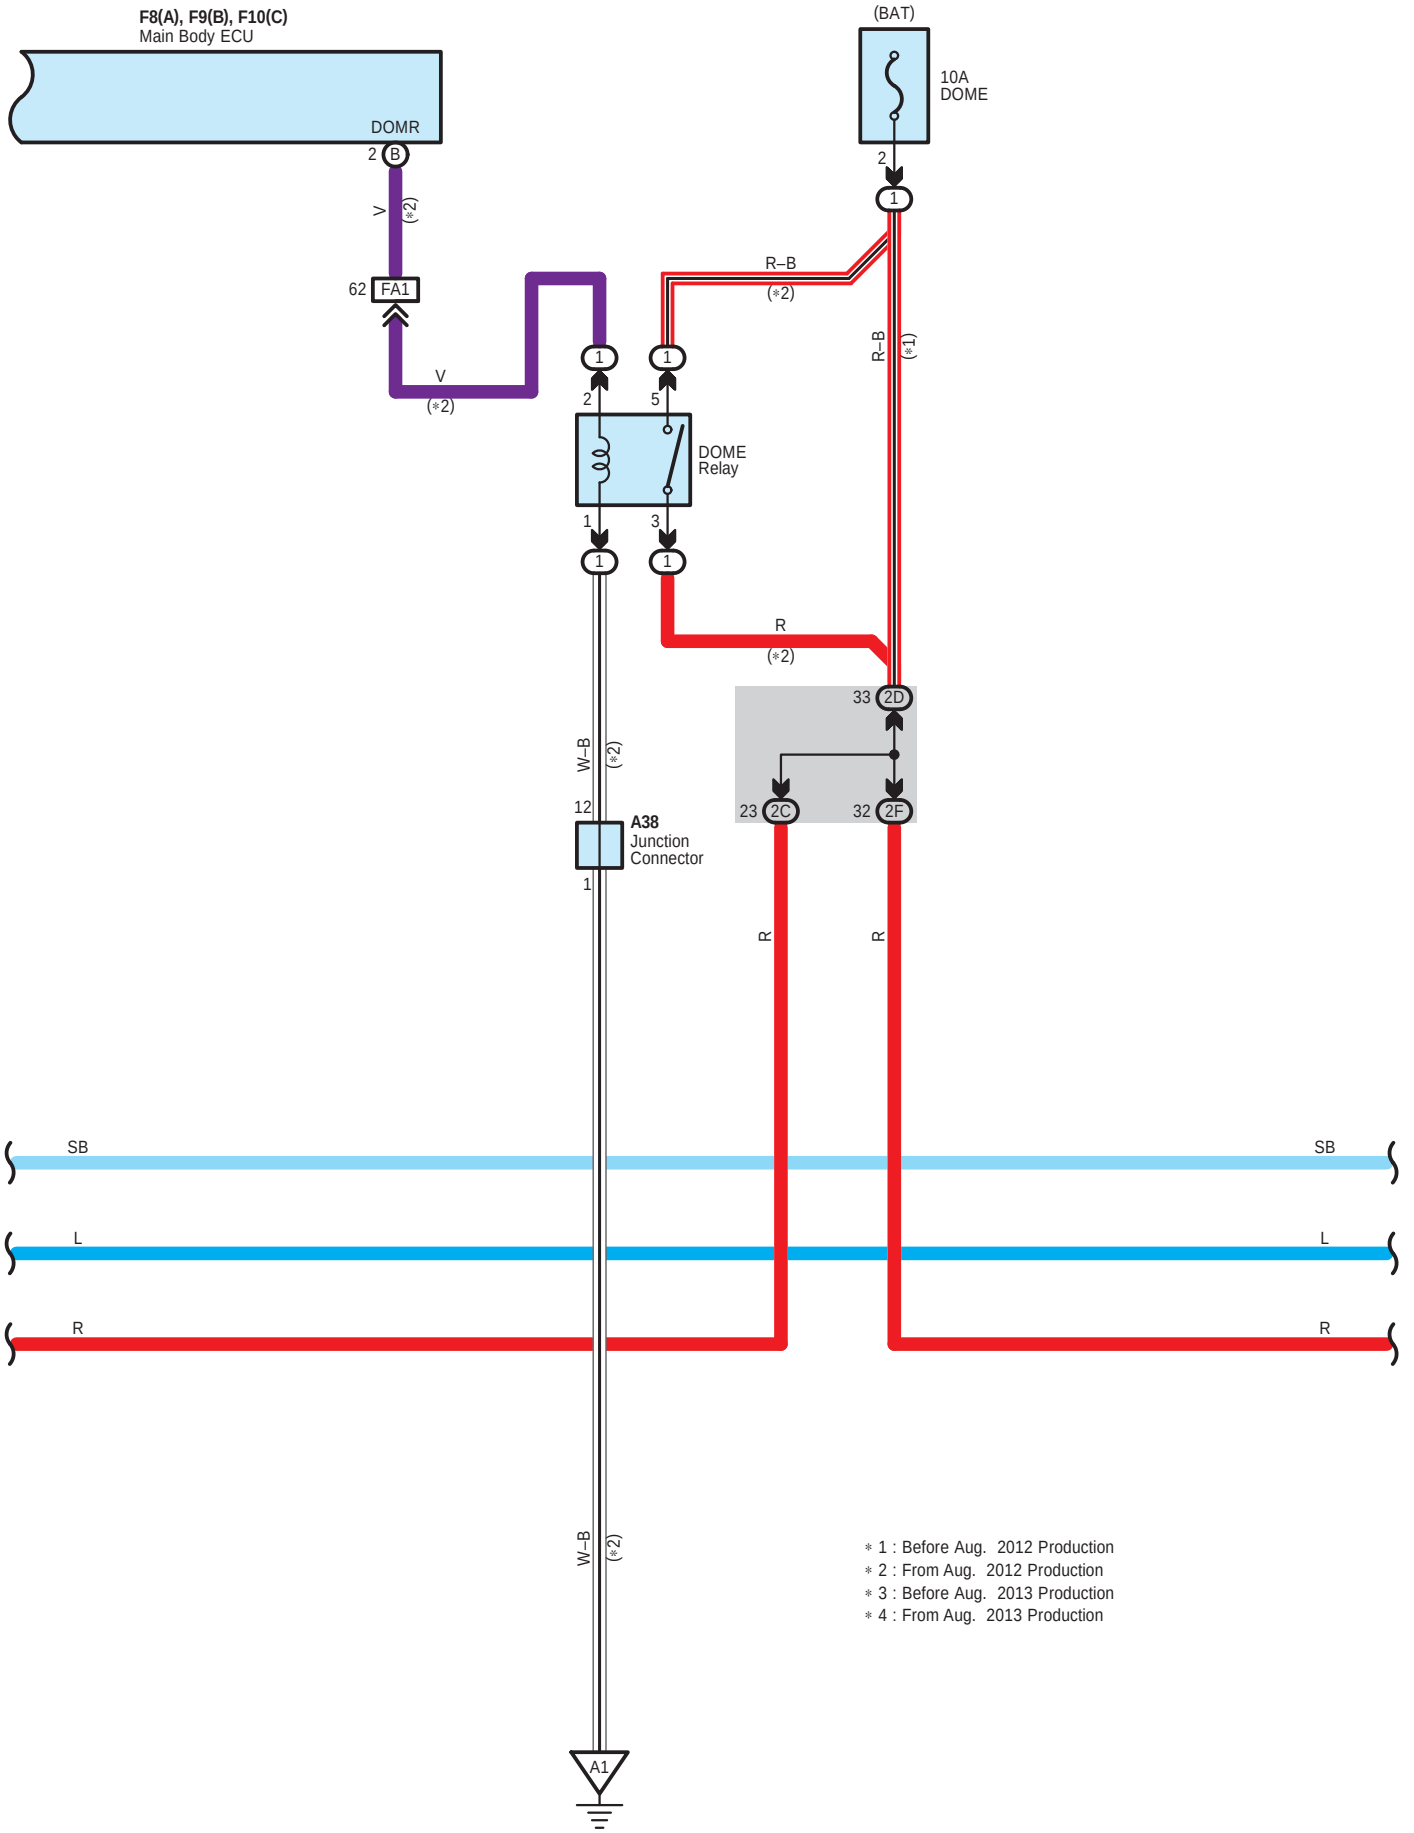
F8(A), F9(B), F10(C)
Main Body ECU
DOMR
2
B
V
(*2)
62
FA1
V
(*2)
(BAT)
10A
DOME
2
1
R–B
(*2)
R–B
(*1)
1
2
5
DOME
Relay
1
3
1
1
R
(*2)
33
2D
23
2C
32
2F
W–B
(*2)
12
A38
Junction
Connector
1
R
R
SB
SB
L
L
R
R
W–B
(*2)
A1
* 1 : Before Aug. 2012 Production
* 2 : From Aug. 2012 Production
* 3 : Before Aug. 2013 Production
* 4 : From Aug. 2013 Production

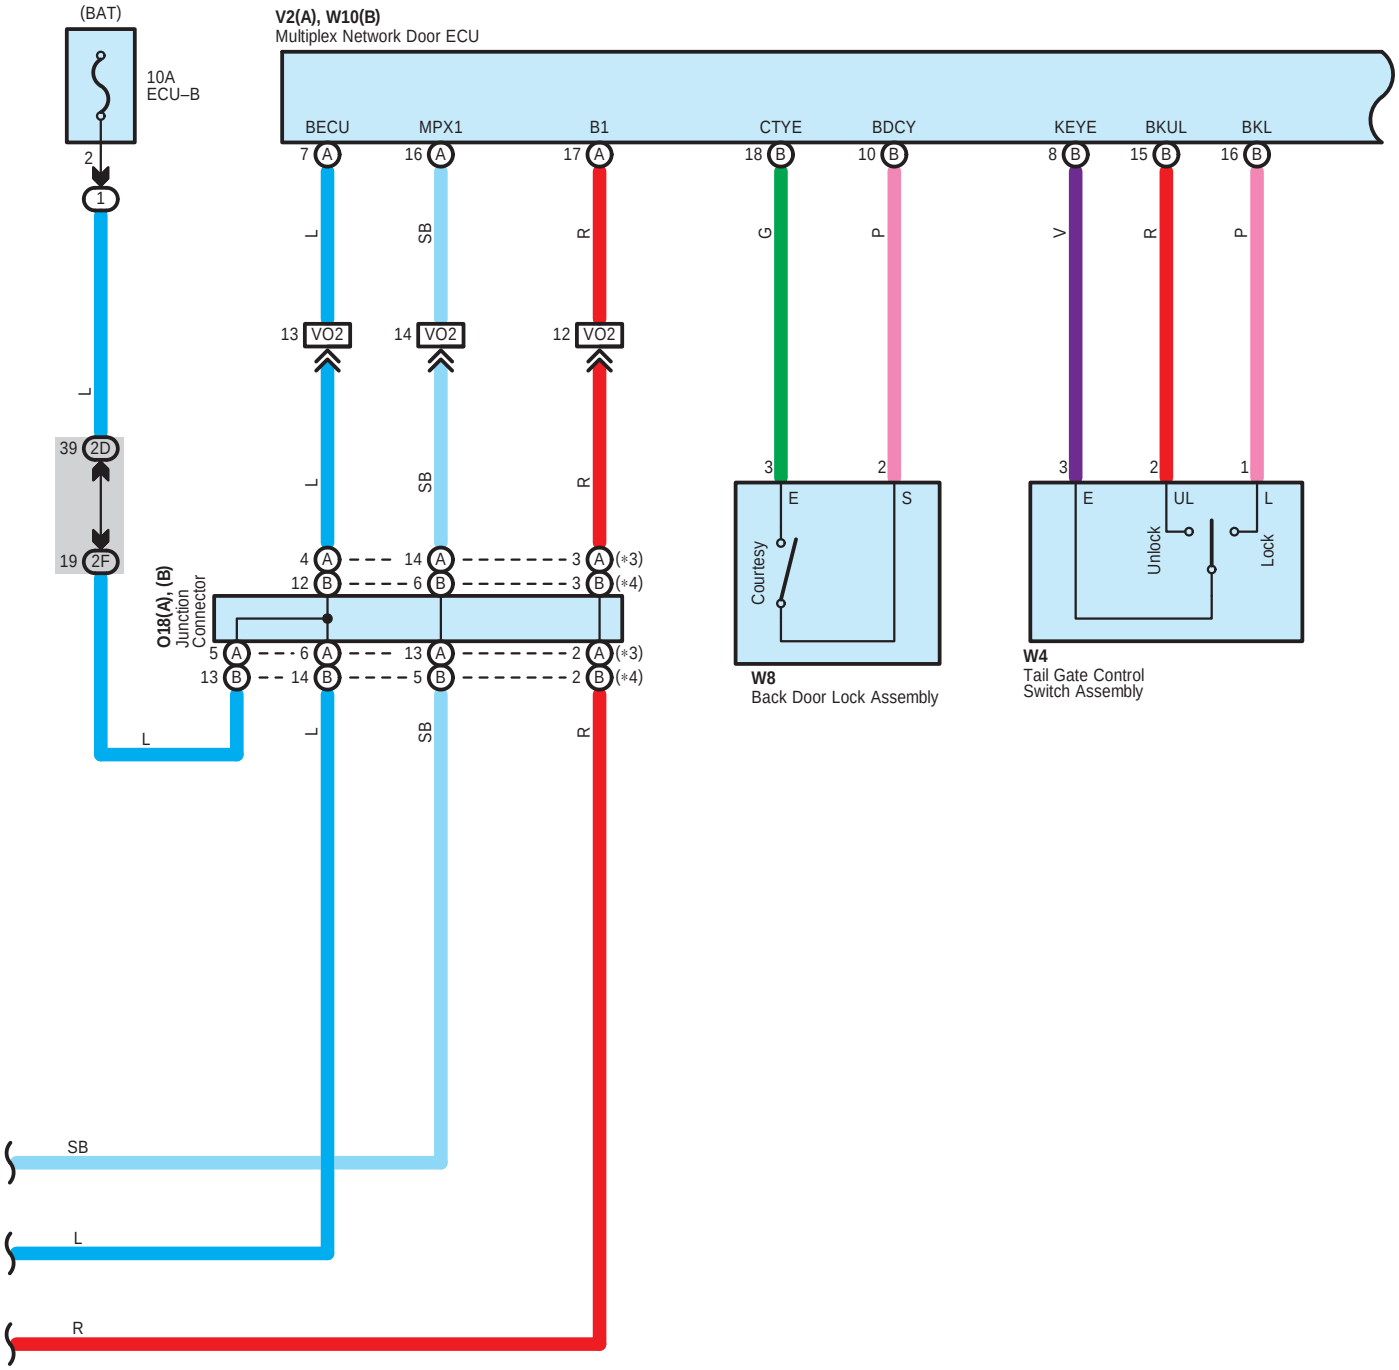
(BAT)
10A
ECU–B
2
1
V2(A), W10(B)
Multiplex Network Door ECU
BECU
MPX1
B1
CTYE
BDCY
KEYE
BKUL
BKL
7 A
16 A
17 A
18 B
10 B
8 B
15 B
16 B
L
SB
R
G
P
V
R
P
13 VO2
14 VO2
12 VO2
39 2D
19 2F
4 A
12 B
14 A
6 B
3 A (*3)
3 B (*4)
O18(A), (B)
Junction
Connector
5 A
13 B
6 A
14 B
13 A
5 B
2 A (*3)
2 B (*4)
3
2
E
S
Courtesy
W8
Back Door Lock Assembly
3
2
1
E
UL
L
Unlock
Lock
W4
Tail Gate Control
Switch Assembly
SB
L
R

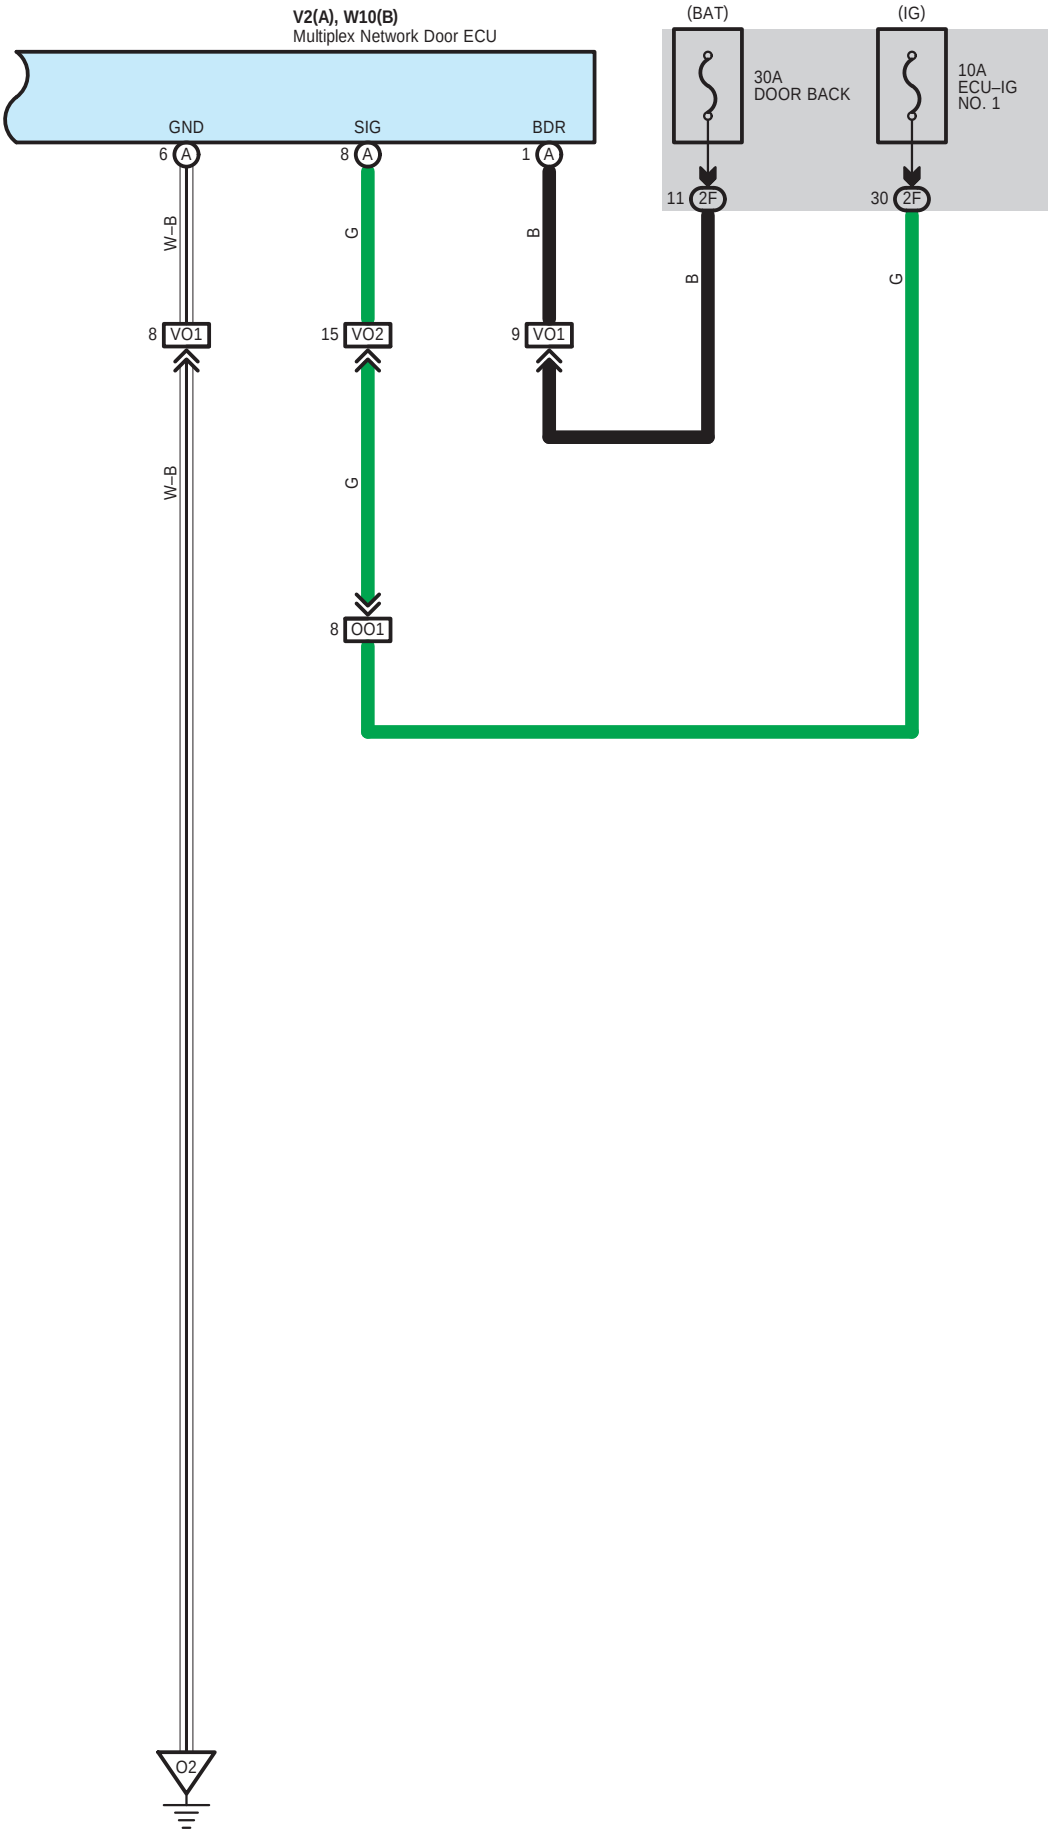
V2(A), W10(B)
Multiplex Network Door ECU
GND
SIG
BDR
6 A
8 A
1 A
W–B
G
B
8 VO1
15 VO2
9 VO1
W–B
G
8 OO1
(BAT)
(IG)
30A
DOOR BACK
10A
ECU–IG
NO. 1
11 2F
30 2F
B
G
O2


A 19
Black

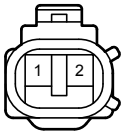


A 20
Black




A 21
Black




A 32
Black




A 38
White

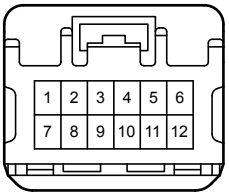


F 8
White

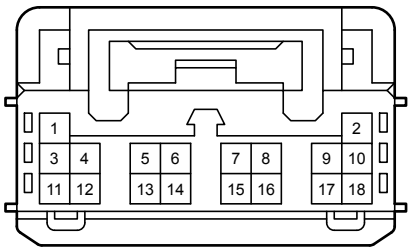


F 9
White

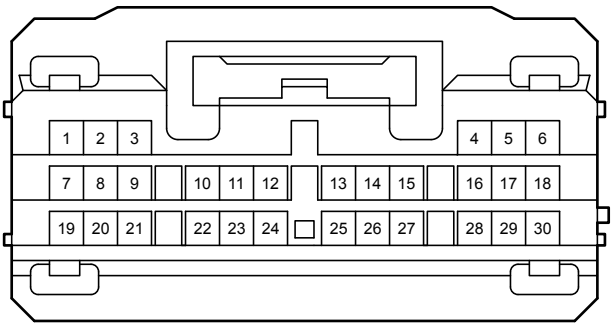


F 10
White

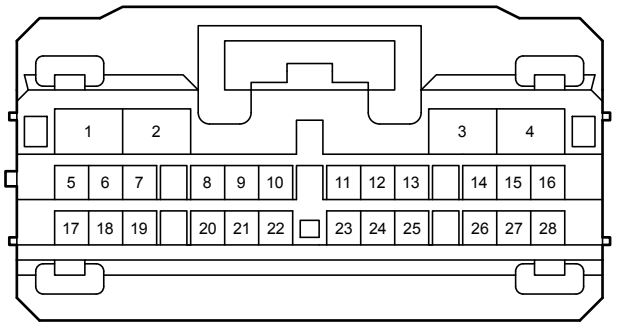


F 17
Black

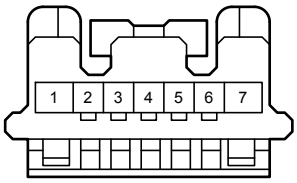


F 18
White




F 32
Black

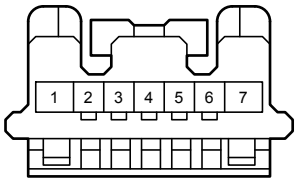


F 35
Black

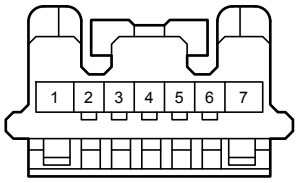


F 55
Gray

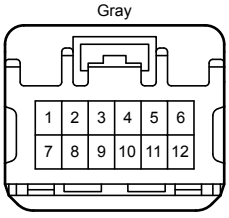


F 56
Gray

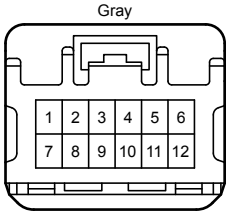


F 63
White

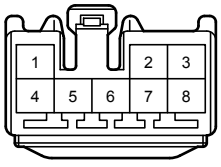


F 64
White

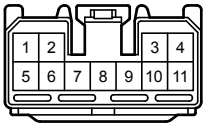


F 65
White

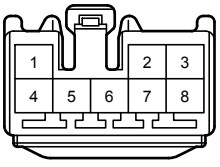


F 67
Black




H 5
White

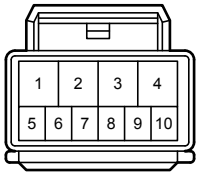


H 8
White

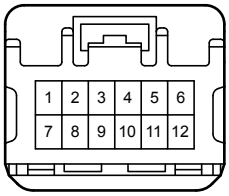


I 5
White

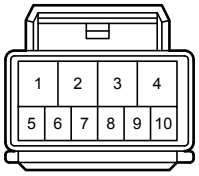


I 8
White

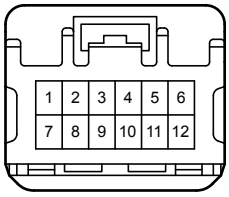

J 3
White

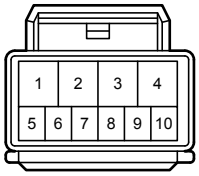

K 3
White

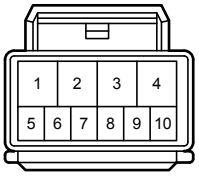


N 5
Black



N 7
White



N 22
Black




O 5
Black




O 6
White




O 11
White

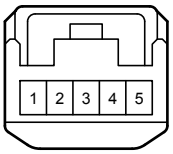


O 18
White

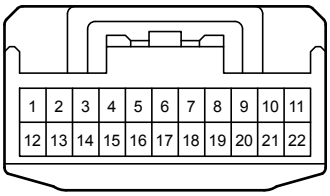


S 3
White




U 2
White

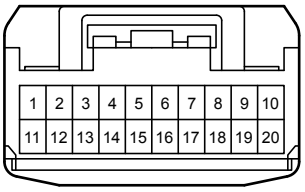


U 7
Black

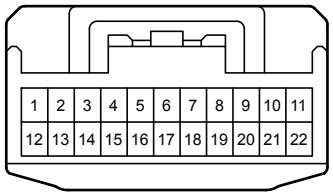


V 2
White

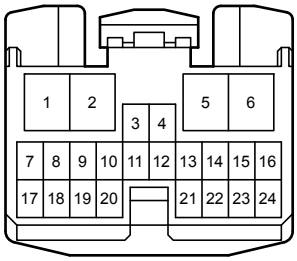


W 4
White

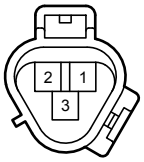


W 8
White

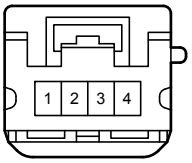


W 10
White

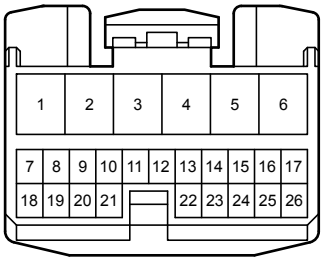



g 2
White




h 1
White

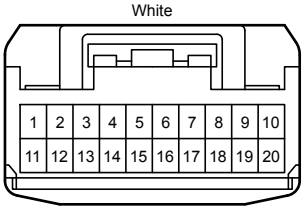

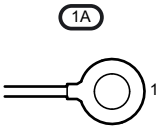


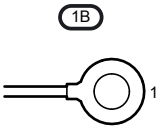


1C
White

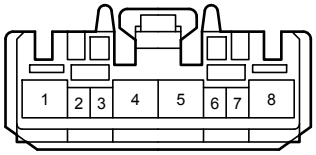


2B
White

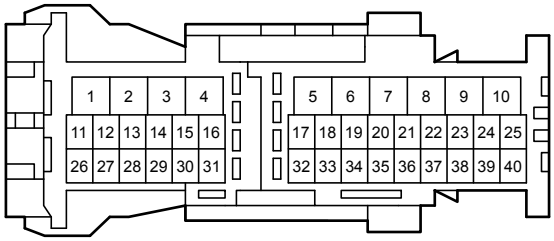


2C
White

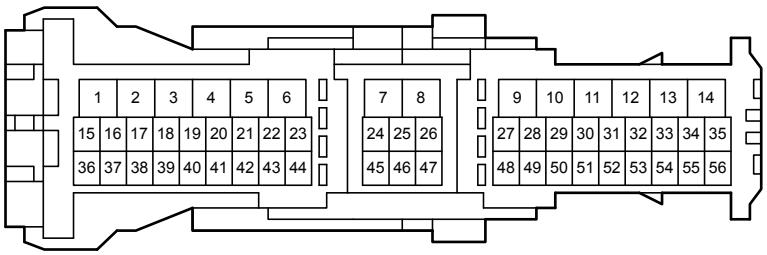


2D
White

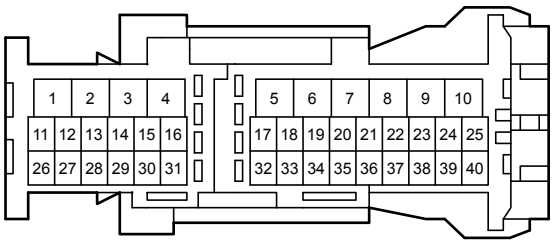


2E
White

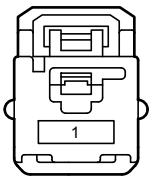


2F
White

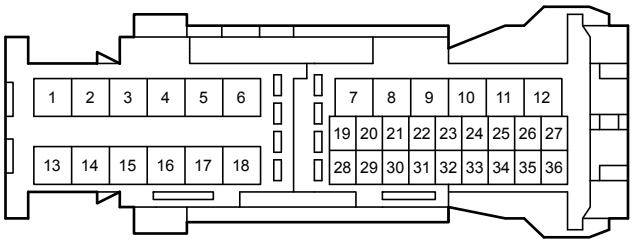


4A
White

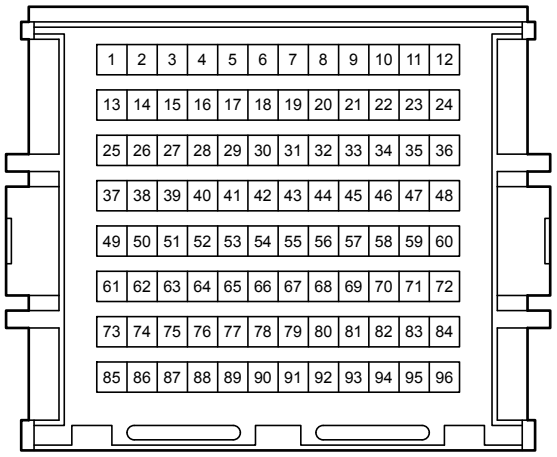


4B
White

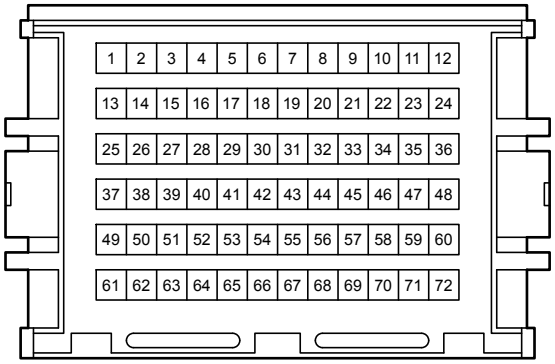


4C
White

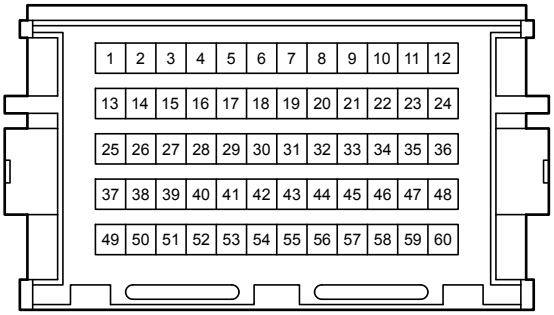


5A
White

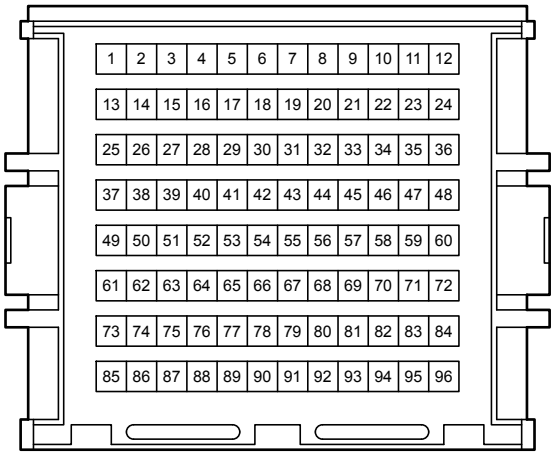


FA1
White

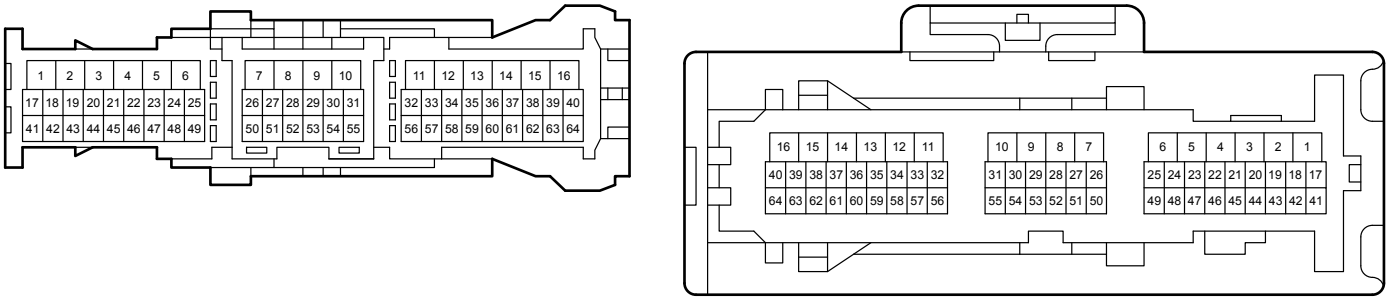


FN1
White

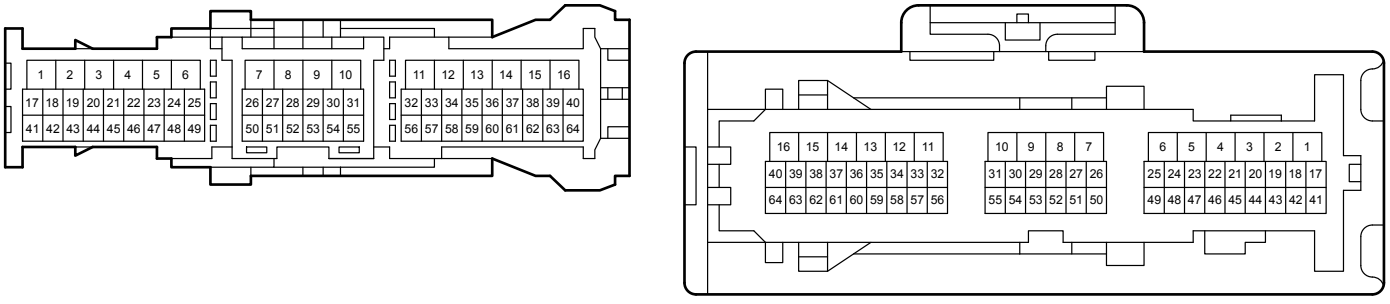


FO1
White

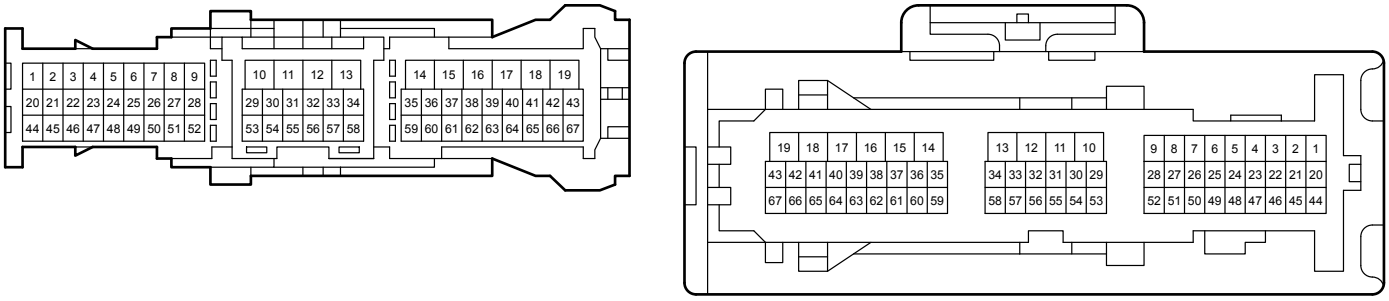


FS1
White

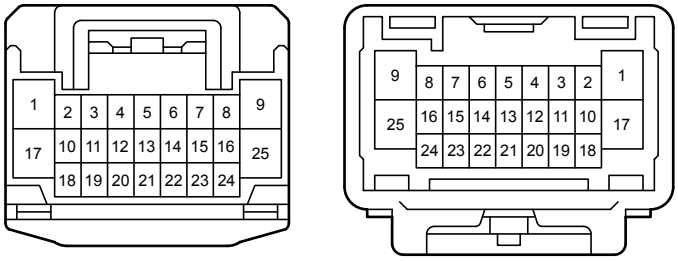


HF1
White

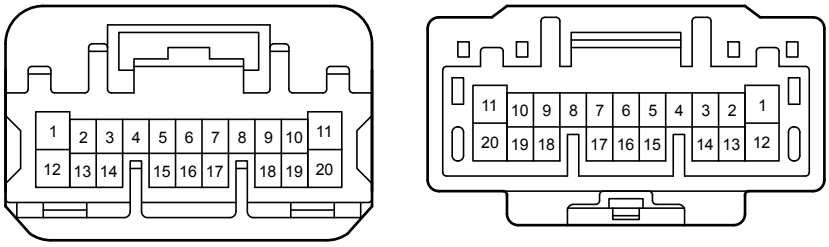


HF2
Black

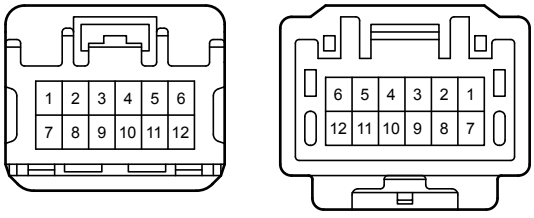


Hg1
White

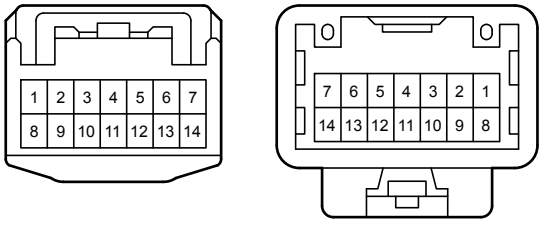


IF1
White

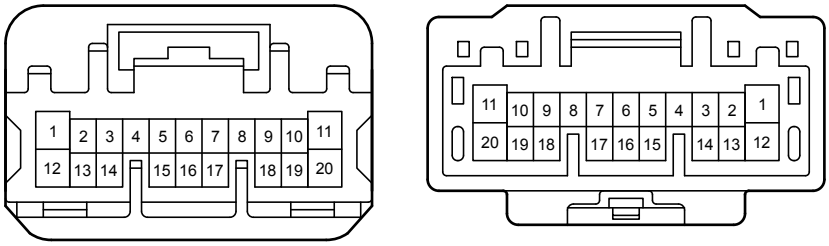


IF2
Black

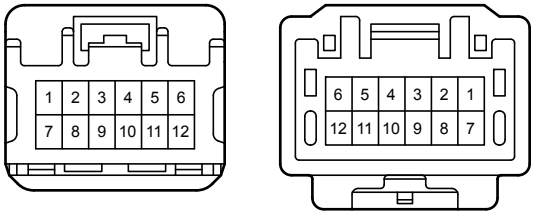


Ih1
White

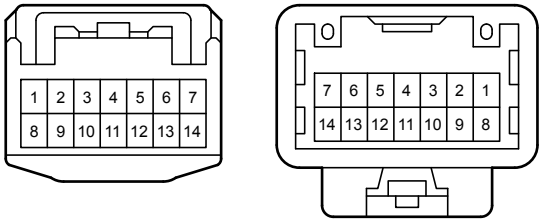


JN1
White

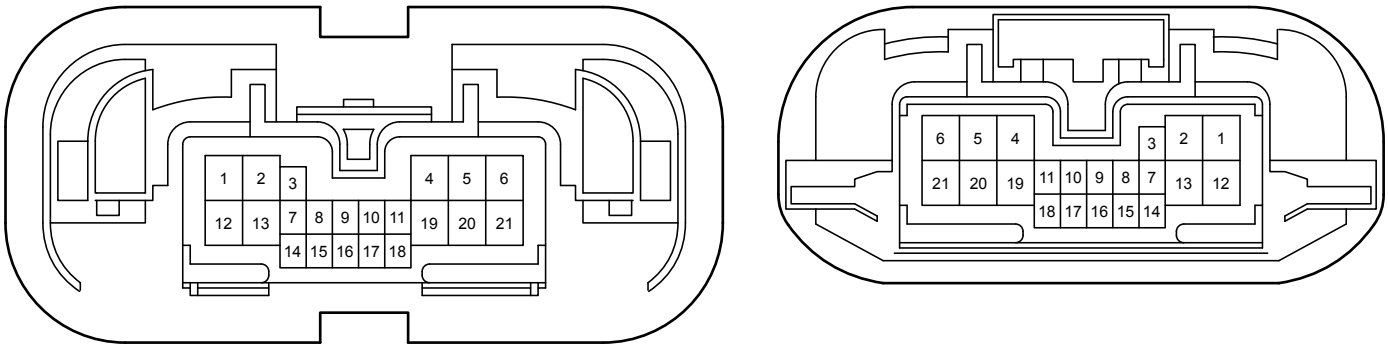


KO1
White

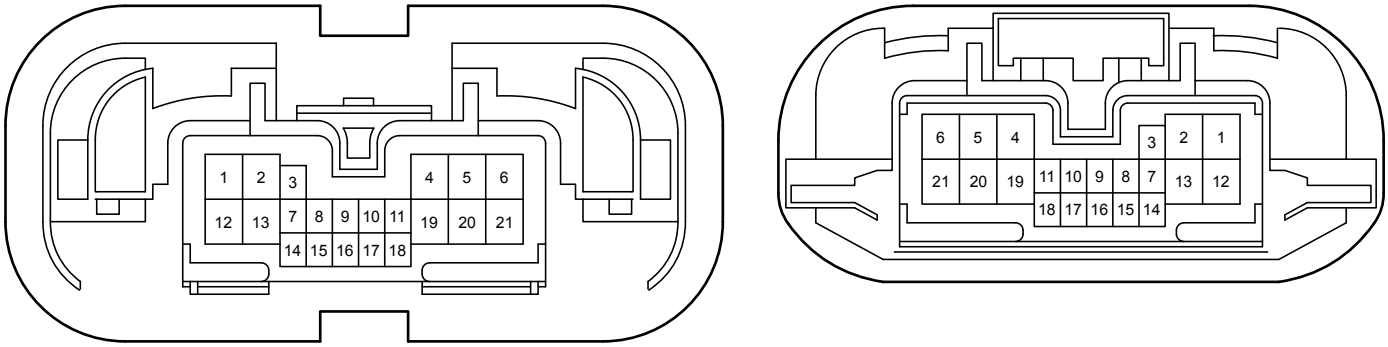


OO1
White

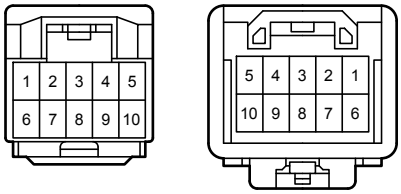

SU1
White

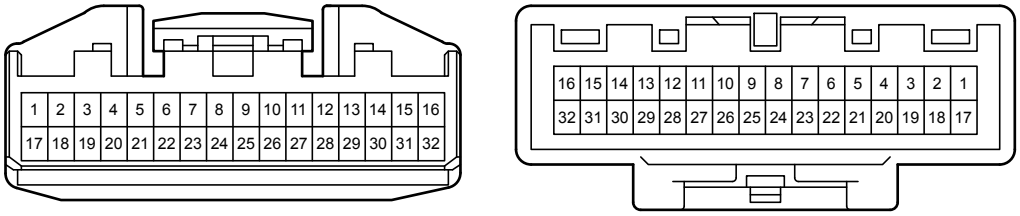

VO1
Blue

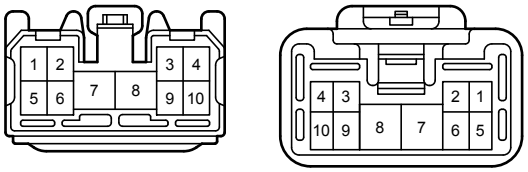

VO2
White

