




(BAT)
10A
ECU–B
2
1
(BAT)
25A
D/L
NO. 2
(ACC)
7. 5A
ACC
(IG)
10A
ECU–IG
NO. 2
F9(B), F10(C)
Main Body ECU
IG
ACC
ALTB
BECU
GND1
GND2
32
29
31
30
11
3 C
39 2D
4 2B
L
L
W–B
W–B
5 B
F55(A), F56(B)
Junction
Connector
1 A
3 A
W–B
5
F63
Junction
Connector
F1


F9(B), F10(C)
Main Body ECU
TAIL
30 B
R
11 4A
12 4C
R
18
T
T
H
AUTO
EL
Light Control Switch
Off
AUTO (*8)
Tail
Head
EL
F22
Headlight Dimmer Switch Assembly
12
W–B
* 8 : w/ Automatic Light Control
11 4C
35 4B
W–B
8
F64
Junction Connector
F2

F9(B), F10(C)
Main Body ECU


＊4 : Before Aug. 2013 Production
＊5 : From Aug. 2013 Production

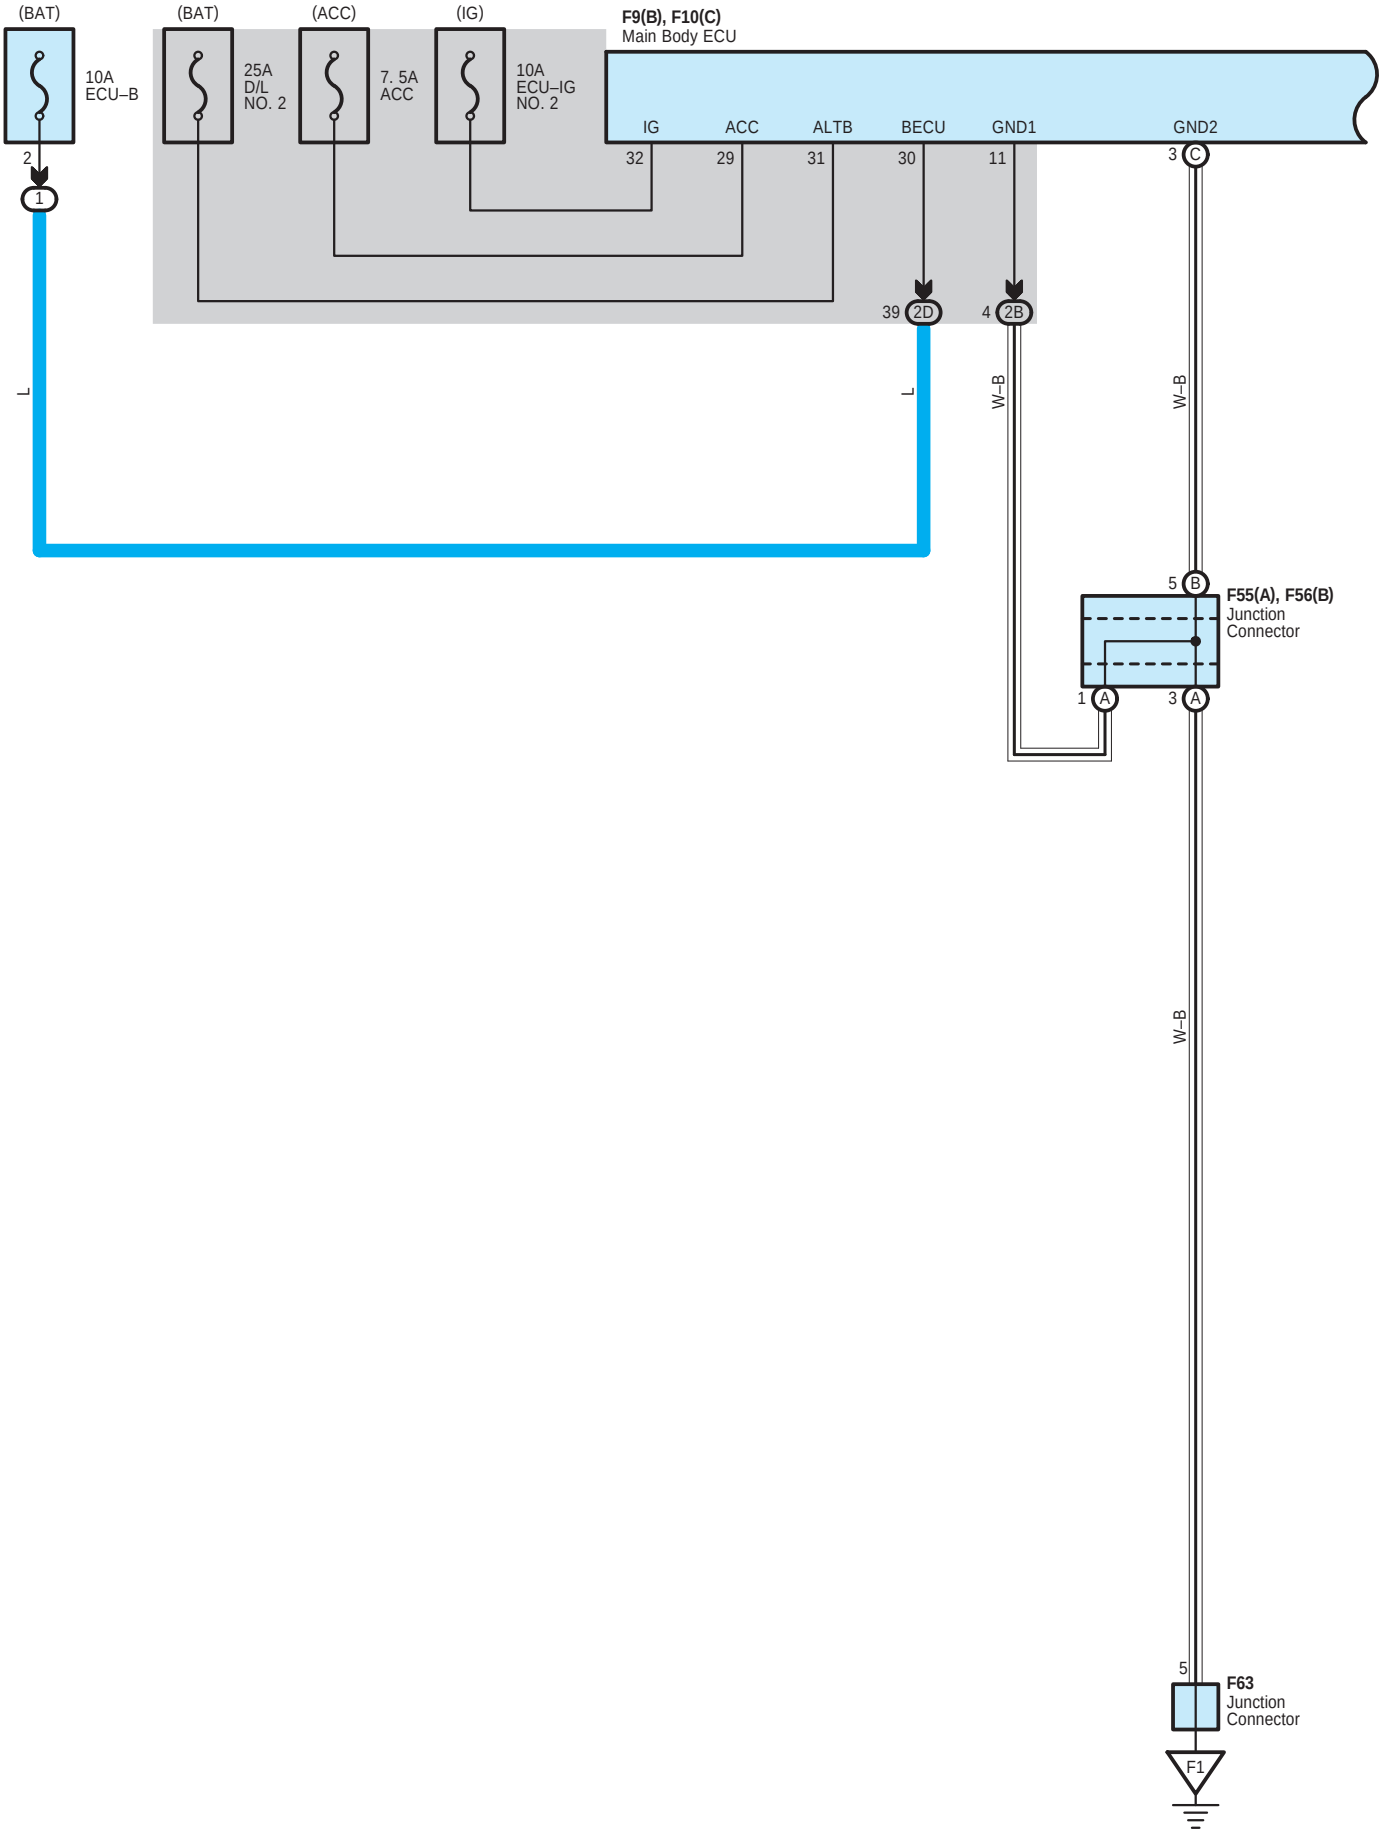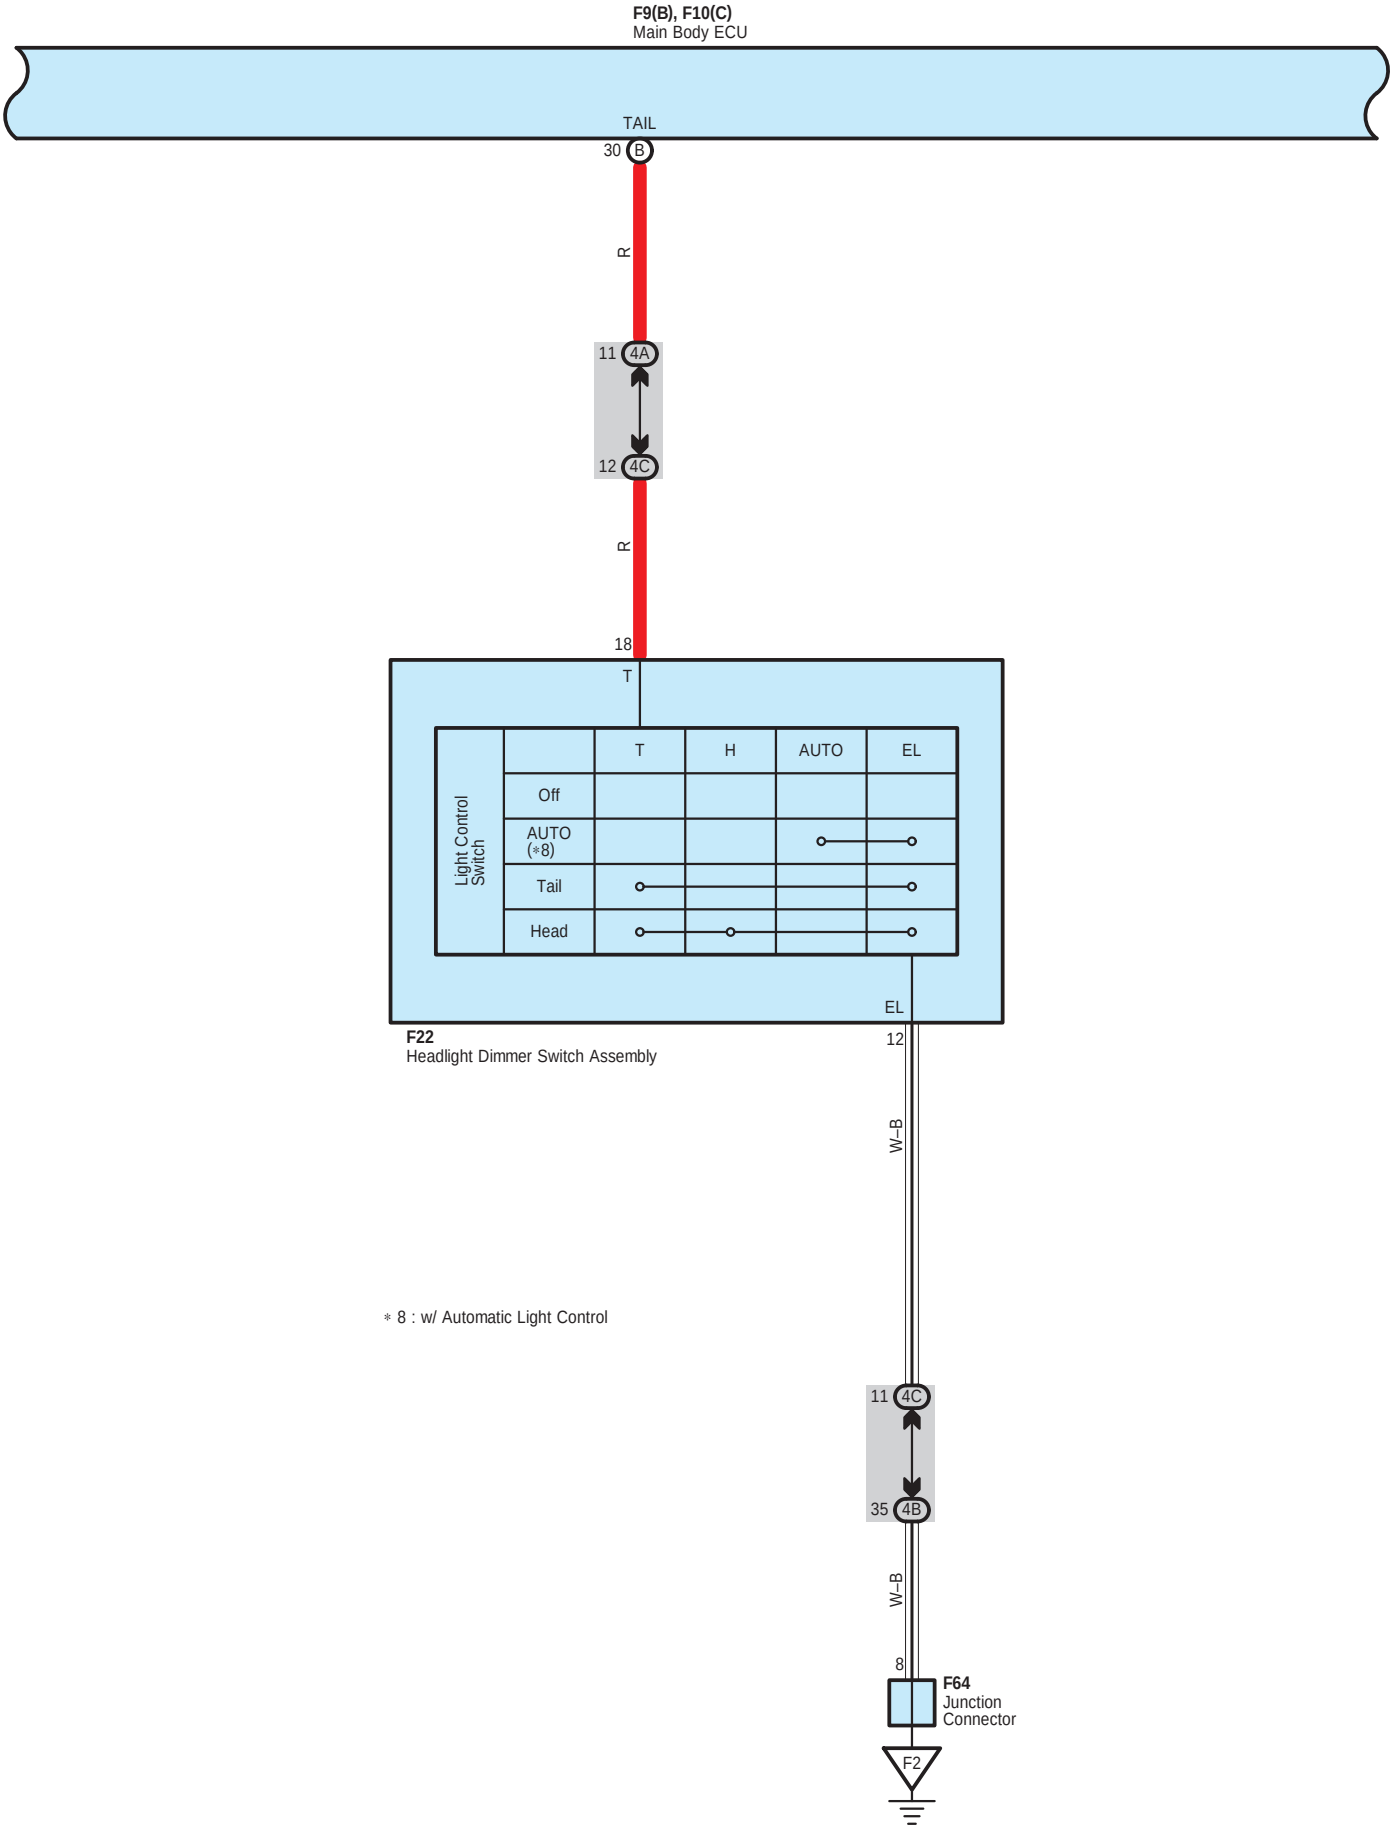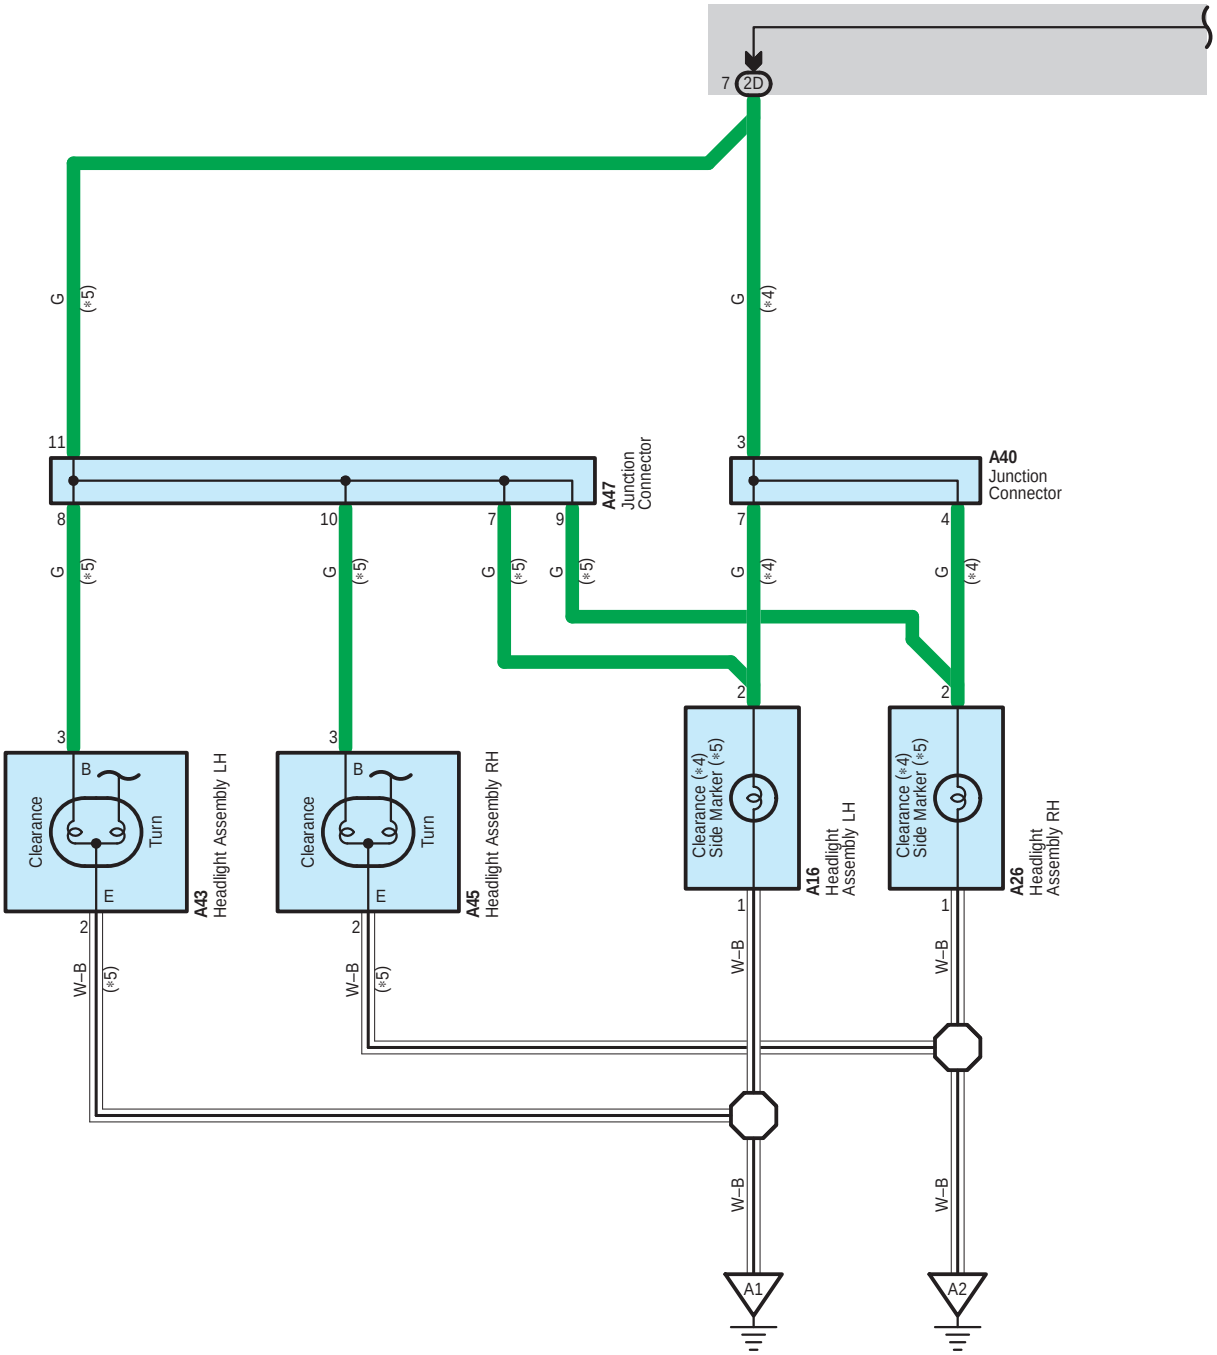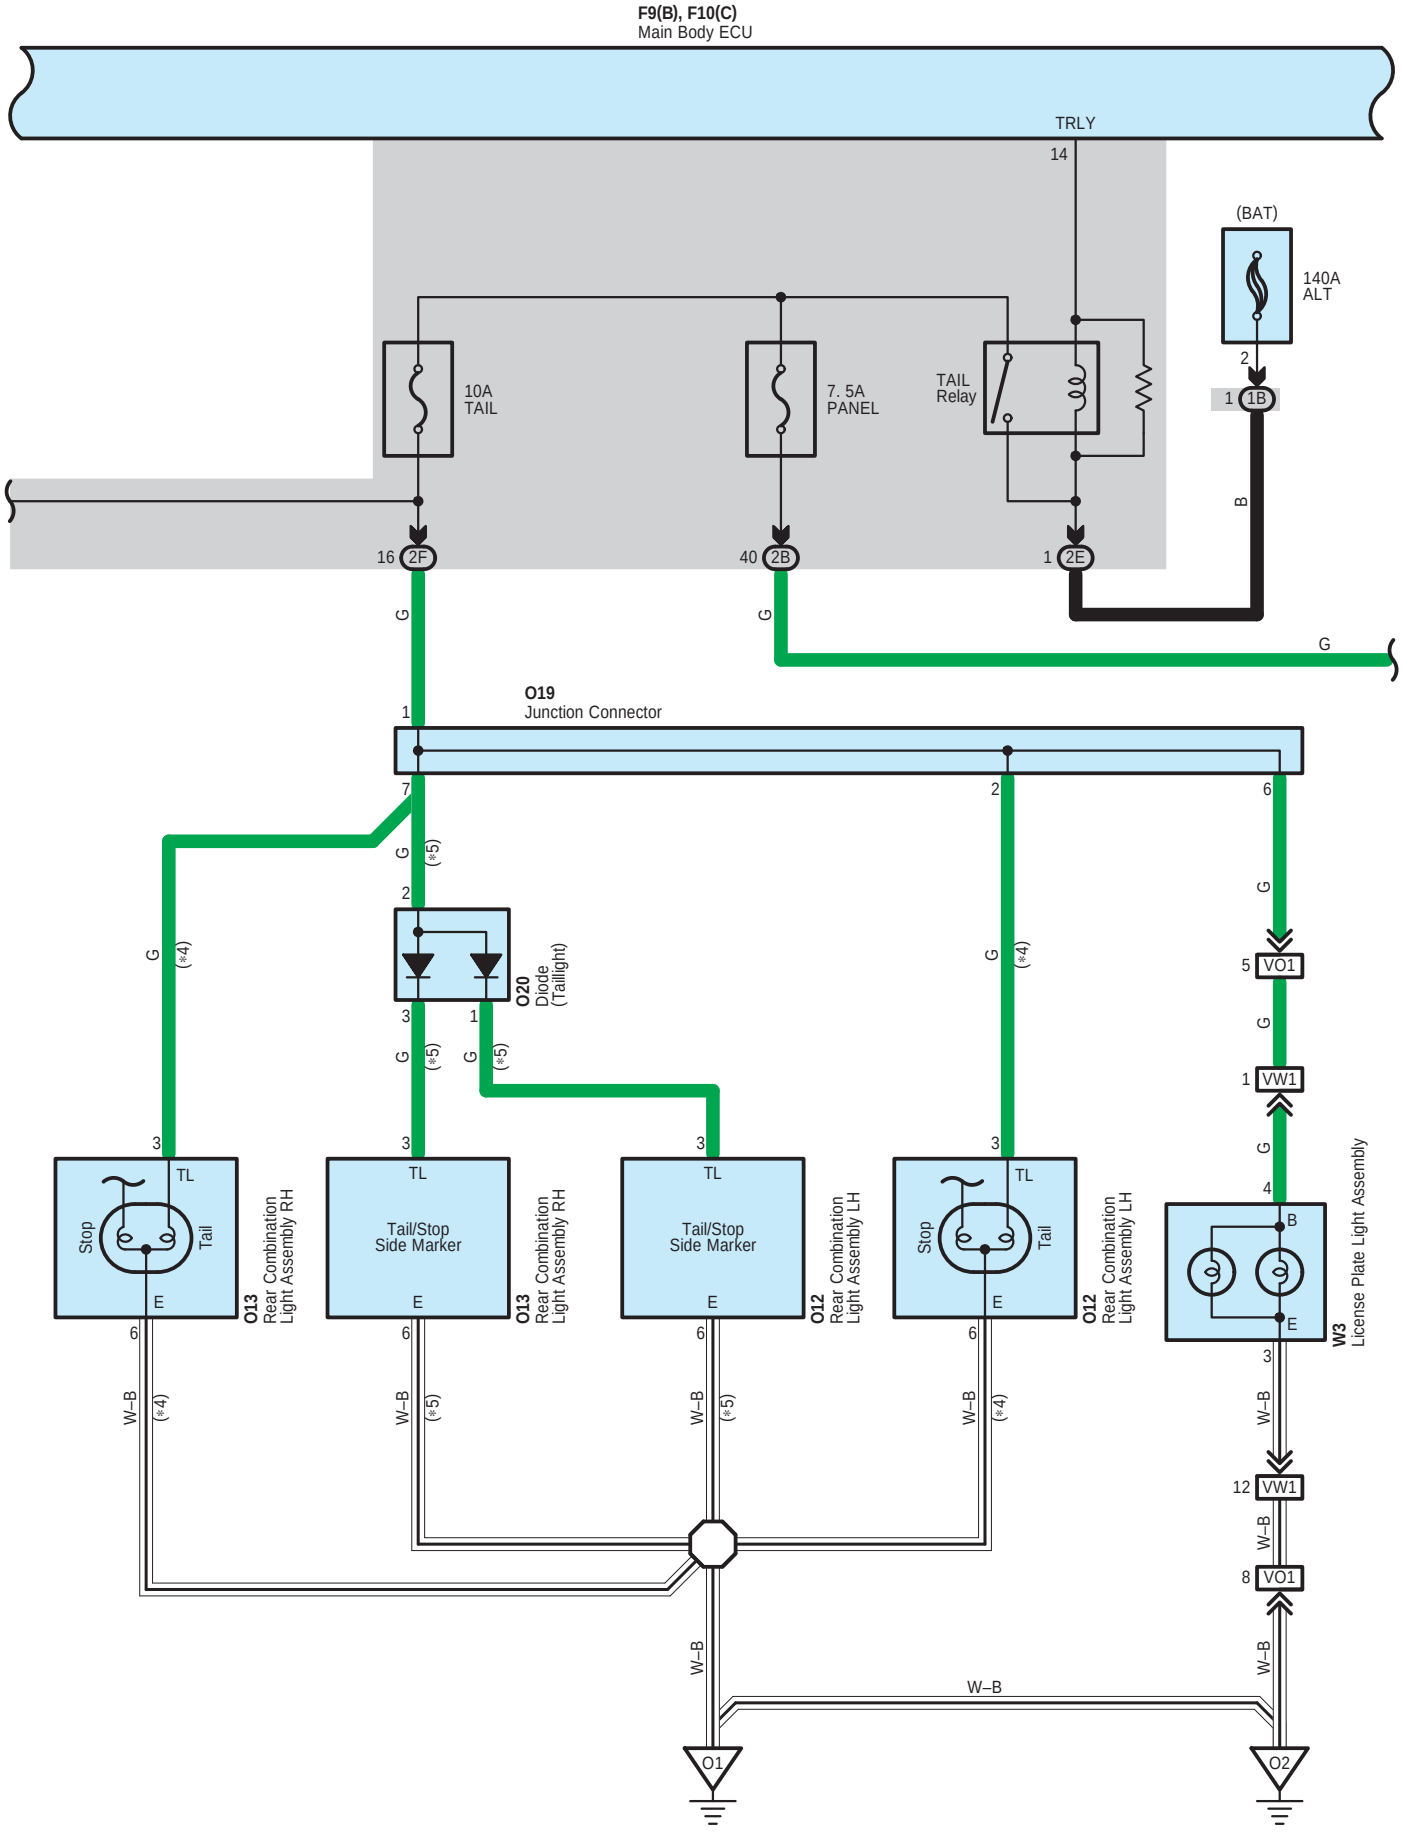




F9(B), F10(C)
Main Body ECU
TRLY
14
(BAT)
140A
ALT
2
1
1B
B
10A
TAIL
7. 5A
PANEL
TAIL
Relay
16
2F
40
2B
1
2E
G
O19
Junction Connector
1
7
2
6
(*4)
(*5)
O20
Diode
(Taillight)
3
5
VO1
VW1
4
B
E
W3
License Plate Light Assembly
TL
Stop
Tail
Tail/Stop
Side Marker
O13
Rear Combination
Light Assembly RH
O12
Rear Combination
Light Assembly LH
W–B
12
8
O1
O2


F9(B), F10(C)
Main Body ECU


∗ 1 : w/ Steering Pad Switch Assembly
∗ 4 : Before Aug. 2013 Production
∗ 5 : From Aug. 2013 Production
∗ 6 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
∗ 7 : w/ Climate Control Seat

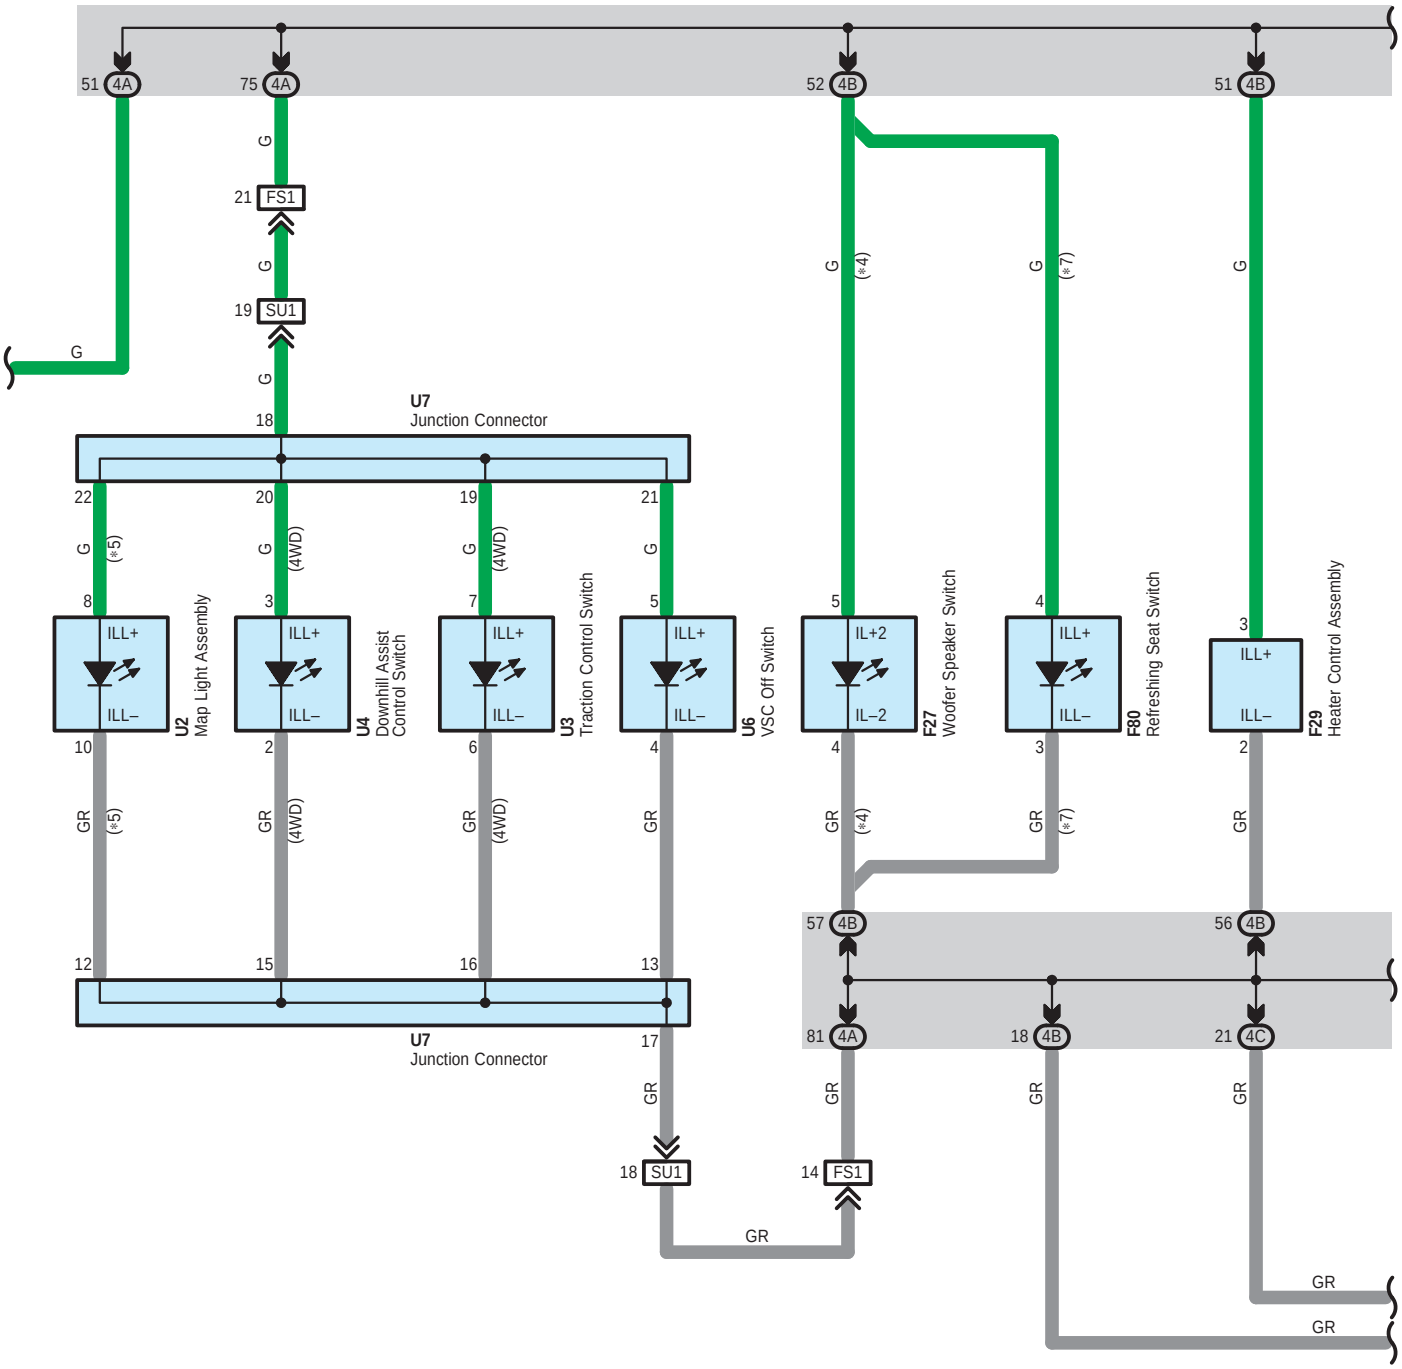


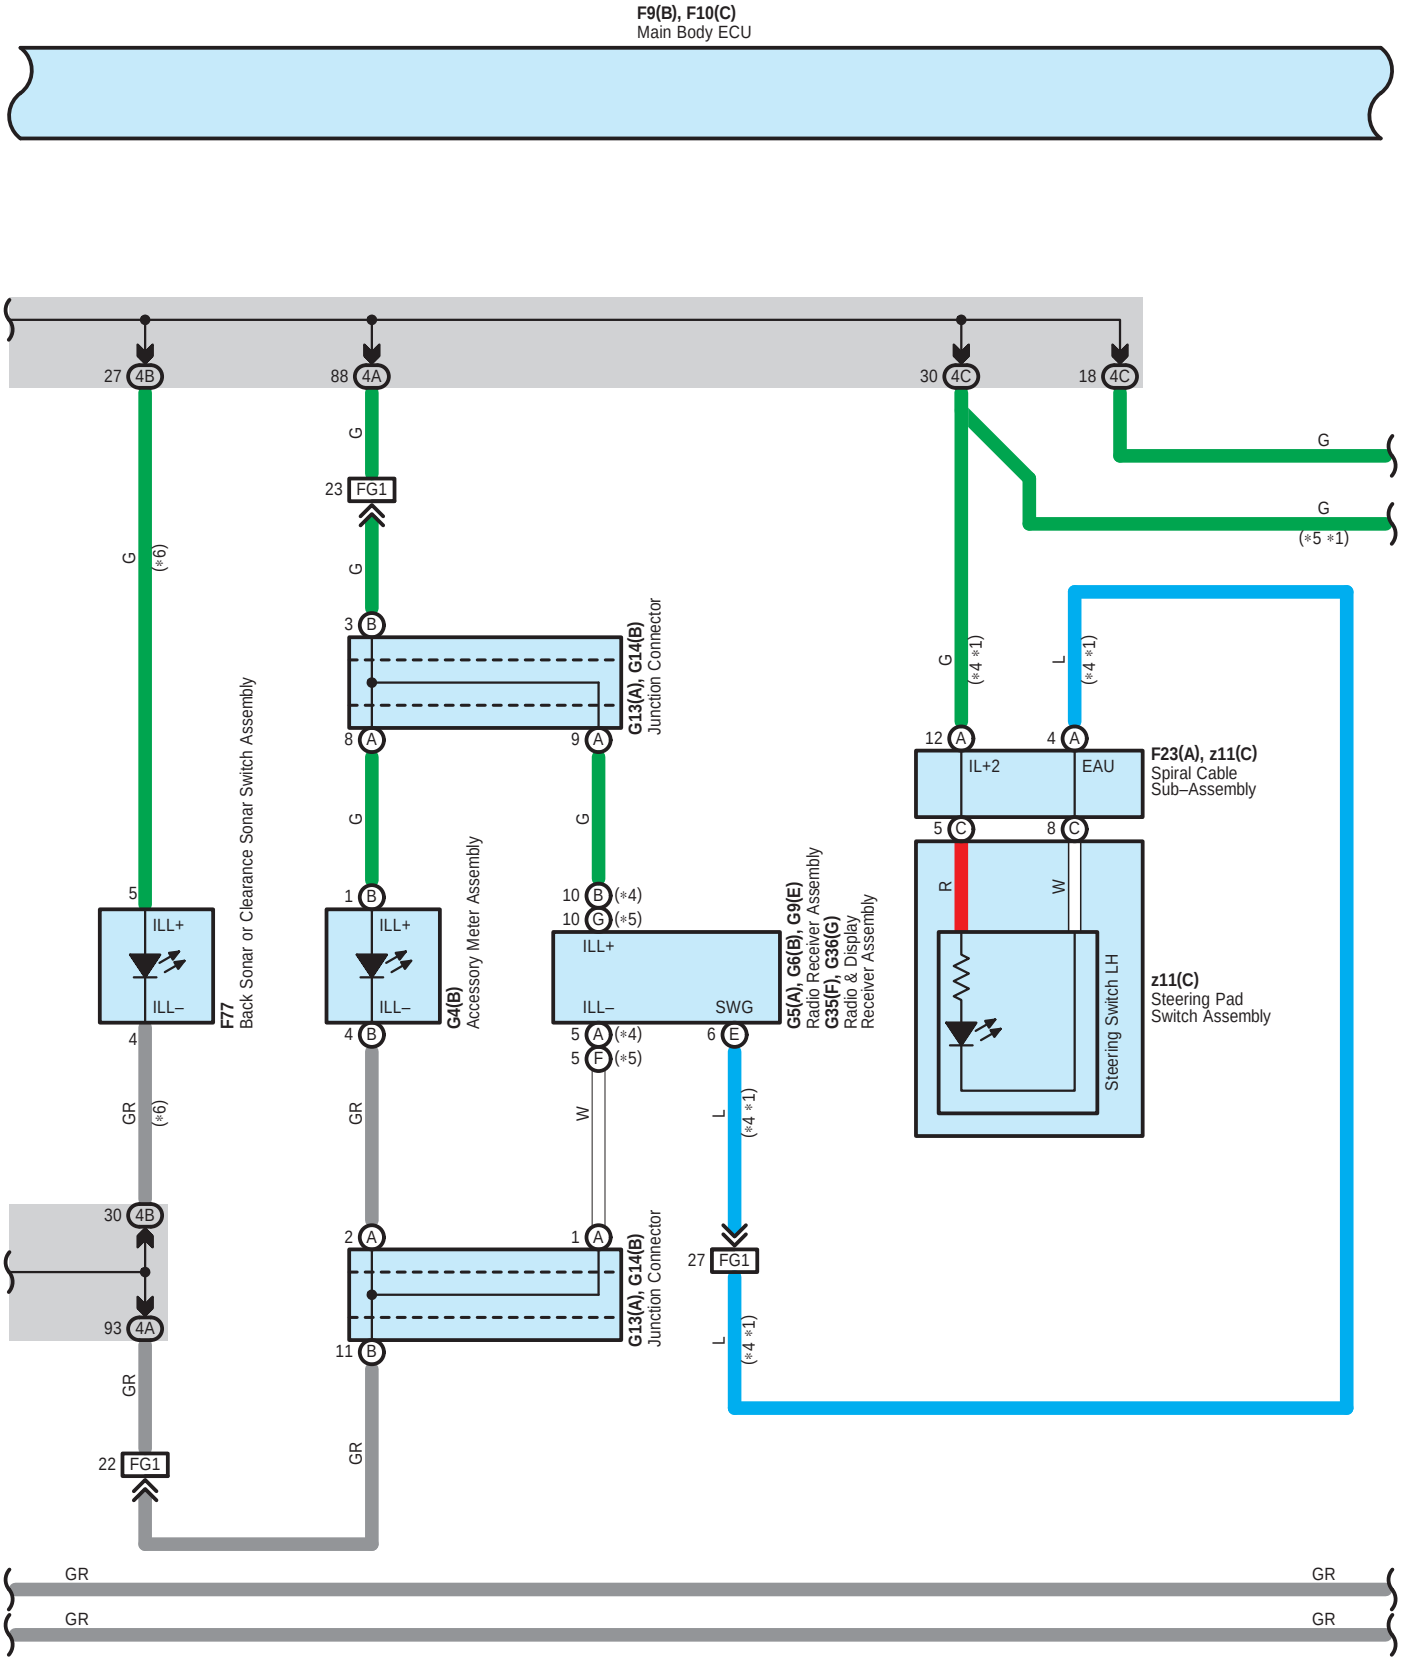
F9(B), F10(C)
Main Body ECU
27 4B
88 4A
30 4C
18 4C
G
(*6)
23 FG1
3 B
8 A
9 A
G13(A), G14(B)
Junction Connector
G
(*5 *1)
(*4 *1)
L
12 A
4 A
IL+2
EAU
F23(A), z11(C)
Spiral Cable
Sub–Assembly
5 C
8 C
R
W
z11(C)
Steering Switch LH
Steering Pad
Switch Assembly
5
ILL+
ILL–
F77
Back Sonar or Clearance Sonar Switch Assembly
4
GR
1 B
4 B
G4(B)
Accessory Meter Assembly
10 B (*4)
10 G (*5)
ILL+
ILL–
SWG
G5(A), G6(B), G9(E)
Radio Receiver Assembly
G35(F), G36(G)
Radio & Display
Receiver Assembly
5 A (*4)
5 F (*5)
6 E
W
L
(*4 *1)
27 FG1
30 4B
93 4A
2 A
1 A
11 B
22 FG1
GR

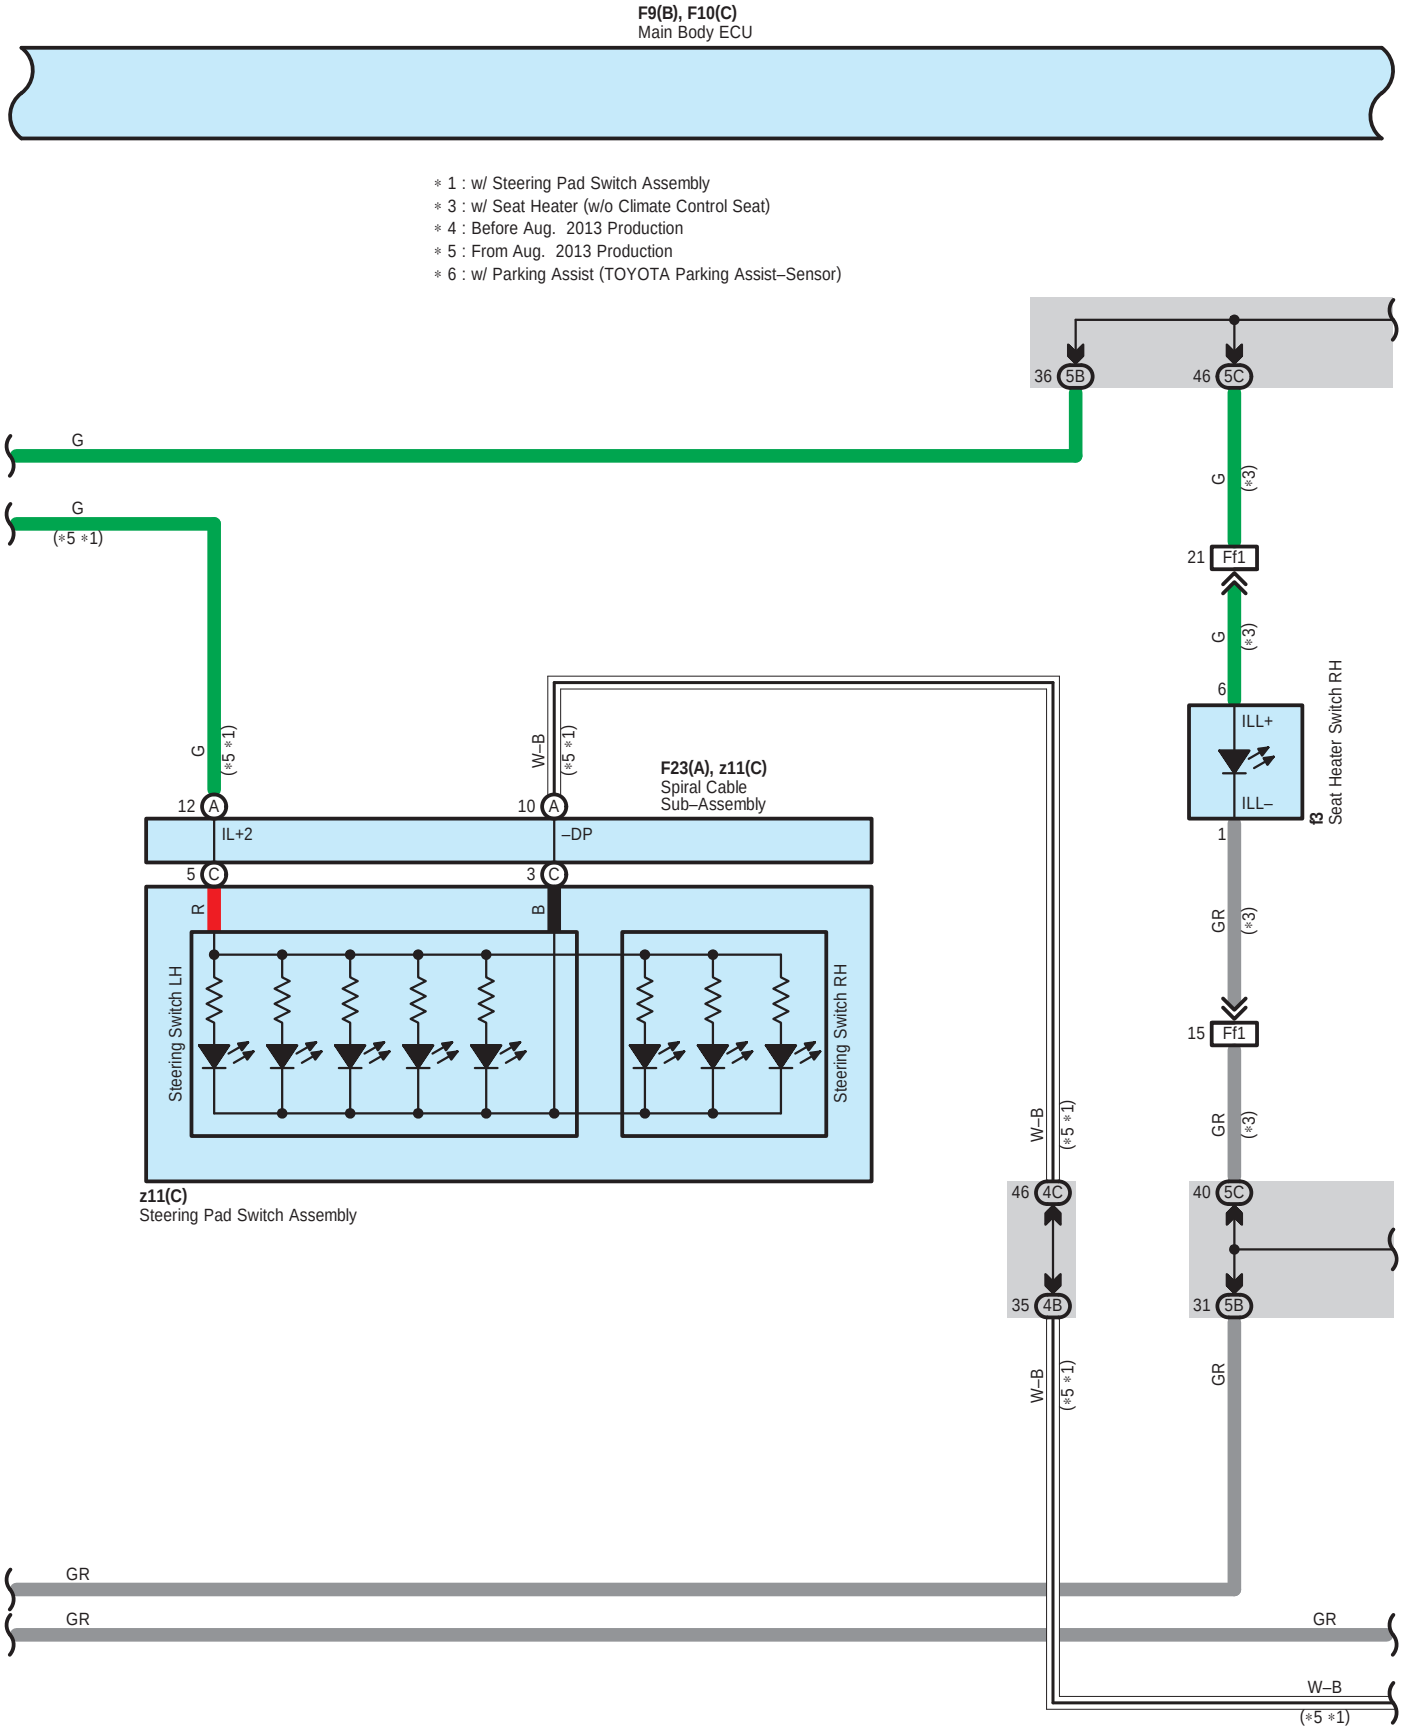

F9(B), F10(C)
Main Body ECU
∗ 1 : w/ Steering Pad Switch Assembly
∗ 3 : w/ Seat Heater (w/o Climate Control Seat)
∗ 4 : Before Aug. 2013 Production
∗ 5 : From Aug. 2013 Production
∗ 6 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
36 5B
46 5C
G
G (∗5 ∗1)
G (∗3)
21 Ff1
G (∗3)
6
ILL+
ILL–
f3
Seat Heater Switch RH
1
GR (∗3)
15 Ff1
GR (∗3)
40 5C
31 5B
GR
W–B (∗5 ∗1)
F23(A), z11(C)
Spiral Cable
Sub–Assembly
12 A
10 A
IL+2
–DP
5 C
3 C
R
B
Steering Switch LH
Steering Switch RH
z11(C)
Steering Pad Switch Assembly
46 4C
35 4B
W–B (∗5 ∗1)
GR
GR
GR
W–B
(∗5 ∗1)

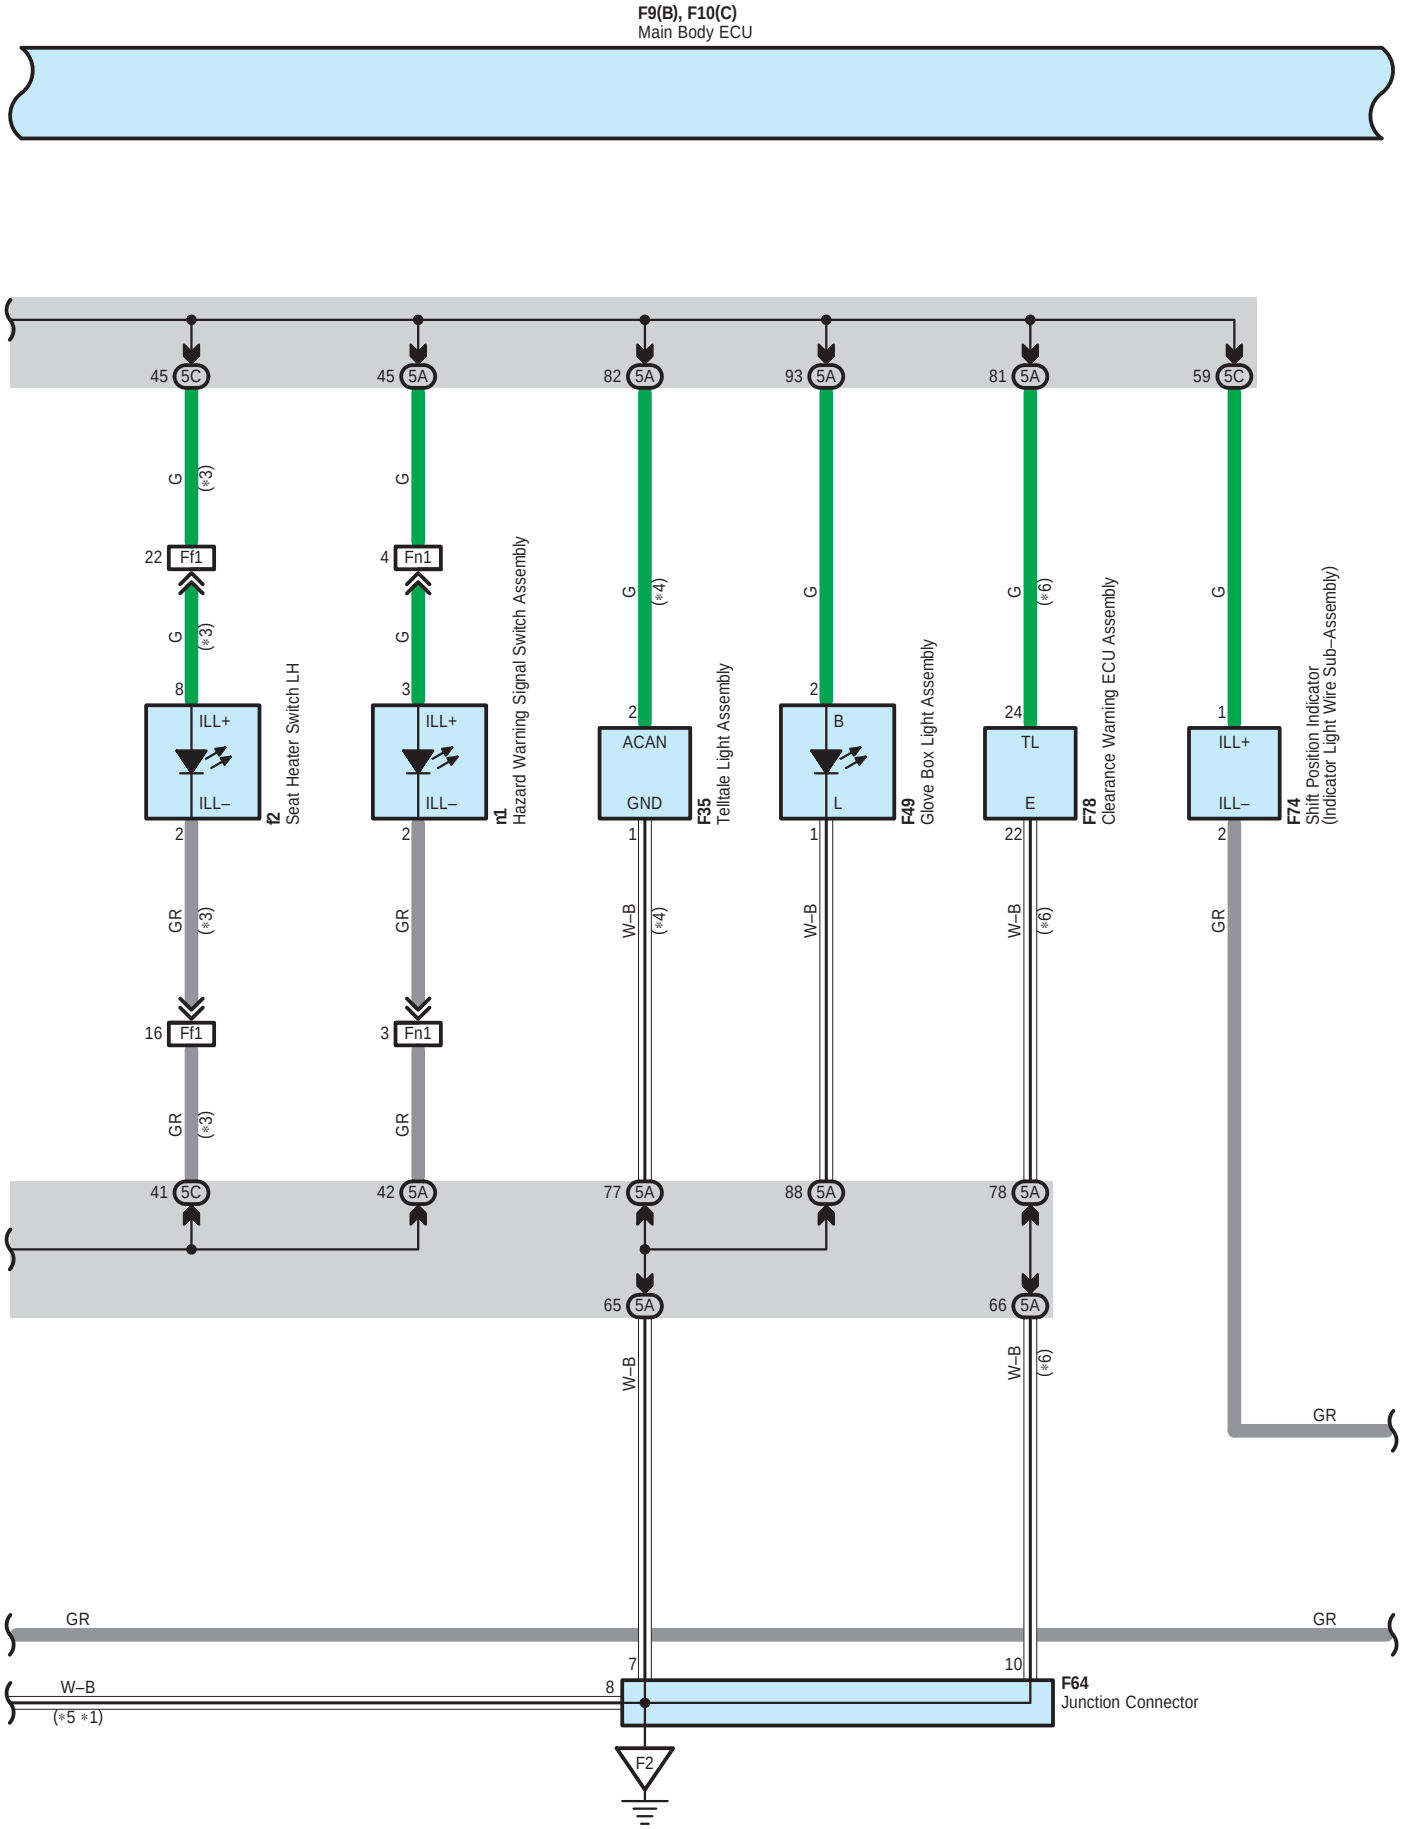
F9(B), F10(C)
Main Body ECU
45 5C
45 5A
82 5A
93 5A
81 5A
59 5C
G
(*3)
(*4)
(*6)
22 Ff1
4 Fn1
8
3
2
24
1
ILL+
ILL–
ACAN
GND
B
L
TL
E
f2
Seat Heater Switch LH
n1
Hazard Warning Signal Switch Assembly
F35
Telltale Light Assembly
F49
Glove Box Light Assembly
F78
Clearance Warning ECU Assembly
F74
Shift Position Indicator
(Indicator Light Wire Sub–Assembly)
GR
W–B
16 Ff1
3 Fn1
41 5C
42 5A
77 5A
88 5A
78 5A
65 5A
66 5A
7
8
10
F64
Junction Connector
(*5 *1)
F2

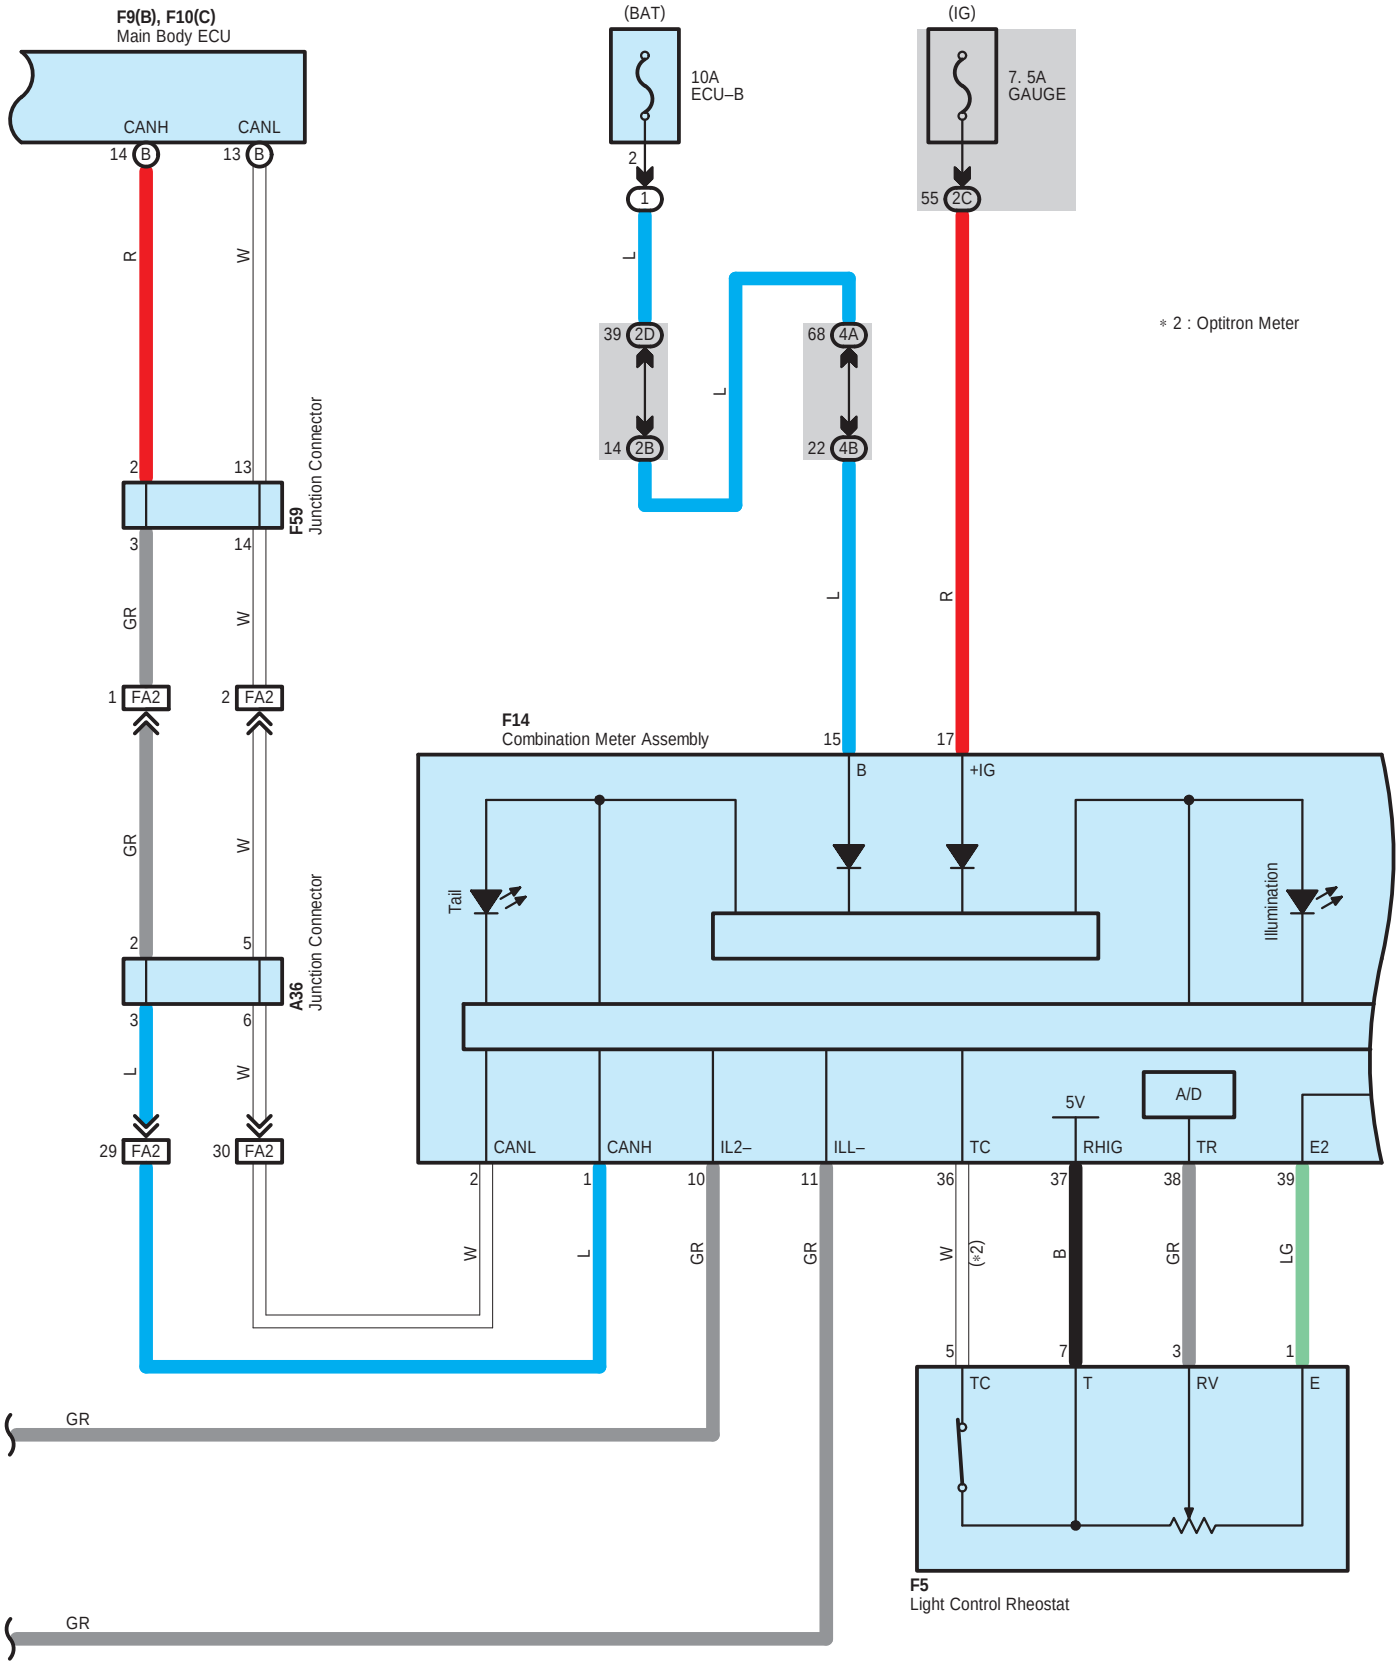

F9(B), F10(C)
Main Body ECU
CANH
CANL
14 B
13 B
(BAT)
10A
ECU–B
2
1
(IG)
7. 5A
GAUGE
55 2C
∗ 2 : Optitron Meter
39 2D
14 2B
68 4A
22 4B
R
W
L
GR
2
13
F59
Junction Connector
3
14
1 FA2
2 FA2
F14
Combination Meter Assembly
15
17
B
+IG
Tail
Illumination
2
5
A36
Junction Connector
3
6
29 FA2
30 FA2
CANL
CANH
IL2–
ILL–
TC
5V
RHIG
A/D
TR
E2
2
1
10
11
36
37
38
39
(∗2)
5
7
3
1
TC
T
RV
E
F5
Light Control Rheostat
GR
GR

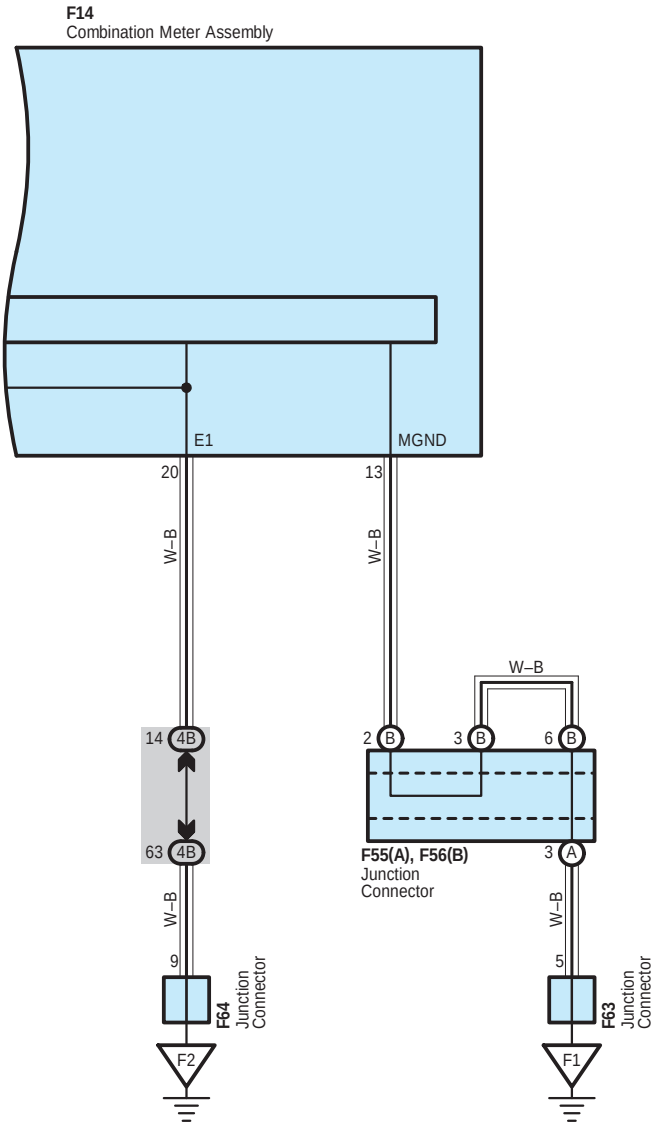
F14
Combination Meter Assembly
E1
MGND
20
13
W–B
W–B
W–B
14
4B
63
4B
2
B
3
B
6
B
F55(A), F56(B)
Junction
Connector
3
A
W–B
W–B
9
5
F64
Junction
Connector
F63
Junction
Connector
F2
F1


A 16
Brown

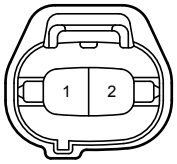


A 26
Brown

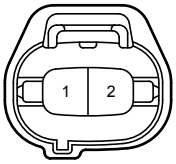

A 36
White

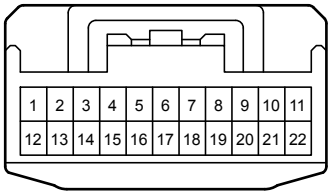

A 40
Dark Gray

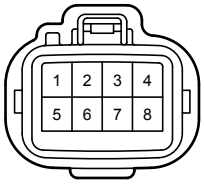


A 43
Gray




A 45
Gray




A 47
White

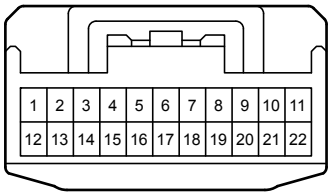


F 5
White

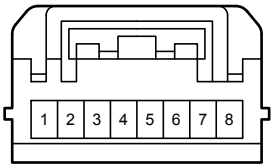


F 9
White

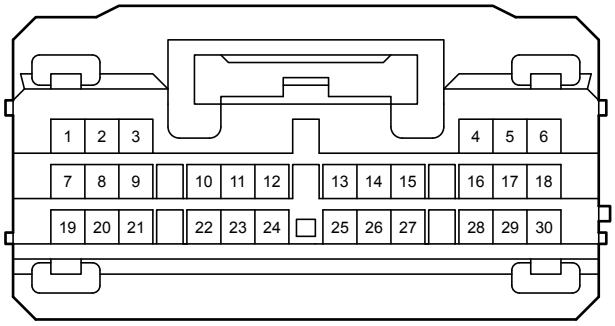


F 10
White

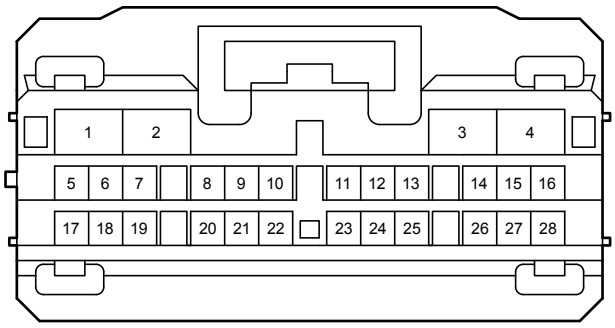


F 14
White

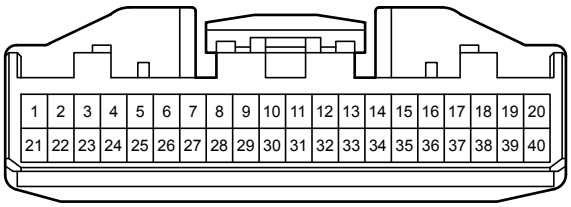


F 22
White

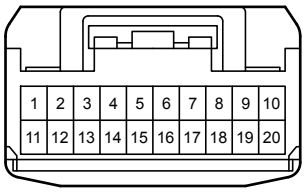


F 23
Black

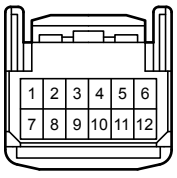


F 27
Black

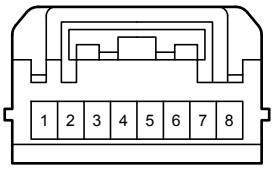


F 29
White

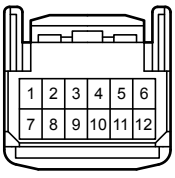


F 35
Black

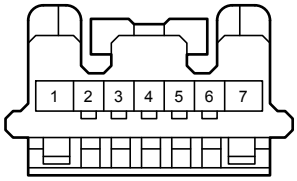


F 49
Black




F 55
Gray

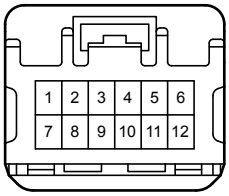


F 56
Gray

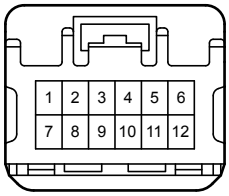


F 59
Gray

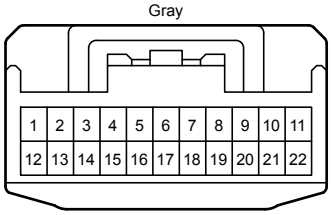


F 63
White

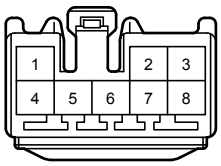


F 64
White

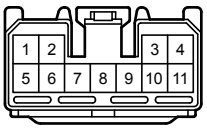


F 74
White




F 77
Black

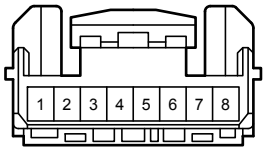


F 78
White

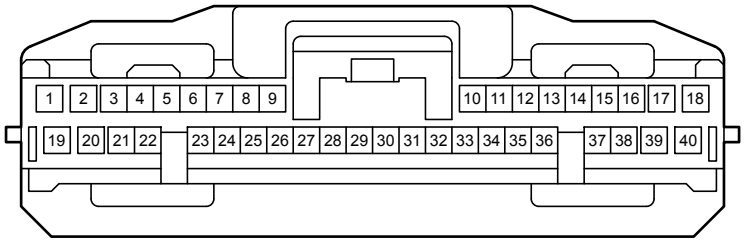

F 80
Black

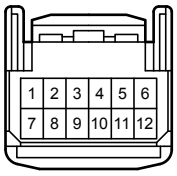


G 4
Gray

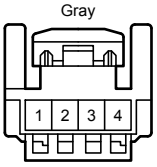


G 5
White




G 6
White

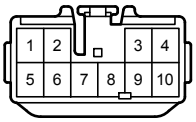


G 9
White

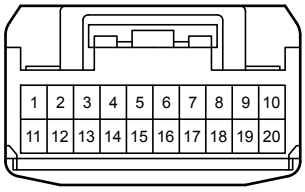


G 13
Black

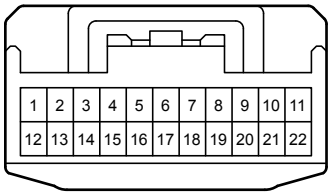


G 14
Black

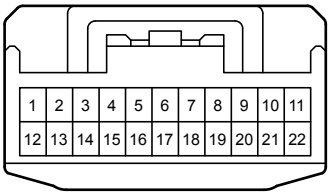


G 35
White

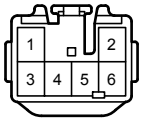


G 36
White

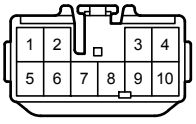


O 12
Gray

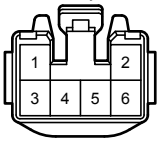


O 13
Gray

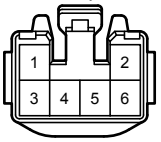


O 19
Gray




O 20
White




U 2
White

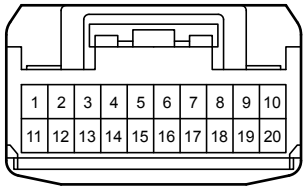


U 3
Black

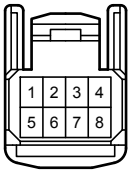


U 4
Gray

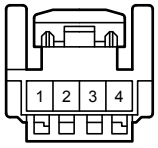

U 6
Black

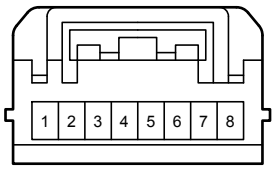


U 7
Black

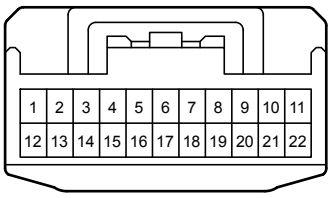


W 3
Gray




f 2
Black

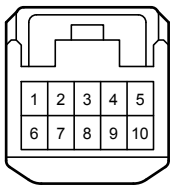


f 3
Black

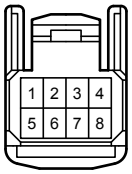


n 1
Gray

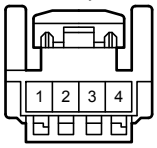


z 11
White

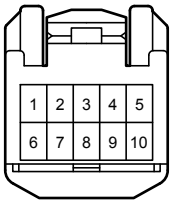


1B




2B
White

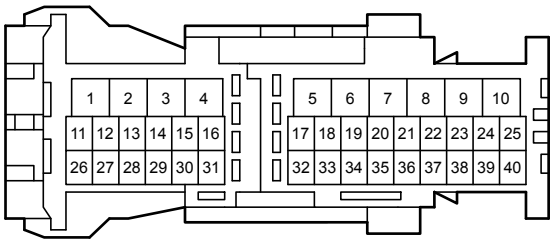


2C
White

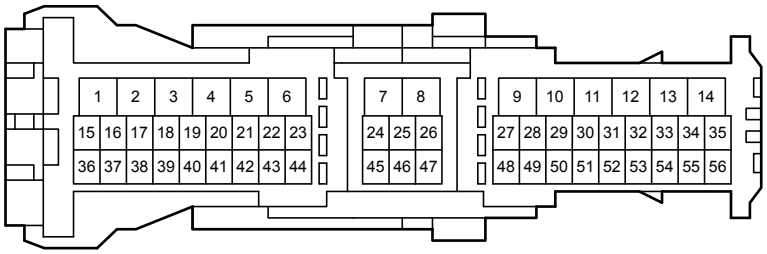


2D
White

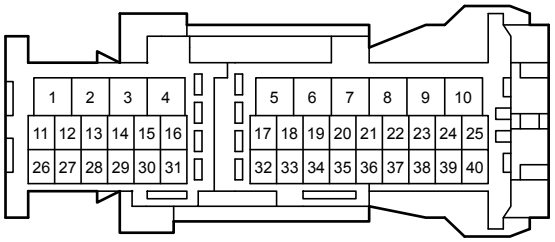


2E
White

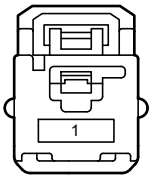


2F
White

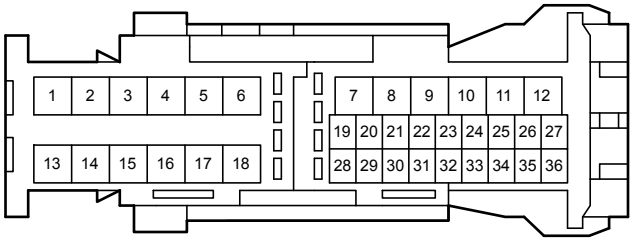


4A
White

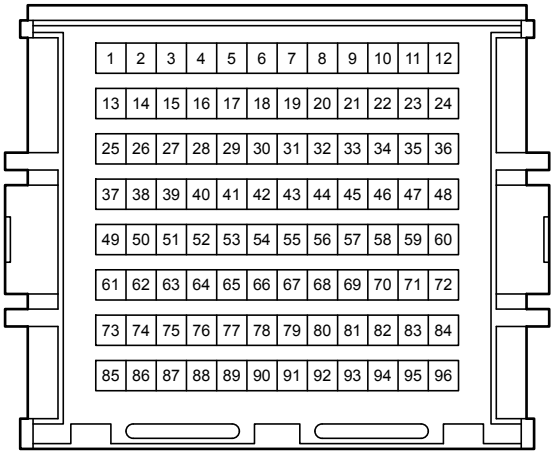


4B
White

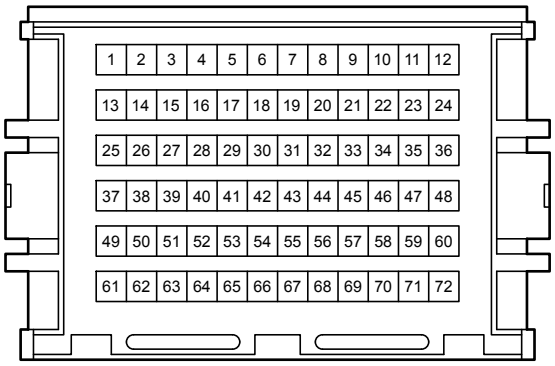


4C
White

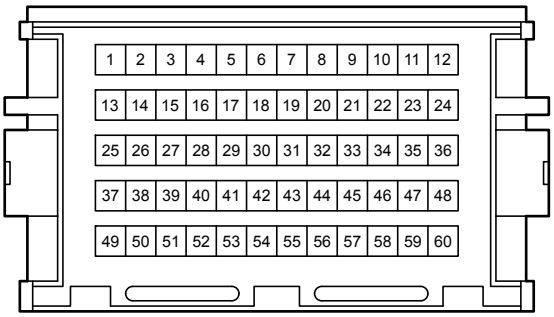


5A
White

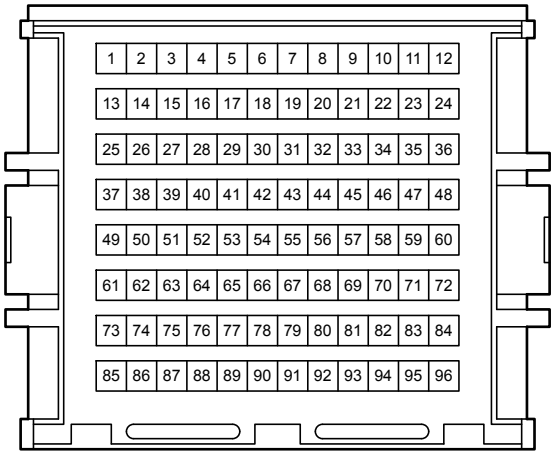


5B
White

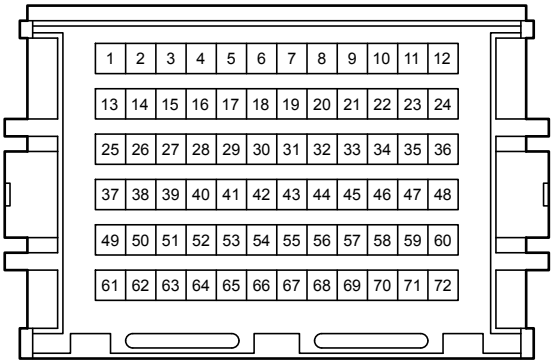


5C
White

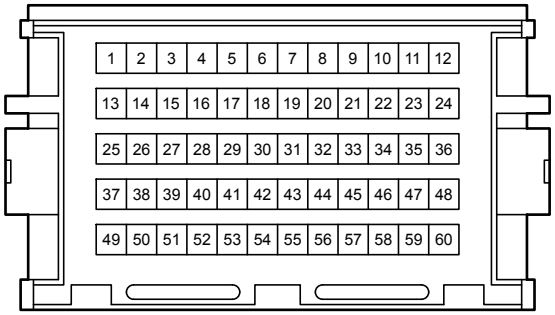



FA2
White

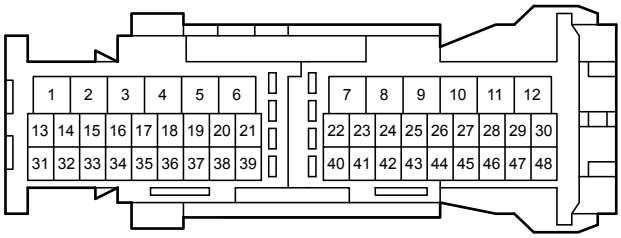

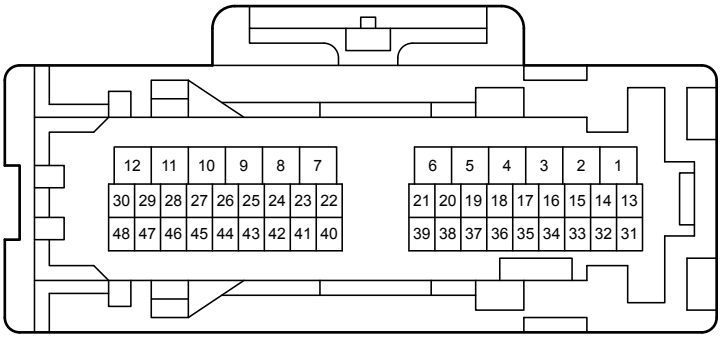



FG1
White

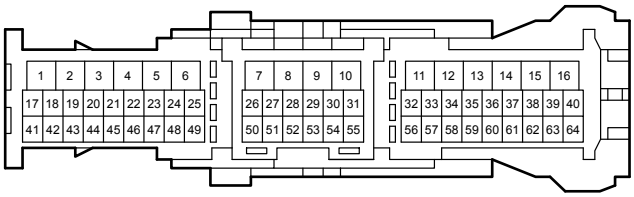

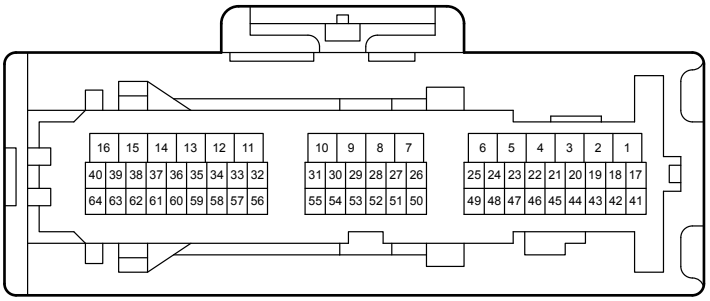

FS1
White

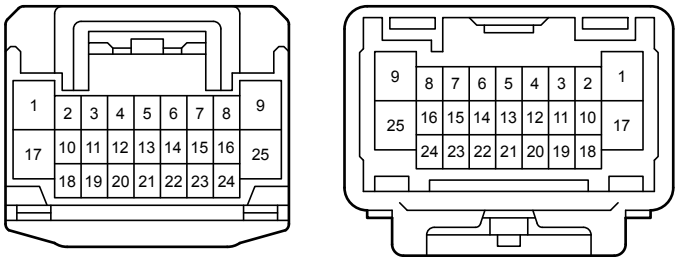

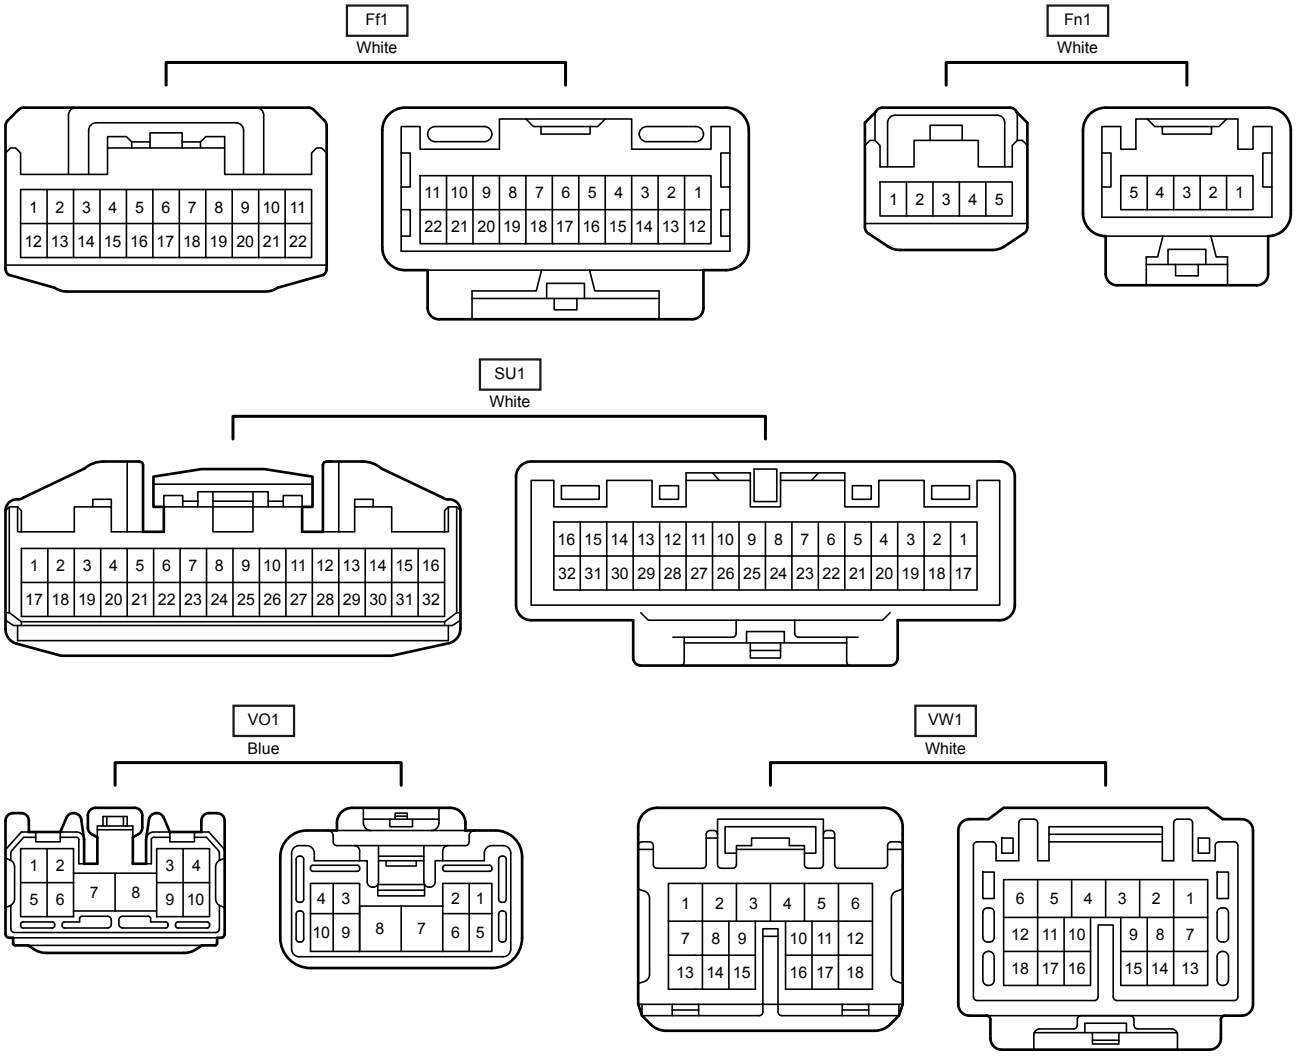
Ff1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
Fn1
White
1 2 3 4 5
5 4 3 2 1
SU1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
32 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17
VO1
Blue
1 2 3 4 5 6 7 8 9 10
4 3 2 1 10 9 8 7 6 5
VW1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
6 5 4 3 2 1 12 11 10 9 8 7 18 17 16 15 14 13