
FRONT CROSSMEMBER (ASSY)

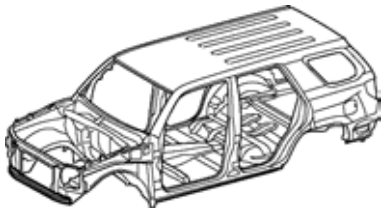

F42917A


Symbol meaning

REMOVAL	▲ : Remove Weld Points
INSTALLATION	■ : Plug Weld


F42917B

REMOVAL·INSTALLATION

[LH Side]

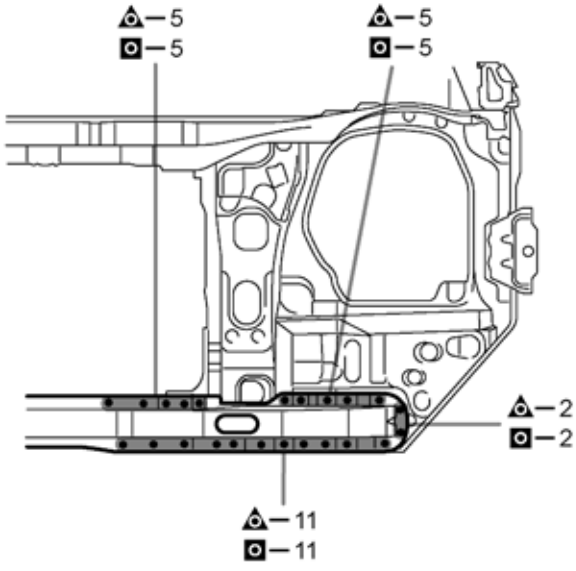

[RH Side]

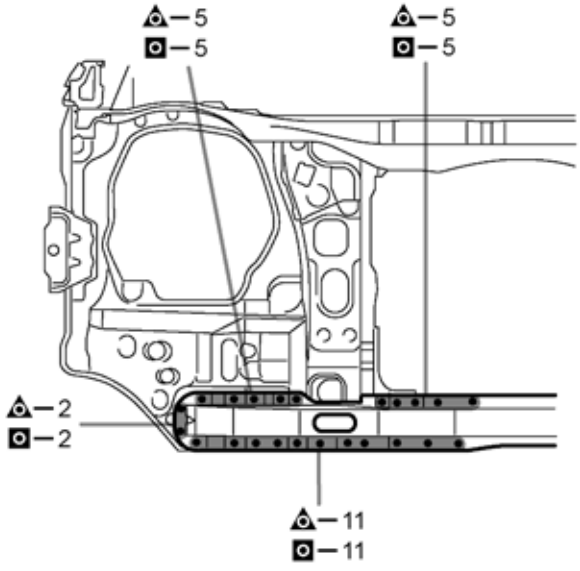

F42917

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.