
COWL TOP SIDE PANEL (ASSY)

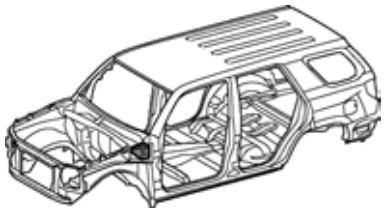

F42922A


With the front body pillar lower gusset removed.

Symbol meaning

REMOVAL	▲ ▲M : Remove Weld Points
INSTALLATION	● M : Plug Weld

F42922B

REMOVAL·INSTALLATION

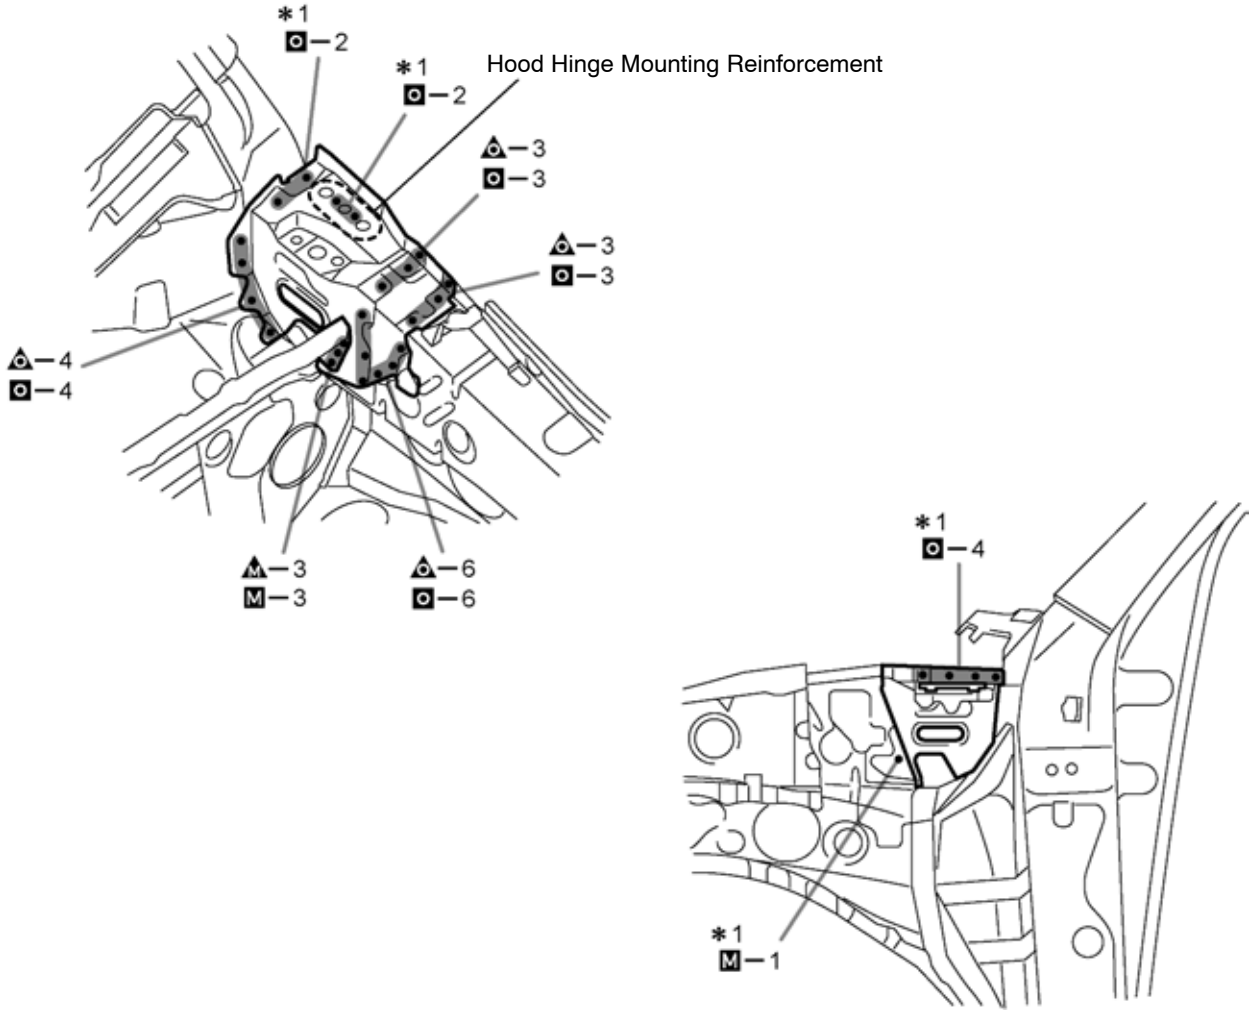

F42922

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.