
FRONT BODY PILLAR LOWER GUSSET (ASSY)

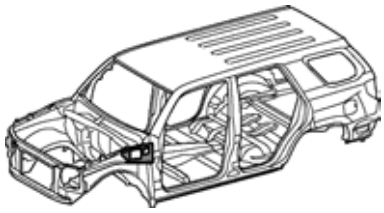


F42923A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F42923B

REMOVAL·INSTALLATION

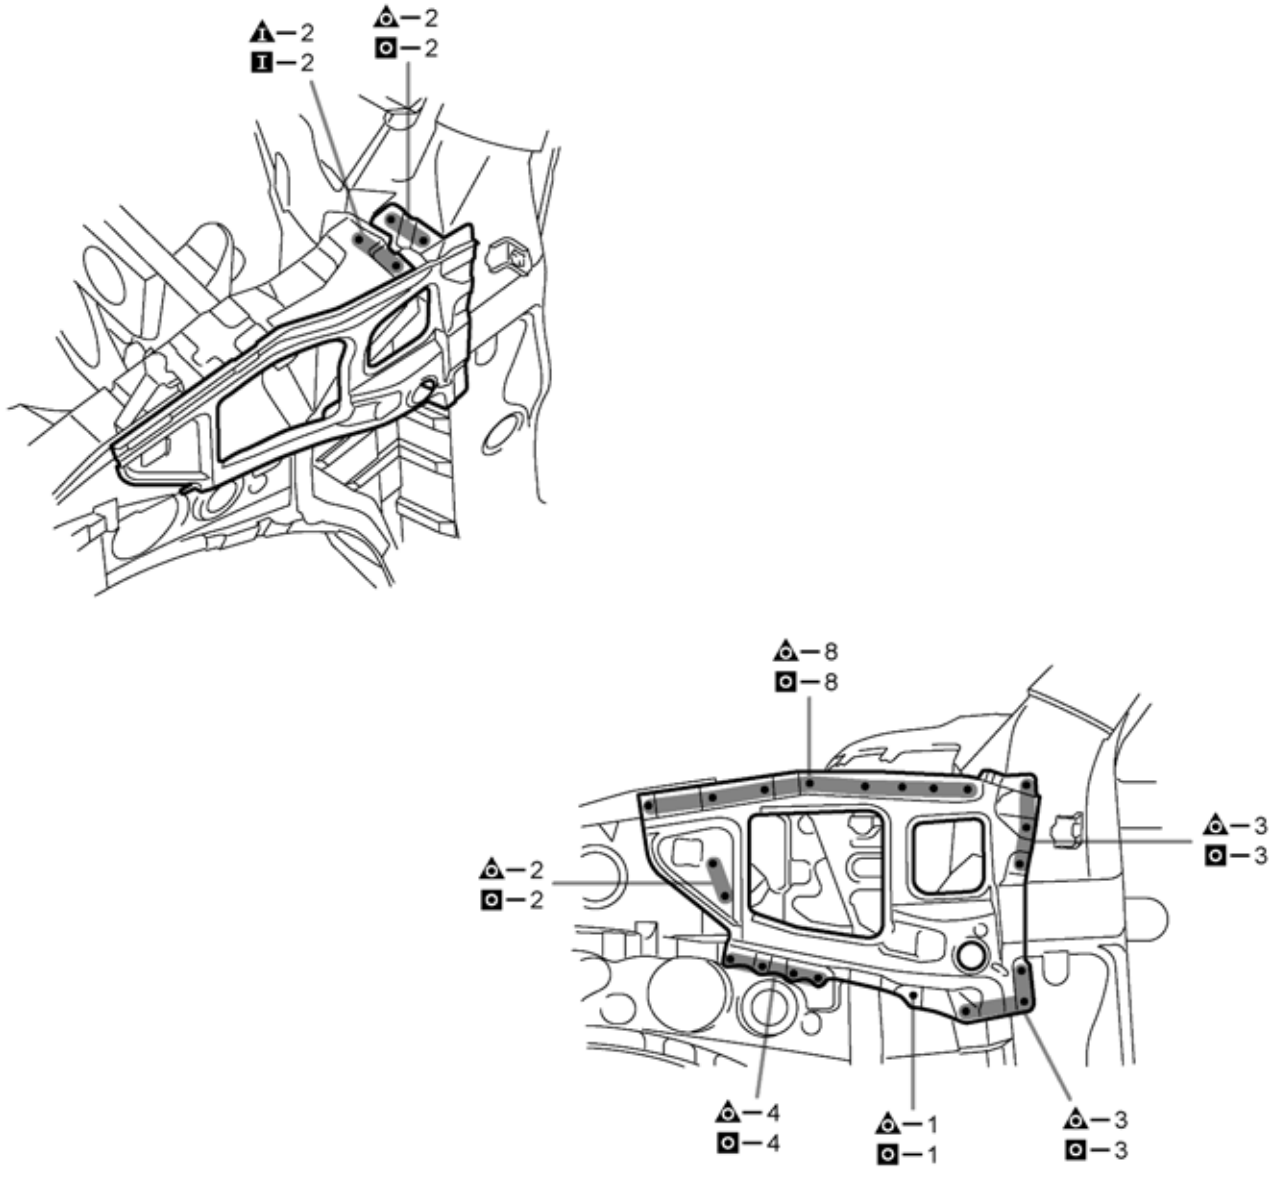

F42923

INSTALLATION POINT

1 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.