QUARTER WHEEL HOUSING OUTER PANEL (ASSY)


F42948A

With the quarter panel removed.

Symbol meaning


: Remove Weld Points : Cut with Disc Sander etc.

: Cut and Join Location

F42948B

REMOVAL

[LH]

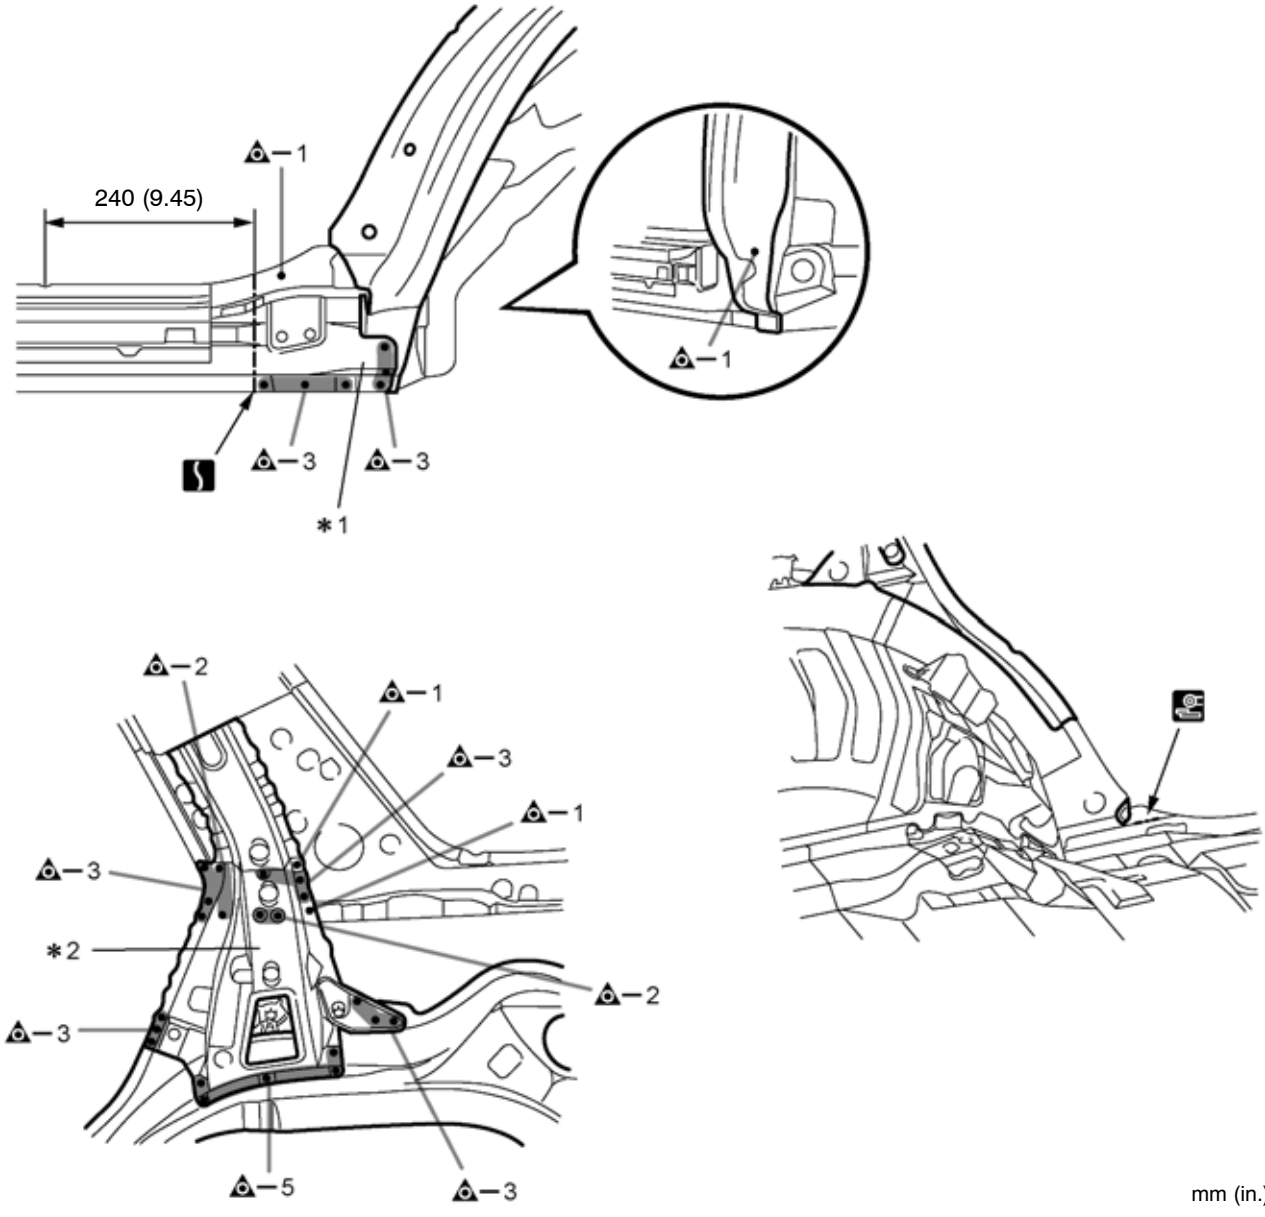

F42948

REMOVAL POINT

1 *1 is reused.

2 After removing the *1 and *2 remove the quarter wheel housing outer panel.


Symbol meaning

: Remove Weld Points : Cut with Disc Sander etc.

: Cut and Join Location


F42948B

[LH]

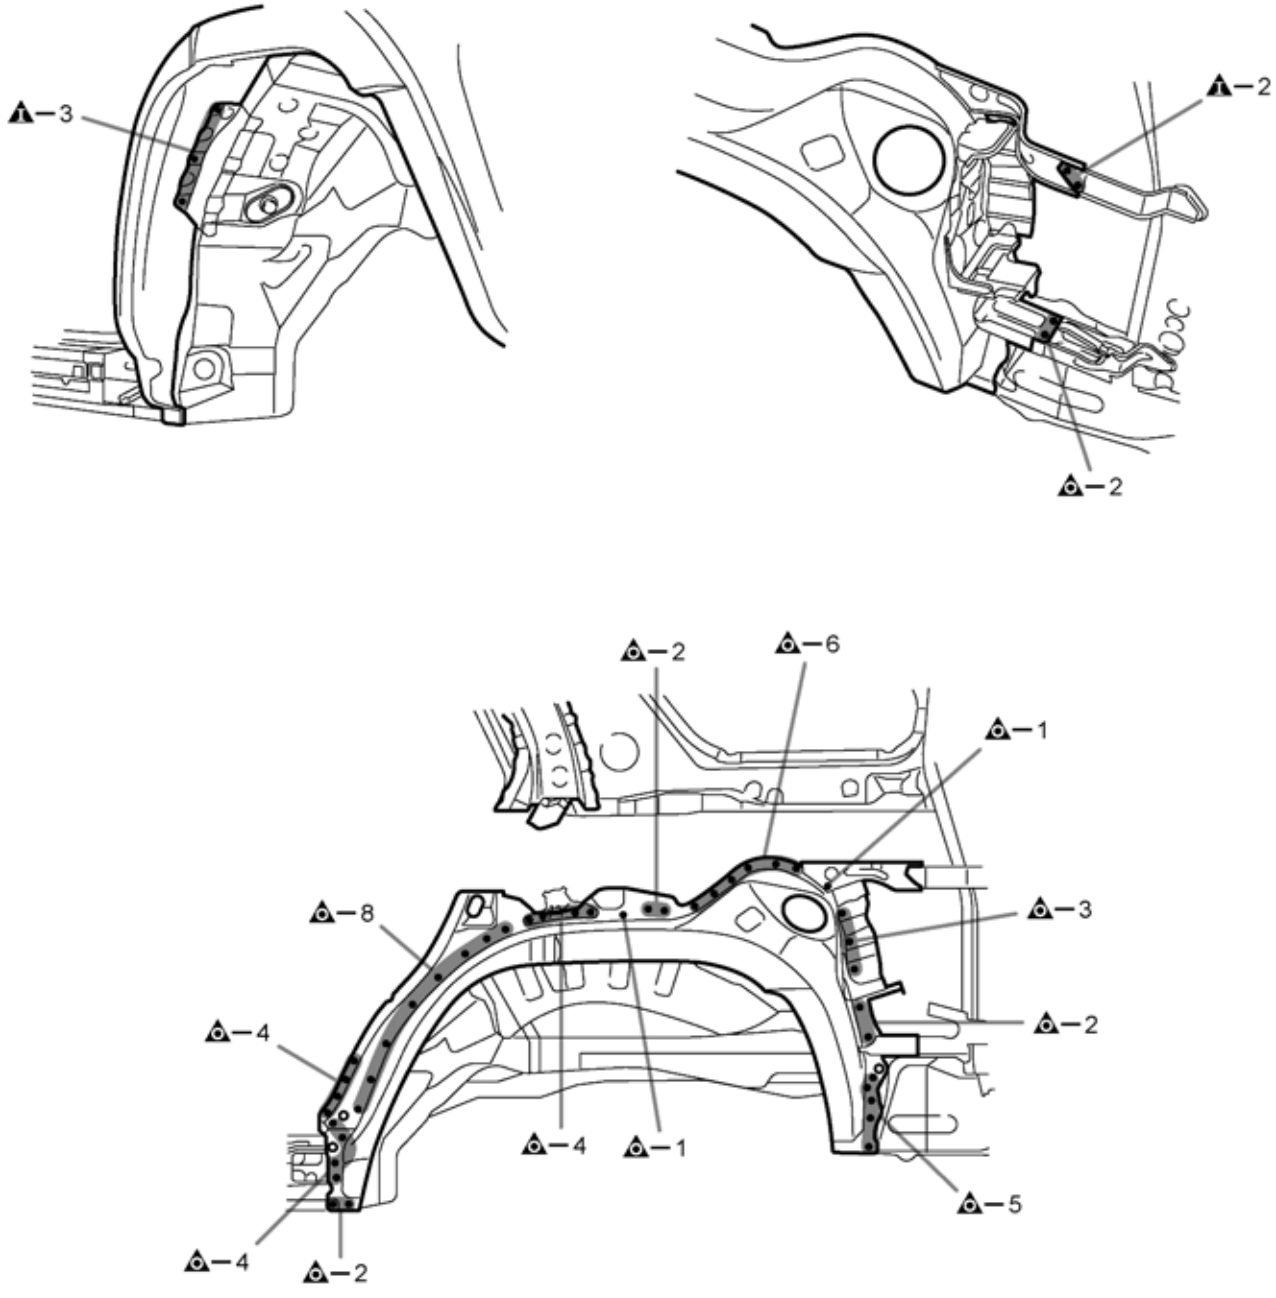

F42949

[RH]

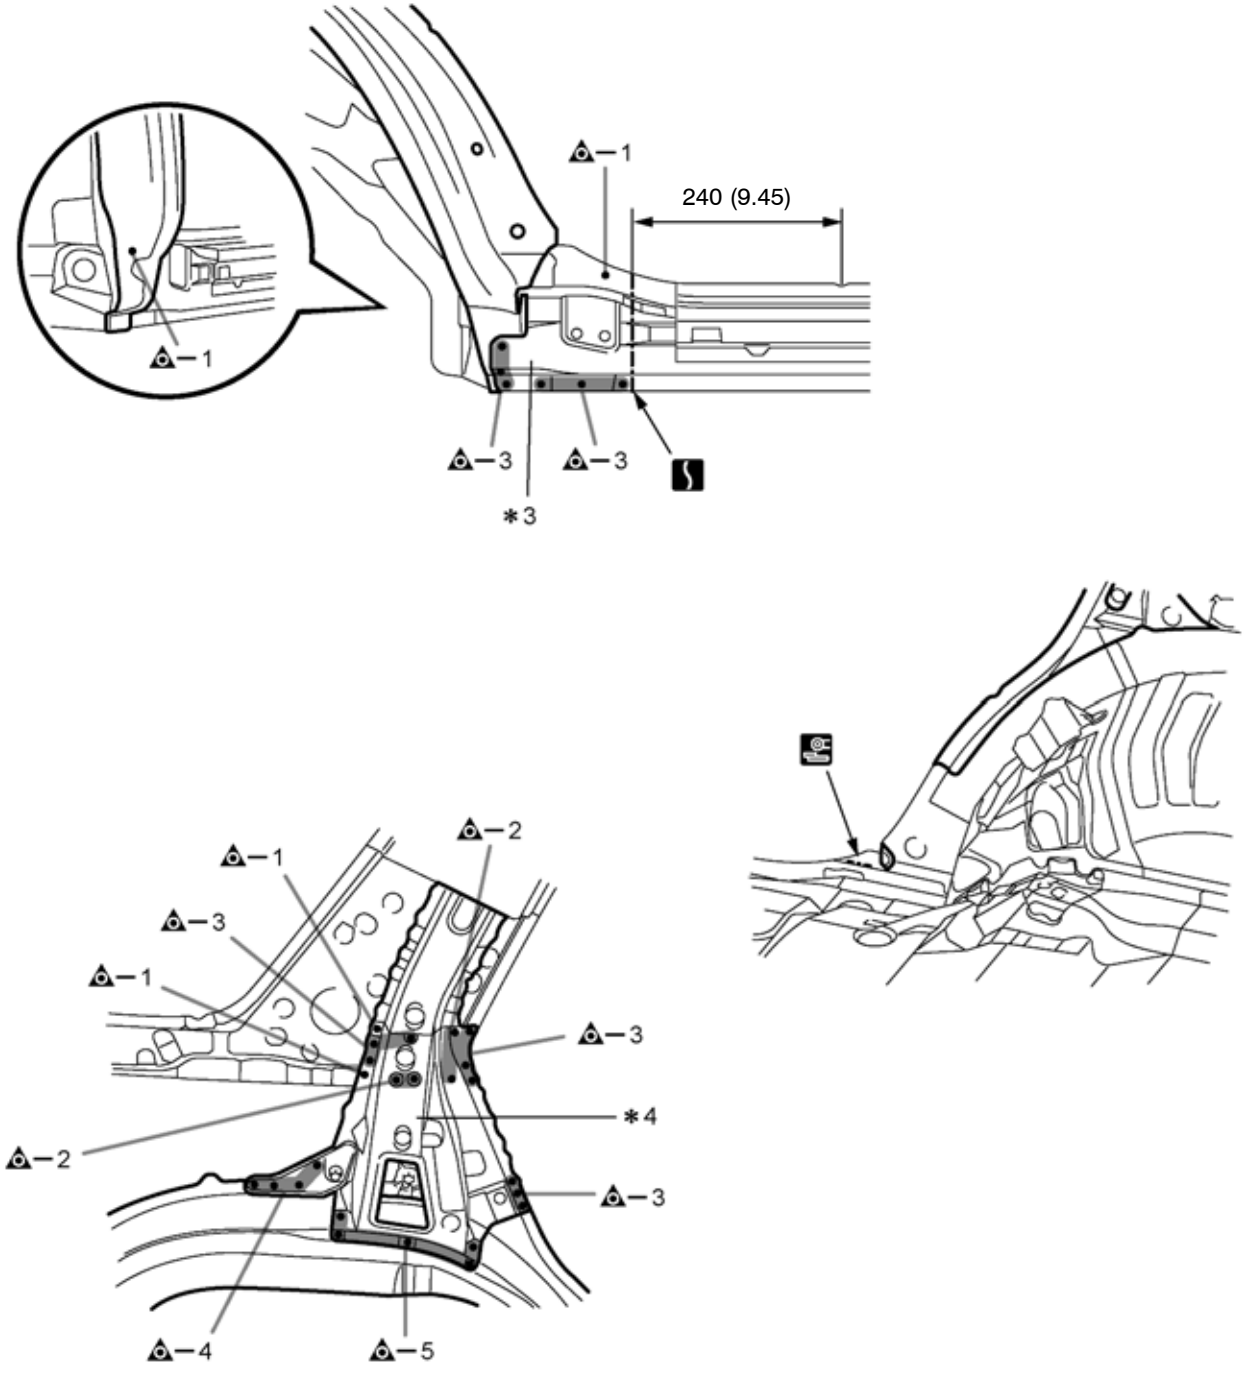

mm (in.)

F42950

REMOVAL POINT

1 *3 is reused.

2 After removing the *3 and *4 remove the quarter wheel housing outer panel.


Symbol meaning


: Remove Weld Points : Cut with Disc Sander etc.

: Cut and Join Location

F42948B

[RH]

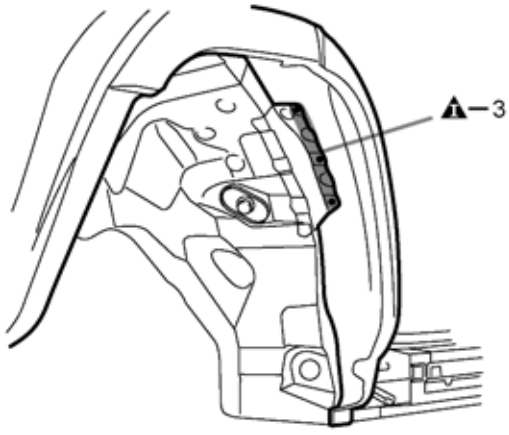

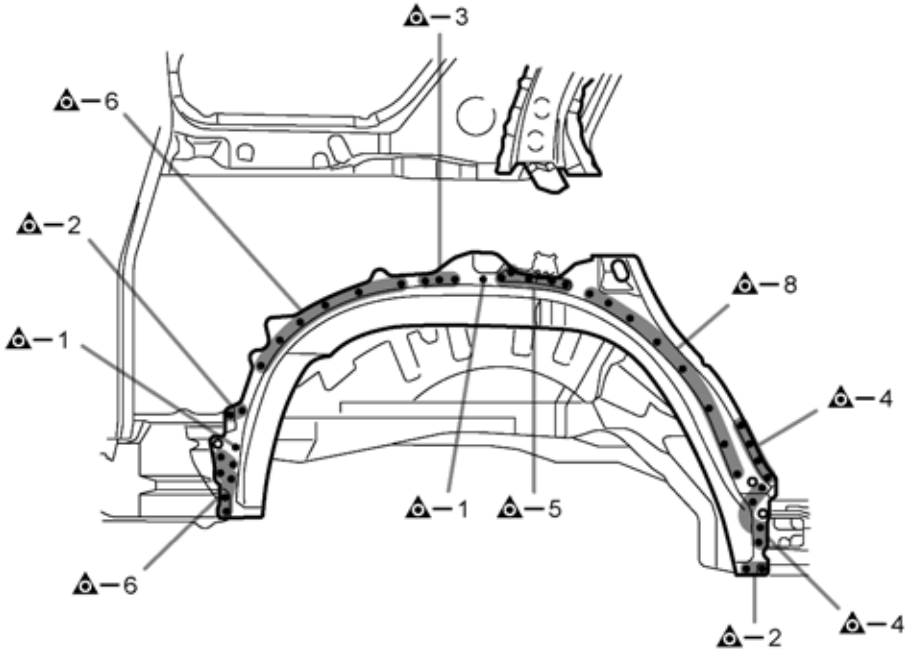

F42951

Symbol meaning


: Remove Weld Points : Spot Weld : Plug Weld

: Fillet Weld : Butt Weld : Body Sealer

F42952B

INSTALLATION

[LH]

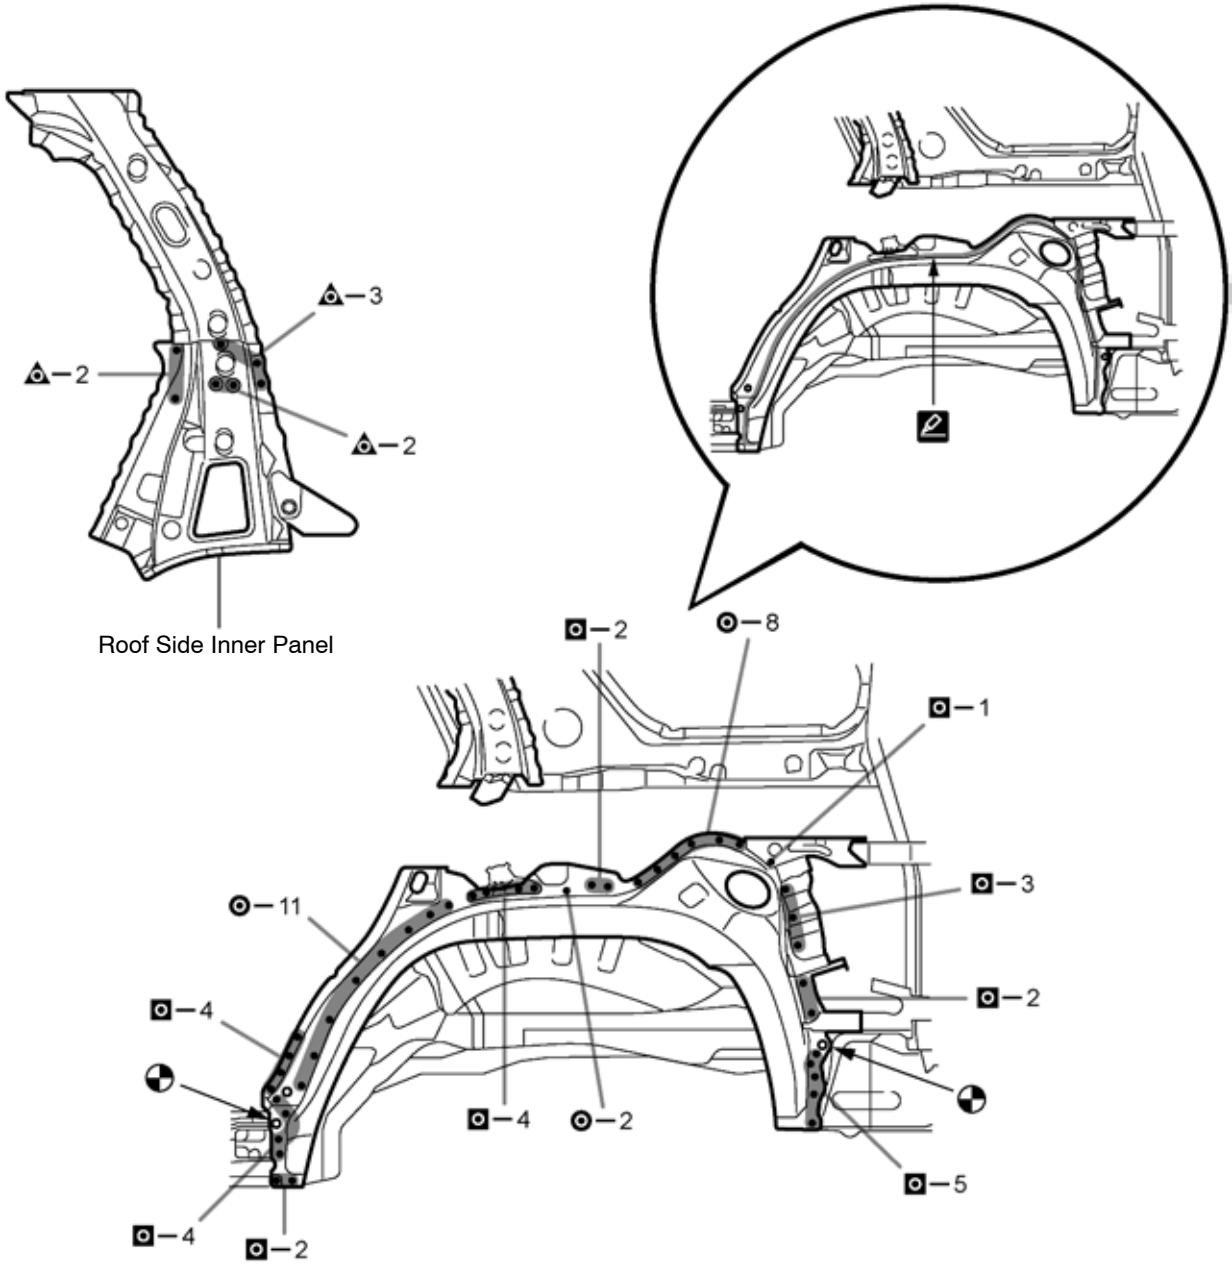

F42952

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.
2 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
3 Before installing a new part, apply body sealer.
HINT:
Apply body sealer in an even, continuous bead.


Symbol meaning


: Remove Weld Points : Spot Weld : Plug Weld

: Fillet Weld : Butt Weld : Body Sealer

F42952B


[LH]

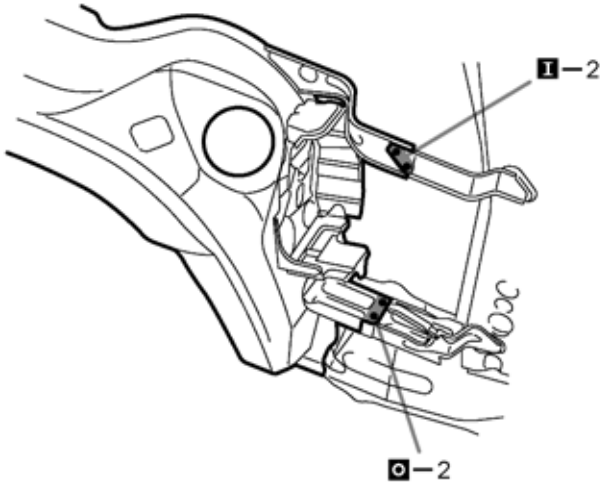

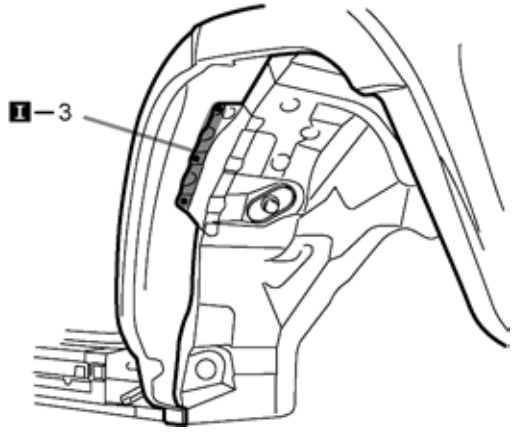

F42953

[LH]

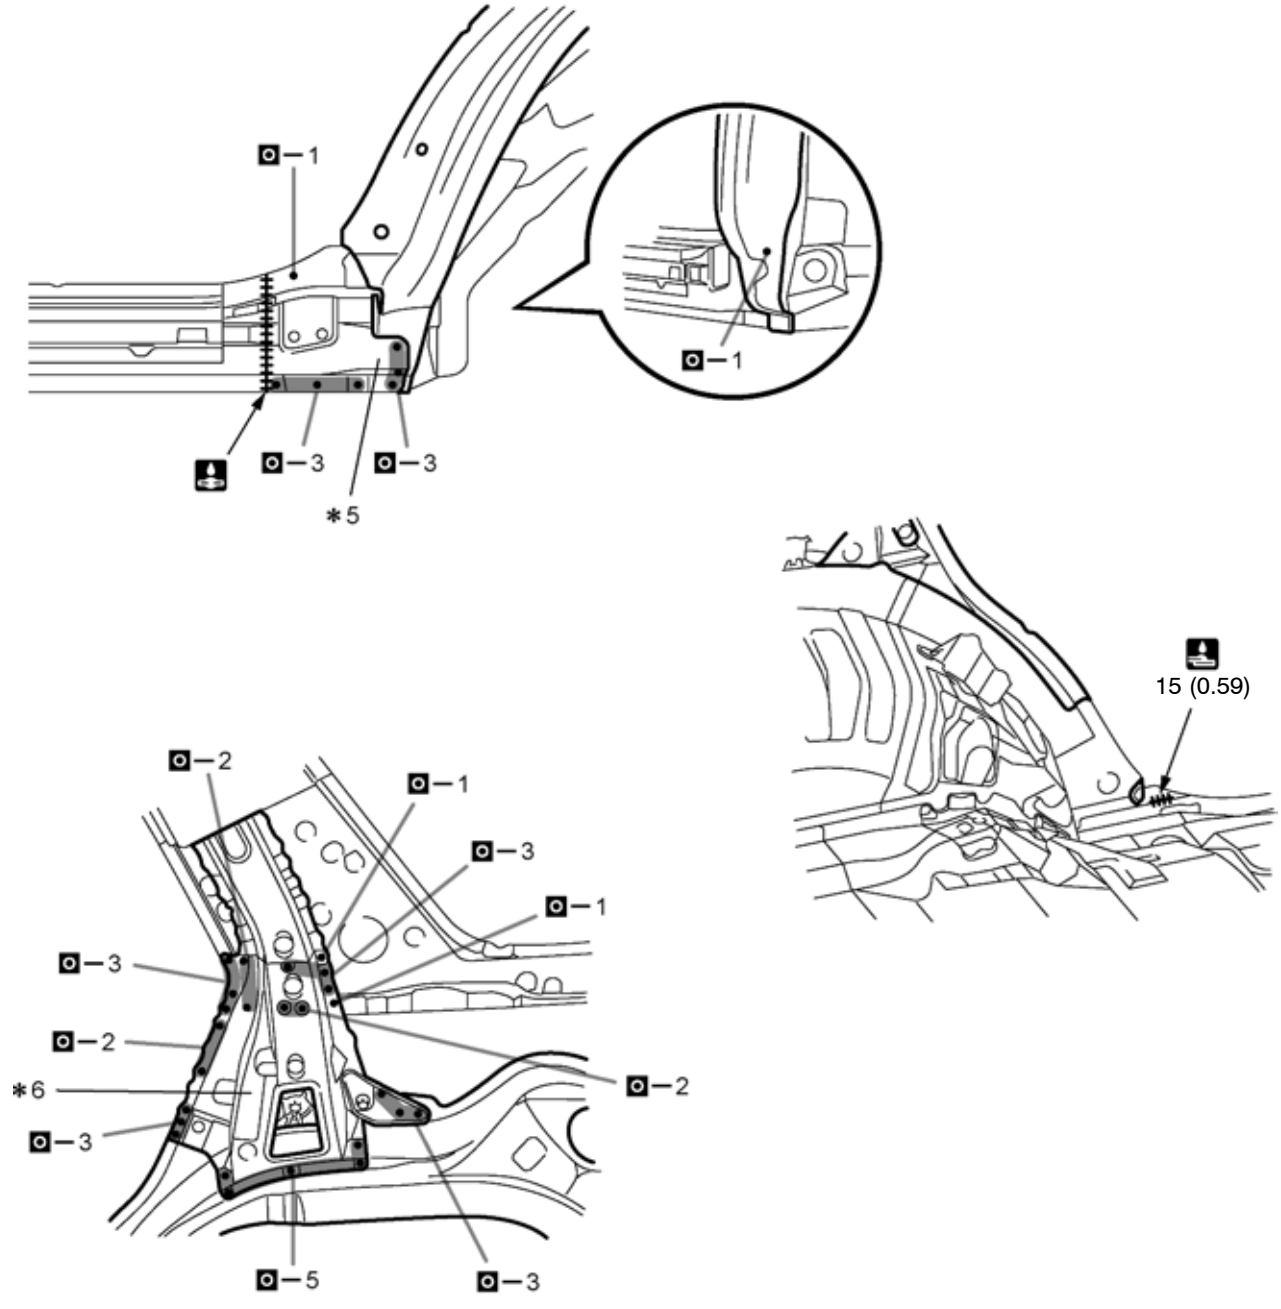

mm (in.)

F42954

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the *5 and *6.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning

: Remove Weld Points : Spot Weld : Plug Weld

: Fillet Weld : Butt Weld : Body Sealer

F42952B

[RH]

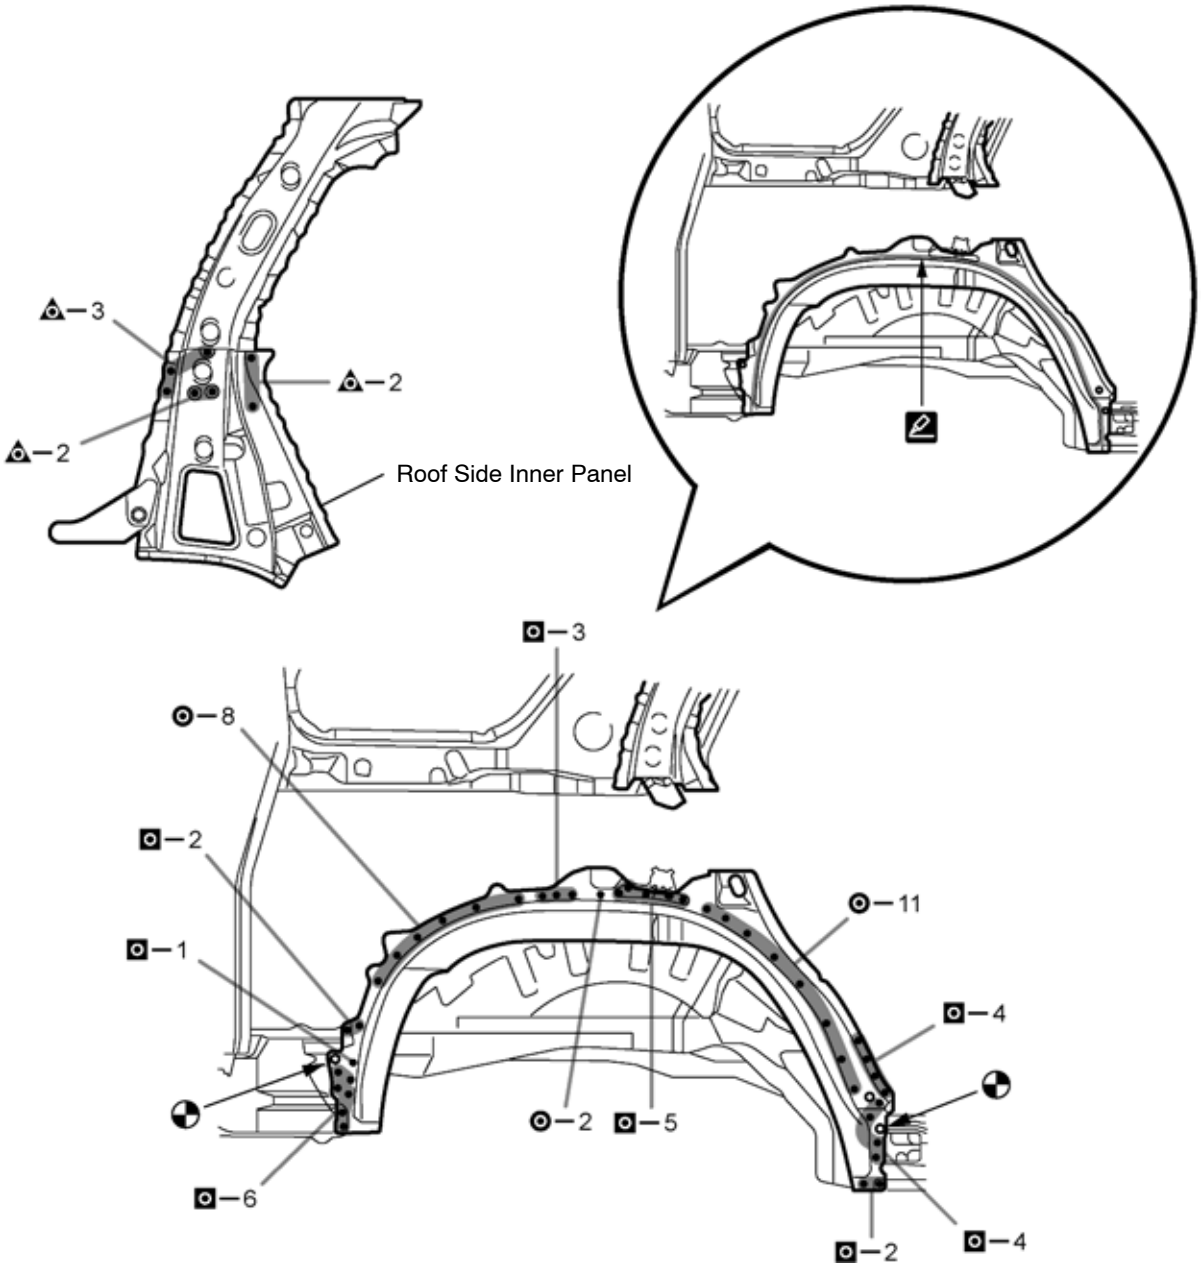


F42955

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.
2 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
3 Before installing a new part, apply body sealer.
HINT:
Apply body sealer in an even, continuous bead.

[RH]

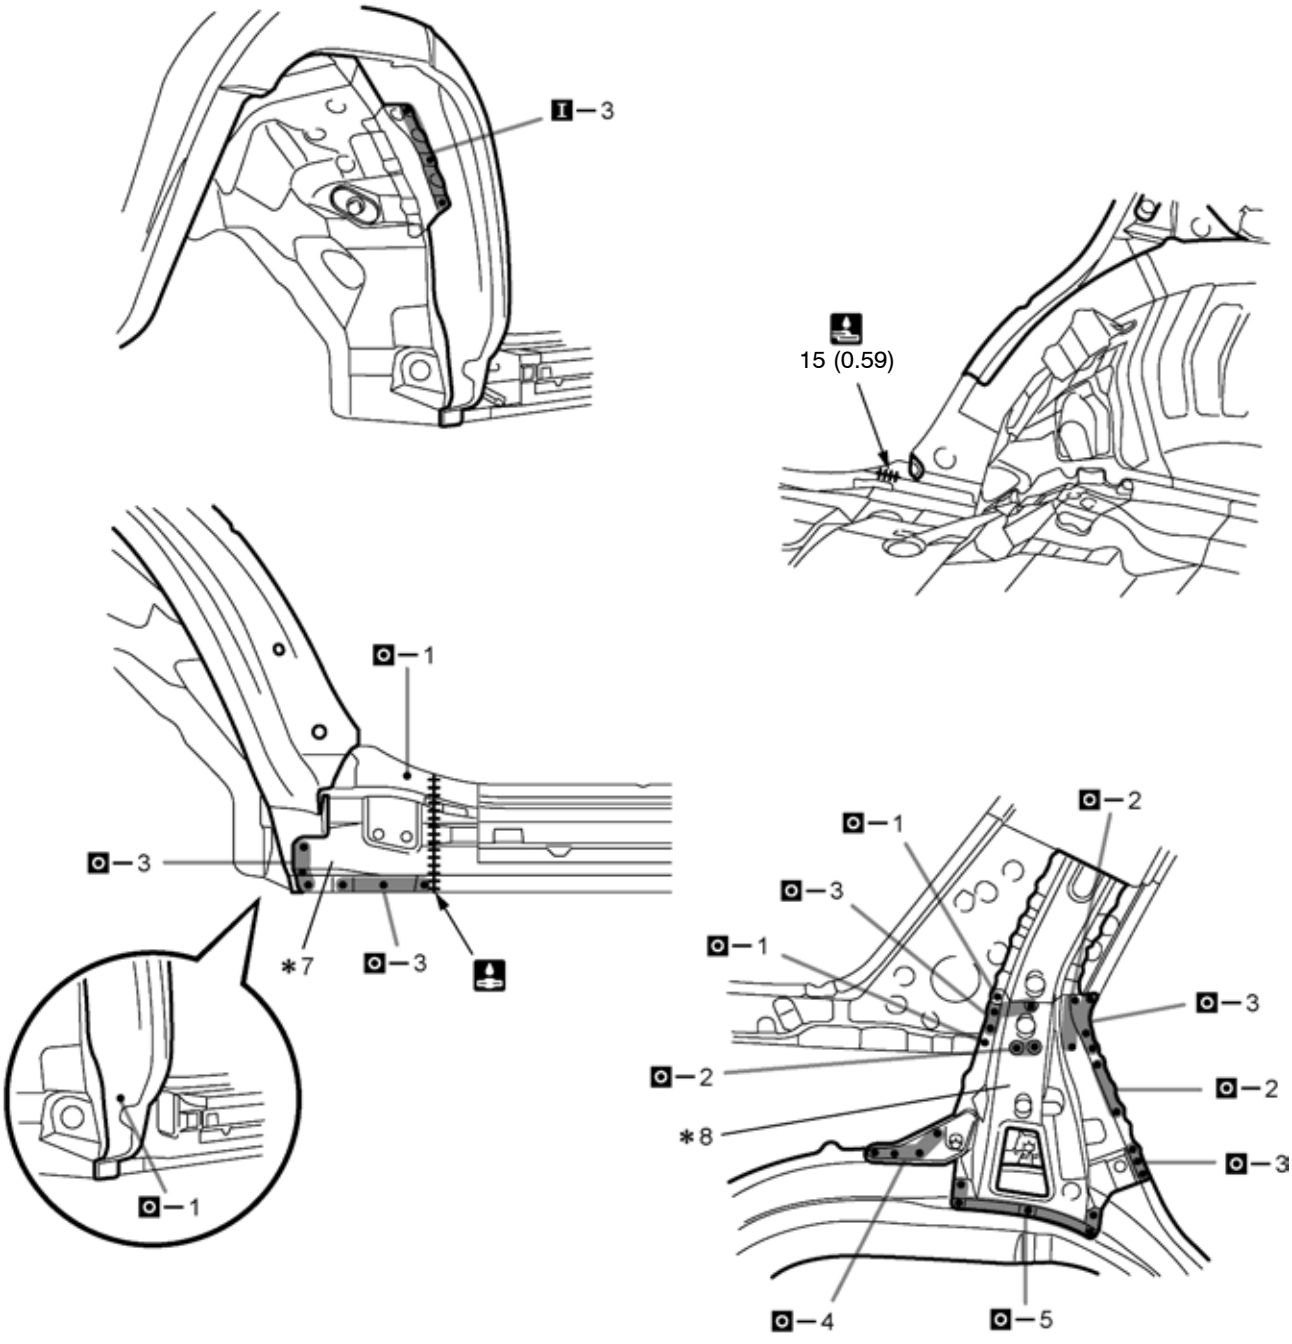

mm (in.)

F42956

INSTALLATION POINT

1 After welding the quarter wheel housing outer panel to the vehicle side, install the *7 and *8.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.