QUARTER OUTER PANEL (CUT)



F42957A


With the quarter panel removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Plug Weld	: Butt Weld

F42957B

REMOVAL·INSTALLATION

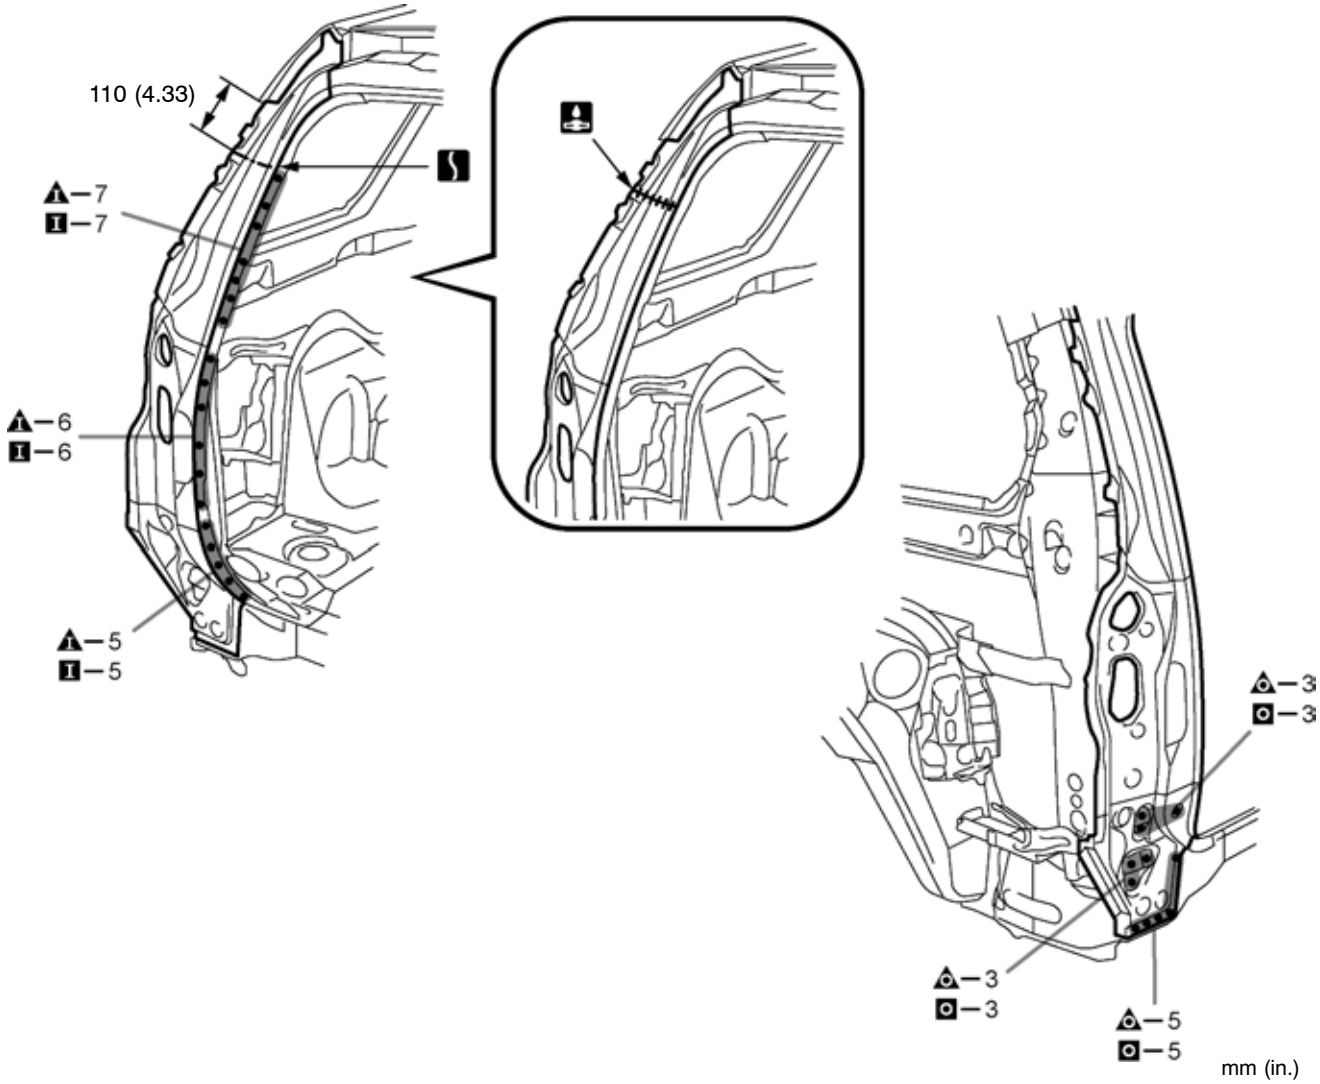

F42957

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.