
ROOF SIDE INNER REINFORCE (CUT)

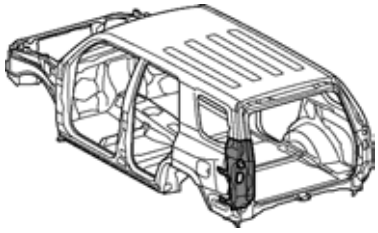

F42958A


With the quarter outer panel and rear floor crossmember No. 2 removed.

Symbol meaning

: Remove Weld Points

F42958B

REMOVAL

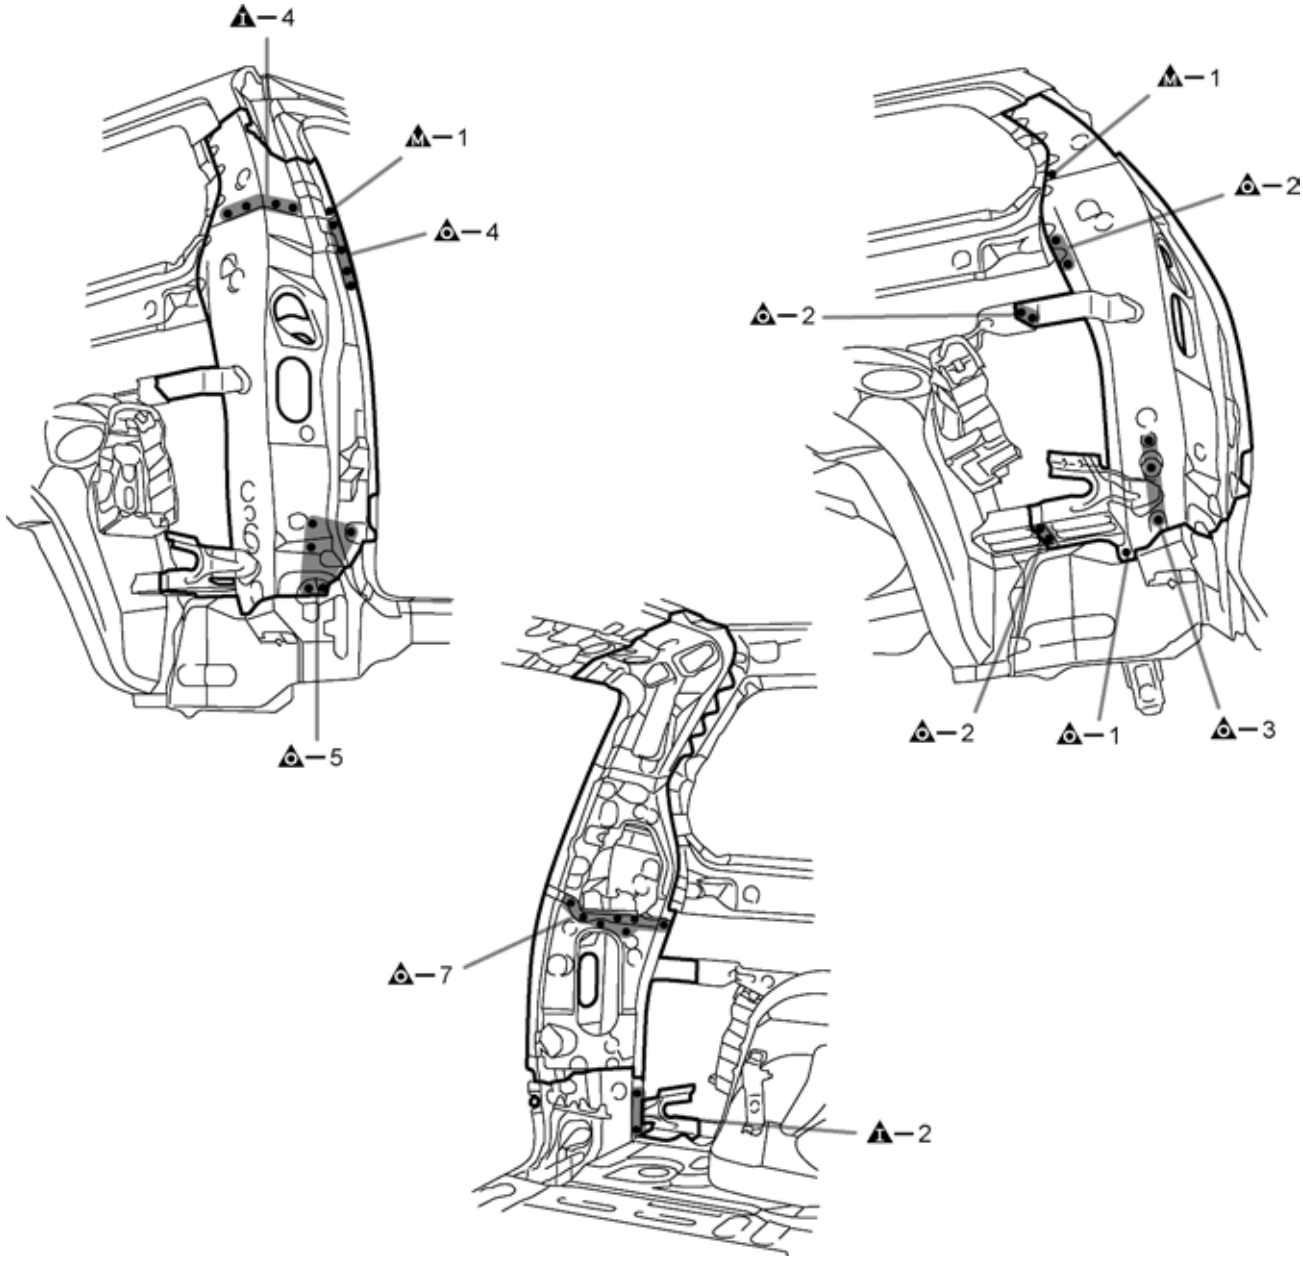


F42958

Symbol meaning

: Remove Weld Points : Plug Weld

F43013B


INSTALLATION

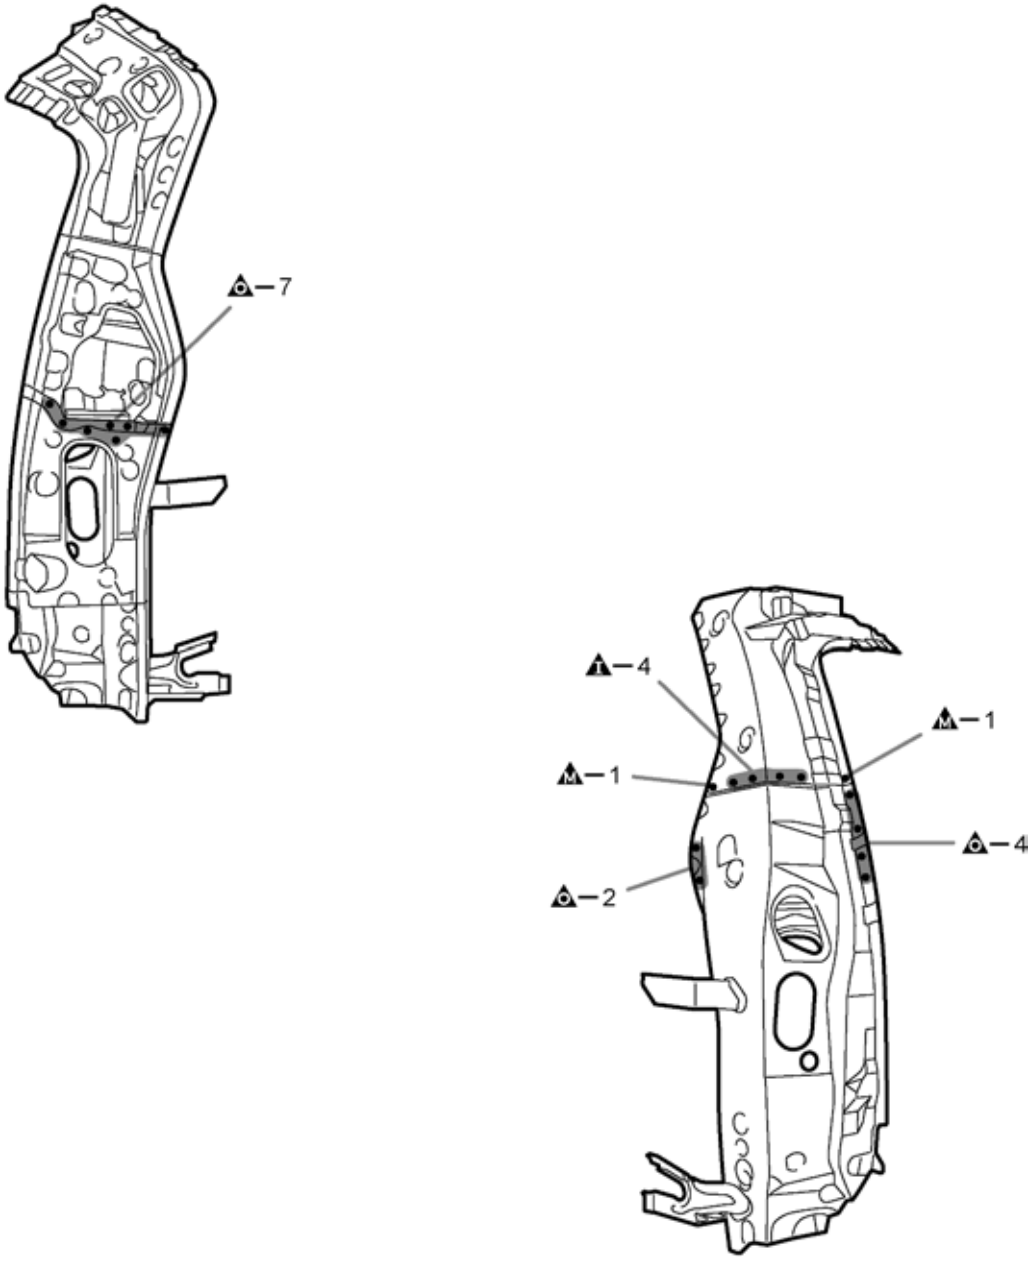

F43013

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.

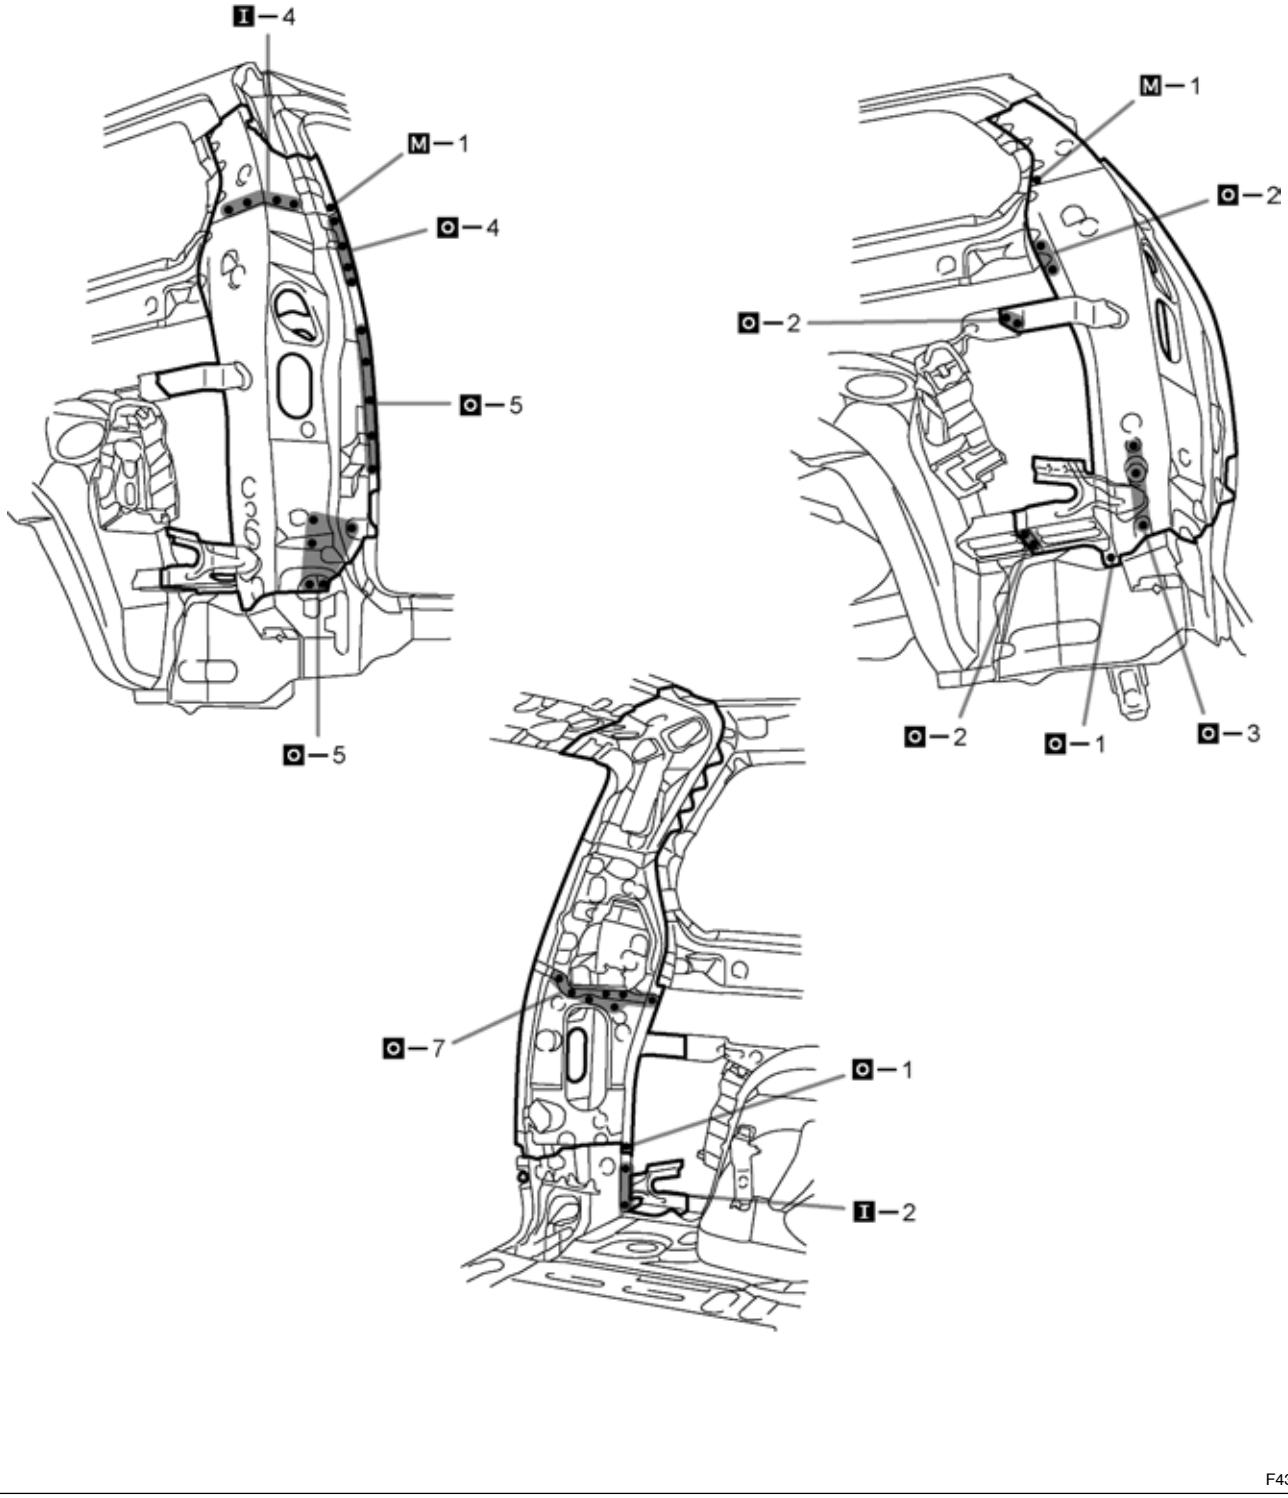

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.