BODY LOWER BACK PANEL (ASSY)


F42960A

With the roof side inner reinforce removed.


Symbol meaning

REMOVAL	: Remove Weld Points : Cut and Join Location
INSTALLATION	: Spot Weld : Plug Weld : Butt Weld

F42960B

REMOVAL·INSTALLATION

[LH Side]

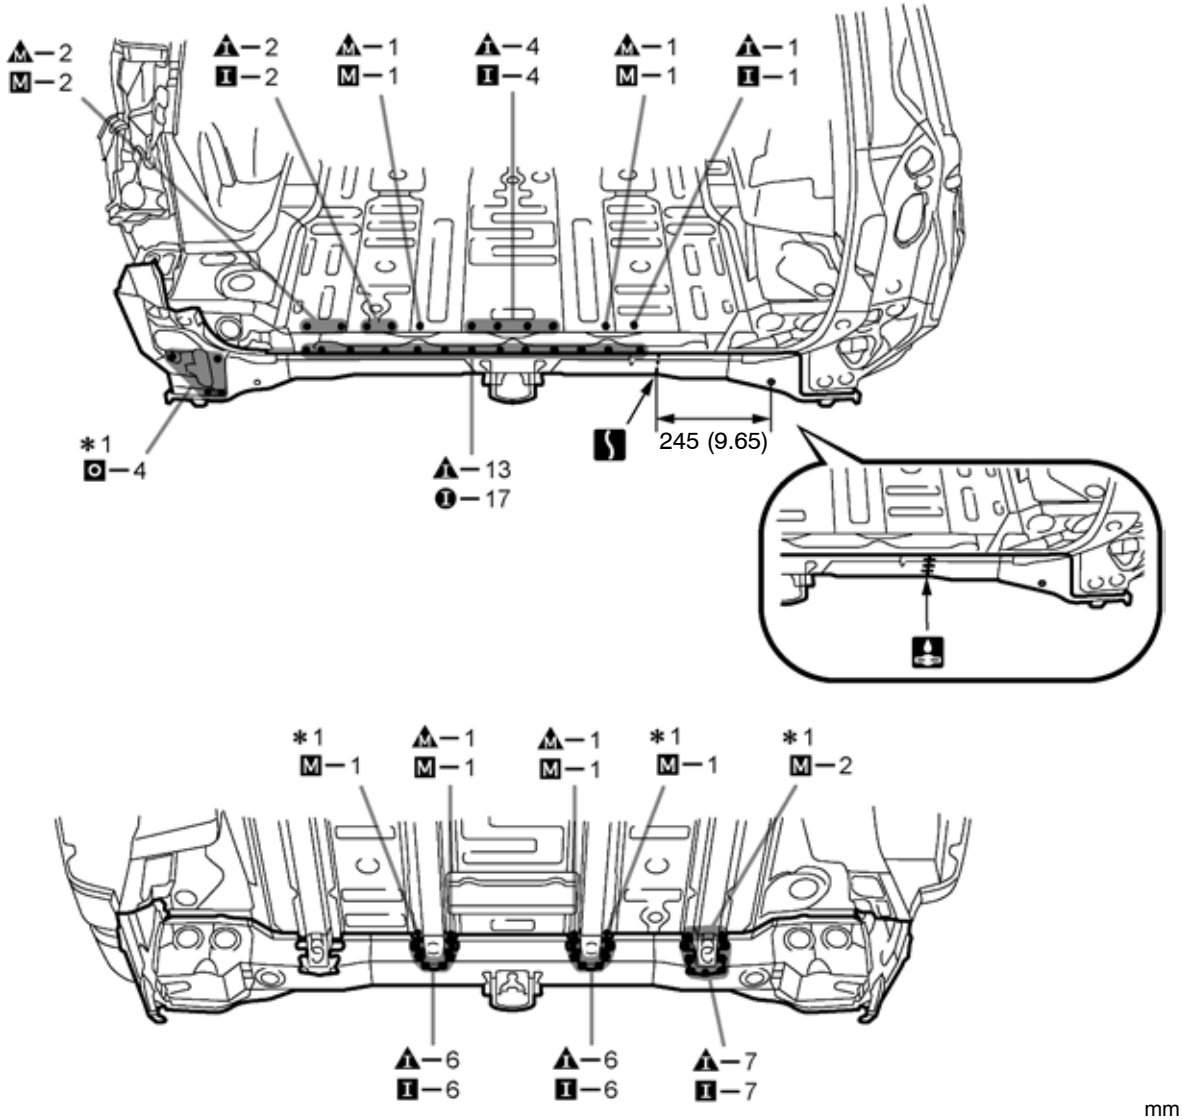

mm (in.)

F42960

INSTALLATION POINT


1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location	
INSTALLATION	: Spot Weld	: Plug Weld	: Butt Weld

F42960B

[LH Side]

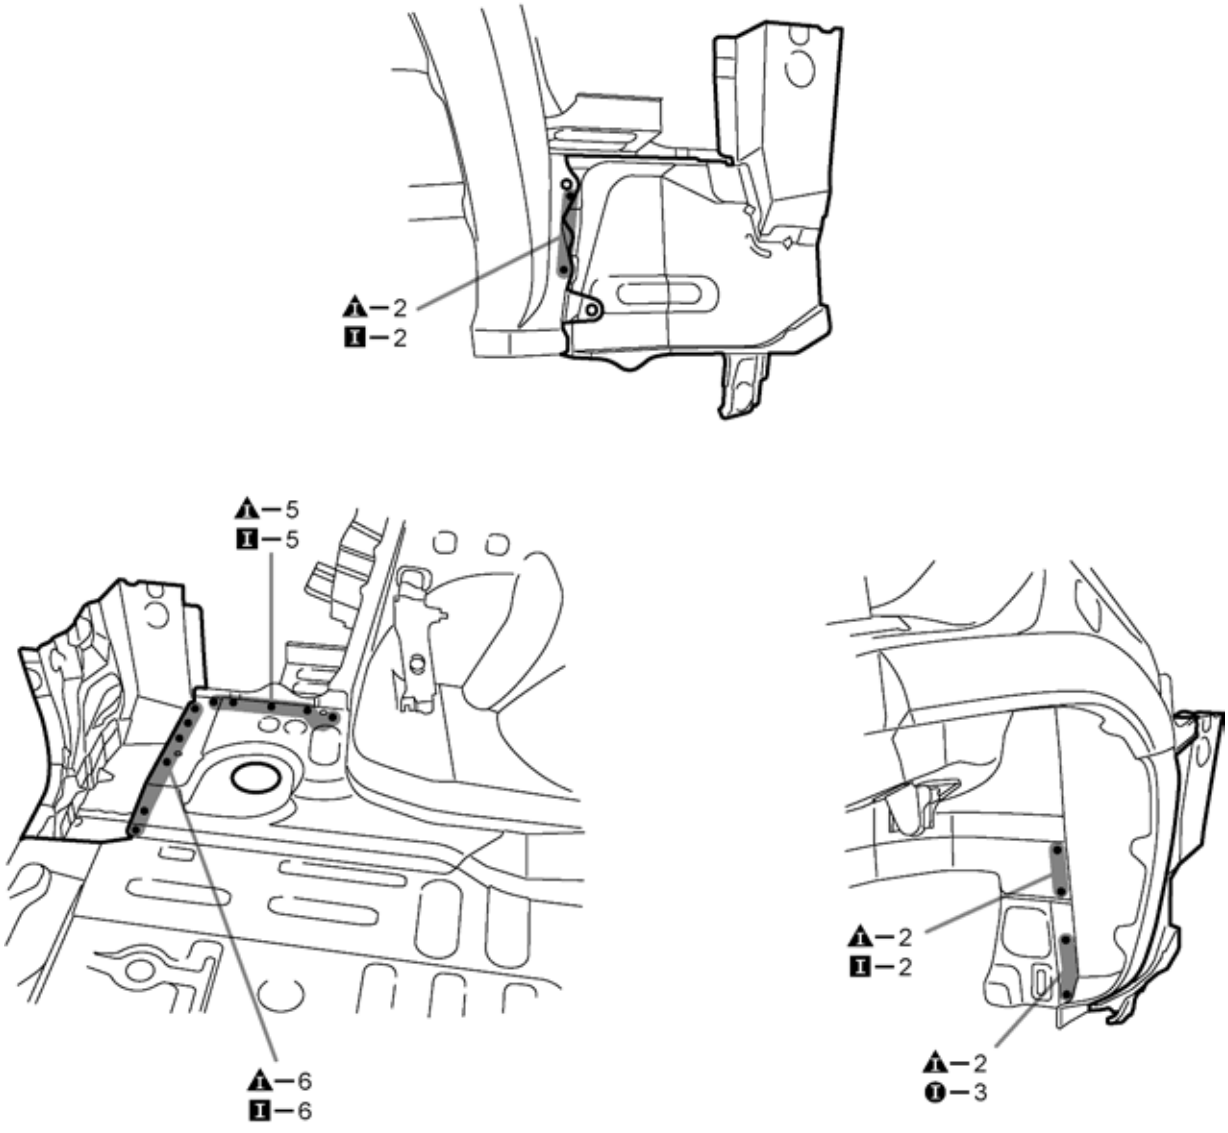


F42961

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH Side]

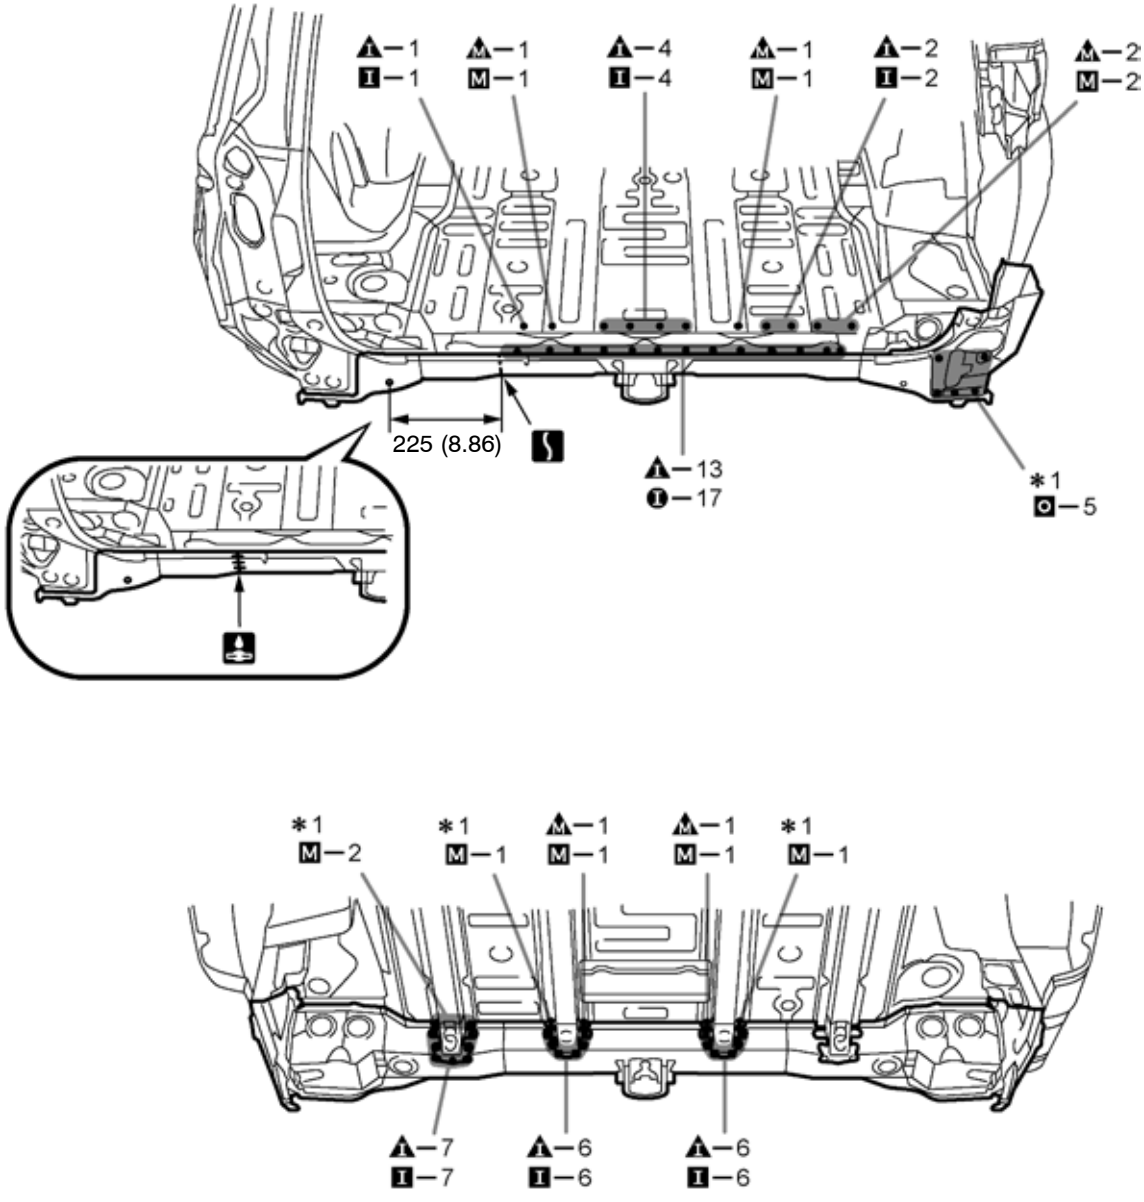

mm (in.)

F42962

INSTALLATION POINT


1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location	
INSTALLATION	: Spot Weld	: Plug Weld	: Butt Weld

F42960B

[RH Side]

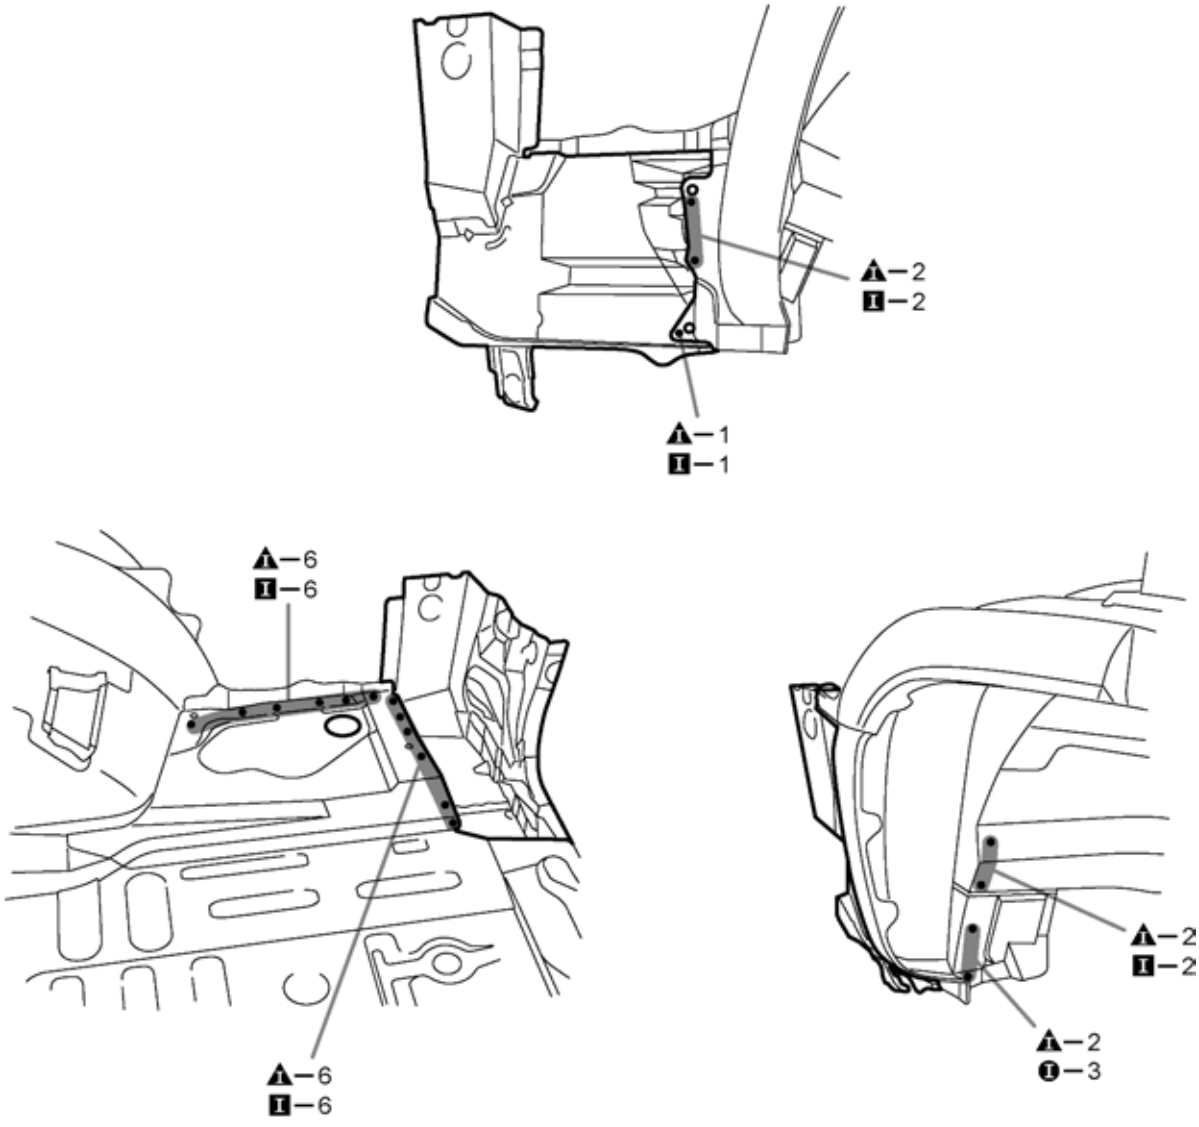

F42963

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.