
REAR FLOOR PAN (ASSY)

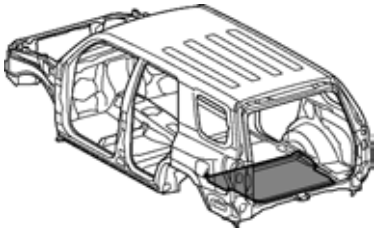

F42967A


With the body lower back panel and rear floor side panel removed.

Symbol meaning


: Remove Weld Points

F42967B


REMOVAL

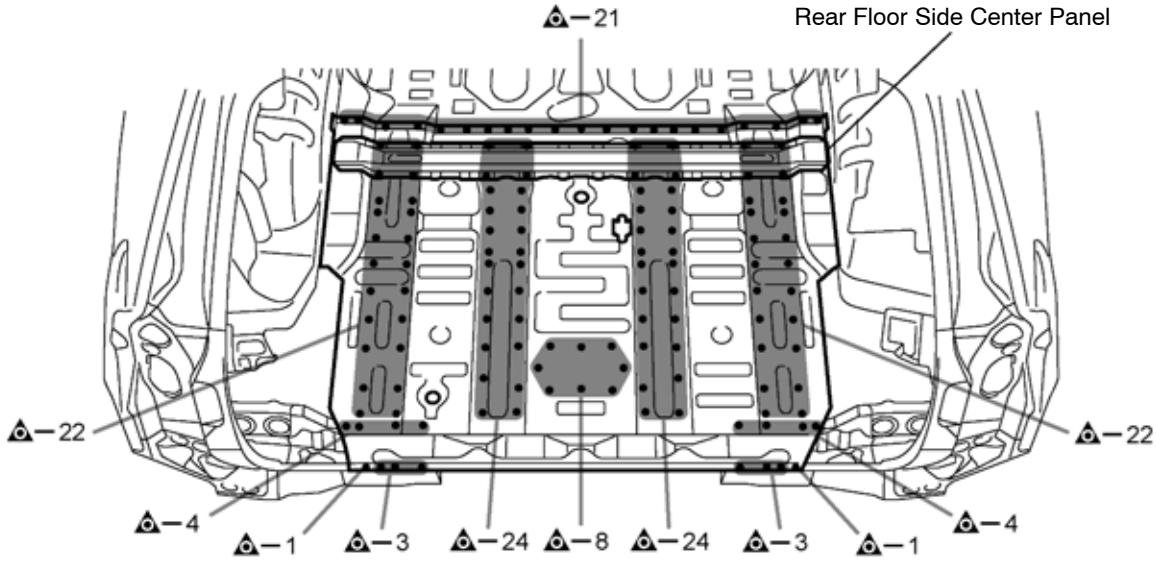

[LH Side]

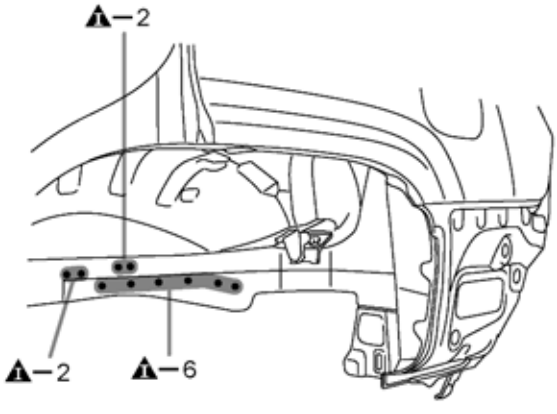

[RH Side]

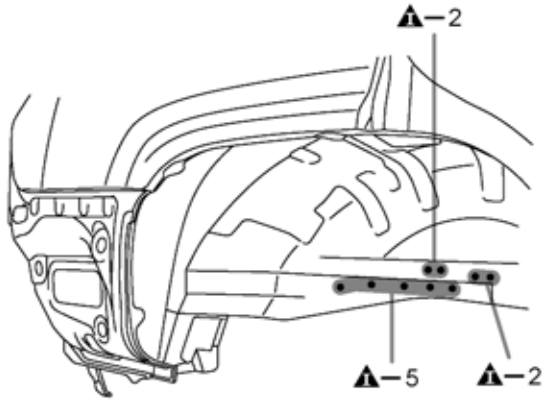

F42967

REMOVAL POINT

1 Remove the rear floor side center panel at the same time.


Symbol meaning

: Spot Weld : Plug Weld : Fillet Weld


F42968B

INSTALLATION

[Upper Face]

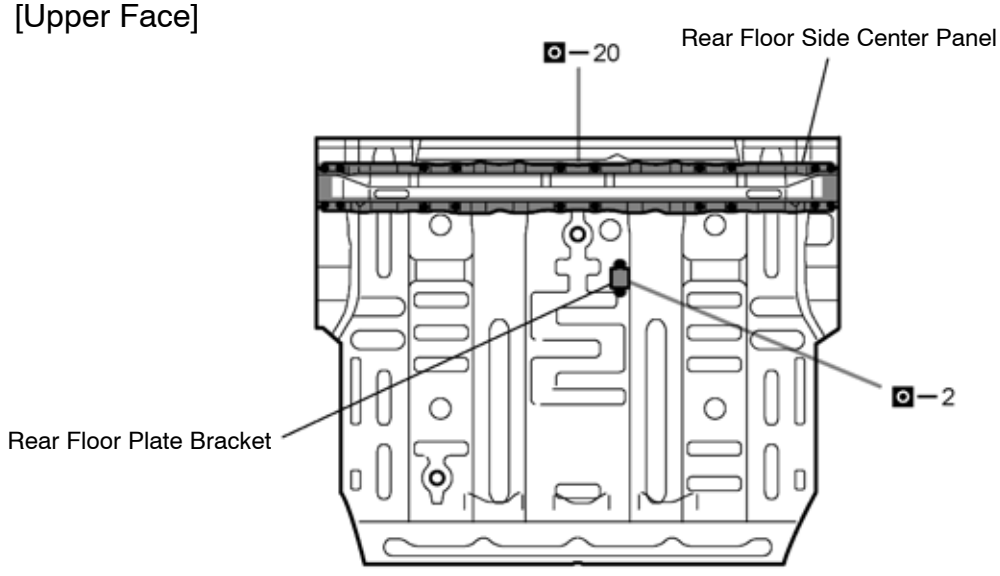

[Lower Face]

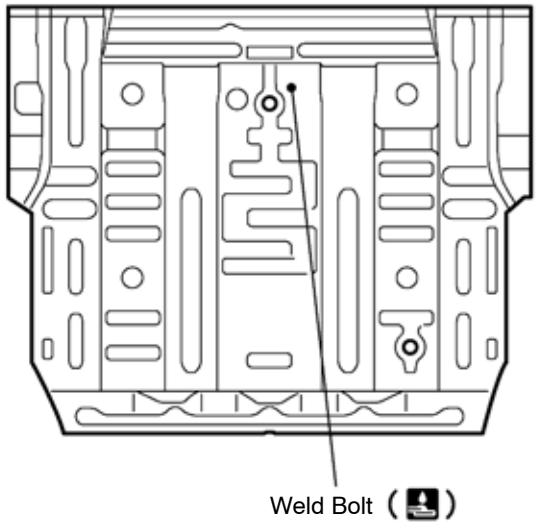

F42968


INSTALLATION POINT

1 Before temporarily installing the new parts, weld the rear floor side center panel, rear floor plate bracket and weld bolt with the standard number of welding points.


Symbol meaning

: Spot Weld : Plug Weld : Fillet Weld


F42968B

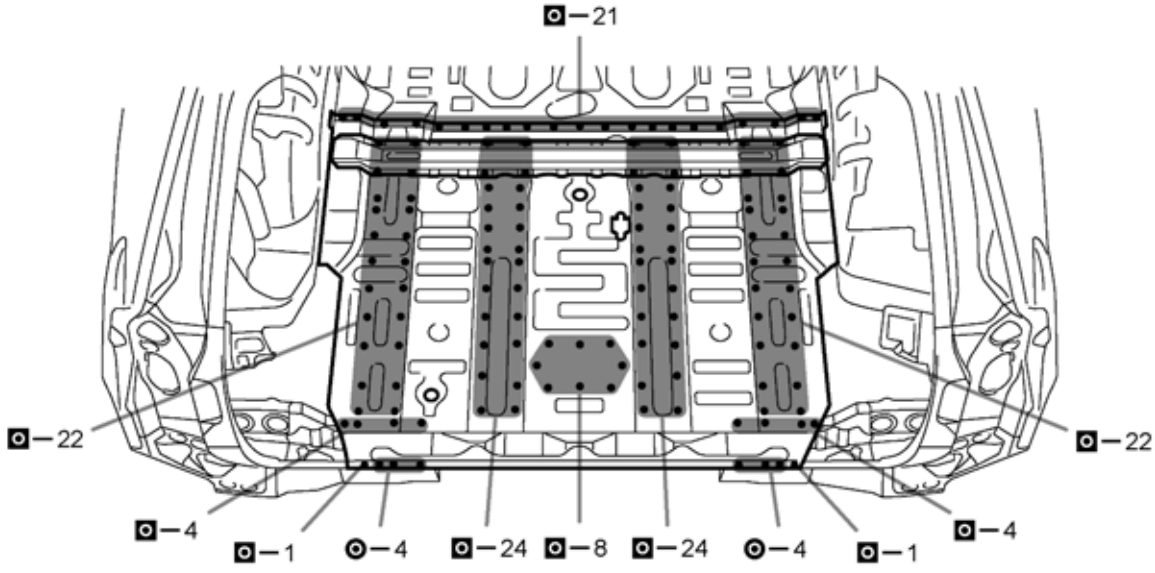

[LH Side]

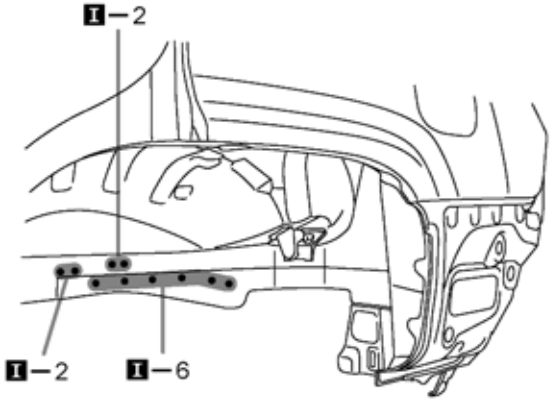

[RH Side]

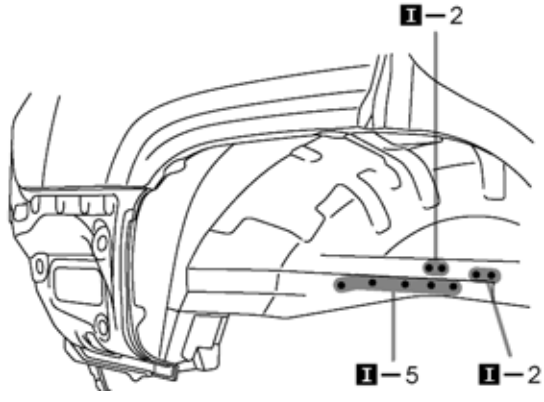

F42969

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.