REAR FLOOR SIDE PANEL (ASSY)



F42970A

With the rear floor crossmember No. 2 removed.


Symbol meaning

REMOVAL	A M A : Remove Weld Points
INSTALLATION	O M I : Plug Weld

F42970B

REMOVAL·INSTALLATION

[LH]

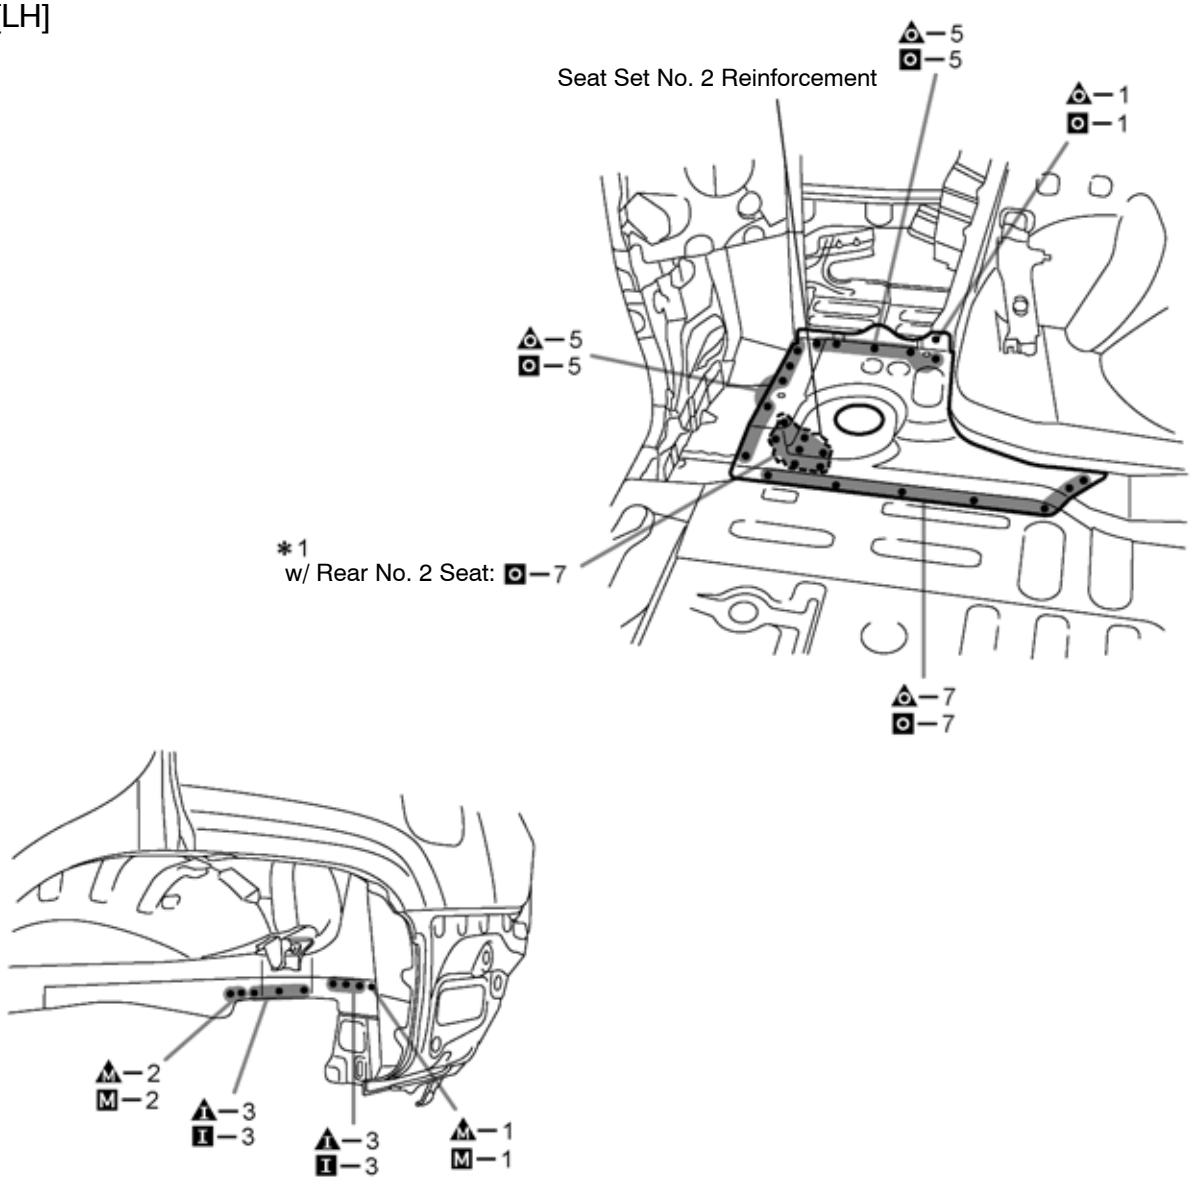

F42970

INSTALLATION POINT


1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F42970B

[RH]

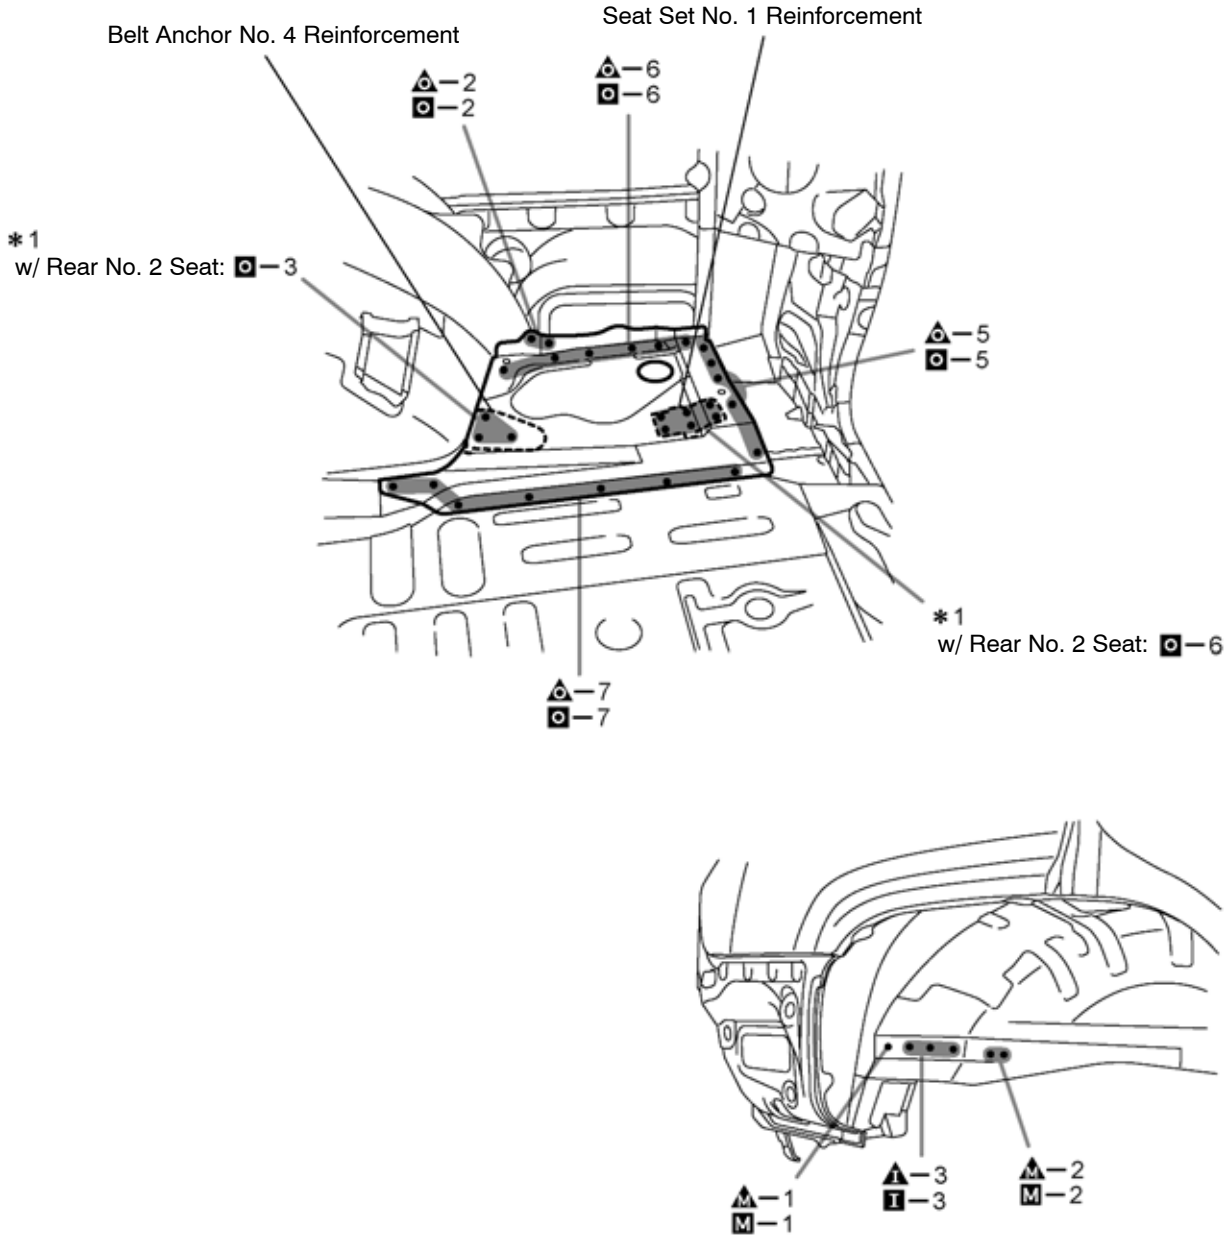

F42971

INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.