REAR FLOOR SIDE PANEL REAR EXTENSION (ASSY)



F42972A

With the roof side inner reinforce removed.


Symbol meaning

REMOVAL	▲ ▲ : Remove Weld Points
INSTALLATION	⊙ ❶ : Spot Weld ◘ ❶ : Plug Weld

F42972B

REMOVAL·INSTALLATION

[LH]

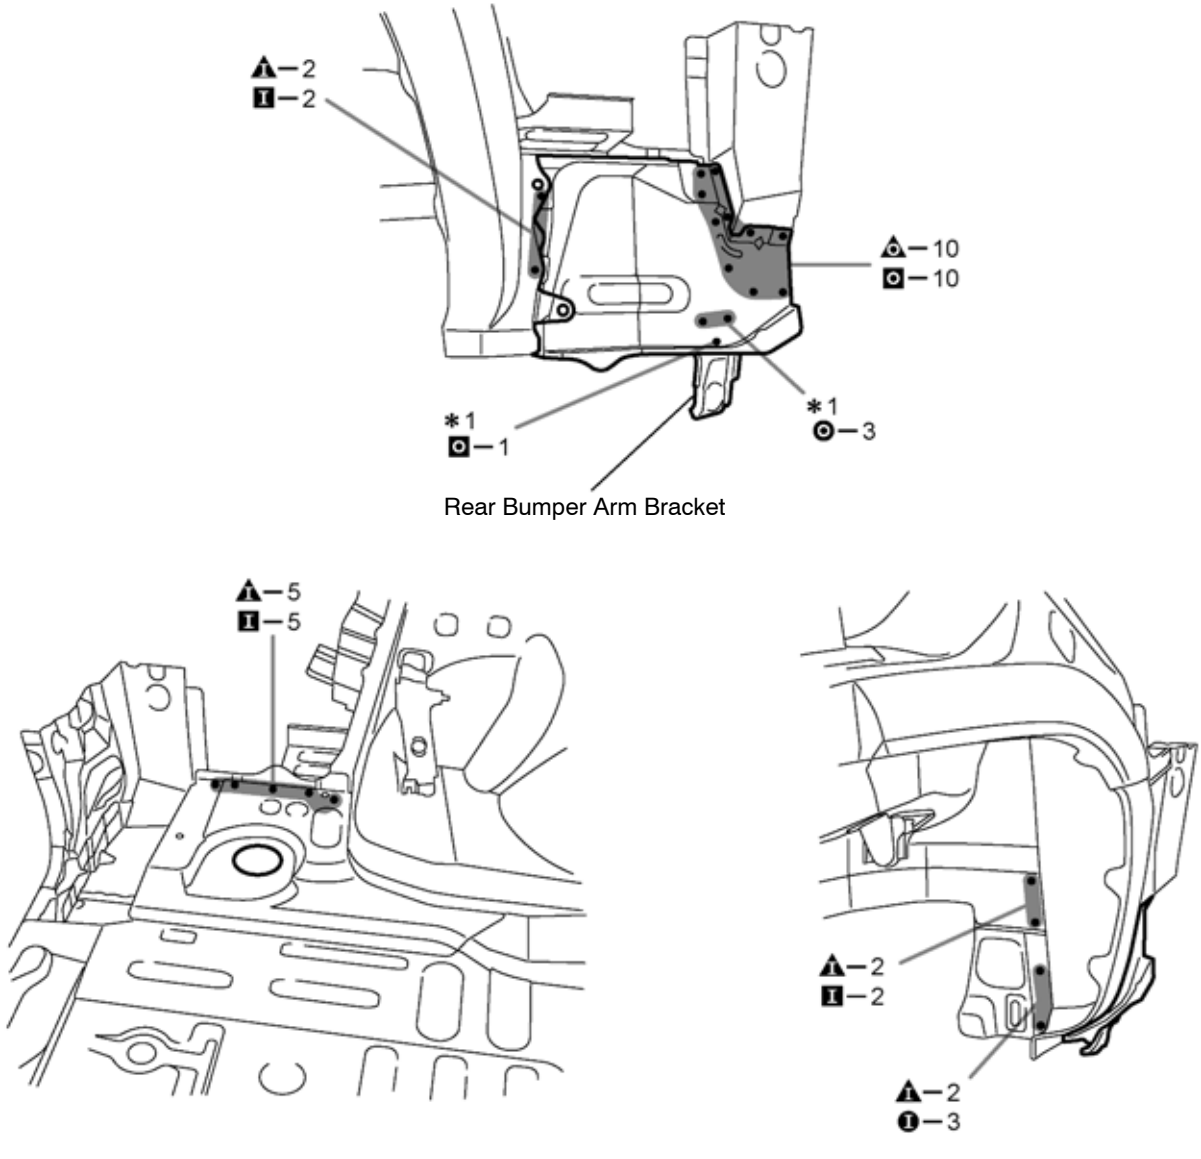

F42972

INSTALLATION POINT


1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning


REMOVAL	: Remove Weld Points
INSTALLATION	: Spot Weld : Plug Weld

F42972B

[RH]

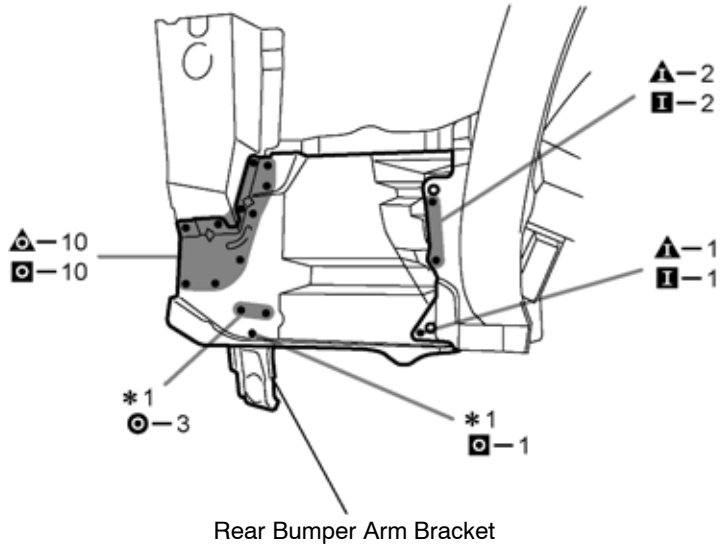

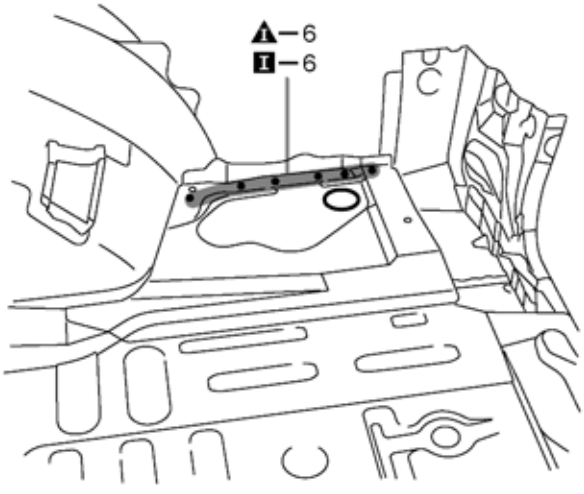

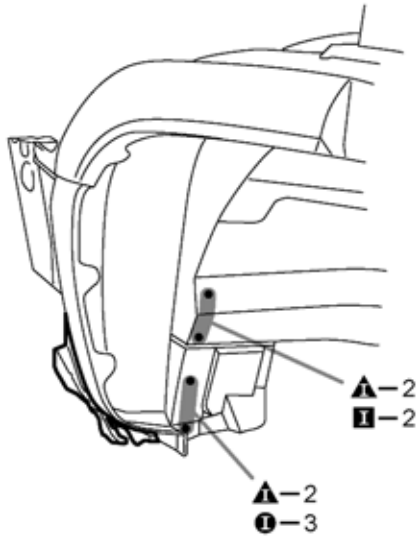

F42973

INSTALLATION POINT

1 *1 is only for installation.
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.