
REAR FLOOR SIDE CENTER MEMBER (CUT)

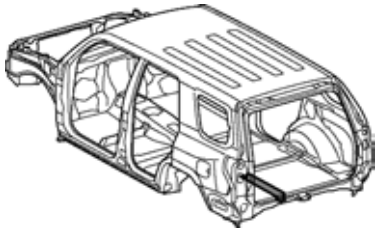

F42976A


With the rear floor crossmember No. 3 removed.

Symbol meaning

: Remove Weld Points

F42976B

REMOVAL

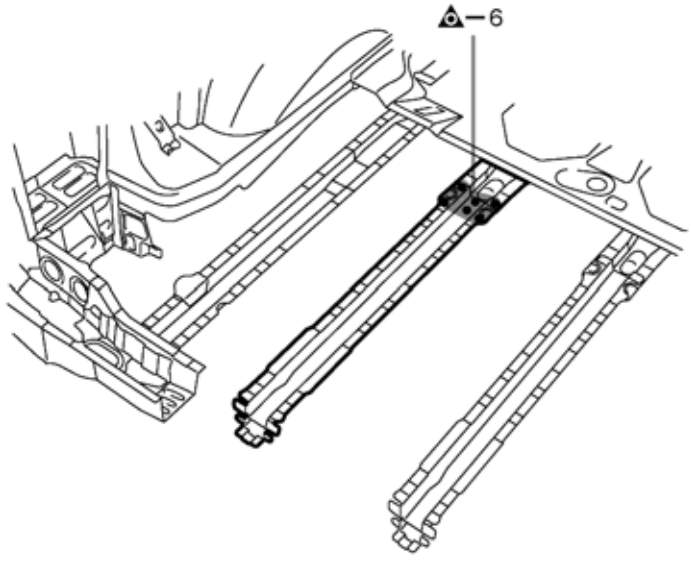


F42976

Symbol meaning

: Remove Weld Points : Plug Weld

F43012B

INSTALLATION

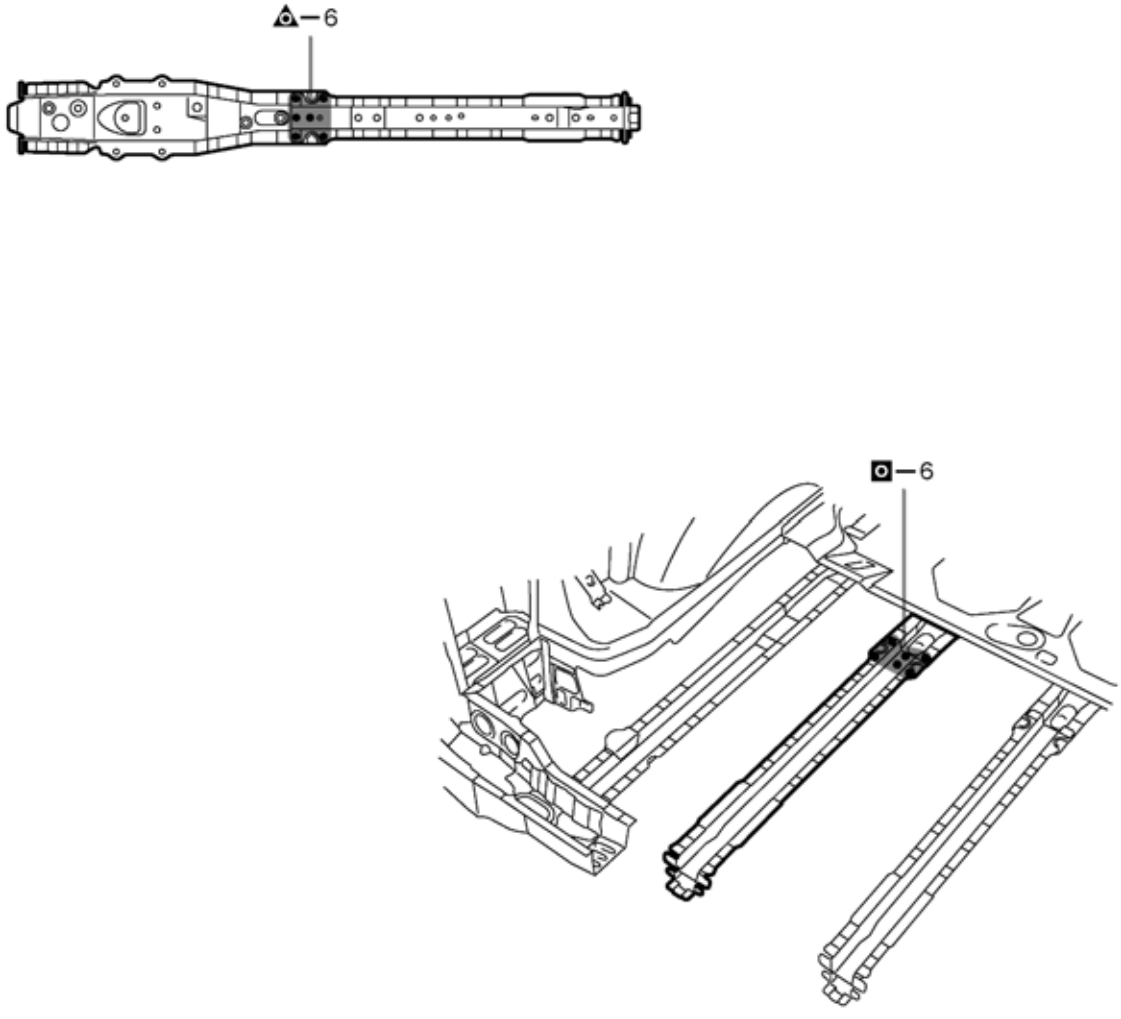

F43012

INSTALLATION POINT

1 If the entire supply part is not needed, remove the part of the supply part that is needed.
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.