7. PRECAUTIONS FOR SRS AIRBAG SYSTEM

(a) HANDLING OF A VEHICLE THAT HAS BEEN DAMAGED IN A COLLISION

(1) Refer to the TOYOTA Repair Manual for the SRS airbag system inspection procedures.

(2) If impacts are likely to occur to the front airbag sensors, side airbag sensors, rear airbag sensors, rear floor side airbag sensors or center airbag sensor remove each sensor as necessary beforehand.


(3) Do not allow the front airbag sensors, side airbag sensors, rear airbag sensors, rear floor side airbag sensors or center airbag sensor to become heated to high temperatures.


(4) Check the wire harnesses and connectors for damage and/or melting, as some areas of the airbags and seat belt pretensioners may heat up to several hundred degrees when they operate.

(b) PRECAUTIONS FOR USING AN ELECTRIC WELDER

(1) Check the Diagnostic Trouble Codes (DTCs).

1. If one or more DTCs are displayed;
   - Disconnect the negative (–) terminal cable from the battery.
   - Disconnect all the malfunctioning circuit connectors.
   - Disconnect the center airbag sensor assembly connector.
2. If DTCs are NOT displayed;
   - Inspect for damage to the electric wiring harnesses and connectors.
   - Disconnect the negative (–) terminal cable from the battery.
   - Disconnect the center airbag sensor assembly connector.

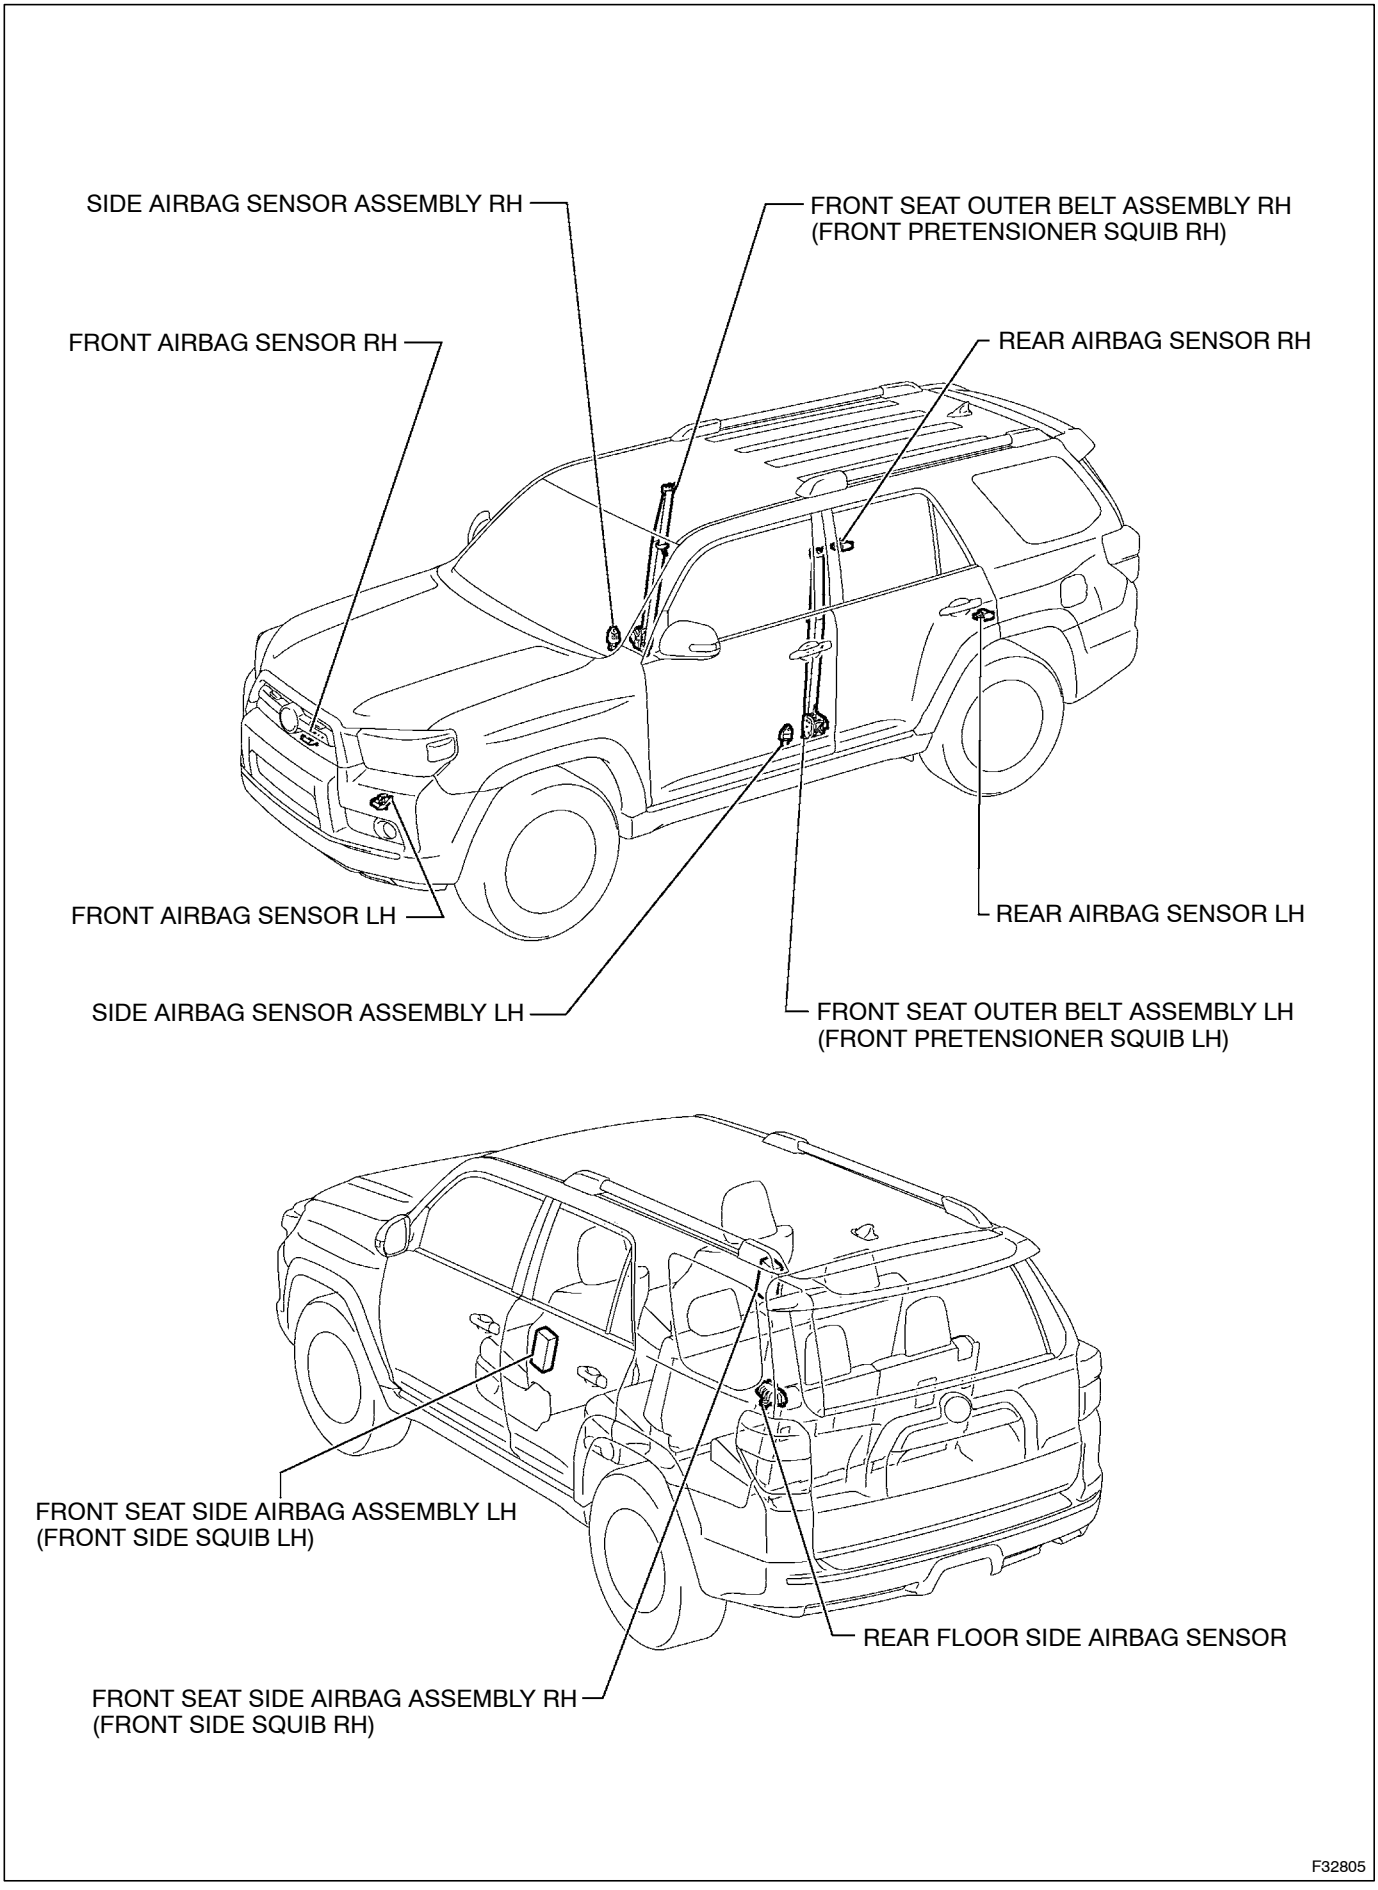

SIDE AIRBAG SENSOR ASSEMBLY RH
FRONT SEAT OUTER BELT ASSEMBLY RH
(FRONT PRETENSIONER SQUIB RH)
FRONT AIRBAG SENSOR RH
REAR AIRBAG SENSOR RH
FRONT AIRBAG SENSOR LH
REAR AIRBAG SENSOR LH
SIDE AIRBAG SENSOR ASSEMBLY LH
FRONT SEAT OUTER BELT ASSEMBLY LH
(FRONT PRETENSIONER SQUIB LH)
FRONT SEAT SIDE AIRBAG ASSEMBLY LH
(FRONT SIDE SQUIB LH)
REAR FLOOR SIDE AIRBAG SENSOR
FRONT SEAT SIDE AIRBAG ASSEMBLY RH
(FRONT SIDE SQUIB RH)
F32805

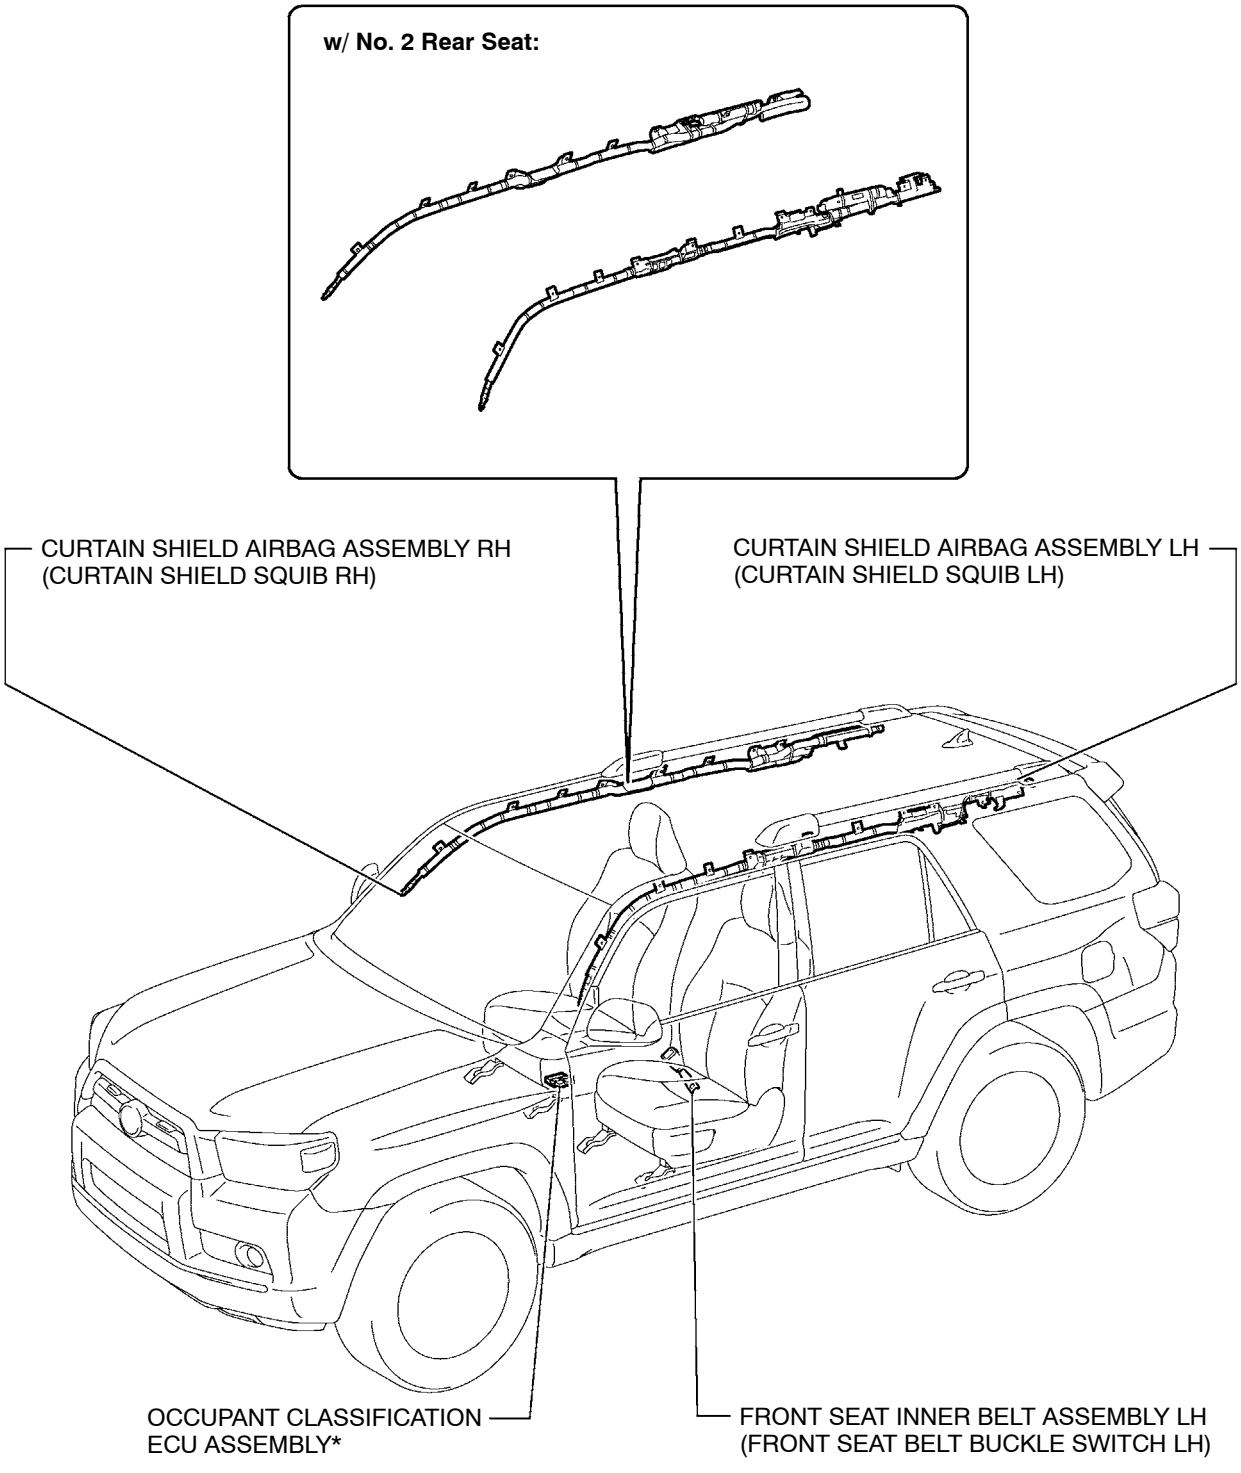


*: for USA, Canada

F32804

for USA, Canada:

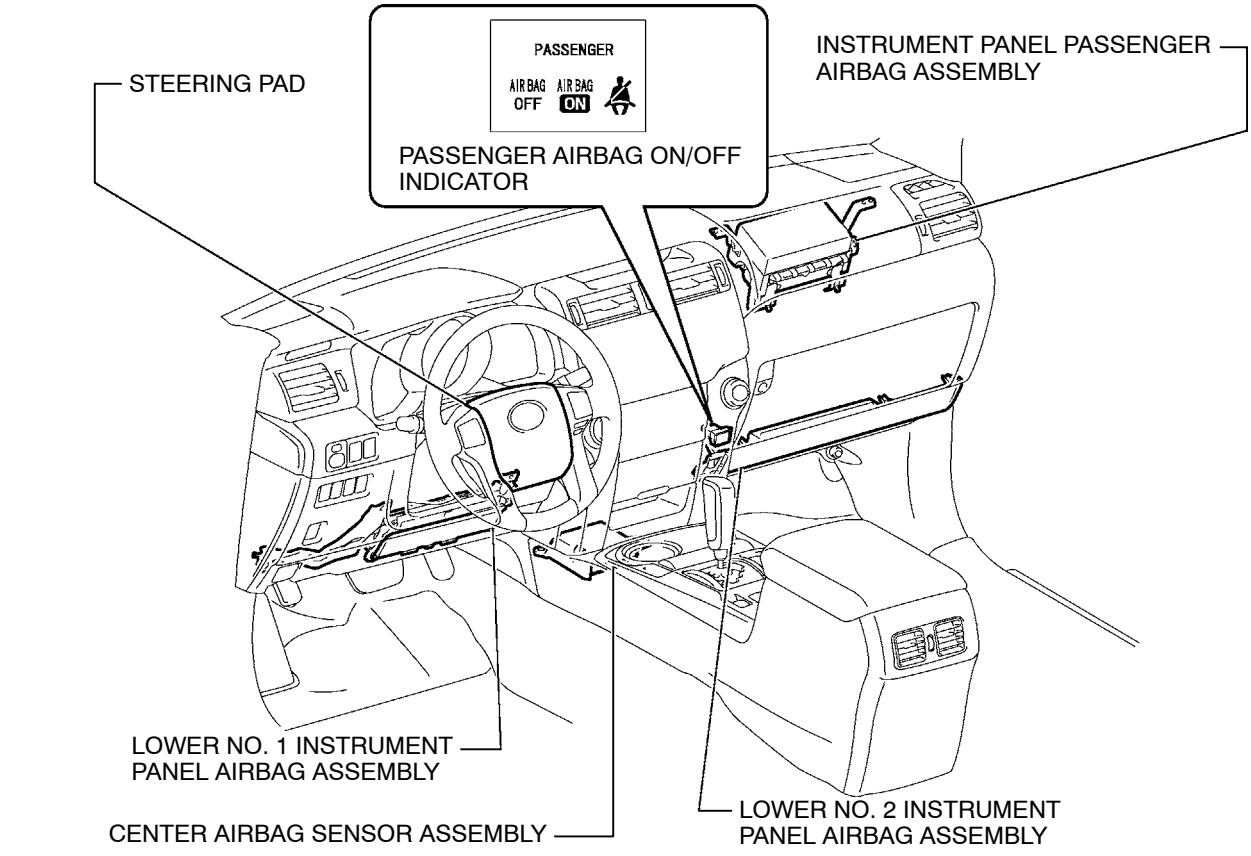

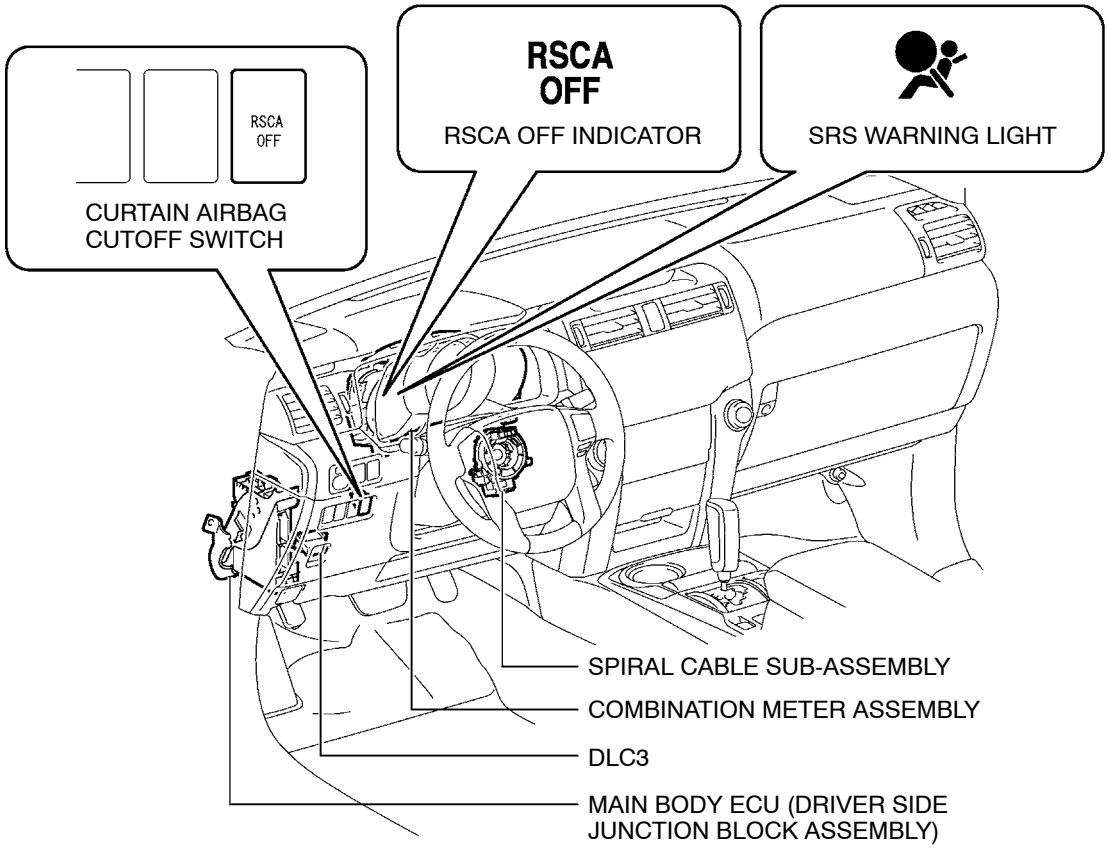

F32806

Except USA, Canada:

