
2. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE

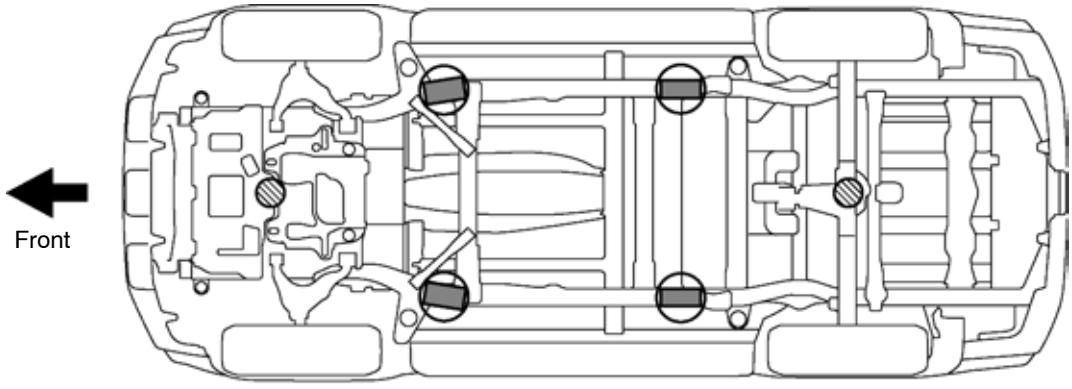

: JACK POSITION	Front: Center of crossmember Rear: Protruding part of rear suspension member CAUTION: When jacking up the vehicle, make sure the vehicle is not carrying any extra weight.
: SUPPORT POSITION	Swing arm type lift, Safety stand

F32811