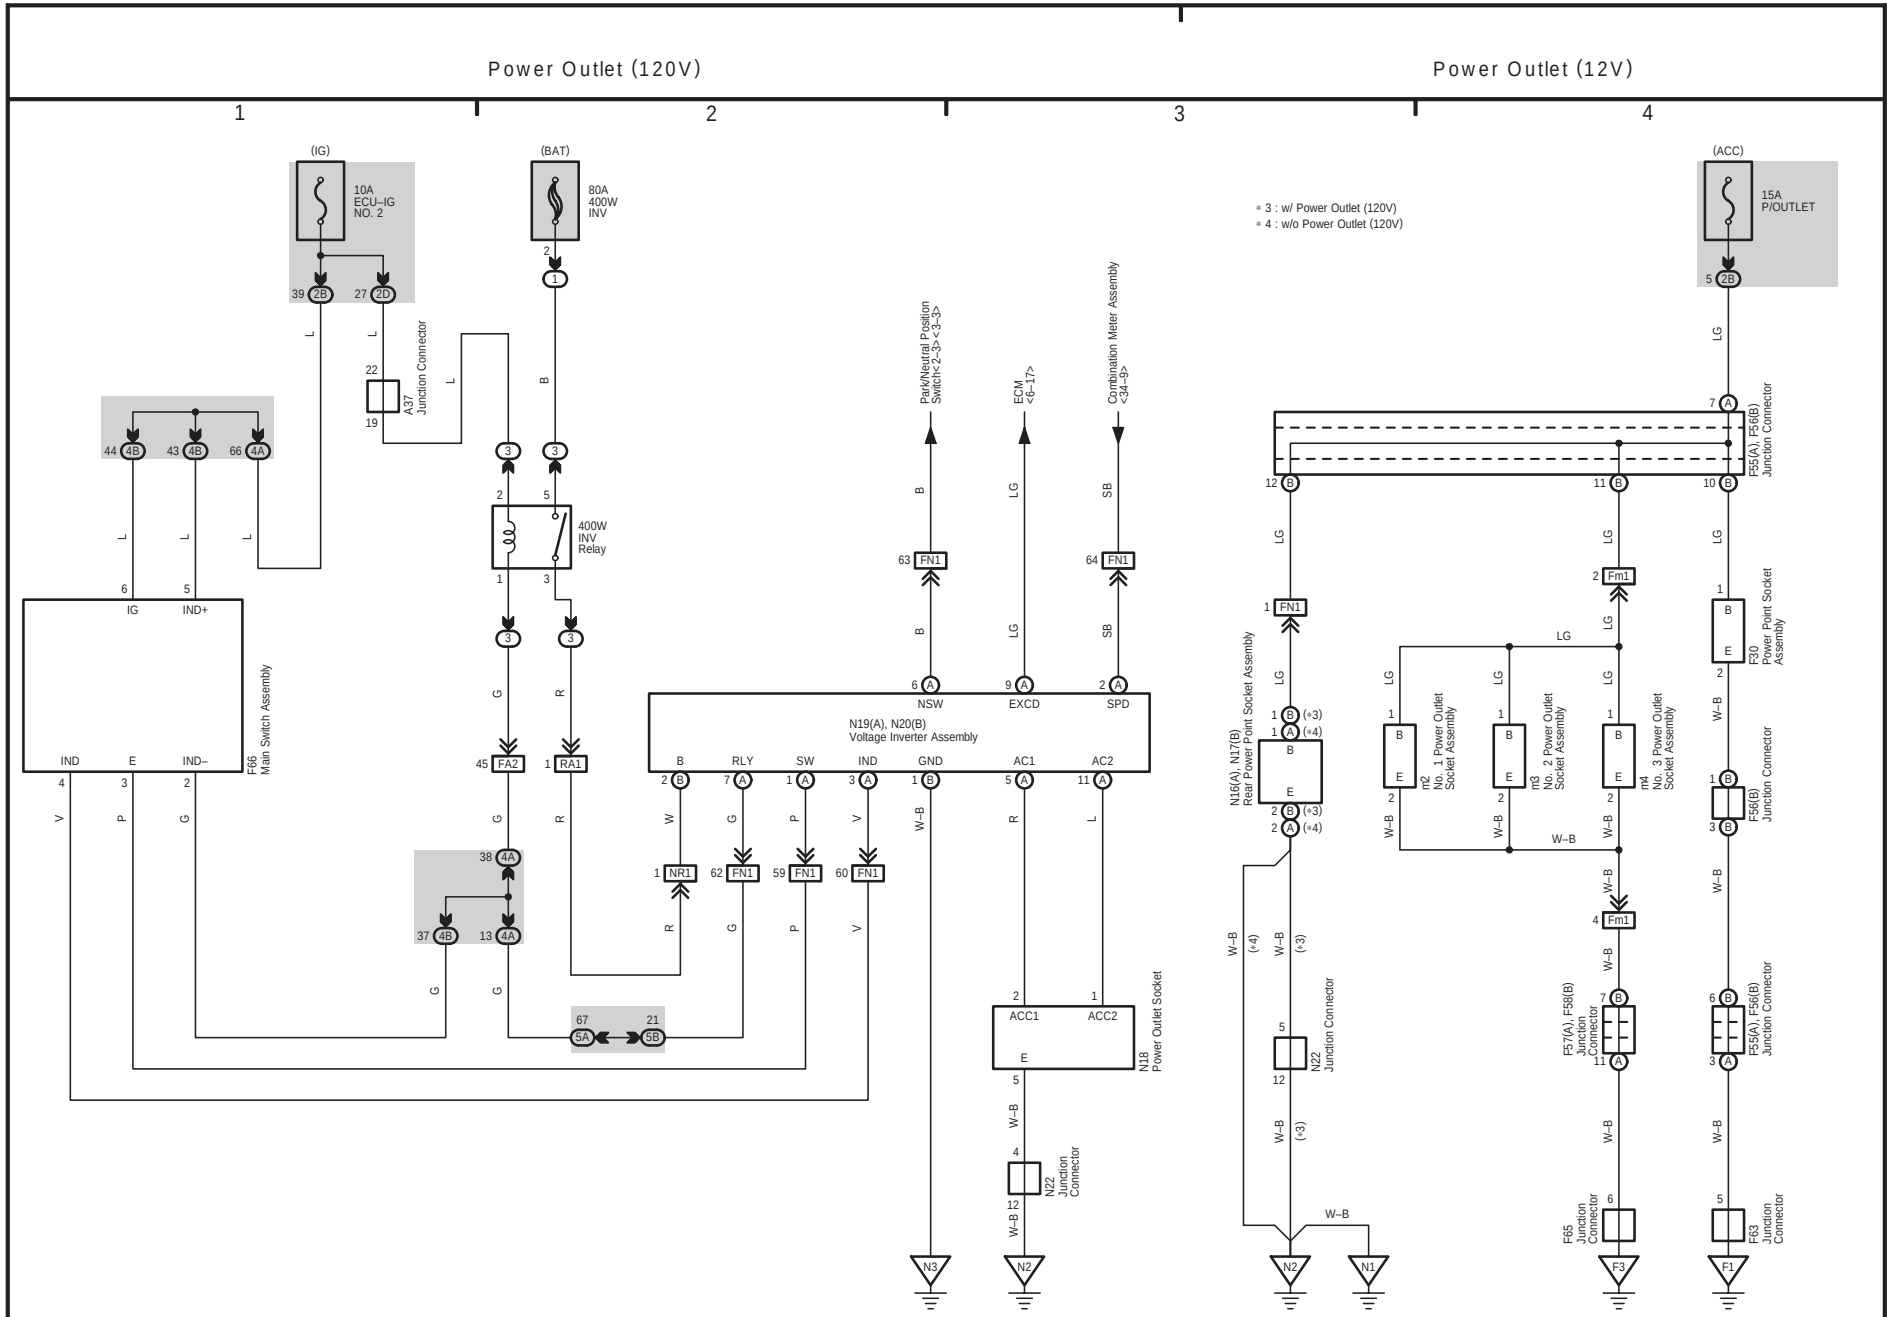

Power Outlet (120V)
Power Outlet (12V)
1
2
3
4
* 3 : w/ Power Outlet (120V)
* 4 : w/o Power Outlet (120V)
(IG)
10A ECU–IG NO. 2
(BAT)
80A 400W INV
(ACC)
15A P/OUTLET
A37 Junction Connector
400W INV Relay
F66 Main Switch Assembly
IG
IND+
IND
E
IND–
Park/Neutral Position Switch<2-3><3-3>
ECM <6-17>
Combination Meter Assembly <34-9>
N19(A), N20(B) Voltage Inverter Assembly
NSW
EXCD
SPD
B
RLY
SW
IND
GND
AC1
AC2
N18 Power Outlet Socket
ACC1
ACC2
N16(A), N17(B) Rear Power Point Socket Assembly
N22 Junction Connector
F55(A), F56(B) Junction Connector
F30 Power Point Socket Assembly
F56(B) Junction Connector
F55(A), F56(B) Junction Connector
F57(A), F58(B) Junction Connector
F65 Junction Connector
F63 Junction Connector
m2 No. 1 Power Outlet Socket Assembly
m3 No. 2 Power Outlet Socket Assembly
m4 No. 3 Power Outlet Socket Assembly
N1
N2
N3
F1
F3