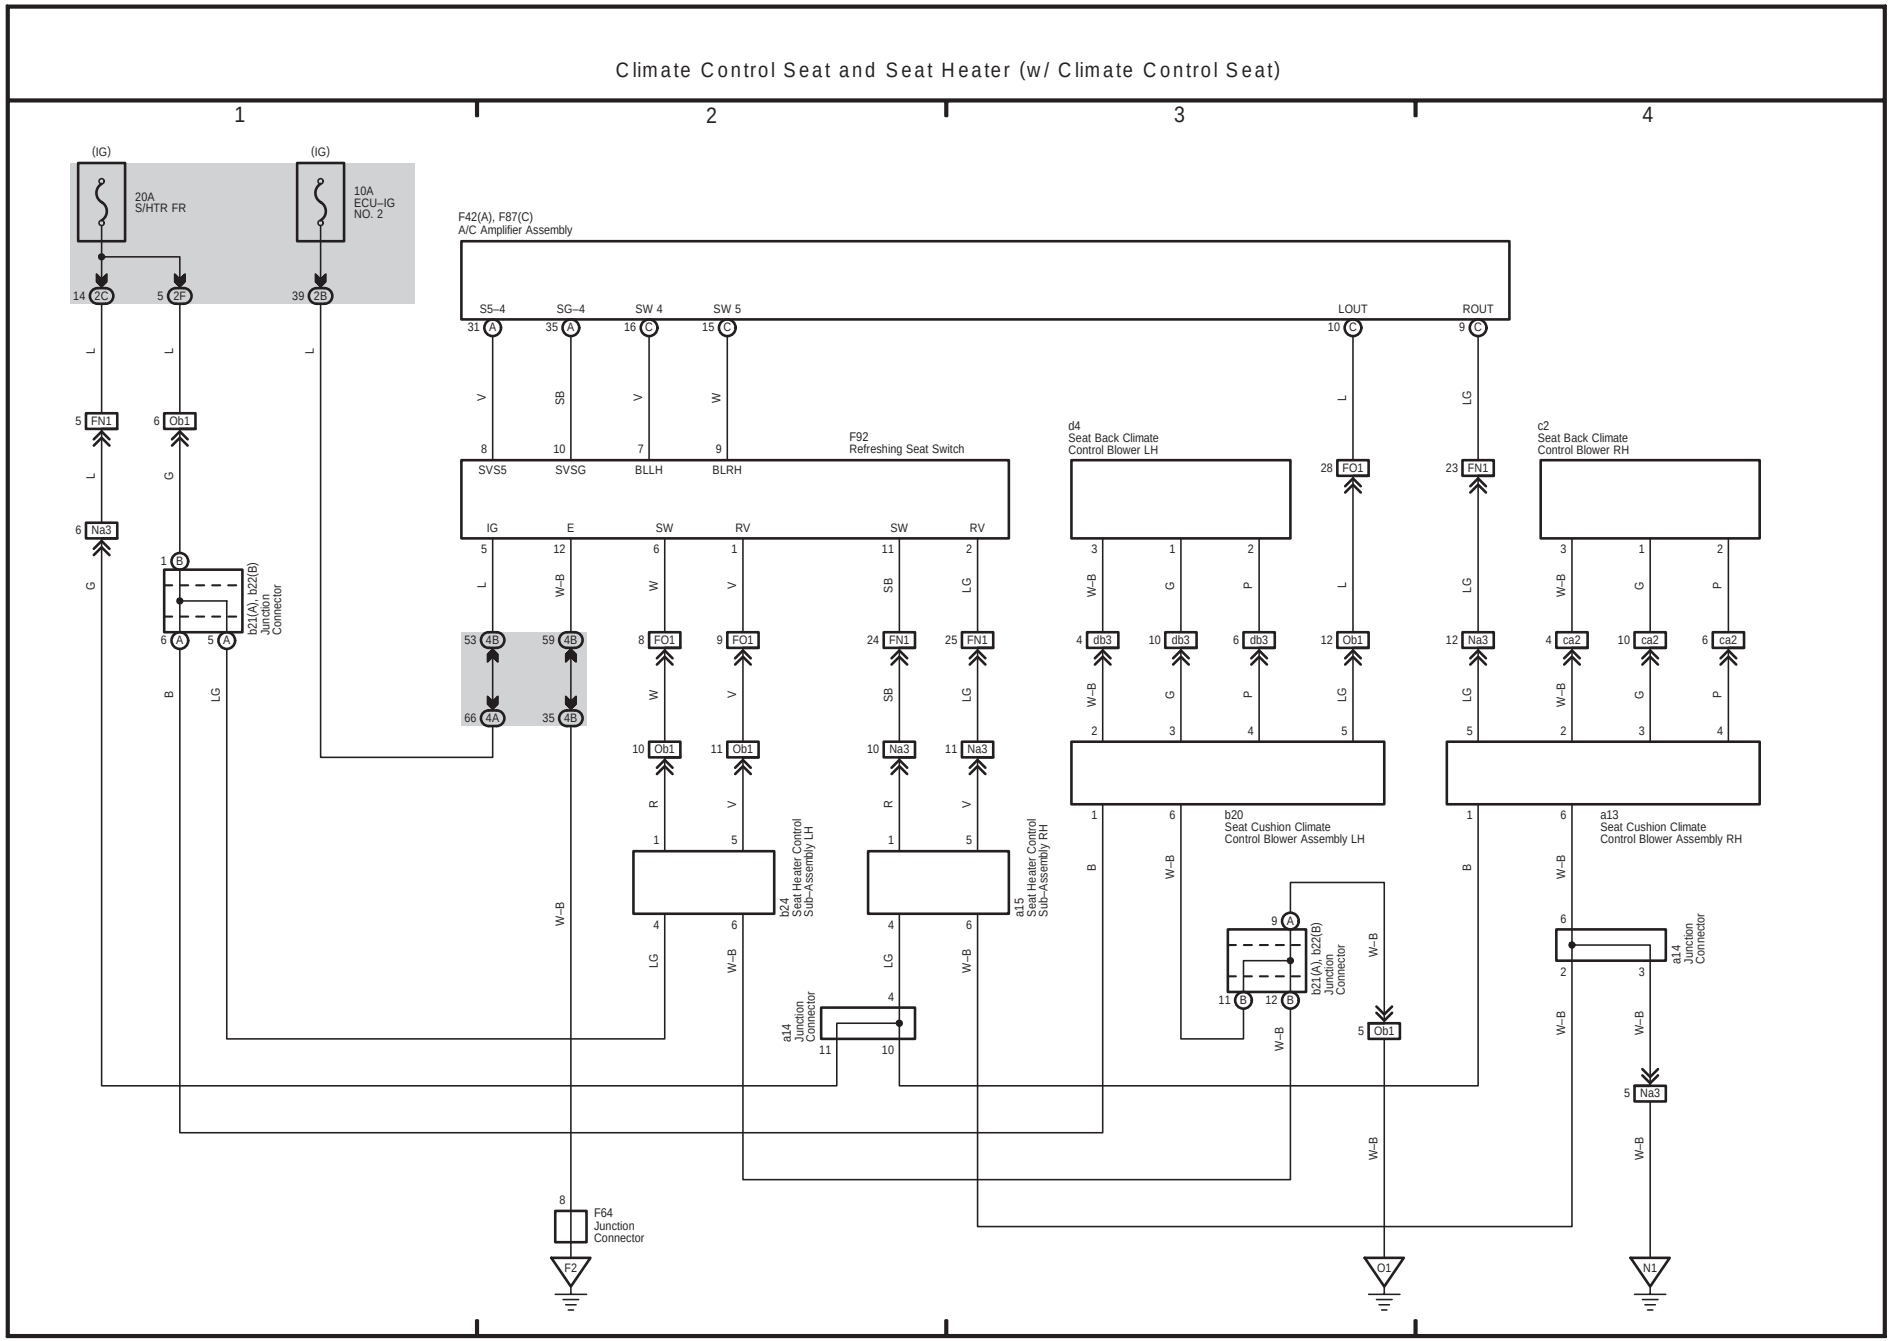

Climate Control Seat and Seat Heater (w/ Climate Control Seat)
1
2
3
4
(IG)
20A
S/HTR FR
(IG)
10A
ECU–IG
NO. 2
F42(A), F87(C)
A/C Amplifier Assembly
S5–4
SG–4
SW 4
SW 5
LOUT
ROUT
SVS5
SVSG
BLLH
BLRH
F92
Refreshing Seat Switch
IG
E
SW
RV
SW
RV
d4
Seat Back Climate
Control Blower LH
c2
Seat Back Climate
Control Blower RH
b21(A), b22(B)
Junction
Connector
b24
Seat Heater Control
Sub–Assembly LH
a15
Seat Heater Control
Sub–Assembly RH
b20
Seat Cushion Climate
Control Blower Assembly LH
a13
Seat Cushion Climate
Control Blower Assembly RH
a14
Junction
Connector
F64
Junction
Connector
F2
O1
N1